 


Contents

| | | | |
|----------------------------------|-----------|--|-----------|
| Getting started | 6 | Vicemail | 28 |
| Assembly | 6 | Voice control | 28 |
| Turning on the phone | 6 | Diverting calls | 30 |
| Help in your phone | 7 | More than one call | 30 |
| Charging the battery | 8 | My numbers | 32 |
| Using the USB charger | 8 | Accept calls | 32 |
| Note: | 9 | Restricted dialling | 32 |
| Phone overview | 10 | Fixed dialling | 33 |
| Menu overview | 12 | Call time and cost | 33 |
| Navigation | 14 | Showing or hiding your phone number | 33 |
| File manager | 15 | Open to answer | 33 |
| Phone language | 17 | Messaging | 34 |
| Entering text | 17 | Text messages | 34 |
| Chinese input | 18 | Picture messages | 35 |
| Stroke input | 19 | Message options | 36 |
| Pinyin input | 21 | Templates | 37 |
| Calling | 22 | Voice messages | 37 |
| Making and receiving calls | 22 | Email | 38 |
| Contacts | 23 | My friends | 39 |
| Call list | 27 | Area and cell information | 41 |
| Speed dial | 28 | | |



Imaging 41

Camera and video recorder 41

Using the camera 41

Camera icons and settings 42

Camera shortcuts 42

Transferring pictures 42

Camera printing 43

Pictures 43

PhotoDJ™ and VideoDJ™ 44

Themes 45

Entertainment 45

Stereo portable handsfree 45

Walkman® player 45

Video player 47

Transferring music from a computer 49

TrackID™ 50

Radio 51

PlayNow™ 51

Ringtones and melodies 52

MusicDJ™ 53

Sound recorder 53

Games 53

Applications 54

Connectivity 55

Settings 55

Phone name 55

Using the Internet 55

Web feeds 57

Bluetooth™ wireless technology 57

Using the USB cable 59

Synchronizing 60

Update service 62

More features 63

Alarms 63

Calendar 64

Tasks 65

Timer, stopwatch and calculator 66

Code memo 66

Profiles 68


Time and date 68


Locks 68

Troubleshooting 70

Common questions 70

  Error messages 72





Important information 73

| | |
|---|----|
| Guidelines for Safe and Efficient Use | 75 |
| End User Licence Agreement | 80 |
| Limited Warranty | 80 |
| FCC Statement | 83 |
| Declaration of Conformity | 83 |

Index 84



Sony Ericsson W908c

GSM 900/1800/1900

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide. All rights reserved.

©Sony Ericsson Mobile Communications AB, 2007
Publication number: 1201-5544.1

Please note:

Some of the services in this User guide are not supported by all networks. *This also applies to the GSM International Emergency Number 112.*

Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not.

Please read the *Guidelines for safe and efficient use* and the *Limited warranty* chapters before you use your mobile phone.

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

Bluetooth™ is a trademark or registered trademark of Bluetooth SIG Inc.

The marble logo, SensMe, PlayNow, MusicDJ, PhotoDJ, TrackID and VideoDJ are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB.

TrackID™ is powered by Gracenote Mobile MusicID™. Gracenote and Gracenote Mobile MusicID are trademarks or registered trademarks of Gracenote, Inc.

Sony, WALKMAN and the WALKMAN logo, Memory Stick Micro™ and M2™ are trademarks of Sony Corporation.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.

Adobe Photoshop Album Starter Edition is either a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries/regions.

 
Microsoft, Windows, Outlook, Exchange Server and Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries/regions.

T9™ Text Input is a trademark or a registered trademark of Tegic Communications. T9™ Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No.

1,331,057, United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries/regions.

End-user license agreement for Sun™ Java™ J2ME™.



Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.

Export Regulations: Software, including technical data, is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries/regions. Customer agrees to comply strictly with all such regulations and acknowledges that it has the responsibility to obtain licenses to export, re-export, or import Software. Software may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, Cuba, Iraq, Iran, North Korea, Libya, Sudan, Syria (as such listing may be revised from time to time) or any country/region to which the U.S. has embargoed goods; or (ii) to anyone on the U.S. Treasury Department's list of Specially Designated Nations or the U.S. Commerce Department's Table of Denial Orders.

Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Note: Sony Ericsson advises users to backup their personal data information.

Any rights not expressly granted herein are reserved. All illustrations are for illustration only and may not accurately depict the actual phone.



Instruction symbols

These symbols appear in the User guide.



Note



Tip



 
 
Warning



A service or function is network- or subscription-dependent. Contact your network operator for details.



Use a selection or navigation key to scroll and select. See *Navigation* on page 14.



Getting started

Assembly

Before you start using your phone, you need to insert a SIM card and the battery.

To insert the SIM card



- 1 Unlock the battery cover.
- 2 Remove the battery cover.
- 3 Slide the SIM card into its holder with the golden contacts facing down.

To insert the battery



- 1 Insert the battery with the label side down and the connectors facing each other.
- 2 Slide the battery cover into place and lock it.

Turning on the phone

To turn on the phone



- 1 Press and hold down ①.
- 2 Select a mode:

- **Normal mode** – full functionality.
 - **Flight mode** – limited functionality.
- 3 Enter your SIM card PIN, if requested and select **OK**.
 - 4 Select a language.
 - 5 Select **Cont.** > **Yes** to use the setup wizard while settings are downloaded.

💡 *If you want to correct a mistake when you enter your PIN, press (C).*

SIM card

The SIM (Subscriber Identity Module) card, which you get from your network operator, contains information about your subscription. Always turn off your phone and detach the charger before you insert or remove the SIM card.

💡 *You can save contacts on the SIM card before you remove it from your phone. See [To copy names and numbers to the SIM card on page 25](#).*

PIN

You may need a PIN (Personal Identification Number) to activate the services in your phone. Your PIN is supplied by your network operator. Each PIN digit appears as *, unless it starts with emergency number digits, for example, 112 or 911. You can see and call an emergency number without entering a PIN.

! *If you enter the wrong PIN three times in a row, the SIM card is blocked. See [SIM card lock on page 68](#).*

Flight mode

In **Flight mode** the network and radio transceivers are turned off to prevent disturbance to sensitive equipment.

💡 *You can use the Bluetooth™ function in Flight mode.*

Startup screen

The startup screen appears when you turn your phone on. See [Using pictures on page 43](#).

Standby

After you have turned your phone on and entered your PIN, the name of the network operator appears. This view is called standby.

Help in your phone

Help and information are available in your phone. See [Navigation on page 14](#).

To use the setup wizard

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Setup wizard**.
- 2 Select an option.

To view information about functions

- Scroll to a function and select **Info**, if available. In some cases, **Info** appears under **Options**.

To view the phone demonstration

- From standby select **Menu** > **Entertainment** > **Demo tour**.

To view status information

- From standby press the volume key up.

Charging the battery

 
The phone battery is partly charged when you buy it.

- ! *It may take 30 minutes for the battery icon to appear on the screen.*

Non-USB Charger (old type)



USB Charger (new type)

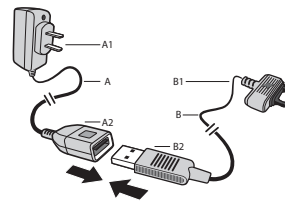

- A AC adapter
- A1 AC adapter connector
- A2 AC adapter USB socket
- B USB cable
- B1 USB cable connector
- B2 USB cable plug

Using the USB charger

To connect the charger and charge the battery

- 1 Connect the USB cable plug to the AC adapter USB socket, as shown in the above illustration. The USB cable is supplied with your phone.



- 2 Connect the USB cable connector to your phone. Press a key to view the charging status on the screen. It takes approximately 2.5 hours to fully charge the battery.

To remove the charger



- 1 Charge your battery until the battery icon indicates a full charge.
- 2 Tilt the USB charger connector upwards to remove it.

Note:

- 1 The USB cable for the new USB charger shown in the illustration (Part. B in the new-type charger illustration) on page 8 is **only intended for charging your phone. Do not use it for transferring data.**
- 2 The USB cable for the USB charger shown in the illustration (Part. B in the new-type charger illustration) is only intended for connection to the AC adapter (Part. A in the new-type charger illustration) to charge your

phone. It must not be used for connection to a PC. It can only be used for charging your phone. Never use it for charging accessories.

- 3 Sony Ericsson strongly recommends that you use only Sony Ericsson branded original batteries, the part of power supply device in accordance with YD/T 1591-2006 specifications of Communications Industry Standards of P. R. China (Part A in the new-type charger illustration) and the USB cable supplied with your phone to charge the phone. The use of third-party products may decrease the performance of your phone and/or pose a risk to your health or safety.
- 4 Sony Ericsson recommends that you never mix the use the new USB charger and the old non-USB charger. The phone with new-type charger in box cannot be charged with the old-type charger, and vice versa. The use of both the chargers may decrease the performance of your phone and/or pose a risk to your health or safety.

! You can use the phone during charging. You can charge the battery for more or less than 2.5 hours. Interrupted charging will not damage the battery.

 
Phone overview

- 1 Ear speaker
- 2 Gaming key A
- 3 Screen
- 4 Selection keys
- 5 Call key
- 6 Activity menu key
- 7 Navigation key, Walkman® player control
- 8 Gaming key B
- 9 Volume, digital zoom keys
- 10 Memory card slot
- 11 End key
- 12 C key (Clear)
- 13 Camera key
- 14 Silent key



- 15 Walkman® key
- 16 Strap hole
- 17 Video recording indicator
- 18 Camera lens
- 19 On/off key
- 20 Connector for charger, handsfree and USB cable





Menu overview



PlayNow™*



Monternet*



Entertainment

- Online services*
- Games
- TrackID™
- VideoDJ™
- PhotoDJ™
- MusicDJ™
- Remote control
- Record sound
- Demo tour



Camera



Messaging

- Write new
- Inbox
- Email
- Web feeds
- Drafts
- Outbox
- Sent messages
- Saved messages
- My friends*
- Call voicemail
- Templates
- Manage messages
- Settings



Media



Radio



Contacts

- Myself
- New contact





WALKMAN





12 Getting started




 **Calls****
All Answered Dialed Missed

 **Organizer**
File manager**
Alarms
Applications
Calendar
Tasks
Notes
Synchronization
Timer
Stopwatch
Calculator
Code memo

 **Settings****
General
Profiles
Time & date
Language
Update service
Voice control
New events
Shortcuts
Flight mode
Security
Setup wizard
Accessibility*
Phone status
Master reset

 **Sounds & alerts**
Ring volume
Ringtone
Silent mode
Increasing ring
Vibrating alert
Message alert
Key sound

 **Display**
Wallpaper
Themes
Startup screen
Screen saver
Clock size
Brightness
Edit line names*

 **Calls**
Speed dial
Smart search
Divert calls
Switch to line 2*
Manage calls
Video share*
Time & cost*
Show/hide my no.
Handsfree
Open to answer

 **Connectivity***
Bluetooth
USB
Phone name
Network sharing
Synchronization
Device management
Mobile networks
Internet settings
Streaming settings
Message settings*
Accessories

* Some menus are operator-, network- and subscription-dependent.

** You can use the navigation key to scroll between tabs in submenus. For more information, see Navigation on page 14.

Navigation

The main menus are shown as icons. Some submenus include tabs.

To navigate the phone menus

 


- 1 From standby select **Menu**.
- 2 Use the navigation key to move up, down, left and right through the menus.



To select actions on the screen

- Select an action shown at the bottom of the screen by pressing the left or right selection key, or the centre navigation key.

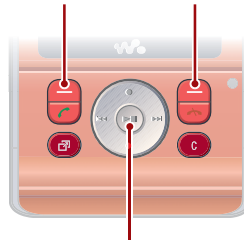Selection keys



Centre navigation key

- To view options for an item
 - Select **Options** to, for example, edit.
- To scroll between the tabs
 - Scroll to a tab by pressing the navigation key left or right.
- To return to standby
 - Press .
- To end a function
 - Press .

To navigate your media

- 1 From standby select **Media**.
- 2 Use the navigation key to move through the menus.
- 3 Select from the list.

To delete items

- Press **(C)** to delete items such as numbers, letters, pictures and sounds.

Shortcuts

You can use keypad shortcuts to go directly to a menu. Menu numbering starts from the top left icon and moves across and then down row by row.

To go directly to a main menu

- From standby select **Menu** and press **(1)** - **(9)**, **(*aA)**, **(0+)** or **(#->?)**.

To use navigation key shortcuts

- From standby press **(1)**, **(2)**, **(3)** or **(4)** to go directly to a function.

To edit a navigation key shortcut

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Shortcuts**.
- 2 Scroll to an option and select **Edit**.
- 3 Scroll to a menu option and select **Shortc.**

Activity menu

The activity menu gives you quick access to certain functions.

To open the activity menu

- Press **(E)**.

Activity menu tabs

- **New events** – missed calls and new messages.
- **Running apps** – applications that are running in the background.
- **My shortcuts** – add your favourite functions to access them quickly.
- **Internet** – quick access to the Internet.

File manager

You can use the file manager to handle files saved in the phone memory or on a memory card.

- ! You may have to purchase a memory card separately.

Memory card

 
Your phone supports Memory Stick Micro™ (M2™) memory card adding more storage space to your phone. It can also be used as a portable memory card with other compatible devices.

To insert a memory card



- Open the cover and insert the memory card with the golden contacts facing down.

To remove a memory card

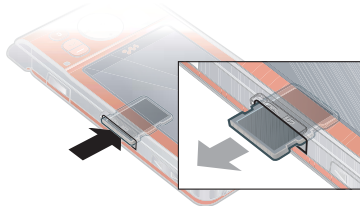

- Open the cover and press the edge of the memory card to release and remove it.

To view memory card options

- 1 From standby select **Menu > Organizer > File manager > the On memory card tab.**
- 2 Select **Options.**

Handling files

You can move and copy files between your phone, a computer and a memory card. Files are saved on the memory card first and then in the phone memory. Unrecognized files are saved in the **Other** folder.

You can create subfolders to move or copy files to. You can select more than one or all the files in a folder at the same time for all folders except **Games** and **Applications.**

If the memory is full, delete some content to create space.

File manager tabs

The file manager is divided into three tabs, and icons indicate where the files are saved.

- **All files** – all content in the phone memory and on a memory card
- **In phone** – all content in the phone memory
- **On memory card** – all content on a memory card

To view information about files

- 1 From standby select **Menu > Organizer > File manager.**
- 2 Find a file and select **Options > Information.**

To move a file in the file manager

- 1 From standby select **Menu** > **Organizer** > **File manager**.
- 2 Find a file and select **Options** > **Manage file** > **Move**.
- 3 Select an option.

To select more than one file in a folder

- 1 From standby select **Menu** > **Organizer** > **File manager**.
- 2 Scroll to a folder and select **Open**.
- 3 Select **Options** > **Mark** > **Mark several**.
- 4 For each file you want to mark, scroll to the file and select **Mark**.

To delete a file from the file manager

- 1 From standby select **Menu** > **Organizer** > **File manager**.
- 2 Find the file and press **C**.

Phone language

You can select a language to use in your phone.

To change the phone language

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Language** > **Phone language**.
- 2 Select an option.

Entering text

You can use multitap text input or T9™ Text Input **T9** to enter text. The T9 Text Input method uses a built-in dictionary.

To change text input method

- When you enter text, press and hold down ***a/A**.

To shift between capitals and lower-case letters

- When you enter text, press ***a/A**.

To enter numbers

- When you enter text, press and hold down **0+** – **9**.

To enter full stops and commas

- When you enter text, press **1**.

To enter text using T9™ Text Input

- 1 From standby select, for example, **Menu** > **Messaging** > **Write new** > **Text message**.
- 2 If **T9** is not displayed, press and hold down ***a/A** to change to T9 Text Input.
- 3 Press each key only once, even if the letter you want is not the first letter on the key. For example, to write the word “Jane”, press **5**, **2**, **6**, **3**. Write the whole word before looking at the suggestions.

- 4 Use or to view suggestions.
- 5 Press to accept a suggestion.

To enter text using multitap

- 1 From standby select, for example, **Menu > Messaging > Write new > Text message**.
- 2 If **T9** is displayed, press and hold down to change to multitap text input.
- 3 Press - repeatedly until the desired letter appears.
- 4 When a word is written, press to add a space.

Multitap input only applies when Latin characters are selected as input language.

To add words to the built-in dictionary

- 1 When you enter text using T9 Text Input, select **Options > Spell word**.
- 2 Write the word using multitap input and select **Insert**.

Chinese input

This mobile phone has different input methods for entering Chinese characters:

- Stroke input
- Pinyin input

You can use these methods, for example, to enter Chinese names and Chinese short messages.

Switching between Chinese input methods

In the Chinese editing mode, you can select and switch quickly to another input method by pressing and holding .

General instructions

Regardless of which input method you choose, your phone has a function to speed up the entry of Chinese characters. Whenever you enter a stroke or a Pinyin letter, a candidate row of the most frequently used characters containing that stroke or relating to that letter appears at the bottom of the screen.

If the character you want is not displayed in the candidate row, press to present another candidate row. Continue pressing until the character you want is displayed. Alternatively, you can enter the next stroke or Pinyin letter and a new set of characters will immediately be displayed in the candidate row. To go back to the previous row, press . To select a character in the candidate row, press the navigation key.

Stroke input

A Chinese character is built up of strokes. There are more than 30 basic strokes, which are grouped into 5 stroke categories. Each category is represented on the keypad by one of the keys (1) - (5). The Wild Card key (6), is used when you are not sure of which stroke to use.

Stroke categories

The 5 stroke categories are defined in the table below:

| Number Key | Stroke Category | Basic Stroke | Stroke Name | Character |
|------------|-----------------|--------------|------------------|--------------|
| 1 | 一 | 一 | Over | 王 十 在 |
| | | 丿 | Lift | 海 红 牡 状 习 |
| 2 | 丨 | 丨 | Down | 中 业 上 门 丑 |
| | | 𠃉 | Down-Hook | 小 水 打 子 承 |
| | | 丨 | Short Slope Down | 直 真 质 草 |
| 3 | 丿 | 丿 | Long Left Slope | 八 九 丹 风 片 |
| | | ㇇ | Over Slope | 香 千 匕 后 丢 |
| | | 丶 | Short left Slope | 而 页 面 学 殷 |


| Number Key | Stroke Category | Basic Stroke | Stroke Name | Character |
|------------|-----------------|--------------|-----------------------|--------------|
| 4 | 丶 | 丶 | Dot | 六 学 雷 心 性 |
| | | ㇇ | Right Slope | 人 火 又 送 林 |
| | | ㇏ | Down-Curved-Over | 四 西 西 酸 |
| 5 | ㇇ | ㇏ | Down-Over | 山 巨 屯 母 凶 |
| | | ㇏ | Left Slope-Over | 么 去 公 约 能 |
| | | ㇏ | Left Slope-Dot | 女 要 好 巡 巢 |
| | | ㇏ | Down-Lift | 衣 以 饭 收 长 |
| | | ㇏ | Right Slope-Hook | 我 或 民 成 伐 |
| | | ㇏ | Down-Over-Hook | 心 必 思 忘 |
| | | ㇏ | Down-Over-Curved-Hook | 电 也 毛 冗 孔 |
| | | ㇏ | Down-Over-Left Slope | 专 传 转 |
| 5 | ㇏ | ㇏ | Down-Over-Down-Hook | 马 与 张 号 费 |
| | | ㇏ | Down-Over-Down | 鼎 鼐 |
| | | ㇏ | Over-Hook | 写 字 皮 通 兔 |

| Number Key | Stroke Category | Basic Stroke | Stroke Name | Character |
|------------|-------------------|--------------|-----------------------------|--------------|
| | | フ | Over-Down | 口 己 户 书 骨 |
| | | フ | Over-Down-Hook | 力 习 也 同 永 |
| | | フ | Over-Left Slope | 又 之 登 多 社 |
| | | フ | Over-Down-Over-Left Slope | 及 极 廷 建 |
| | | フ | Over-Left Slope-Curved-Hook | 阿 队 陈 那 部 |
| | | フ | Over-Down-Over-Hook | 乃 透 龠 隹 杨 |
| | | フ | Over-Down-Over-Down | 凸 |
| | | フ | Curved-Hook | 狗 豹 家 逐 狂 |
| | | フ | Over-Down-Curved-Hook | 乙 九 瓦 飞 风 |
| | | フ | Over-Down-Over | 投 沿 船 凹 |
| | | フ | Over-Down-Lift | 话 计 认 讯 |
| 6 | ? (Wild card key) | | | |



Components

The basic building units of Chinese characters are components that are made up of strokes. After entering the first two strokes of the desired character, the component and character candidates that started with that stroke are displayed in the candidate row.


 
 
 
 
Using components is a fast method for entering complex characters.

 The smaller candidates surrounded by dotted frames are components, and the bigger candidates without dotted frames are characters.

For example, to enter “信息”

- 1 Enter “フ”, “|” and “\”.
- 2 Move the cursor to “信”, press .
- 3 Move the cursor to “息”, press  again to select “息”.

Example of using the wild card key

The wild card key , is used to supplement unclear strokes in entering characters. If you want to enter “互”, but you only know that “一” is the first and the last stroke of the character and that the total number of strokes is four, enter , , , . The character is displayed in the candidate row.

Pinyin input

Press the keys containing the required Pinyin letters, and the phone will make various proposals on the screen, according to the pronunciation rules of Mandarin.

Below is the key mapping of Pinyin letters on the keypad.

| Number Key | Pinyin Letter |
|------------|---------------|
| 2 | a b c |
| 3 | d e f |
| 4 | g h i |
| 5 | j k l |
| 6 | m n o |
| 7 | p q r s |
| 8 | t u ü |
| 9 | w x y z |

💡 On the keypad, the letter ü is replaced by v.

For example, to enter “信息”

- 1 Press (9), (4), (6).
- 2 When “xin” is highlighted, press ⤴ or ⤵ and select “信”, then press ⏹. (If you want to enter any of the other suggested Pinyin combinations, scroll up or down to the desired combination, then press ⏹).
- 3 Press ⏹ again to select “息”, when “息” is highlighted.

Fuzzy Pinyin

Fuzzy Pinyin is an option for the Pinyin input method, which contains additional spelling alternatives.

When in Pinyin input mode, press **Options > Writing options > Fuzzy Pinyin > On**.

Input punctuation, symbols and smilies

Under any Input mode, > **Options > Add symbol**, or > **Add item** to see the table of punctuation marks, symbols and smilies. Use the navigation key to make a selection. Press (#-☞) to enter a space into the text.