- 13 Volume, digital zoom keys
- 14 Main camera
- 15 Camera key
- 16 Cover lock
- 17 Connector for charger, handsfree and USB cable
- 18 Strap holder



Getting started

Menu overview



PlayNow™*



Internet*



Entertainment

Online services*
TrackIDTM
Games
VideoDJTM PhotoDJ™
MusicDJ™
Remote control
Record sound
Demo tour



Media Media

Photo Music Video Games TV* Web feeds Settings



Radio

Cyber-shot™

Messaging

Write new Write new
Inbox
Email
Drafts
Outbox
Sent messages
Saved messages
My friends*
Call voicemail Templates
Manage messages
Settings

[Contacts


Myself New contact

Location services

Google Maps* Navigation* Tracker My favorites Status info Log Settings

Getting started

Preflighted by **Elanders** Passed FAILED

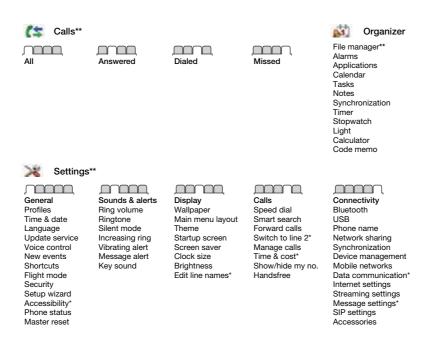


^{*} Some menus are operator-, network- and subscription-dependent.

** You can use the navigation key to scroll between tabs in submenus. For more information, see Navigation on page 14.

Navigation

The main menus are shown as icons. Some submenus include tabs.

To navigate the phone menus

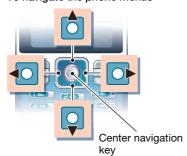

- 1 From standby select Menu.
- 2 Use the navigation key to move through the menus.

To select actions on the screen

 Press the left or right selection key, or the center navigation key.

To view options for an item

• Select Options to, for example, edit.

To scroll between the tabs

 Scroll to a tab by pressing the navigation key left or right.

To return to standby

Press

To end a function

Press

To navigate your media

- 1 From standby select Menu > Media.
- 2 Scroll to a menu item and press the navigation key right.
- 3 To go back, press the navigation key left.

To delete items

 Press © to delete items such as numbers, letters, pictures and sounds.

To send items

- 1 Scroll to an item such as a contact, a picture or a sound.
- 2 Select Options > Send.
- 3 Select a transfer method.
- Make sure the receiving device supports the transfer method you select.

14 Getting started

Shortcuts

You can use keypad shortcuts to go directly to a menu. Menu numbering starts from the top left icon and moves across and then down row by row.

To go directly to a main menu

- From standby select Menu and press
 1 (9), (★ shee), (0 +) or (#→疹).
- The Main menu layout must be set to
 Grid. See To change the main menu layout on page 65.

To use navigation key shortcuts

From standby press (*), (*), (*) or (*)
to go directly to a function.

To edit a navigation key shortcut

- 1 From standby select Menu > Settings > the General tab > Shortcuts.
- 2 Scroll to an option and select Edit.3 Scroll to a menu option and select
- 3 Scroll to a menu option and select Shortc.

Activity menu

The activity menu gives you quick access to certain functions.

To open the activity menu

Press 团.

Activity menu tabs

- New events missed calls and new messages.
- Running apps applications that are running in the background.
- My shortcuts add your favorite functions to access them quickly.
- Internet quick access to the Internet.

Memory card

You may have to purchase a memory card separately.

Your phone supports Memory Stick Micro™ (M2™) memory card adding more storage space to your phone. It can also be used as a portable memory card with other compatible devices.

You can use the file manager to move files between the memory card and the phone memory. See *To move a file in the file manager* on page 61.

To insert a memory card



 Open the cover and insert the memory card with the gold-colored contacts facing up.

To remove a memory card



 Open the cover and press the edge of the memory card to release and remove it.

16 Getting started

To view memory card options

- 1 From standby select Menu > Organizer > File manager > the On memory card tab.
- 2 Select Options.

Phone language

You can select a language to use in your phone.

To change the phone language

- 1 From standby select Menu > Settings > the General tab > Language > Phone language.
- 2 Select an option.

Entering text

You can use multitap text input or T9™ Text Input ™ to enter text. The T9 Text Input method uses a built-in dictionary.

To change text input method

• When you enter text, press and hold down (****).

To shift between capitals and lower-case letters

• When you enter text, press (* 25% red).

To enter numbers

When you enter text, press and hold down (0+) - (9).

To enter periods and commas

• When you enter text, press 1.

To enter a symbol

- 1 When you enter text, select Options > Add symbol.
- 2 Scroll to a symbol and select Insert.

To enter text using T9™ Text Input

- 1 From standby select, for example, Menu > Messaging > Write new > Text message.
- 2 If 19 is not displayed, press and hold down (***) to change to T9 Text Input.
- 3 Press each key only once, even if the letter you want is not the first letter on the key. For example, to write the word "Jane", press (5), (2), (6), (3). Write the whole word before looking at the suggestions.
- 4 Use **(a)** or **(a)** to view suggestions.
- 5 Press #=3 to accept a suggestion.

To enter text using multitap

- 1 From standby select, for example, Menu > Messaging > Write new > Text message.
- 2 If 19 is displayed, press and hold down ** to change to multitap text input.
- 3 Press 2 9 repeatedly until the desired letter appears.
- 4 When a word is written, press (#=3) to add a space.

To add words to the built-in dictionary

- 1 When you enter text using T9 Text Input, select Options > Spell word.
- 2 Write the word using multitap input and select Insert.

Imaging

Camera and video recorder

You can take pictures and record video clips to view, save or send. You find your saved pictures and video clips in Media > Photo > Cam. album and File manager.

Viewfinder and camera keys



- 1 Zoom in or out
- 2 Take pictures/Record video

Using the camera

Your Cyber-shot™ phone has 3.2 MP with auto-focus, face detection and photo light. You can use photo light when taking pictures and recording videos.

To activate the camera

From standby press

To take a picture

- Do not record with a strong light source in the background. Use a support or the self-timer to avoid a blurred picture.
- 1 Activate the camera and press ⑤ or ⑥ to scroll to ⑥.
- 2 Press halfway down to use auto focus or face detection.
- 3 When the dot and focus frame are green, press fully down to take a picture. The picture is automatically saved on the memory card, if a memory card is inserted. If not, the picture is saved in the phone memory.

18 Imaging

Face detection

You can use face detection to bring an off-center face into focus. The camera automatically detects up to three faces, indicated by white frames. A green frame shows which face has been selected when auto-focus is used. As a rule, focus is set to the face closest to the camera.

To set face detection

- From standby select Menu
- > Cyber-shot™ > **N** > Focus
- > Face detection.

To record a video clip

- Activate the camera and press ⑤ or ⑥ to scroll to Ⅲ.
- 2 Press fully down to start recording.

To stop recording

- 1 Press 🗗.
- 2 The video clip is automatically saved on the memory card, if a memory card is inserted. If not, the video clip is saved in the phone memory.

To use zoom

- Press the volume keys up or down.
- When taking a picture, zoom is available in VGA mode only.

To adjust brightness

• Press • or •.

Getting more from the camera

You can improve an under-exposed picture with Photo fix.

To improve a picture with Photo fix

- Activate the camera and press (*) or (*)
 to scroll to (*).
- 2 Make sure Review is set to On. Select

 Settings > Review > On.
- 3 Take a picture.
- 4 During review, select Options > Photo fix.

To view pictures and video clips

- Activate the camera and press ⑤ or ⑥ to scroll to ►.
- 2 Scroll to the item.
- 3 To view a video clip, press the center navigation key.

Camera icons and settings

Icons on the screen show what the current setting is. More camera settings are available in Settings.

Icon	Description
→	Shoot mode
※ ■ ※※ 水 №	Scenes – predefined settings for common picture situations, including landscape, portrait and sport
	White balance – to adjust color tones to the lighting conditions
□ +	Metering mode
∞ **	Focus
	Light
C _{3MP} C _{2MP}	Picture size
	Video length – for picture messages, the length is limited
£	Microphone
)	Night mode
	Video: recording

(C)	Zoom
	Auto focus
	Focus frame
300+	Camera: remaining pictures

To change settings

Activate the camera and select

To view information about settings

Scroll to a setting and select 1.

Camera shortcuts

Key	Shortcut
3	Camera: Shoot mode Video: Video length
6	Camera: Scenes Video: Night mode
9 0	Self-timer
#=3	Light
(I) +	Camera key guide

20 Imaging

Transferring pictures

Transfer to and from your computer

You can use Bluetooth™ wireless technology and the USB cable to transfer pictures and video clips between your computer and phone. See Bluetooth wireless technology on page 54 and Transferring content to and from a computer on page 40 for more information.

You can view, enhance and organize your pictures and video clips on your computer by installing the Adobe™ Photoshop™ Album Starter Edition. It is included on the CD that comes with your phone and is available for download at www.sonyericsson.com/support.

Picture and video blog

A blog is a personal Web page. If your subscription supports this service, you can send pictures or video clips to a blog.

Web services may require a separate license agreement between you and the service provider. Additional regulations and charges may apply. Contact your service provider.

To send camera pictures to a blog

- 1 From standby select Menu > Media > Photo > Cam. album.
- 2 Scroll to a month and a picture. Select View.
- 3 Select Options > Send > To blog.
- 4 Enter a title and text and select OK.
- 5 Select Publish.

To send video clips to a blog

- 1 From standby select Menu > Media > Video.
- 2 Scroll to a video clip.
- 3 Select Options > Send > To blog.
- 4 Enter a title and text and select OK.
- 5 Select Publish.

To go to a blog address from contacts

- 1 From standby select Menu > Contacts.
- 2 Scroll to a contact and select a Web address.
- 3 Select Go to.

Camera printing

You can print camera pictures using the USB cable connected to a compatible printer.



You can also print using a Bluetooth compatible printer.

To print camera pictures using the USB cable

- 1 From standby select Menu > Media > Photo > Cam. album.
- 2 Scroll to a month and a picture.
- 3 Select Options > Print.
- 4 Select an option.
- 5 Connect the USB cable to the phone.
- 6 Connect the USB cable to the printer.
- 7 Wait for feedback in the phone and select OK.
- 8 Enter printer settings, if required, and select Print.
- You should disconnect and re-connect the USB cable if there is a printer error.

Pictures

You can view and tag your pictures in Media.

To view pictures in a slide show

- 1 From standby select Menu > Media > Photo > Cam. album.
- 2 Scroll to a month and a picture. Select View.
- 3 Select Options > Slide show.
- 4 Select a mood.

Viewing pictures on a map Location data * is included when you take pictures with the camera. This allows you to view the approximate location of where a picture was taken.

To view pictures on a map

- 1 From standby select Menu > Media > Photo > Cam. album.
- 2 Scroll to a month and a picture. Select
- 3 Select Options > View on map.

To turn off location data for pictures

- From standby select Menu
 - > Cyber-shot™ > N
 - > Add position > Off.

Imaging

Photo tags

You can tag pictures to categorize them. They are saved in Photo tags.

To tag pictures

- 1 From standby select Menu > Media > Photo > Cam. album.
- 2 Scroll to a month and a picture. Select View.
- 3 Press and scroll to a tag.
- 4 Press the center navigation key.
- 5 For each picture you want to tag, use

 or

 to to scroll to the picture and press the center navigation key.

To create a new photo tag

- 1 From standby select Menu > Media > Photo > Cam. album.
- 2 Scroll to a month and a picture. Select View.
- 3 Press $\widehat{\mbox{\ \ }}$ and select Options > New tag.
- 4 Enter a name and select OK.
- 5 Select an icon.
- 6 Press the center navigation key to tag the picture.

Using pictures

You can add a picture to a contact, use it during phone startup, as a wallpaper in standby or as a screen saver.

To use pictures

- 1 From standby select Menu > Media > Photo > Cam. album.
- 2 Scroll to a month and a picture. Select View.
- 3 Select Options > Use as.
- 4 Select an option.

PhotoDJ™ and VideoDJ™

You can edit pictures and video clips.

To edit and save a picture

- 1 From standby select Menu > Media > Photo > Cam. album.
- 2 Scroll to a month and a picture. Select View.
- 3 Select Options > Edit in PhotoDJ™.
- 4 Edit the picture.
- 5 Select Options > Save picture.

To edit and save a video clip

- 1 From standby select Menu > Organizer > File manager > Videos.
- 2 Scroll to a video clip and select Options > Edit in VideoDJ™.
- 3 Edit the video clip.
- 4 Select Options > Save.

To trim a video clip

- 1 From standby select Menu > Organizer > File manager > Videos.
- 2 Scroll to a video clip and select Options > Edit in VideoDJ™ > Edit > Trim.
- 3 Select Set to set the starting point and select Start.
- 4 Select Set to set the ending point and select End.
- 5 Select Trim > Options > Save.

Calling

Making and receiving calls

You need to turn on your phone and be within range of a network.

To make a call

- 1 From standby enter a phone number (with international country code and area code, if applicable).
- 2 Press C.
- You can call numbers from your contacts and call list. See Contacts on page 26, and Call list on page 29. You can also use your voice to make calls. See Voice control on page 29.

To end a call

Press

To make international calls

- 1 From standby press and hold down + until a + sign appears.
- Enter the country code, area code (without the first zero) and phone number.
- 3 Press 🥕.

To re-dial a number

When Retry? appears select Yes.

A Do not hold your phone to your ear when waiting. When the call connects, your phone gives a loud signal.

To answer a call

Press

To reject a call

Press

To change the ear speaker volume during a call

• Press the volume key up or down.

To mute the microphone during a call

- 1 Press and hold down ©.
- 2 Press and hold down © again to resume.

To turn the loudspeaker on during a call

Select SpkrOn.



Do not hold your phone to your ear when using the loudspeaker. This could damage your hearing.

To view missed calls from standby

Press r to open the call list.

Emergency calls

Your phone supports international emergency numbers, for example, 112 and 911. These numbers can normally be used to make emergency calls in any country, with or without the SIM card inserted, if a GSM network is within range.

In some countries, other emergency numbers may also be promoted. Your network operator may therefore have saved additional local emergency numbers on the SIM card.

To make an emergency call

• From standby enter 112 (the international emergency number) and press c.

To view your local emergency numbers

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > Special numbers > Emergency nos.

Contacts

You can save names, phone numbers and personal information in Contacts. Information can be saved in the phone memory or on the SIM card.

Default contacts

You can choose which contact information is shown as default. If Phone contacts is selected as default, your contacts show all the information saved in Contacts. If you select SIM contacts as default, your contacts show names and numbers saved on the SIM card.

To select default contacts

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > Advanced > Default contacts.
- 3 Select an option.

Phone contacts

Phone contacts can contain names, phone numbers and personal information. They are saved in the phone memory.

To add a phone contact

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Add.
- 3 Enter the name and select OK.

- 4 Scroll to New number: and select Add.
- 5 Enter the number and select OK.
- 6 Select a number option.
- 7 Scroll between tabs and select the fields to add information.
- 8 Select Save.

Calling contacts

To call a phone contact

- 1 From standby select Menu > Contacts.
- 2 Scroll to a contact and press c.

To go directly to the contacts list

From standby press and hold down
 2 - 9.

To call with Smart search

- 1 From standby press (1+) (9) to enter a contact name or a phone number. All entries which match the sequence of digits or letters are shown in a list.
- 2 Scroll to a contact or a phone number and press eals.

To turn Smart search on or off

- 1 From standby select Menu > Settings > the Calls tab > Smart search.
- 2 Select an option.

26 Calling

Editing contacts

To add information to a phone contact

- 1 From standby select Menu > Contacts.
- 2 Scroll to a contact and select Options > Edit contact.
- 3 Scroll between the tabs and select Add or Edit.
- 4 Select an option and an item to add or edit.
- 5 Select Save.
- Lif your subscription supports Calling Line Identification (CLI) service, you can assign personal ringtones and pictures to contacts.

To copy names and numbers to phone contacts

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > Advanced > Copy from SIM.
- 3 Select an option.

To copy names and numbers to the SIM card

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > Advanced > Copy to SIM.
- 3 Select an option.
- When you copy all contacts from your phone to the SIM card, all existing SIM card information is replaced.

To automatically save names and phone numbers on the SIM card

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > Advanced > Auto save on SIM.
- 3 Select an option.

To save contacts on a memory card

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > Advanced > Back up to m. card.

SIM contacts

SIM contacts can contain names and numbers only. They are saved on the SIM card.

To add a SIM contact

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Add.
- 3 Enter the name and select OK.
- 4 Enter the number and select OK.
- 5 Select a number option and add more information, if available.
- 6 Select Save.

To call a SIM contact

- 1 From standby select Menu > Contacts.
- 2 Scroll to a contact and press c.

27

Deleting contacts

To delete all contacts

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > Advanced > Delete all contacts.
- 3 Select an option.

Memory status

The number of contacts you can save in your phone or on the SIM card depends on available memory.

To view memory status

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > Advanced > Memory status.

Synchronizing contacts

The Sony Ericsson PC Suite is designed to work with the following programs:

- Windows Contact (Vista Contacts Manager)
- Windows Calendar (Vista Calendar)
- Microsoft® Outlook® 2007
- Microsoft Outlook 2003
- Microsoft Outlook 2002Microsoft Outlook 2000
- Lotus Notes™ 7
- Lotus Notes 6.5
- Lotus Notes 6
- Lotus Notes 5
- 28 Calling

- Windows Address Book (Outlook Express)
- Sony Ericsson PC Suite proprietary contact & calendar manager
 For more information see Synchronizing on page 57.

Groups

You can create a group of phone numbers and email addresses from Phone contacts to send messages to. See Messaging on page 34. You can also use groups (with phone numbers) when you create accepted callers lists. See Accept calls on page 32.

To create a group of numbers and email addresses

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > Groups.
- 3 Scroll to New group and select Add.
- 4 Enter a name for the group and select Continue.
- 5 Scroll to New and select Add.
- 6 For each contact phone number or email address you want to mark, scroll to it and select Mark.
- 7 Select Continue > Done.

Call list

You can view information about recent calls.

To call a number from the call list

- From standby press ightharpoonup and scroll to a tab.
- 2 Scroll to a name or a number and press c.

To add a call list number to contacts

- 1 From standby press
 and scroll to a tab.
- 2 Scroll to the number and select Save.
- 3 Select New contact to create a new contact or select an existing contact to add the number to.

Speed dial

Speed dialing lets you select nine contacts that you can dial quickly. The contacts can be saved in positions 1-9.

To add contacts to speed dial numbers

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > Speed dial.
- 3 Scroll to a position number and select Add.
- 4 Select a contact.

To speed dial

• From standby enter the position number and press c.

Voicemail

If your subscription includes an answering service, callers can leave a voicemail message when you cannot answer a call.

To enter your voicemail number

- 1 From standby select Menu > Messaging > Settings > Voicemail number.
- 2 Enter the number and select OK.

To call your voicemail service

 From standby press and hold down 1.

Voice control

By creating voice commands you can:

- Voice dial call someone by saying their name.
- Answer and reject calls when you use a handsfree.

To record a voice command using voice dialing

- 1 From standby select Menu > Settings > the General tab > Voice control
 - > Voice dialing > Activate.

- 2 Select Yes > New voice command and select a contact. If the contact has more than one number, select the number to add the voice command to.
- 3 Record a voice command such as "John mobile".
- 4 Follow the instructions that appear. Wait for the tone and say the command to record. The voice command is played back to you.
- 5 If the recording sounds OK, select Yes. If not, select No and repeat steps 3 and 4.
- Voice commands are saved in the phone memory only. They cannot be used in another phone.

Voice dialing

You can hear your recorded contact name when you receive a call from that contact.

To voice dial

- From standby press and hold down a volume key.
- Wait for the tone and say a recorded name, for example "John mobile". The name is played back to you and the call is connected.

Voice answering

When you use a handsfree, you can answer or reject incoming calls with your voice.

To activate voice answering and record voice answer commands

- 1 From standby select Menu > Settings > the General tab > Voice control > Voice answer > Activate.
- 2 Follow the instructions that appear and select Cont. Wait for the tone and say "Answer", or another word.
- 3 Select Yes to accept or No for a new recording.
- 4 Follow the instructions that appear and select Cont. Wait for the tone and say "Busy", or another word.
- 5 Select Yes to accept or No for a new recording.
- 6 Follow the instructions that appear and select Cont.
- 7 Select where your voice answering is to be activated.

To answer a call using voice commands

Say "Answer".

To reject a call using voice commands

Say "Busy".

Forwarding calls

You can forward calls, for example, to an answering service.

 When Restrict calls is used, some forward call options are not available.
 See Restricted dialing on page 33.

To forward calls

- 1 From standby select Menu > Settings > the Calls tab > Forward calls.
- 2 Select a call type and a forward option.
- 3 Select Activate.
- 4 Enter the number to forward calls to and select OK.

More than one call

You can handle more than one call at a time. For example, you can put an ongoing call on hold, while you make or answer a second call. You can also switch between the two calls. You cannot answer a third call without ending one of the first two calls.

Call waiting

When call waiting is used, you hear continuous beep if you receive a second call.

To activate call waiting

 From standby select Menu > Settings > the Calls tab > Manage calls > Call waiting > Activate.

To make a second call

- 1 During the call, select Options > Hold call. This puts the ongoing call on hold.
- 2 Select Options > Add call.
- 3 Enter the number to call and press c.

To answer a second call

 During the call, press . This puts the ongoing call on hold.

To reject a second call

During the call, press
 and continue with the ongoing call.

To end an ongoing call and answer a second call

• During the call, select Replace active call.

Handling two voice calls

You can have calls ongoing and on hold at the same time.

To switch between two calls

During the call, press

To join two calls

During the call, select Options > Join calls.

31



To connect two calls

During the call, select Options > Transfer call. You are disconnected from both calls.

To end an ongoing call and return to the call on hold

First press 🗻 and then 🌈.



Conference calls
With a conference call, you can have a joint conversation with up to five people.

To add a new participant

- During the call, select Options > Hold call. This puts the joined calls on hold.
- 2 Select Options > Add call.
- 3 Enter the number to call and press c.
- 4 Select Options > Join calls to add the new participant.
- 5 Repeat this task to add more participants.

To release a participant

- Select Options > Release party.
- 2 Select the participant to release.

To have a private conversation

- During the call, select Options > Talk to and select the participant to talk to.
- To resume the conference call, select Options > Join calls.

Calling

My numbers

You can view, add and edit your own phone numbers.

To check your phone numbers

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > Special numbers > My numbers.
- 3 Select an option.

Accept calls

You can choose to receive calls from certain phone numbers only.

To add numbers to the accepted callers list

- 1 From standby select Menu > Settings > the Calls tab > Manage calls > Accept calls > Only from list.
- 2 Scroll to New and select Add.
- 3 Select a contact or Groups.
- '. See Groups on page 28.

To accept all calls

• From standby select Menu > Settings > the Calls tab > Manage calls > Accept calls > All callers.

Restricted dialing
You can restrict outgoing and incoming calls. A password from your service provider is required.

If you forward incoming calls, you cannot use some restrict calls options.

Restrict calls options Standard options are:

- All outgoing all outgoing callsOutgoing intl all outgoing international calls
- Outgoing intl roam. all outgoing international calls except to your home country
- All incoming all incoming calls
- Inc. when roaming all incoming calls when you are abroad

To restrict calls

- 1 From standby select Menu > Settings > the Calls tab > Manage calls > Restrict calls.
- 2 Select an option.
- 3 Select Activate.
- 4 Enter your password and select OK.

Call time and cost
During a call, the duration of the call is shown. You can check the duration of your last call, outgoing calls and the total time of your calls.

To check the call time

• From standby select Menu > Settings > the Calls tab > Time & cost > Call timers.

Showing or hiding your phone number

You can decide to show or hide your phone number when you make a call.

To hide your phone number

- 1 From standby select Menu > Settings > the Calls tab > Show/hide my no.
- 2 Select Hide number.

Messaging

Receiving and saving messages

You are notified when you receive a message. Messages are automatically saved in the phone memory. When the phone memory is full, you can delete messages or save them on a memory card or on the SIM card.

To save a message on a memory card

 From standby select Menu > Messaging > Settings > General > Save to > Memory card.

To save a message on the SIM card

- 1 From standby select Menu > Messaging and select a folder.
- 2 Scroll to a message and select Options> Save message.

To view a message from the inbox

- 1 From standby select Menu > Messaging > Inbox.
- 2 Scroll to the message and select View.

Text messages

Text messages can contain simple pictures, sound effects, animations, and melodies.

Before you use messaging

You must have a service center number. The number is supplied by your service provider and is usually saved on the SIM card. If the number to your service center is not saved on your SIM card, you must enter the number yourself.

To enter a service center number

- 1 From standby select Menu > Messaging > Settings > Text message and scroll to Service center. The number is shown if it is saved on the SIM card.
- 2 If there is no number shown, select Edit.
- 3 Scroll to New Service Center and select Add.
- 4 Enter the number, including the international "+" sign and country code.
- 5 Select Save.

4 Messaging

To write and send a text message

- 1 From standby select Menu > Messaging > Write new > Text message.
- 2 Write the message and select Continue > Contacts lookup.
- 3 Select a recipient and select Send.
- If you send a text message to a group, you will be charged for each member. See Groups on page 28.

To copy and paste text in a text message

- 1 When you write the message, select Options > Copy & paste.
- 2 Select Copy all or Mark & copy. Scroll to and mark text in the message.
- 3 Select Options > Copy & paste > Paste.

To add an item to a text message

- 1 When you write the message, select Options > Add item.
- 2 Select an option and then an item.

To call a number in a text message

 When you view the message, scroll to the phone number and press

To turn long messages on

- 1 From standby select Menu > Messaging > Settings > Text message.
- 2 Select Max. msg length > Max. available.

Picture messages

Picture messages can contain text, pictures, slides, sound recordings, video clips, signatures and attachments. You can send picture messages to a phone or an email address.

Before you use picture messaging

You must set an MMS profile and the address of your message server. If no MMS profile or message server exists, you can receive all the settings automatically from your network operator or at www.sonyericsson.com/support.

To select an MMS profile

- 1 From standby select Menu > Messaging > Settings > Picture message > MMS profile.
- 2 Select a profile.

To set the message server address

- 1 From standby select Menu > Messaging > Settings > Picture message.
- 2 Scroll to MMS profile and select Edit.
- 3 Select Options > Edit.
- 4 Scroll to Message server and select Edit.
- 5 Enter the address and select OK > Save.

To create and send a picture message

- 1 From standby select Menu > Messaging > Write new > Picture msg.
- 2 Enter text. To add items to the message, press ♠, scroll ♠ and select an item.
- 3 Select Continue > Contacts lookup.
- 4 Select a recipient and select Send.

Receiving picture messages You can select how to download your picture messages. Standard options when you download picture messages are:

- Always automatic download.
- Ask in roaming ask to download when not in home network.
- Not in roaming do not download when not in home network.
- Always ask ask to download.
- Off new messages appear in the lnbox.

To set automatic download

- 1 From standby select Menu > Messaging > Settings > Picture message > Auto download.
- 2 Select an option.

Message options

You can set standard options for all messages or choose specific settings each time you send a message.

To set text message options

- 1 From standby select Menu > Messaging > Settings > Text message.
- 2 Scroll to an option and select Edit.

To set picture message options

- 1 From standby select Menu > Messaging > Settings > Picture message.
- 2 Scroll to an option and select Edit.

To set message options for a specific message

- 1 When the message is ready and a recipient is selected, select Options > Advanced.
- 2 Scroll to an option and select Edit.

Messaging

36

Voice messages
You can send and receive a sound recording as a voice message.

The sender and recipient must have a subscription supporting picture messaging.

To record and send a voice message

- 1 From standby select Menu > Messaging > Write new > Voice message.
- 2 Record the message and select Stop > Send > Contacts lookup.
- 3 Select a recipient and select Send.

Email

You can use standard email functions and your computer email address in your phone.

Before you use email

You can use the setup wizard to check if settings are available for your email account or you can enter them manually. You can also receive settings at www.sonyericsson.com/support.

To create an email account

- 1 From standby select Menu > Messaging > Email > Accounts.
- 2 Scroll to New account and select Add.

'- If you enter settings manually, you can contact your email provider for more information.

To write and send an email message

- 1 From standby select Menu > Messaging > Email > Write new.
- 2 Select Add > Enter email address. Enter the email address and select OK.
- 3 To add more recipients, scroll to To: and select Edit.
- 4 Scroll to an option and select Add > Enter email address. Enter the email address and select OK. When you are ready, select Done.
- 5 Select Edit and enter a subject. Select OK.
- 6 Select Edit and enter the text. Select OK.
- 7 Select Add and choose a file to attach (if you want to include a file).
- 8 Select Cont. > Send.

To receive and read an email message

- 1 From standby select Menu > Messaging > Email > Inbox > Options > Check new
- 2 Scroll to the message and select View.

To save an email message

- 1 From standby select Menu > Messaging > Email > Inbox.
- 2 Scroll to the message and select View > Options > Save message.

To reply to an email message

- 1 From standby select Menu > Messaging > Email > Inbox.
- 2 Scroll to the message and select Options > Reply.
- 3 Write the reply and select OK.
- 4 Select Cont. > Send.

To view an attachment in an email message

• When you view the message, select Options > Attachments > Use > View.

To save an attachment in an email message

When you view the message, select
 Options > Attachments > Use > Save.

Synchronizing email

Email can be synchronized with a Microsoft Exchange Server (Microsoft Outlook). For more information see Synchronizing on page 57.

Active email account

If you have several email accounts, you can change which one is active.

To change the active email account

- 1 From standby select Menu > Messaging > Email > Accounts.
- 2 Select an account.

Push email

You can receive notification in your phone from your email server that you have new email messages.

To turn on push email notification

• From standby select Menu > Messaging > Email > Settings > Push email.

My friends

You can connect and log in to the My friends server to communicate online with chat messages.

Before you use My friends

If no settings exist in your phone, you need to enter server settings. Your service provider can provide standard settings information such as:

- Username
- Password
- Server address
- Internet profile

38 Messaging

To enter My friends server settings

- 1 From standby select Menu > Messaging > My friends > Configure.
- 2 Scroll to a setting and select Add.

To log in to the My friends server

From standby select Menu > Messaging
 My friends > Log in.

To log out of the My friends server

Select Options > Log out.

To add a chat contact

- 1 From standby select Menu > Messaging > My friends > the Contacts tab.
- 2 Select Options > Add contact.

To send a chat message

- 1 From standby select Menu > Messaging > My friends > the Contacts tab.
- 2 Scroll to a contact and select Chat.
- 3 Write the message and select Send.

Status

You can show your status, for example, Happy or Busy, to your contacts only. You can also show your status to all users on the My friends server.

To show my status

- 1 From standby select Menu > Messaging > My friends > Options > Settings > Show my status.
- 2 Select an option.

To update your own status

- 1 From standby select Menu > Messaging > My friends > the My status tab.
- 2 Edit the information.
- 3 Select Options > Save.

Chat group

A chat group can be started by your service provider, by an individual My friends user or by yourself. You can save chat groups by saving a chat invitation or by searching for a specific chat group.

To create a chat group

- 1 From standby select Menu > Messaging > My friends > the Chat groups tab.
- 2 Select Options > Add chat group > New chat group.
- 3 Select who to invite from your contacts list and select Cont.
- 4 Enter a short invitation text and select Cont. > Send.

To add a chat group

- 1 From standby select Menu > Messaging > My friends > the Chat groups tab > Options > Add chat group.
- 2 Select an option.
- Conversation history is saved between log out and when you log in again to let you return to chat messages from previous conversations.

To save a conversation

- 1 From standby select Menu > Messaging > My friends > the Conversations tab.
- 2 Enter a conversation.
- 3 Select Options > Advanced > Save conversation.

Area and cell information

Area and cell information are text messages about, for example, local traffic reports that are sent to subscribers within a certain network area.

To turn area information on

- 1 From standby select Menu > Messaging > Settings > Area info.
- 2 Scroll to Reception and select Edit > On.

Media player and music

You can listen to music, audio books and podcasts. Use Sony Ericsson Media Manager to transfer content to your phone.

Sony Ericsson Media Manager software is included on the CD that comes with your phone and available for download at www.sonyericsson.com/support.

Transferring content to and from a computer

Required operating systems

You need one of these operating systems to use the software included on the CD:

- Microsoft Windows Vista[™] 32 bit and 64 bit versions of: Ultimate, Enterprise, Business, Home Premium, Home Basic
- Microsoft Windows XP (Pro or Home), Service Pack 2 or higher

To install Media Manager

- 1 Turn on your computer and insert the CD. The CD starts automatically and the installation window opens.
- 2 Select a language and click OK.
- 3 Click Install Sony Ericsson Media Manager and follow the instructions.

Media player and music

To transfer content using Media Manager

- Connect the phone to a computer with a USB cable supported by your phone.
- 2 Computer: Start/Programs/ Sony Ericsson/Media Manager.
- 3 Phone: Select Media transfer.
- Do not remove the USB cable from your phone or computer during transfer, as this may corrupt the memory card or the phone memory.
- 4 Computer: Wait until the phone appears in Media Manager.
- 5 Move files between your phone and the computer in Media Manager.
- For details on transferring music, refer to Media Manager Help. Click ? in the top right corner of the Media Manager window.

Stereo portable handsfree



To use the handsfree

 Connect the portable handsfree. Music stops when you receive a call and resumes when the call has ended.

Music player

To play music

- 1 From standby select Menu > Media > Music.
- 2 Scroll to a title and select Play.

To stop playing music

· Press the center navigation key.

To fast forward and rewind

• Press and hold down (or ().

To move between tracks

• Press (or ().

To change the volume

• Press the volume keys up or down.

Browsing files

Music is saved and categorized.

- Artists list music by artist.
- Albums list music by album.
- Tracks list all music tracks.
- Playlists create your own lists of tracks.
- Audio books list audio books you have transferred from your computer.
- Podcasts list all podcasts.

Playlists

You can create playlists to organize music files. Files can be added to more than one playlist.

Deleting a playlist, or a file from a playlist, does not delete the file from the memory, just that reference to the file.

To create a playlist

- 1 From standby select Menu > Media and scroll to Music > Playlists.
- 2 Scroll to New playlist and select Add.
- 3 Enter a name and select OK.
- 4 For each track you want to add, scroll to the track and select Mark.
- 5 Select Add to add the tracks to the playlist.

To add files to a playlist

- 1 From standby select Menu > Media and scroll to Music > Playlists.
- 2 Select a playlist.
- 3 Scroll to Add music and select Add.
- 4 For each track you want to add, scroll to the track and select Mark.
- 5 Select Add to add the tracks to the playlist.

To remove tracks from a playlist

- 1 From standby select Menu > Media and scroll to Music > Playlists.
- 2 Select a playlist.
- 3 Scroll to the track and press C.

To view information about a track

Scroll to a track and select Options > Information.

Audio books

You can listen to audio books that you have transferred to your phone from a computer using Media Manager.

 It may take a few minutes before a transferred audio book appears in the list of available audio books.

To play audio books

- 1 From standby select Menu > Media > Music > Audio books.
- 2 Select an audio book.
- 3 Scroll to a chapter and select Play.
- Audio books in other formats than M4B
 or audio books that do not have ID3v2 chapter tags can be found in the Tracks folder.

42 Media player and music

PlayNow™

You can connect to PlayNow™ to download ringtones, games, music, themes and wallpapers. You can preview or listen to content before you purchase and download it to your phone.

This service is not available in all countries.

Before you use PlayNow™

You must have the required Internet connection settings in your phone. See *Settings* on page 53.

To use PlayNow™

- From standby select Menu > PlayNow™.
- 2 Scroll the PlayNow™ Web site and follow the instructions to preview and purchase content.

TrackID™

TrackID™ is a music recognition service. You can search for song titles, artists and album names.

For cost information contact your service provider.

To search for song information

- When you hear a song through a loudspeaker, from standby select Menu > Entertainment > TrackID™ > Start.
- When the radio is playing select Options > TrackID™.

Online music and video clips

You can view video clips and listen to music by streaming them to your phone from the Internet. If settings are not already in your phone, see *Settings* on page 53. For more information, contact your network operator or go to www.sonyericsson.com/support.

To select a data account for streaming

- 1 From standby select Menu > Settings > the Connectivity tab > Streaming settings > Connect using:.
- 2 Select the data account to use.
- 3 Select Save.

To stream music and video clips

- 1 From standby select Menu > Internet.
- 2 Select Options > Go to > Bookmarks.
- 3 Select a link to stream from.