

Thank you for purchasing a Sony Ericsson W595c Walkman™ phone. A slim slider phone made for you and others to enjoy your music.

For additional phone content, go to [www.sonyericsson.com/fun](http://www.sonyericsson.com/fun).

Register now to get a suite of tools, free online storage, special offers, news and competitions at [www.sonyericsson.com/myphone](http://www.sonyericsson.com/myphone).

For product support, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

## Accessories – More for your phone

### Stereo Bluetooth™ Headset HBH-DS205

Enjoy wireless music without missing a call



### Wireless Portable Speaker MBS-200

Experience wireless music with powerful sound



### Bluetooth™ Music Receiver MBR-100

Enjoy the music stored on your phone through stereo loudspeakers



These accessories can be purchased separately but may not be available in every market. To view the full range go to [www.sonyericsson.com/accessories](http://www.sonyericsson.com/accessories).

This is the Internet version of the User guide. © Print only for private use.

## Contents

<b>Getting started</b> .....	<b>7</b>	MusicDJ™ .....	28
Assembly .....	7	Record sound .....	29
Turning on the phone .....	8	<b>Transferring and handling</b>	
Help .....	9	<b>content</b> .....	<b>29</b>
Charge the battery .....	9	Handling content within	
Phone overview .....	11	the phone .....	29
Menu overview .....	13	Sending content to another	
Navigation .....	15	phone .....	30
Memory .....	16	Transferring content to and from	
Phone language .....	18	a computer .....	30
Entering text .....	18	Using the USB cable .....	31
Chinese input .....	19	Phone name .....	32
Stroke input .....	19	Using Bluetooth™ wireless	
Pinyin input .....	22	technology .....	32
Fuzzy Pinyin .....	22	Backing up and restoring .....	34
<b>Walkman™</b> .....	<b>23</b>	<b>Calling</b> .....	<b>36</b>
Stereo portable handsfree .....	23	Making and receiving calls .....	36
Walkman™ player .....	23	Contacts .....	37
PlayNow™ .....	27	Call list .....	41
TrackID™ .....	27	Speed dial .....	41
Online music and video clips .....	27	Voicemail .....	41
Video player .....	28	Voice control .....	41
Radio .....	28	More than one call .....	43

Restricted dialling .....	45	<b>Synchronizing .....</b>	<b>60</b>
Call time and cost .....	46	Synchronizing using	
Showing or hiding your phone		a computer .....	60
number .....	46	Synchronizing using an internet	
<b>Messaging .....</b>	<b>46</b>	service .....	61
Text messages .....	47	<b>More features.....</b>	<b>62</b>
Picture messages .....	47	Flight mode .....	62
Message options .....	48	Update service .....	63
Templates .....	48	Location services .....	63
Voice messages .....	49	Alarms .....	64
Email .....	49	Calendar .....	65
My friends .....	51	Notes .....	66
Area and cell information .....	52	Tasks .....	66
<b>Imaging .....</b>	<b>53</b>	Profiles .....	66
Viewfinder and camera keys .....	53	Time and date .....	67
Using the camera .....	53	Theme .....	67
More camera features .....	54	Main menu layout .....	67
Viewing and tagging pictures .....	54	Ringtones .....	67
Printing photos .....	56	Screen orientation .....	68
<b>Internet.....</b>	<b>57</b>	Games .....	68
Bookmarks .....	57	Applications .....	68
History pages .....	57	Walk Mate .....	69
More browser features .....	57	Locks .....	69
Internet security and		<b>Troubleshooting.....</b>	<b>71</b>
certificates .....	58	Common questions .....	71
Web feeds .....	58	Error messages .....	74

<b>Important information</b> .....	<b>75</b>	Limited Warranty .....	80
Guidelines for Safe and Efficient Use .....	75	Declaration of Conformity for W595c .....	82
Memory Card .....	78	<b>Index</b> .....	<b>83</b>
End User License Agreement .....	79		

### Sony Ericsson W595c

GSM EDGE 850/900/1800/1900

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide. All rights reserved.

©Sony Ericsson Mobile Communications AB, 2008  
Publication number: 1215-3158.1

Please note:

Some of the services in this User guide are not supported by all networks. *This also applies to the GSM International Emergency Number 112.*

Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not.

Please read the *Important information* chapters before you use your mobile phone.

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws.

You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

Smart-Fit Rendering is a trademark or a registered trademark of ACCESS Co., Ltd.

Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under license.

The Liquid Identity logo, SensMe, PlayNow, MusicDJ, PhotoDJ, TrackID and VideoDJ are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB.

TrackID™ is powered by Gracenote Mobile MusicID™. Gracenote and Gracenote Mobile MusicID are trademarks or registered trademarks of Gracenote, Inc.

WALKMAN is a trademark or a registered trademark of Sony Corporation.

Lotus Notes is a trademark or a registered trademark of International Business Machines Corporation.

Sony, Memory Stick Micro™ and M2™ are trademarks or registered trademarks of Sony Corporation.

SyncML is a trademark or registered trademark of Open Mobile Alliance LTD.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.

Adobe Photoshop Album Starter Edition is a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries/regions.

Microsoft, ActiveSync, Windows, Outlook, and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries/regions.

T9™ Text Input is a trademark or a registered trademark of Tegic Communications. T9™ Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057, United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries/regions.

End-user license agreement for Sun™ Java™ J2ME™.

This product is licensed under the MPEG-4 visual and AVC patent portfolio licenses for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard ("MPEG-4 video") or the AVC standard ("AVC video") and/or (ii) decoding MPEG-4 or AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 and/or AVC video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained from MPEG LA, L.L.C. See

<http://www.mpegla.com>. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.

Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.

Export Regulations: This product, including any software or technical data contained in or accompanying the product, may be subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations and the U.S. sanctions programs administered by the U.S. Treasury Department's Office of Foreign Assets Control, and may be additionally subject to export or import regulations in other countries/regions. The user and any possessor of the product agrees to comply strictly with all such regulations and acknowledges that it is their responsibility to obtain any required licenses to export, re-export, or import this product. Without limitation this product, including any software contained therein, may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, or an entity in, Cuba, Iraq, Iran, North Korea, Sudan, Syria (as such listing may be revised from time to time) or any country/region to which the U.S. has embargoed goods; or (ii) to any person or entity on the U.S. Treasury Department's list of Specially Designated Nationals or (iii) any person or entity on any other export prohibition list that may be maintained from time to time by the United States Government, including but not limited to the U.S. Commerce Department's Denied Persons List or Entity List, or the U.S. State Department's Nonproliferation Sanctions List.

Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved.

Note: Sony Ericsson advises users to backup their personal data information.

All illustrations are for illustration only and may not accurately depict the actual phone.

## Instruction symbols

These symbols may appear in the User guide.



Note



Tip



Warning



A service or function is network- or subscription-dependent. Contact your network operator for details.



Use a selection or navigation key to scroll and select. See *Navigation* on page 15.

 


## Getting started

### Assembly


Before you start using your phone, you need to insert a SIM card and the battery.

#### To insert the SIM card

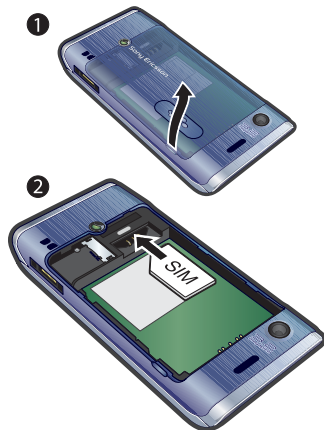

- 1 Remove the battery cover.
- 2 Slide the SIM card into its holder with the gold-coloured contacts facing down.


#### To insert the battery

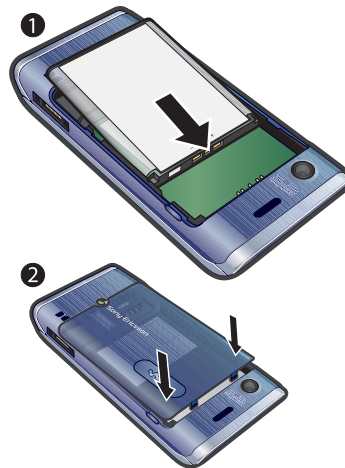 


- 1 Insert the battery with the label side up and the connectors facing each other.
- 2 Slide the battery cover into place.


## Turning on the phone
 
### To turn on the phone

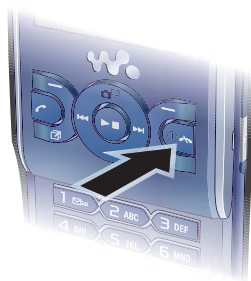

- 1 Press and hold down **OK**.
- 2 Enter your SIM card PIN, if requested and select **OK**.
- 3 Select a language.
- 4 Select **Yes** to use the setup wizard.


 To correct a mistake when you enter your PIN, press **C**.

 Before turning the phone off, you must return to standby.

#### SIM card


The SIM (Subscriber Identity Module) card, which you get from your network operator, contains information about

your subscription. Always turn off your phone and detach the charger before you insert or remove the SIM card.

 You can save contacts on the SIM card before you remove it from your phone. See *To copy names and numbers to the SIM card* on page 39.

#### PIN

You may need a PIN (Personal Identification Number) to activate the services and functions in your phone. Your PIN is supplied by your network operator. Each PIN digit appears as \*, unless it starts with emergency number digits, for example, 112 or 911. You can see and call an emergency number without entering a PIN.

 If you enter the wrong PIN three times in a row, the SIM card is blocked. See *SIM card lock* on page 69.

#### Standby

After you have turned on your phone and entered your PIN, the name of the network operator appears. This view is called standby. Your phone is now ready for use.

## Help

In addition to this User guide, Getting started guides and more information are available at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

Help and information are also available in your phone.

### To view tips and tricks

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Setup wizard**.
- 2 Select **Tips and tricks**.

### To view information about functions

- Scroll to a function and select **Info**, if available. In some cases, **Info** appears under **Options**.

### To view the phone demonstration

- From standby select **Menu** > **Entertainment** > **Demo tour**.

### To view the phone status

- From standby press the volume key up. Phone, memory and battery information is shown.

## Charge the battery

Your phone battery is partly charged when you buy it.

- ! *It may take 30 minutes for the battery icon to appear on the screen.*

### Using the USB charger

*To connect the charger and charge the battery (The illustrations are for guidance only and may not accurately depict the actual phone)*

- 1 Connect the USB cable (you can get instruction for three conditions from **Note**) plug to the AC adapter USB socket, as shown in the above illustration. The USB cable is supplied with your phone.



- 2 Connect the USB cable connector to your phone. Press a key to view the charging status on the screen. It takes approximately 2.5 hours to fully charge the battery.

### To remove the charger

- 1 Charge your battery until the battery icon indicates a full charge.

2



- 2 Tilt the USB charger connector upwards to remove it.

 
### Note:

- 1 If there are two USB cables in the kit (USB cable for charging and USB cable for data transferring. See the illustrations as below), then the USB cable for charging is only intended for charging your phone. Do not use it for transferring data.

The USB cable for the USB charger is only intended for connection to the AC adapter to charge your phone. It must not be used for connection to a PC. It can only be used for charging your phone. Never use it for charging accessories.




USB cable for charging




USB cable for transferring

- 2 If there is only one USB cable in the kit, it is intended for charging your phone as well as transferring data.
- 3 If there is only one USB cable for the USB charger in the phone kit, this USB cable is only intended for charging your phone.
- 4 Sony Ericsson strongly recommends that you use only Sony Ericsson branded original batteries, the part of power supply device in accordance with YD/T 1591-2006 specifications of Communications Industry Standards of P. R. China and the USB cable supplied with your phone to charge the phone. The use of third-party products may decrease the performance of your phone and/or pose a risk to your health or safety.

 You can charge the battery for more or less than 2.5 hours. Interrupted charging will not damage the battery.

Performance depends on temperatures, signal strength, usage patterns, features selected and voice or data transmissions. The stand-by time for this battery is up to 385 hours.


 Use only Sony Ericsson branded original batteries intended for use with your mobile phone. If you use other batteries you may not be able to charge your phone.

### Phone overview

 - 1 Ear speaker
- 2 Screen
- 3 Selection keys
- 4 Call key
- 5 Activity menu key
- 6 Selection key, Walkman™ player control
- 7 Volume key
- 8 Walkman™ key
- 9 End key, On/off key
- 10 C key (Clear)
- 11 Navigation key, Walkman™ player control
- 12 Silent key




- 13 Camera lens
- 14 Speaker
- 15 Connector for charger, handsfree and USB cable
- 16 Strap holder

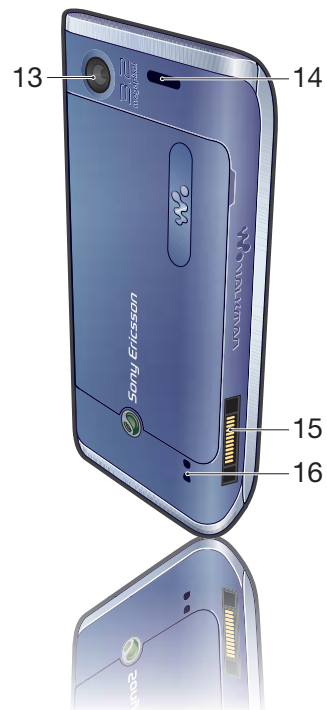

## Menu overview




  - Online services\*
- TrackID™
- Location services
- Games
- VideoDJ™
- PhotoDJ™
- MusicDJ™
- Remote control
- Record sound
- Demo tour















- Write new
- Inbox
- Email
- Drafts
- Outbox
- Sent messages
- Saved messages
- My friends\*
- Call voicemail
- Templates
- Manage messages
- Settings

- Photo
- Music
- Video
- Games
- Web feeds
- Settings



- Myself
- New contact

 <b>Calls**</b>  All	 Answered	 Dialled	 Missed	 <b>Organizer</b> File manager** Alarms Applications Calendar Tasks Notes Synchronization Timer Stopwatch Calculator Code memo
 <b>Settings**</b>  <b>General</b> Profiles Time & date Language Update service Voice control New events Shortcuts Flight mode Security Setup wizard Phone status Master reset	 <b>Sounds &amp; alerts</b> Ring volume Ringtone Silent mode Increasing ring Vibrating alert Message alert Key sound	 <b>Display</b> Wallpaper Main menu layout Theme Startup screen Screen saver Clock size Brightness Edit line names*	 <b>Calls</b> Speed dial Smart search Divert calls Switch to line 2* Manage calls Time & cost* Show/hide my no. Handsfree Open to answer Close to end call	 <b>Connectivity</b> Bluetooth USB Phone name Network sharing Synchronization Device management Mobile networks Internet settings Streaming settings SIP settings Accessories


\* Some menus are operator-, network- and subscription-dependent.

\*\* You can use the navigation key to scroll between tabs in submenus. For more information, see Navigation on page 15.



## Navigation
 
### To navigate the phone menus

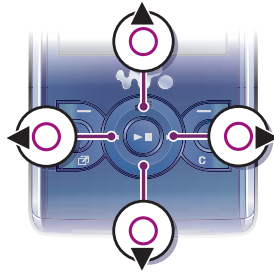

- 1 From standby select **Menu**.
- 2 Use the navigation key to move through the menus.


#### To select actions on the screen

- Press the left, centre or right selection key.


#### To view options for an item

- Select **Options** to, for example, edit.

#### To end a function

- Press .

 
#### To return to standby

- Press .

### To navigate your media

- 1 From standby select **Menu > Media**.
- 2 Scroll to a menu item and press the navigation key right.
- 3 To go back, press the navigation key left.

### To delete items

- Press  to delete items such as numbers, letters, pictures and sounds.

### Tabs

Tabs may be available. For example, **Settings** have tabs.





 

### To scroll between tabs

- Press the navigation key left or right.

### Shortcuts

You can use keypad shortcuts to go directly to functions.

### To use navigation key shortcuts

- From standby press , ,  or  to go directly to a function.

#### To edit a navigation key shortcut

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Shortcuts**.
- 2 Scroll to an option and select **Edit**.
- 3 Scroll to a menu option and select **Shortc.**

#### Main menu shortcuts

Menu numbering starts from the top left icon and moves across and then down row by row.

#### To go directly to a main menu

- From standby select **Menu** and press **1** – **9**, **(\*)**, **(0+)** or **(#→)**.

! *The Main menu layout must be set to Grid. See To change the main menu layout on page 67.*

#### Activity menu

The activity menu gives you quick access to:

- **New events** – missed calls and new messages.
- **Running apps** – applications that are running in the background.
- **My shortcuts** – add your favourite functions to access them quickly.
- **Internet** – quick access to the internet.

#### To open the activity menu

- Press **(☰)**.

## Memory

You can save content on the memory card, in the phone memory and on the SIM card. Pictures and music are saved on the memory card if a memory card is inserted. If not, or if the memory card is full, they are saved in the phone memory. Messages and contacts are saved in the phone memory, but you can choose to save them on the SIM card.

 
#### Memory card

Your phone supports Memory Stick Micro™ (M2™) memory card adding more storage space to your phone. It can also be used as a portable memory card with other compatible devices.

You can move content between the memory card and the phone memory. See *Handling content within the phone* on page 29.


! *You may have to purchase a memory card separately.*

*To insert a memory card*

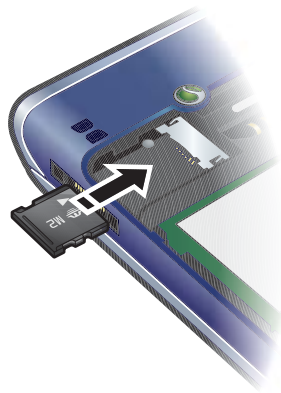

- Open the cover and insert the memory card with the gold-coloured contacts facing down.

 *To remove a memory card*

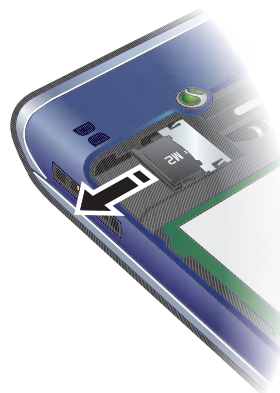

- Open the cover and remove the memory card.

#### **To view memory card options**

- 1 From standby select **Menu > Organizer > File manager > the On memory card tab.**
- 2 Select **Options.**

### **Phone language**

You can select a language to use in your phone.

#### **To change the phone language**

- 1 From standby select **Menu > Settings > the General tab > Language > Phone language.**
- 2 Select an option.

### **Entering text**

You can use multitap text input or T9™ Text Input **T9** to enter text. The T9 Text Input method uses a built-in dictionary.

#### **To change text input method**

- When you enter text, press and hold down **(\*)a/A**.

#### **To shift between capitals and lower-case letters**

- When you enter text, press **(\*)a/A**.

#### **To enter numbers**

- When you enter text, press and hold down **(0+) - (9)**.

#### **To enter full stops and commas**

- When you enter text, press **(1)**.

#### **To enter a symbol**

- 1 When you enter text, select **Options > Add symbol.**
- 2 Scroll to a symbol and select **Insert.**

#### **To enter text using T9™ Text Input**

- 1 From standby select, for example, **Menu > Messaging > Write new > Text message.**
- 2 If **T9** is not displayed, press and hold down **(\*)a/A** to change to T9 Text Input.
- 3 Press each key only once, even if the letter you want is not the first letter on the key. For example, to write the word "Jane", press **(5)**, **(2)**, **(6)**, **(3)**. Write the whole word before looking at the suggestions.
- 4 Use **(↑)** or **(↓)** to view suggestions.
- 5 Press **(#↵)** to accept a suggestion.

#### **To enter text using multitap**

- 1 From standby select, for example, **Menu > Messaging > Write new > Text message.**
- 2 If **T9** is displayed, press and hold down **(\*)a/A** to change to multitap text input.
- 3 Press **(2) - (9)** repeatedly until the desired letter appears.
- 4 When a word is written, press **(#↵)** to add a space.