

Congratulations on your purchase of the Sony Ericsson K770i.  
Share your life with friends and family in pictures. For additional  
phone content, go to [www.sonyericsson.com/fun](http://www.sonyericsson.com/fun).

 
Register now to get a suite of tools, free online storage,  
special offers, news and competitions at  
[www.sonyericsson.com/myphone](http://www.sonyericsson.com/myphone).

For product support, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

## Accessories – More for your phone

### Bluetooth™ Car Speakerphone HCB-100E

Simplicity and high performance –  
with long talk and standby times

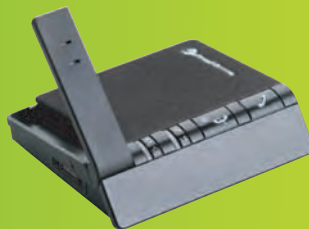

### Bluetooth™ Headset HBH- PV705

A powerful Bluetooth™ headset with  
compact design



### Camera Phone Kit IPK-100

Support and enhance the use of  
your phone with a tripod, belt clip  
and compact carrying case



These accessories can be purchased separately but may not be available in every market. To view the full range go to [www.sonyericsson.com/accessories](http://www.sonyericsson.com/accessories).

# Contents

## Getting started ..... 5

|                                  |    |
|----------------------------------|----|
| Assembly .....                   | 5  |
| Turning on the phone .....       | 6  |
| Making and receiving calls ..... | 7  |
| Help in your phone .....         | 7  |
| Charging the battery .....       | 8  |
| Phone overview .....             | 9  |
| Menu overview .....              | 11 |
| Navigation .....                 | 13 |
| Shortcuts .....                  | 14 |
| Activity menu .....              | 15 |
| File manager .....               | 15 |
| Phone language .....             | 16 |
| Entering text .....              | 17 |

## Calling ..... 18

|                                  |    |
|----------------------------------|----|
| Making and receiving calls ..... | 18 |
| Emergency calls .....            | 19 |
| Video call .....                 | 20 |
| Contacts .....                   | 20 |
| Synchronizing contacts .....     | 22 |
| Groups .....                     | 22 |
| Call list .....                  | 23 |
| Speed dial .....                 | 23 |
| Voicemail .....                  | 23 |

|                           |    |
|---------------------------|----|
| Diverting calls .....     | 25 |
| More than one call .....  | 26 |
| Conference calls .....    | 27 |
| My numbers .....          | 27 |
| Accept calls .....        | 27 |
| Restricted dialling ..... | 28 |
| Fixed dialling .....      | 28 |
| Call time and cost .....  | 29 |
| Business cards .....      | 29 |

## Messaging ..... 29

|                                 |    |
|---------------------------------|----|
| Text messages .....             | 29 |
| Picture messages .....          | 31 |
| Templates .....                 | 32 |
| Voice messages .....            | 33 |
| Email .....                     | 33 |
| My friends .....                | 36 |
| Area and cell information ..... | 37 |

## Imaging ..... 38

|                                 |    |
|---------------------------------|----|
| Camera and video recorder ..... | 38 |
| Transferring pictures .....     | 39 |
| Pictures and video clips .....  | 41 |
| PhotoDJ™ and VideoDJ™ .....     | 41 |
| Themes .....                    | 42 |

## Entertainment ..... 42

Stereo portable handsfree ..... 42

Music and video players ..... 42

TrackID™ ..... 45

Radio ..... 46

PlayNow™ ..... 47

MusicDJ™ ..... 48

Games ..... 49

Applications ..... 50

## Connectivity ..... 51

Settings ..... 51

Using Internet ..... 51

RSS reader ..... 53

Synchronizing ..... 53

Bluetooth™ wireless  
technology ..... 54

Update service ..... 58

## More features ..... 59

Alarms ..... 59

Calendar ..... 59

Tasks ..... 61

Notes ..... 61

Timer, stopwatch and  
calculator ..... 62

Code memo ..... 62

Profiles ..... 63

Time and date ..... 64

Locks ..... 64

IMEI number ..... 65

## Troubleshooting ..... 66

Common questions ..... 66

Error messages ..... 67

## Important information ..... 69

Guidelines for Safe and  
Efficient Use ..... 71

Limited Warranty ..... 75

FCC Statement ..... 78

Declaration of Conformity  
for K770i ..... 78

## Index ..... 79

## Sony Ericsson K770i

UMTS 2100 GSM 900/1800/1900

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB or its local affiliated company at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved.

©Sony Ericsson Mobile Communications AB, 2007

Publication number: 1202-3846.1

Please note:

Some of the services in this User guide are not supported by all networks. *This also applies to the GSM International Emergency Number 112.*

Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not.

Please read the *Guidelines for safe and efficient use* and the *Limited warranty* chapters before you use your mobile phone.

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any

other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

Bluetooth is a trademark or registered trademark of Bluetooth SIG Inc.

The Liquid Identity logo, PlayNow, TrackID, MusicDJ, PhotoDJ and VideoDJ are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB.

Sony, Cyber-shot, Memory Stick Micro and M2 are trademarks of Sony Corporation.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.

Adobe and Photoshop are trademarks or registered trademarks of Adobe Systems Incorporated in the United States and/or other countries.

TrackID is powered by Gracenote Mobile MusicID™. Gracenote and Gracenote Mobile MusicID are trademarks or registered trademarks of Gracenote, Inc.

Microsoft, Windows, PowerPoint, Outlook and Vista are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

T9™ Text Input is a trademark or a registered trademark of Tegic Communications. T9™ Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057, United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. End-user license agreement for Sun™ Java™ J2ME™.

Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.

Export Regulations: Software, including technical data, is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries. Customer agrees to comply strictly with all such regulations and acknowledges that it has the responsibility to obtain licenses to export, re-export, or import Software. Software may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, Cuba, Iraq, Iran, North Korea, Libya, Sudan, Syria (as such listing may be revised from time to time) or any country to which the U.S. has embargoed goods; or (ii) to anyone on the U.S. Treasury Department's list of Specially Designated Nations or the U.S. Commerce Department's Table of Denial Orders.

Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved.

All illustrations are for illustration only and may not accurately depict the actual phone.


## Instruction symbols

The following appear in the User guide.


 Note


 Tip


 Warning


 A service or function is network- or subscription-dependent. Contact your network operator for details.

> Use a selection or navigation key to scroll and select. See *Navigation* on page 13.

 Press the navigation key centre.

 Press the navigation key up.

 Press the navigation key down.

 Press the navigation key left.

 
 Press the navigation key right.

# Getting started


## Assembly

Before you start using your phone, you need to insert a SIM card and the battery.


*To insert the SIM card and battery*

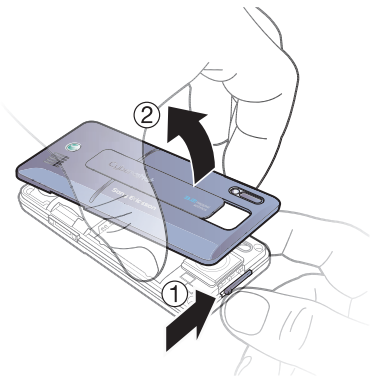

 
- 1 Slide and hold the clasp sideways and remove the battery cover.

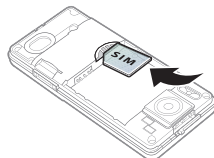

 - 2 Slide the SIM card into its holder with the contacts facing down.

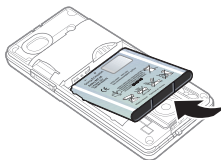

 - 3 Insert the battery with the label side up and the connectors facing each other.

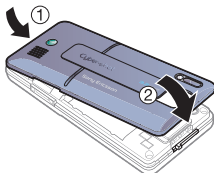

- 4 Replace the battery cover.

## Turning on the phone

To turn on the phone



- 1 Press and hold down ①.
- 2 Select a mode:
  - **Normal mode** – full functionality.
  - **Flight mode** – limited functionality with network, FM radio, Bluetooth™ transceivers off.
- 3 Enter your SIM card PIN, if requested.
- 4 Select a language.
- 5 Select **Yes** to use the setup wizard.

- ! If you make a mistake when you enter your PIN, you can press **(C)** to delete numbers from the screen.

### SIM card

The SIM (Subscriber Identity Module) card, which you get from your network operator, contains information about your subscription. Always turn off your phone and detach the charger before you insert or remove the SIM card.

- ! You can save contacts on the SIM card before you remove it from your phone. See *To copy names and numbers to the SIM card on page 21.*

### PIN

You may need a PIN (Personal Identification Number) to activate the services in your phone. Your PIN is supplied by your network operator. Each PIN digit appears as \*, unless it starts with emergency number digits, for example, 112 or 911. You can see and call an emergency number without entering a PIN.

### To delete numbers from the display

- Press **(C)**.

- ! If you enter the wrong PIN three times in a row, **PIN blocked** appears. To unblock it, you need to enter your PUK (Personal Unblocking Key). See *SIM card lock on page 64.*

### Flight mode

In **Flight mode** the network, radio and Bluetooth transceivers are turned off to prevent disturbance to sensitive equipment.





## Start-up screen

The start-up screen appears when you turn your phone on. See *Using pictures* on page 41.

## Standby

After you have turned your phone on and entered your PIN, the name of the network operator appears on the screen. This is called standby.

## Making and receiving calls

You must turn on your phone and be within range of a network.

### *To make a call*

- 1 From standby enter a phone number (with international country code and area code, if applicable).
- 2 Select [Call](#).

### *To answer a call*

- Select [Answer](#).

### *To reject a call*

- Select [Busy](#).

## Help in your phone

Help and information is available in your phone at any time.

### *To use the setup wizard*

- 1 From standby select [Menu](#) > [Settings](#) > the [General](#) tab > [Setup wizard](#).
- 2 Select an option.  
See *Navigation* on page 13.

### *To view information about functions*

- Scroll to a function and select [Info](#), if available. In some cases, [Info](#) appears under [More](#).

### *To view the phone demonstration*

- From standby select [Menu](#) > [Entertainment](#) > [Demo tour](#).

### Settings download

You can download settings to your phone. These settings let you use functionality that require Internet accounts, for example, picture messaging and email.

### *To download settings*

- From standby select [Menu](#) > [Settings](#) > the [General](#) tab > [Setup wizard](#) > [Settings download](#).



- *Contact your network operator or service provider for more information.*

## Charging the battery

 
The phone battery is partly charged when you buy it.

### To charge the battery


1



2

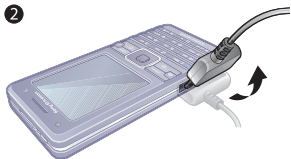

- 1 Connect the charger to the phone. It takes approximately 2.5 hours to fully charge the battery. Press a key to view the screen.
- 2 Remove the charger by tilting the plug upwards.

 You can use your phone while it is charging. You can charge the battery at any time and for more or less than 2.5 hours. You can interrupt the charging without damaging the battery.