


## Draft for Sony Ericsson Internal Use Only

### Turning on the phone

To turn on the phone

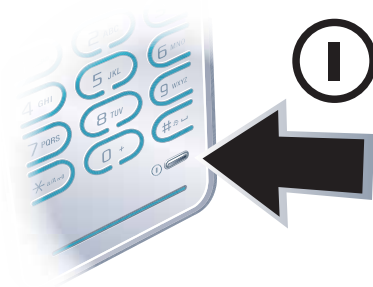

- 1 Press and hold down **⓪**.
- 2 Enter your SIM card PIN, if requested and select **OK**.
- 3 Select a language.
- 4 Select **Yes** to use the setup wizard while settings are downloaded.

💡 If you want to correct a mistake when you enter your PIN, press **⓪**.

### SIM card

The SIM (Subscriber Identity Module) card, which you get from your network operator, contains information about your subscription. Always turn off your phone and detach the charger before you insert or remove the SIM card.

💡 You can save contacts on the SIM card before you remove it from your phone. See *To copy names and numbers to the SIM card on page 19*.

### PIN

You may need a PIN (Personal Identification Number) to activate the services in your phone. Your PIN is supplied by your network operator. Each PIN digit appears as \*, unless it starts with emergency number digits, for example, 112 or 911. You can see and call an emergency number without entering a PIN.

! If you enter the wrong PIN three times in a row, the SIM card is blocked. See *SIM card lock on page 64*.

### Startup screen

The startup screen appears when you turn your phone on. See *Using pictures on page 39*.

## Draft for Sony Ericsson Internal Use Only

### Standby

After you have turned your phone on and entered your PIN, the name of the network operator appears. This view is called standby.

### Help in your phone

Help and information are available in your phone. See *Navigation* on page 12.

#### To use the setup wizard

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Setup wizard**.
- 2 Select an option.

#### To view information about functions

- Scroll to a function and select **Info**, if available. In some cases, **Info** appears under **Options**.

#### To view the phone demonstration

- From standby select **Menu** > **Entertainment** > **Demo tour**.

#### To view status information

- From standby press the volume key.


### Charging the battery

The phone battery is partly charged when you buy it.

### To charge the battery



- 1 Connect the charger to the phone. It takes approximately 2.5 hours to fully charge the battery. Press a key to view the screen.
- 2 Remove the charger by tilting the plug upwards.


 You can use your phone while it is charging. You can charge the battery at any time and for more or less than 2.5 hours. You can interrupt the charging without damaging the battery.

## Draft for Sony Ericsson Internal Use Only

### Phone overview

- 1 Ear speaker
- 2 Screen
- 3 Selection keys
- 4 Connector for charger, handsfree and USB cable
- 5 Call key
- 6 Activity menu key
- 7 End key
- 8 C key (Clear)
- 9 Navigation key
- 10 Keypad rubber
- 11 Silent key
- 12 On/off key
- 13 Microphone mesh

! See *Internet keypad shortcuts* on page 50

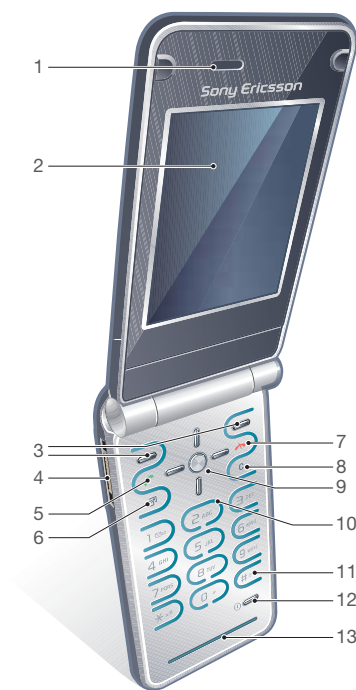

Draft for Sony Ericsson Internal Use Only

- 14 Strap holder
- 15 Memory card slot
- 16 Volume keys
- 17 Speaker mesh
- 18 External display
- 19 Camera lens



Draft for Sony Ericsson Internal Use Only  
Menu overview



PlayNow™\*



Internet\*



Entertainment

- Online services\*
- Games
- TrackID™
- Location services
- VideoDJ™
- PhotoDJ™
- MusicDJ™
- Remote control
- Record sound
- Demo tour



Camera



Messaging

- Write new
- Inbox
- Email
- Web feeds
- Drafts
- Outbox
- Sent messages
- Saved messages
- My friends\*
- Call voicemail
- Templates
- Manage messages
- Settings



Media



Alarms



Contacts

- Myself
- New contact



Radio

## Draft for Sony Ericsson Internal Use Only



### Calls\*\*



All



Answered



Dialled



Missed



### Organizer

File manager\*\*  
 Applications  
 Calendar  
 Tasks  
 Notes  
 Synchronization  
 Timer  
 Stopwatch  
 Calculator  
 Code memo



### Settings\*\*



General  
 Profiles  
 Time & date  
 Language  
 Update service  
 Voice control  
 New events  
 Shortcuts  
 Flight mode  
 Security  
 Setup wizard  
 Accessibility\*  
 Phone status  
 Master reset



Sounds & alerts  
 Ring volume  
 Ringtone  
 Silent mode  
 Increasing ring  
 Vibrating alert  
 Message alert  
 Key sound



Display  
 Wallpaper  
 Themes  
 Startup screen  
 Screen saver  
 Clock size  
 Brightness  
 Edit line names\*



Calls  
 Speed dial  
 Smart search  
 Divert calls  
 Switch to line 2\*  
 Manage calls  
 Time & cost\*  
 Show/hide my no.  
 Handsfree  
 Open to answer



Connectivity  
 Bluetooth  
 USB  
 Phone name  
 Network sharing  
 Synchronization  
 Device management  
 Mobile networks  
 Internet settings  
 Streaming settings  
 Message settings\*  
 Accessories

\* Some menus are operator-, network- and subscription-dependent.

\*\* You can use the navigation key to scroll between tabs in submenus. For more information, see Navigation on page 12.