
Navigation

The main menus are shown as icons. Some submenus include tabs.

To navigate the phone menus

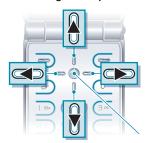

Centre navigation

- 1 From standby select Menu.
- 2 Use the navigation key to move through the menus.

To select actions on the screen

 Select an action shown at the bottom of the screen by pressing the left or right selection key, or the centre navigation key.

To view options for an item

• Select Options to, for example, edit.

To scroll between the tabs

 Scroll to a tab by pressing the navigation key left or right.

To return to standby

Press

To end a function

Press

To navigate your media

- 1 From standby select Menu > Media.
- 2 Press the navigation key right to select an item.
- 3 To go back, press the navigation left.

To delete items

 Press © to delete items such as numbers, letters, pictures and sounds.

Shortcuts

You can use keypad shortcuts to go directly to a menu. Menu numbering starts from the top left icon and moves across and then down row by row.

To go directly to a main menu

From standby select Menu and press
 1 - (9), (★a/A), (0+) or (#→²).

To use navigation key shortcuts

 From standby press (a), (a), (b) or (b) to go directly to a function.

To edit a navigation key shortcut

- 1 From standby select Menu > Settings > the General tab > Shortcuts.
- 2 Scroll to an option and select Edit.
- 3 Scroll to a menu option and select Shortc..

Activity menu

The activity menu gives you quick access to certain functions.

To open the activity menu

Press (♂).

Activity menu tabs

- New events missed calls and new messages.
- Running apps applications that are running in the background.
- My shortcuts add your favourite functions to access them quickly.
- Internet quick access to the Internet.

File manager

You can use the file manager to handle files saved in the phone memory or on a memory card.

You may have to purchase a memory card separately.

Memory card

Your phone supports Memory Stick Micro™ (M2™) memory card adding more storage space to your phone. It can also be used as a portable memory card with other compatible devices.

To insert a memory card



· Open the cover and insert the memory card with the gold-coloured contacts facing down.

To remove a memory card



 Open the cover and press the edge of the memory card to release and remove it.

To view memory card options

- 1 From standby select Menu > Organizer > File manager > the On memory card tab.
- 2 Select Options.

Handling files

You can move and copy files between your phone, a computer and a memory card. Files are saved on the memory card first and then in the phone memory. Unrecognized files are saved in the Other folder.

You can create subfolders to move or copy files to. You can select more than one or all the files in a folder at the same time for all folders except Games and Applications.

If the memory is full, delete some content to create space.

File manager tabs

The file manager is divided into three tabs, and icons indicate where the files are saved.

- All files all content in the phone memory and on a memory card
- On memory card all content on a memory card
- In phone all content in the phone memory

To view information about files

- 1 From standby select Menu > Organizer > File manager.
- 2 Find a file and select Options > Information.

To move a file in the file manager

- 1 From standby select Menu > Organizer > File manager.
- 2 Find a file and select Options > Manage file > Move.
- 3 Select an option.

To select more than one file in a folder

- 1 From standby select Menu > Organizer > File manager.
- 2 Scroll to a folder and select Open.
- 3 Select Options > Mark > Mark several.
- 4 For each file you want to mark, scroll to the file and select Mark.

To delete a file from the file manager

- 1 From standby select Menu > Organizer > File manager.
- 2 Find the file and press (c).

Phone language

You can select a language to use in your phone.

To change the phone language

- 1 From standby select Menu > Settings > the General tab > Language > Phone language.
- 2 Select an option.

Entering text

You can use multitap text input or T9™ Text Input ™ to enter text. The T9 Text Input method uses a built-in dictionary.

To change text input method

 When you enter text, press and hold down (**a/A).

To shift between capitals and lowercase letters

When you enter text, press (*a/A).

To enter numbers

 When you enter text, press and hold down (0+) - (9).

To enter full stops and commas

• When you enter text, press 1.

To enter text using T9™ Text Input

- 1 From standby select, for example, Menu > Messaging > Write new > Text message.
- 2 If 19 is not displayed, press and hold down (*a/h) to change to T9 Text Input.
- 3 Press each key only once, even if the letter you want is not the first letter on the key. For example, to write the word "Jane", press (5), (2), (5), (3). Write the whole word before looking at the suggestions.
- 4 Use **(a)** or **(a)** to view suggestions.
- 5 Press #=3 to accept a suggestion.

To enter text using multitap

- 1 From standby select, for example, Menu > Messaging > Write new > Text message.
- 2 If 19 is displayed, press and hold down (***) to change to multitap text input.
- 3 Press 2 9 repeatedly until the desired letter appears.
- 4 When a word is written, press (#=5) to add a space.

To add words to the built-in dictionary

- 1 When you enter text using T9 Text Input, select Options > Spell word.
- 2 Write the word using multitap input and select Insert.

Calling

Making and receiving calls

You need to turn on your phone and be within range of a network.

To make a call

- From standby enter a phone number (with international country code and area code, if applicable).
- 2 Press c.
- You can call numbers from your contacts and call list. See Contacts on page 18, and Call list on page 22. You can also use your voice to make calls. See Voice control on page 22.

To end a call

Press

To make international calls

- 1 From standby press and hold down

 ① + until a "+" sign appears.
- 2 Enter the country code, area code (without the first zero) and phone number.
- 3 Press 🥕.

To re-dial a number

• When Retry? appears select Yes.



Do not hold your phone to your ear when waiting. When the call connects, your phone gives a loud signal.

To answer a call

- Open your phone.
- You can turn Open to answer on or off. See Open to answer on page 28.

To answer a call

Press

To reject a call

Press

To change the ear speaker volume during a call

Press the volume key up or down.

To mute the microphone during a call

- 1 Press and hold down ©.
- 2 Press and hold down © again to resume.

To turn the loudspeaker on during a call

• Select SpkrOn.



Do not hold your phone to your ear when using the loudspeaker. This could damage your hearing.

To view missed calls from standby

Press r to open the call list.

Your phone switches automatically between GSM and 3G (UMTS) networks depending on availability. Some network operators allow you to switch networks manually.

To switch networks manually

- 1 From standby select Menu > Settings > the Connectivity tab > Mobile networks > GSM/3G networks.
- 2 Select an option.

Emergency calls

Your phone supports international emergency numbers, for example, 112 and 911. These numbers can normally be used to make emergency calls in any country, with or without the SIM card inserted, if a 3G (UMTS) or GSM network is within range.

In some countries, other emergency numbers may also be promoted. Your network operator may therefore have saved additional local emergency numbers on the SIM card.

To make an emergency call

 From standby enter 112 (the international emergency number) and press .

To view your local emergency numbers

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > Special numbers > Emergency nos..

Contacts

You can save names, phone numbers and personal information in Contacts. Information can be saved in the phone memory or on the SIM card.

Default contacts

You can choose which contact information is shown as default. If Phone contacts is selected as default, your contacts show all the information saved in Contacts. If you select SIM contacts as default, your contacts show names and numbers saved on the SIM card.

To select default contacts

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > Advanced > Default contacts.

3 Select an option.

Phone contacts

Phone contacts can contain names, phone numbers and personal information. They are saved in the phone memory.

To add a phone contact

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Add.
- 3 Enter the name and select OK.
- 4 Enter the number and select OK.
- 5 Select a number option.
- 6 Scroll between tabs and select the fields to add information.
- 7 Select Save.

Calling contacts

To call a phone contact

- 1 From standby select Menu > Contacts.
- 2 Scroll to a contact and press r.
- To go directly to a contact, from standby press and hold down 2 9.

To call a SIM contact from phone contacts

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > SIM contacts.
- 3 Scroll to a contact and press c.

To call with Smart search

- From standby press 1 9 to enter a contact name or a phone number. All entries which match the sequence of digits or letters are shown in a list.
- 2 Scroll to a contact or a phone number and press eals.

To turn Smart search on or off

- 1 From standby select Menu > Settings > the Calls tab > Smart search.
- 2 Select an option.

Editing contacts

To add information to a phone contact

- 1 From standby select Menu > Contacts.
- 2 Scroll to a contact and select Options> Edit contact.
- 3 Scroll between the tabs and select Add.
- 4 Select an option and an item to add.
- 5 Select Save.
- If your subscription supports Calling Line Identification (CLI) service, you can assign personal ringtones to contacts.

To copy names and numbers to phone contacts

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > Advanced > Copy from SIM.
- 3 Select an option.

To copy names and numbers to the SIM card

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > Advanced > Copy to SIM.
- 3 Select an option.
- When you copy all contacts from your phone to the SIM card, all existing SIM card information is replaced.

To automatically save names and phone numbers on the SIM card

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > Advanced > Auto save on SIM.
- 3 Select an option.

To save contacts on a memory card

1 From standby select Menu > Contacts

2 Scroll to New contact and select Options > Advanced > Back up to m. card.

SIM contacts

SIM contacts can contain names and numbers only. They are saved on the SIM card.

To add a SIM contact

- 1 From standby select Menu >
- 2 Scroll to New contact and select Add.
- 3 Enter the name and select OK.
- 4 Enter the number and select OK.
- 5 Select a number option and add more information, if available.
- 6 Select Save.

To call a SIM contact

- 1 From standby select Menu > Contacts.
- 2 Scroll to a contact and press c.

Deleting contacts

To delete a contact

- 1 From standby select Menu > Contacts.
- 2 Scroll to a contact and press ©.

To delete all phone contacts

- 1 From standby select Menu > Contacts
- 2 Scroll to New contact and select Options > Advanced > Delete all contacts.

Sending contacts

To send a contact

- 1 From standby select Menu > Contacts.
- 2 Scroll to a contact and select Options > Send contact.
- 3 Select a transfer method.
- Make sure the receiving device supportsthe transfer method you select.

Sorting contacts

To select the sort order for contacts

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > Advanced > Sort order.
- 3 Select an option.

Memory status

The number of contacts you can save in your phone or on the SIM card depends on available memory.

To view memory status

1 From standby select Menu > Contacts.

2 Scroll to New contact and select Options > Advanced > Memory status.

Synchronizing contacts

Contacts can be synchronized with a Microsoft® Exchange Server (Microsoft® Outlook®). For more information see *Synchronizing* on page 55.

Myself

You can enter information about yourself and, for example, send your business card.

To enter Myself information

- 1 From standby select Menu > Contacts.
- 2 Scroll to Myself and select Open.
- 3 Scroll to an option and edit the information.
- 4 Select Save.

To add your own business card

- 1 From standby select Menu > Contacts.
- 2 Scroll to Myself and select Open.
- 3 Scroll to My contact info and select Add > Create new.
- 4 Scroll between tabs and select the fields to add information.
- 5 Enter the information and select Save.
- To enter a symbol select Options > Add symbol > Insert.

To send your business card

- 1 From standby select Menu > Contacts.
- 2 Scroll to Myself and select Open.
- 3 Scroll to My contact info and select Send
- 4 Select a transfer method.
- Make sure the receiving device supportsthe transfer method you select.

Groups

You can create a group of phone numbers and email addresses from Phone contacts to send messages to. See Messaging on page 28. You can also use groups (with phone numbers) when you create accepted callers lists. See Accept calls on page 26.

To create a group of numbers and email addresses

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > Groups.
- 3 Scroll to New group and select Add.
- 4 Enter a name for the group and select Cont..
- 5 Scroll to New and select Add.
- 6 For each contact phone number or email address you want to mark, scroll to it and select Mark.
- 7 Select Continue > Done.

Call list

You can view information about recent calls.

To call a number from the call list

- 1 From standby press and scroll to a tab
- 2 Scroll to a name or a number and press .

To add a call list number to contacts

- 1 From standby press and scroll to a tab.
- 2 Scroll to the number and select Save.
- 3 Select New contact to create a new contact or select an existing contact to add the number to.

To clear the call list

- 1 From standby press c.
- 2 Scroll to the All tab and select Options > Delete all.

Speed dial

Speed dialling lets you select nine contacts that you can dial quickly. The contacts can be saved in positions 1-9.

To add contacts to speed dial numbers

1 From standby select Menu > Contacts.

- 2 Scroll to New contact and select Options > Speed dial.
- 3 Find a position number and select Add.
- 4 Select a contact.

To speed dial

 From standby enter the position number and press .

Voicemail

If your subscription includes an answering service, callers can leave a voicemail message when you cannot answer a call.

To enter your voicemail number

- 1 From standby select Menu > Messaging > Settings > Voicemail number.
- 2 Enter the number and select OK.

To call your voicemail service

From standby press and hold down
 1).

Voice control

By creating voice commands you can:

- Voice dial call someone by saying their name
- Activate voice dialling by saying a "magic word"

 Answer and reject calls when you use a handsfree

To record a voice command using voice dialling

- 1 From standby select Menu > Settings > the General tab > Voice control > Voice dialling > Activate.
- 2 Select Yes > New voice command and select a contact. If the contact has more than one number, select the number to add the voice command to.
- 3 Record a voice command such as "John mobile".
- Follow the instructions that appear. Wait for the tone and say the command to record. The voice command is played back to you.
- 5 If the recording sounds OK, select Yes. If not, select No and repeat steps 3 and 4.
- Voice commands are saved in the phone memory only. They cannot be used in another phone.

To re-record a voice command

- 1 From standby select Menu > Settings > the General tab > Voice control > Voice dialling > Edit names.
- 2 Scroll to a command and select Options > Replace voice.

3 Wait for the tone and say the command.

Voice dialling

You can hear your recorded contact name when you receive a call from that contact.

To voice dial

- 1 From standby press and hold down a volume key.
- 2 Wait for the tone and say a recorded name, for example "John mobile". The name is played back to you and the call is connected.

The magic word

You can record and use a voice command as a magic word to activate voice dialling without pressing any keys. Your handsfree must be connected to your phone when using the magic word.

You should choose a long, unusual word or phrase that can easily be distinguished from ordinary background speech. Bluetooth handsfree does not support this feature.

To activate and record the magic word

- 1 From standby select Menu > Settings > the General tab > Voice control > Magic word > Activate.
- 2 Follow the instructions that appear and select Cont.. Wait for the tone and say the magic word.
- 3 Select Yes to accept or No for a new recording.
- 4 Follow the instructions that appear and select Cont..
- 5 Select where your magic word is to be activated.

To make a call using the magic word

- 1 In standby make sure 🐤 is visible.
- 2 Say the magic word.
- 3 Wait for the tone and say a voice command.

Voice answering

When you use a handsfree, you can answer or reject incoming calls with your voice.

To activate voice answering and record voice answer commands

1 From standby select Menu > Settings > the General tab > Voice control > Voice answer > Activate.

- 2 Follow the instructions that appear and select Cont.. Wait for the tone and say "Answer", or another word.
- 3 Select Yes to accept or No for a new recording.
- 4 Follow the instructions that appear and select Cont.. Wait for the tone and say "Busy", or another word.
- 5 Select Yes to accept or No for a new recording.
- 6 Follow the instructions that appear and select Cont..
- 7 Select where your voice answering is to be activated.

To answer a call using voice commands

Say "Answer".

To reject a call using voice commands

Say "Busy".

Diverting calls

You can divert calls, for example, to an answering service.

When Restrict calls is used, some divert call options are not available. See Restricted dialling on page 26.

To divert calls

- From standby select Menu > Settings > the Calls tab > Divert calls.
- 2 Select a call type and a divert option.
- 3 Select Activate.
- 4 Enter the number to divert calls to and select OK.

More than one call

You can handle more than one call at a time. For example, you can put an ongoing call on hold, while you make or answer a second call. You can also switch between the two calls. You cannot answer a third call without ending one of the first two calls.

Call waiting

When call waiting is used, you hear a beep if you receive a second call.

To activate call waiting

From standby select Menu > Settings > the Calls tab > Manage calls > Call waiting > Activate.

To make a second call

- During the call, select Options > Hold call. This puts the ongoing call on hold.
- 2 Select Options > Add call.
- 3 Enter the number to call and press

To answer a second call

During the call, press 🥕 . This puts the ongoing call on hold.

To reject a second call

 During the call, press
 and continue with the ongoing call.

To end an ongoing call and answer a second call

During the call, select Replace active

Handling two voice calls

You can have calls ongoing and on hold at the same time.

To switch between two calls

During the call, press

To join two calls

• During the call, select Options > Join

To connect two calls

 During the call, select Options > Transfer call. You are disconnected from both calls.

To end an ongoing call and return to the call on hold

First press
 and then
 ...

Conference calls
With a conference call, you can have a joint conversation with up to five people.

To add a new participant

- 1 During the call, select Options > Hold call. This puts the joined calls on hold.
- 2 Select Options > Add call.
- 3 Enter the number to call and press c.
- 4 Select Options > Join calls to add the new participant.
- 5 Repeat this task to add more participants.

To release a participant

- 1 Select Options > Release part..
- 2 Select the participant to release.

To have a private conversation

- 1 During the call, select Options > Talk to and select the participant to talk to.
- 2 To resume the conference call, select Options > Join calls.

My numbers

You can view, add and edit your own phone numbers.

To check your phone numbers

1 From standby select Menu > Contacts.

- 2 Scroll to New contact and select Options > Special numbers > My numbers.
- 3 Select an option.

Accept calls

You can choose to receive calls from certain phone numbers only.

To add numbers to the accepted callers list

- 1 From standby select Menu > Settings > the Calls tab > Manage calls > Accept calls > Only from list.
- 2 Scroll to New and select Add.
- 3 Scroll to a contact or Groups.
- See Groups on page 21.

To accept all calls

 From standby select Menu > Settings > the Calls tab > Manage calls > Accept calls > All callers.

Restricted dialling

You can restrict outgoing and incoming calls. A password from your service provider is required.

If you divert incoming calls, you cannot use some restrict calls options.

Restrict calls options Standard options are:

- All outgoing all outgoing calls
- Outgoing intl all outgoing international calls
- Outgoing intl roam. all outgoing international calls except to your home country
- All incoming all incoming calls
- Inc. when roaming all incoming calls when you are abroad

To restrict calls

- 1 From standby select Menu > Settings > the Calls tab > Manage calls > Restrict calls.
- 2 Select an option.
- 3 Select Activate.
- 4 Enter your password and select OK.

Fixed dialling

Fixed dialling allows calls to be made only to certain numbers saved on the SIM card. The fixed numbers are protected by your PIN2.

Partial numbers can be saved. For example, saving 0123456 allows calls

to be made to all numbers starting with 0123456.

When fixed dialling is used, you cannot view or manage any phone numbers saved on the SIM card, but you can still call the international emergency number, 112.

To use fixed dialling

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > Special numbers > Fixed dialling > Activate.
- 3 Enter your PIN2 and select OK.
- 4 Select OK again to confirm.

To save a fixed number

- 1 From standby select Menu > Contacts.
- 2 Scroll to New contact and select Options > Special numbers > Fixed dialling > Fixed numbers > New number.
- 3 Enter the information and select Save.

Call time and cost

During a call, the duration of the call is shown. You can check the duration of your last call, outgoing calls and the total time of your calls.

To check the call time

 From standby select Menu > Settings > the Calls tab > Time & cost > Call timers

Showing or hiding your phone number

You can decide to show or hide your phone number when you make a call.

To hide your phone number

- 1 From standby select Menu > Settings > the Calls tab > Show/hide my no..
- 2 Select Hide number.

Open to answer

You can set the phone to answer calls when you open the phone.

To turn Open to answer on

- 1 From standby select Menu > Settings > the Calls tab > Open to answer.
- 2 Select On.

Messaging

Receiving and saving messages

You are notified when you receive a message. Messages are automatically saved in the phone memory. When the phone memory is full, you can delete messages or save them on a memory card or on the SIM card.

To save a message on a memory card

 From standby select Menu > Messaging > Settings > General > Save to > Memory card.

To save a message on the SIM card

- 1 From standby select Menu > Messaging and select a folder.
- 2 Scroll to a message and select Options > Save message.

To view a message from the inbox

- 1 From standby select Menu > Messaging > Inbox.
- 2 Scroll to the message and select View.

To delete a message

- 1 From standby select Menu > Messaging and select a folder.
- 2 Scroll to the message and press ©.

Text messages

Text messages can contain simple pictures, sound effects, animations, and melodies.

Before you use messaging

You must have a service centre number. The number is supplied by your service provider and is usually saved on the SIM card. If the number to your service centre is not saved on your SIM card, you must enter the number yourself.

To enter a service centre number

- 1 From standby select Menu > Messaging > Settings > Text message and scroll to Service centre. The number is shown if it is saved on the SIM card.
- 2 If there is no number shown, select
- 3 Scroll to New ServiceCentre and select Add.
- 4 Enter the number, including the international "+" sign and country code.
- 5 Select Save.

29

To write and send a text message

- 1 From standby select Menu > Messaging > Write new > Text message.
 - Messaging

- 2 Write the message and select Cont. > Contacts look-up.
- 3 Select a recipient and select Send.
- If you send a text message to a group, you will be charged for each member.
 See Groups on page 21.

To copy and paste text in a text message

- 1 When you write the message, select Options > Copy & paste.
- 2 Select Copy all or Mark & copy. Scroll to and mark text in the message.
- 3 Select Options > Copy & paste > Paste.

To add an item to a text message

- 1 When you write the message, select Options > Add item.
- 2 Select an option and then an item.

To convert a text message to a picture message

- 1 When you write the message, select Options > To picture msg.
- 2 Continue creating a picture message. See *Picture messages* on page 30.

To call a number in a text message

 When you view the message, scroll to the phone number and press

To turn long messages on

- 1 From standby select Menu > Messaging > Settings > Text message.
- 2 Select Max. msg length > Max. available.

Picture messages

Picture messages can contain text, pictures, slides, sound recordings, video clips, signatures and attachments. You can send picture messages to a mobile phone or an email address.

Before you use picture messaging

You must set an MMS profile and the address of your message server. If no MMS profile or message server exists, you can receive all the settings automatically from your network operator or at www.sonyericsson.com/support.

To select an MMS profile

- 1 From standby select Menu > Messaging > Settings > Picture message > MMS profile.
- 2 Select a profile.

To set the message server address

1 From standby select Menu > Messaging > Settings > Picture message.

- 2 Scroll to MMS profile and select Edit.
- 3 Select Options > Edit.
- 4 Scroll to Message server and select Edit
- 5 Enter the address and select OK >

To create and send a picture message

- 1 From standby select Menu > Messaging > Write new > Picture msg.
- 2 Enter text. To add items to the message, press ♥, scroll ♥ and select an item.
- 3 Select Continue > Contacts look-up.
- 4 Select a recipient and select Send.

Receiving picture messages

You can select how to download your picture messages. Standard options when you download picture messages are:

- Always automatic download.
- Ask in roaming ask to download when not in home network.
- Not in roaming do not download when not in home network.
- Always ask ask to download.
- Off new messages appear in the lnbox.

To set automatic download

- 1 From standby select Menu > Messaging > Settings > Picture message > Auto download.
- 2 Select an option.

To save an item in a picture message

 When you view a picture message select Options > Save items and select an item.

Message options

You can set standard options for all messages or choose specific settings each time you send a message.

To set text message options

- 1 From standby select Menu > Messaging > Settings > Text message.
- 2 Scroll to an option and select Edit.

To set picture message options

- 1 From standby select Menu > Messaging > Settings > Picture message.
- 2 Scroll to an option and select Edit.

To set message options for a specific message

- 1 When the message is ready and a recipient is selected, select Options > Advanced.
- 2 Scroll to an option and select Edit.

31 Messaging

Templates

If you often use the same phrases and pictures in a message, you can save the message as a template.

To add a text message template

- 1 From standby select Menu > Messaging > Templates > New template > Text.
- 2 Insert text or select Options to add items. Select OK.
- 3 Enter a title and select OK.

To use a picture message template

- 1 From standby select Menu > Messaging > Templates.
- 2 Scroll to a template and select Use.
- 3 When the message is ready, select Cont. > Contacts look-up.
- 4 Select a recipient and select Send.

To add a picture message template

- 1 From standby select Menu > Messaging > Templates > New template > Picture msg.
- 2 Enter text. To add items to the message, press ♠, scroll ♠ and select an item.
- 3 Select Save, enter a title and select OK.

To save a message as a template

- 1 From standby select Menu > Messaging > Inbox.
- 2 Scroll to the message and select View > Options > Save as template.

Noice messages

You can send and receive a sound recording as a voice message.

 The sender and recipient must have a subscription supporting picture messaging.

To record and send a voice message

- 1 From standby select Menu > Messaging > Write new > Voice message.
- 2 Record the message and select Stop > Send > Contacts look-up.
- 3 Select a recipient and select Send.

Email

You can use standard email functions and your computer email address in your phone.

Before you use email

You can use the setup wizard to check if settings are available for your email account or you can enter them manually. You can also receive settings at www.sonyericsson.com/support.

To create an email account

- 1 From standby select Menu > Messaging > Email > Accounts.
- 2 Scroll to New account and select Add.
- Ligron enter settings manually, you can contact your email provider for more information. An email provider could be the company that supplied your email address.

To write and send an email message

- 1 From standby select Menu > Messaging > Email > Write new.
- 2 Select Add > Enter email address. Enter the email address and select OK.
- 3 To add more recipients, scroll to To: and select Edit.
- 4 Scroll to an option and select Add > Enter email address. Enter the email address and select OK. When you are ready, select Done.
- 5 Select Edit and enter a subject. Select
- 6 Select Edit and enter the text. Select OK.
- 7 Scroll to Attachments: and select a file to attach.
- 8 Select Cont. > Send.

To receive and read an email message

- 1 From standby select Menu > Messaging > Email > Inbox > Options > Check new email.
- 2 Scroll to the message and select View.

To save an email message

- 1 From standby select Menu > Messaging > Email > Inbox.
- 2 Scroll to the message and select View > Options > Save message.

To reply to an email message

- 1 From standby select Menu > Messaging > Email > Inbox.
- 2 Scroll to the message and select Options > Reply.
- 3 Write the reply and select OK.
- 4 Select Continue > Send.

To view an attachment in an email message

When you view the message, select
 Options > Attachments > Use > View.

To save an attachment in an email message

 When you view the message, select Options > Attachments > Use > Save.

Synchronizing email

Email can be synchronized with a Microsoft Exchange Server (Microsoft® Outlook®). For more information see *Synchronizing* on page 55.

Active email account

If you have several email accounts, you can change which one is active.

To change the active email account

- 1 From standby select Menu > Messaging > Email > Accounts.
- 2 Select an account.

To delete an email (POP3)

- 1 From standby select Menu > Messaging > Email > Inbox.
- 2 Scroll to the message and press C.

To delete an email (IMAP4)

- 1 From standby select Menu > Messaging > Email > Inbox.
- 2 Scroll to the message and select Options > Mark for deletion.
- 3 Select Options > Clear inbox.
- Marked email messages will be deleted in the phone and on the server.

Push email

You can receive notification in your phone from your email server that you have new email messages.

To turn on push email notification

 From standby select Menu > Messaging > Email > Settings > Push email.

My friends

You can connect and log in to the My friends server to communicate online with chat messages.

Before you use My friends

If no settings exist in your phone, you need to enter server settings. Your service provider can provide standard settings information such as:

- Username
- Password
- Server address
- Internet profile

To enter My friends server settings

- 1 From standby select Menu > Messaging > My friends > Configure.
- 2 Scroll to a setting and select Add.

To log in to the My friends server

 From standby select Menu > Messaging > My friends > Log in.

To log out of the My friends server

• Select Options > Log out.

To add a chat contact

- 1 From standby select Menu > Messaging > My friends > the Contacts tab.
- 2 Select Options > Add contact.

To send a chat message

- 1 From standby select Menu > Messaging > My friends > the Contacts tab.
- 2 Scroll to a contact and select Chat.
- 3 Write the message and select Send.

Status

You can show your status, for example, Happy or Busy, to your contacts only. You can also show your status to all users on the My friends server.

To show my status

- 1 From standby select Menu > Messaging > My friends > Options > Settings > Show my status.
- 2 Select an option.

To update your own status

1 From standby select Menu > Messaging > My friends > the My status tab.

- 2 Edit the information.
- 3 Select Options > Save.

Chat group

A chat group can be started by your service provider, by an individual My friends user or by yourself. You can save chat groups by saving a chat invitation or by searching for a specific chat group.

To create a chat group

- 1 From standby select Menu > Messaging > My friends > the Chat groups tab.
- 2 Select Options > Add chat group > New chat group.
- 3 Select who to invite from your contacts list and select Cont...
- 4 Enter a short invitation text and select Cont. > Send.

To add a chat group

- 1 From standby select Menu > Messaging > My friends > the Chat groups tab > Options > Add chat group.
- 2 Select an option.
- Conversation history is saved between log out and when you log in again to let you return to chat messages from previous conversations.

To save a conversation

- 1 From standby select Menu > Messaging > My friends > the Conversations tab.
- 2 Enter a conversation.
- 3 Select Options > Advanced > Save conversation.

To view a saved conversation

- 1 From standby select Menu > Messaging > My friends > the Conversations tab.
- 2 Select Options > Saved conv..

Area and cell information

Area and cell information are text messages, for example, local traffic reports that are sent to subscribers within a certain network area.

To turn area information on

- 1 From standby select Menu > Messaging > Settings > Area info.
- 2 Scroll to Reception and select Edit > On.


Imaging

Camera and video recorder

You can take pictures and record video clips to view, save or send.

Viewfinder and camera keys

- 1 Adjust brightness
- 2 Take pictures/Record video

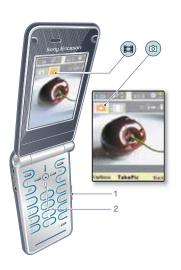

Using the camera

To activate the camera

• From standby select Menu > Camera.

To take a picture

- 1 Activate the camera and press ① or ② to scroll to ②.
- 2 Press the centre navigation key to take a picture.
- 3 The picture is automatically saved.
- Do not record with a strong light source in the background. Use a support or the self-timer to avoid a blurred picture.

To record a video clip

- 2 Press the centre navigation key to start recording.

To stop recording

- 1 Press the centre navigation key.
- 2 The video clip is automatically saved.

To use zoom

Press
 or

To adjust brightness

• Press the volume key up or down.

To view pictures and video clips

- 1 Activate the camera and select Options > View all pictures.
- 2 Scroll to the item.
- 3 To view a video clip, press the centre navigation key.

To improve a picture with Photo fix

- Activate the camera and press
 or
 or
 to scroll to

 and press
- 2 Select Options.
- 3 Make sure Review is set to On.
- 4 Take a picture.
- 5 During review, select Options > Photo

Camera icons and settings

Icons on the screen inform what the current setting is. More camera settings are available in Options.

To change settings

 Activate the camera and select Options.

To view information about settings

Scroll to a setting and select Info.

Camera shortcuts

Key	Shortcut
1	Camera: Shoot mode Video: Video size
2	Night mode
3	Self-timer
(I) +	Camera key guide

Transferring pictures

Transfer to and from your computer

You can use Bluetooth[™] wireless technology and a USB cable to transfer pictures and video clips between your computer and phone. See *Bluetooth*[™] wireless technology on page 52 and *Using a USB cable* on page 53 for more information.

You can view, enhance and organize your pictures and video clips on your computer by installing the Adobe™ Photoshop™ Album Starter Edition or the Sony Ericsson Media Manager. These are available for download at www.sonyericsson.com/support.

Picture and video blog

A blog is a personal Web page. If your subscription supports this service, you

can send pictures or video clips to a blog.

Web services may require a separate license agreement between you and the service provider. Additional regulations and charges may apply. Contact your service provider.

To send camera pictures to a blog

- From standby select Menu > Media and scroll to Photo > Camera album.
- 2 Scroll to a month and a picture. Select View.
- 3 Select Options > Send > To blog.
- 4 Add title and text.
- 5 Select OK > Publish.

To send video clips to a blog

- 1 From standby select Menu > Media and scroll to Video.
- 2 Scroll to a video clip.
- 3 Select Options > Send > To blog.
- 4 Add title and text.
- 5 Select OK > Publish.

To go to a blog address from contacts

- 1 From standby select Menu > Contacts.
- 2 Scroll to a contact and select a Web address.
- 3 Select Go to.

To send a picture or video clip

 
- 1 From standby select Menu > Media.
- 2 Scroll to an item and select Options > Send.
- 3 Select a transfer method.
- Make sure the receiving device supports
 the transfer method you select.

To receive a picture or video clip

Follow the instructions that appear.

Camera printing


You can print camera pictures using a USB cable connected to a compatible printer.



To print camera pictures using a USB cable

- 1 From standby select Menu > Media and scroll to Photo > Camera album.
- 2 Scroll to a month and a picture.
- 3 Select Options > Print.
- 4 Select an option.
- 5 Connect a USB cable to the phone.
- 6 Connect a USB cable to the printer.
- 7 Wait for feedback in the phone and select OK.

 8 Enter printer settings, if required and select Print.



Pictures

You can view, add, edit or delete pictures in Media.

Using pictures

You can add a picture to a contact, use it during phone startup, as a wallpaper in standby or as a screen saver.

To use pictures

- 1 From standby select Menu > Media and scroll to Photo > Camera album.
- 2 Scroll to a month and a picture. Select View.
- 3 Select Options > Use as.
- 4 Select an option.

To view pictures in a slide show

- 1 From standby select Menu > Media and scroll to Photo > Camera album.
- 2 Scroll to a month and a picture. Select View.
- 3 Select Options > Slide show.
- 4 Select a mood.

Photo tags

You can tag pictures to categorize them.

To tag pictures

- 1 From standby select Menu > Media and scroll to Photo > Camera album.
- 2 Scroll to a month and a picture. Select View.
- 3 Press @ and scroll to a tag.
- 4 Press the centre navigation key.
- 5 For each picture you want to tag, use or to scroll to the picture and press the centre navigation key.

To create a new photo tag

- 1 From standby select Menu > Media and scroll to Photo > Camera album.
- 2 Scroll to a month and a picture. Select View.
- 3 Press © and select Options > New tag.
- 4 Enter a name and select OK.
- 5 Select an icon.
- 6 Press the centre navigation key to tag the picture.

PhotoDJ™ and VideoDJ™

You can edit pictures and video clips.

To edit and save a picture

- 1 From standby select Menu > Media and scroll to Photo > Camera album.
- 2 Scroll to a month and a picture. Select View.
- 3 Select Options > Edit in PhotoDJ™.
- 4 Edit the picture.
- 5 Select Options > Save picture.

To edit and save a video clip

- 1 From standby select Menu > Organizer > File manager > Videos.
- 2 Scroll to a video clip and select Options > VideoDJ™.
- 3 Edit the video clip.
- 4 Select Options > Save.

To trim a video clip

- 1 From standby select Menu > Organizer > File manager > Videos.
- 2 Scroll to a video clip and select Options > VideoDJ™ > Edit > Trim.
- 3 Select Set to set the starting point and select Start.
- 4 Select Set to set the ending point and select End.
- 5 Select Trim > Options > Save.

Themes

You can change the appearance of the screen through items such as colours and wallpaper. You can also create

new themes and download them. For more information, go to www.sonyericsson.com/support.

To set a theme

- 1 From standby select Menu > Organizer > File manager.
- 2 Scroll to Themes and select Open.
- 3 Scroll to a theme and select Set.

Entertainment

To navigate your media see Navigation on page 12.

Stereo portable handsfree



To use the handsfree

 Connect the portable handsfree.
 Music stops when you receive a call and resumes when the call has ended.

Music player

To play music

- 1 From standby select Menu > Media > Music
- 2 Scroll to a title and select Play.

To stop playing music

Press the centre navigation key.

To fast forward and rewind

• When you listen to music, press and hold down (*) or (*).

To move between tracks

When you listen to music, press or
 O.

Video player

To play videos

- 1 From standby select Menu > Media and scroll to Video.
- 2 Scroll to a title and select Play.

To stop playing videos

Press the centre navigation key.

Music and video controls

To change the volume

• Press the volume keys up or down.

To return to the player menus

• Select Back.

To return to the players

• Select Options > Resume.

To exit the player menus

Press

Browsing files

Music and video files are saved and categorized.

- Artists list tracks you have transferred using Media Manager.
- Albums list music tracks by album in your phone and on a memory card.
- Tracks list all music tracks in your phone and on a memory card.
- Audio books list audio books you have transferred from your computer.
- Podcasts list all podcasts you have transferred from your computer.
- Playlists create own lists of tracks.
- Videos list all video clips in your phone or on a memory card.

Playlists

You can create playlists to organize files. You can sort the files by artist or title. Files can be added to more than one playlist.

Deleting a playlist, or a file from a playlist, does not delete the file from the memory, just the reference to the file.

To create a playlist

- 1 From standby select Menu > Media and scroll to Music > Playlists.
- 2 Scroll to New playlist and select Add.
- 3 Enter a name and select OK.

- 4 Scroll to a track and select Mark.
- 5 Select Add to add the track to the playlist.

To add files to a playlist

- 1 From standby select Menu > Media and scroll to Music > Playlists.
- 2 Select a playlist.
- 3 Select Add music.
- 4 Scroll to a track and select Mark.
- 5 Select Add to add the track to the playlist.

To remove tracks from a playlist

- 1 From standby select Menu > Media and scroll to Music > Playlists.
- 2 Select a playlist.
- 3 Scroll to the track and press C.

To delete a playlist

- 1 From standby select Menu > Media and scroll to Music > Playlists.
- 2 Scroll to a playlist and press C.

To view information about a track

 Scroll to a track and select Options > Information.

To send music

- 1 From standby select Menu > Media and scroll to Music.
- 2 Scroll to a title and select Options > Send.

- 3 Select a transfer method.
- Make sure the receiving device supports
 the transfer method you select.

To receive music

· Follow the instructions that appear.

Transferring music from a computer

With Sony Ericsson Media Manager, you can transfer music from CDs, your computer or that you have purchased to the phone memory or a memory card.

Sony Ericsson Media Manager software is also available for download at www.sonyericsson.com/support.

Before you use Media Manager You need one of these operating systems to use *Media Manager* on your computer:

- Windows® Vista® (32 bit and 64 bit versions of: Ultimate, Enterprise, Business, Home Premium, Home Basic)
- Windows® XP (Pro or Home), Service Pack 2 or higher

To use Media Manager

- 1 Connect the phone to a computer with a USB cable.
- 2 Computer: Start/Programs/ Sony Ericsson/Media Manager.
- 3 Phone: Select Mass storage. The phone will shut down in this mode but will restart again when it is disconnected from the USB cable.
- Do not remove the USB cable from your phone or computer during transfer, as this may corrupt the memory card or the phone memory.
- 4 For safe disconnection of the USB cable in mass storage mode, right-click the removable disk icon in Windows Explorer and select Eject. See Using a USB cable on page 53. For details on transferring music, refer to Media Manager Help. Click ? in the top right corner of the Media Manager window.

Online music and video clips

You can view video clips and listen to music by streaming them to your phone from the Internet. If settings are not already in your phone, see Settings on page 48. For more information, contact your network operator or go to www.sonyericsson.com/support.

To select a data account for streaming

- 1 From standby select Menu > Settings > the Connectivity tab > Streaming settings.
- 2 Select the data account to use.

To stream music and video clips

- 1 From standby select Menu > Internet.
- 2 Select Options > Go to > Bookmarks.
- 3 Select a link to stream from.

TrackID™

TrackID™ is a free music recognition service. Search for song titles, artists and album names.

To search for song information

- When you hear a song through a loudspeaker, from standby select Menu > Entertainment > TrackIDTM.
- When the radio is playing select Options > TrackID™.

Radio

Do not use your phone as a radio in places where this is prohibited.

To listen to the radio

- 1 Connect the handsfree to the phone.
- 2 From standby select Menu > Radio.

To change the volume

 When the radio is playing, press the volume keys up or down.

To automatically search for channels

 When the radio is playing, select Search.

To manually search for channels

When the radio is playing, press or
 O.

To switch between preset channels

When the radio is playing, press
 or

Saving channels

You can save up to 20 preset channels.

To save channels

• When you have found a radio channel select Options > Save.

To select saved channels

- 1 From standby select Menu > Radio > Options > Channels.
- 2 Select a radio channel.

To save channels in positions 1 to 10

 When you have found a radio channel, press and hold down (0+) - (9).