



Congratulations on your purchase of the Sony Ericsson K850i. Capture and share quality moments. For additional phone content, go to [www.sonyericsson.com/fun](http://www.sonyericsson.com/fun).

Register now to get a suite of tools, free online storage, special offers, news and competitions at [www.sonyericsson.com/myphone](http://www.sonyericsson.com/myphone).

For product support, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).



## Accessories – More for your phone

**Camera Phone Kit IPK-100**  
Premium protection for your phone.



 
**Bluetooth™ Headset HBH-IV835**  
Stylish discretion with excellent sound.



**Desk Stand CDS-65**  
Your phone's best assistant: connect a USB cable, charger and portable handsfree.



These accessories can be purchased separately but may not be available in every market. To view the full range go to [www.sonyericsson.com/accessories](http://www.sonyericsson.com/accessories).




## Contents


 
<b>Getting started</b> .....	<b>5</b>	Fixed dialling .....	27
Assembly .....	5	Call time and cost .....	27
Turning on the phone .....	5	<b>Messaging</b> .....	<b>28</b>
Help in your phone .....	7	Text messages .....	28
Charging the battery .....	7	Picture messages .....	29
Phone overview .....	8	Message options .....	30
Menu overview .....	10	Templates .....	30
Navigation .....	12	Voice messages .....	31
File manager .....	13	Email .....	31
Phone language .....	15	My friends .....	33
Entering text .....	15	Area and cell information .....	34
<b>Calling</b> .....	<b>16</b>	<b>Imaging</b> .....	<b>35</b>
Making and receiving calls .....	16	Camera and video recorder .....	35
Contacts .....	18	Viewfinder and camera keys .....	35
Call list .....	21	Using the camera .....	36
Speed dial .....	22	Getting more from the camera .....	36
Vicemail .....	22	Camera icons and settings .....	37
Voice control .....	22	Camera shortcuts .....	38
Diverting calls .....	24	Transferring pictures .....	38
More than one call .....	24	Camera printing .....	39
My numbers .....	26	Pictures .....	39
Accept calls .....	26	PhotoDJ™ and VideoDJ™ .....	40
Restricted dialling .....	26	Themes .....	41





**Entertainment ..... 41**

Stereo portable handsfree ..... 41

Music and video players ..... 41

Transferring music from  
a computer ..... 42

TrackID™ ..... 44

Radio ..... 45

PlayNow™ ..... 45

Ringtones and melodies ..... 46

MusicDJ™ ..... 46

Sound recorder ..... 47

Games ..... 47

Applications ..... 48

**Connectivity ..... 49**

Settings ..... 49

Phone name ..... 49

Using the Internet ..... 49

Web feeds ..... 50

Bluetooth™ wireless technology . 51

Using the USB cable ..... 52

Synchronizing ..... 54

Update service ..... 56

**More features ..... 57**

Alarms ..... 57

Calendar ..... 58

Tasks ..... 59

Notes ..... 60

Timer, stopwatch and calculator .. 60

Code memo ..... 61

Profiles ..... 62

Time and date ..... 62

Locks ..... 62

**Troubleshooting ..... 64**

Common questions ..... 64

Error messages ..... 66

**Important information ..... 68**

Guidelines for Safe and Efficient Use 70

End User Licence Agreement ..... 74

Limited Warranty ..... 74

FCC Statement ..... 76

Declaration of Conformity ..... 77

**Index ..... 78**



### Sony Ericsson K850i

UMTS 850/1900/2100 GSM 850/900/1800/1900

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved.

© Sony Ericsson Mobile Communications AB, 2007

Publication number: 1200-7392.x

Please note:

Some of the services in this User guide are not supported by all networks. This also applies to the GSM International Emergency Number 112.

Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not.

Please read the Guidelines for safe and efficient use and the Limited warranty chapters before you use your mobile phone.

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

Elanders Berlings  FAILED  PASSED

Bluetooth<sup>®</sup> is a trademark or registered trademark of Bluetooth SIG Inc.

The marble logo, BestPic, PlayNow, MusicDJ, PhotoDJ, TrackID and VideoDJ are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB.

Sony and Cyber-shot are trademarks of Sony Corporation.

Memory Stick Micro<sup>™</sup> and M2<sup>™</sup> are trademarks of Sony Corporation.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.

Adobe<sup>®</sup> Photoshop<sup>®</sup> Album Starter Edition is a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries.

Microsoft, Windows, PowerPoint, Outlook and Vista are trademarks or registered trademarks of Microsoft Corporation in the U.S. and other countries.

MicroSD is a trademark or registered trademark of SanDisk Corporation.

T9<sup>™</sup> Text Input is a trademark or a registered trademark of Tegic Communications. T9<sup>™</sup> Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057, United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

End-user license agreement for Sun<sup>™</sup> Java<sup>™</sup> J2ME<sup>™</sup>.



**Restrictions:** Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.

**Export Regulations:** Software, including technical data, is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries. Customer agrees to comply strictly with all such regulations and acknowledges that it has the responsibility to obtain licenses to export, re-export, or import Software. Software may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, Cuba, Iraq, Iran, North Korea, Libya, Sudan, Syria (as such listing may be revised from time to time) or any country to which the U.S. has embargoed goods; or (ii) to anyone on the U.S. Treasury Department's list of Specially Designated Nations or the U.S. Commerce Department's Table of Denial Orders.

**Restricted Rights:** Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable.

Other product and company names mentioned herein may be the trademarks of their respective owners.


Any rights not expressly granted herein are reserved. All illustrations are for illustration only and may not accurately depict the actual phone.


### Instruction symbols

These symbols appear in the User guide.

 Note

 Tip

 Warning

 A service or function is network- or subscription-dependent. Contact your network operator for details.

> Use a touch option or navigation key to scroll and select. See *Navigation* on page 12.

 


## Getting started

### Assembly

Before you start using your phone, you need to insert a SIM card and the battery.

#### To insert the SIM card

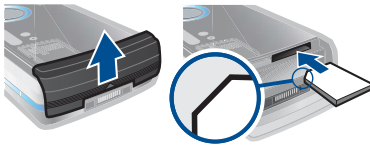

- 1 Remove the battery cover.
- 2 Slide the SIM card into its holder with the golden contacts facing down.

#### To insert the battery



- 1 Insert the battery with the label side down and the connectors facing each other.
- 2 Close and slide the battery cover into place.

 
### Turning on the phone

#### To turn on the phone




- 1 Press and hold down ①.
- 2 Select a mode:
  - Normal mode – full functionality.
  - Flight mode – limited functionality.
- 3 Enter your SIM card PIN, if requested and select OK.
- 4 Select a language.
- 5 Select **Cont.** > **Yes** to use the setup wizard while settings are downloaded.

💡 If you want to correct a mistake when you enter your PIN, press **C**.




### SIM card

The SIM (Subscriber Identity Module) card, which you get from your network operator, contains information about your subscription. Always turn off your phone and detach the charger before you insert or remove the SIM card.

 You can save contacts on the SIM card before you remove it from your phone. See *To copy names and numbers to the SIM card on page 19*.


### PIN

You may need a PIN (Personal Identification Number) to activate the services in your phone. Your PIN is supplied by your network operator. Each PIN digit appears as \*, unless it starts with emergency number digits, for example, 112 or 911. You can see and call an emergency number without entering a PIN.

 If you enter the wrong PIN three times in a row, the SIM card is blocked. See *SIM card lock on page 62*.

### Flight mode

In *Flight mode* the network and radio transceivers are turned off to prevent disturbance to sensitive equipment.

 You can use the Bluetooth™ function in *Flight mode*.

### Startup screen

The startup screen appears when you turn your phone on. See *Using pictures on page 39*.

### Standby

After you have turned your phone on and entered your PIN, the name of the network operator appears. This view is called standby.





### Help in your phone

Help and information are available in your phone. See *Navigation* on page 12.

#### To use the setup wizard

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Setup wizard**.
- 2 Select an option.

#### To view information about functions

- Scroll to a function and select **Info**, if available. In some cases, **Info** appears under **Options**.

#### To view the phone demonstration

- From standby select **Menu** > **Entertainment** > **Demo tour**.

 
#### To view status information

- From standby press the volume key up.


### Charging the battery

The phone battery is partly charged when you buy it.

#### To charge the battery

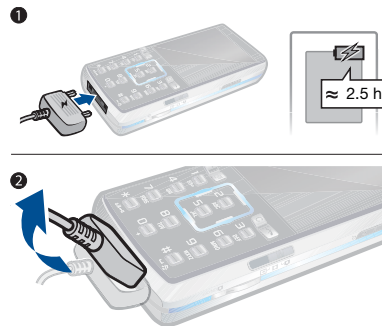


- 1 Connect the charger to the phone. It takes approximately 2.5 hours to fully charge the battery. Press a key to view the screen.
- 2 Remove the charger by tilting the plug upwards.

 You can use your phone while it is charging. You can charge the battery at any time and for more or less than 2.5 hours. You can interrupt the charging without damaging the battery.


## Phone overview

 - 1 Ear speaker
- 2 Screen
- 3 Touch options
- 4 Activity menu key
- 5 Call key
- 6 Navigation key
- 7 Video call camera
- 8 Volume, digital zoom keys
- 9 C key (Clear)
- 10 End key
- 11 Camera switch mode key
- 12 Camera key
- 13 Camera on/off key
- 14 Silent key
- 15 Connector for charger, handsfree and USB cable

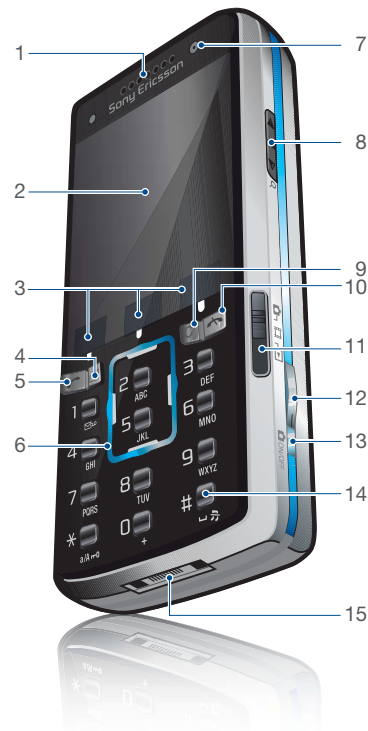

## 8 Getting started

 - 16 On/off key
- 17 Camera lens cover
- 18 Flash

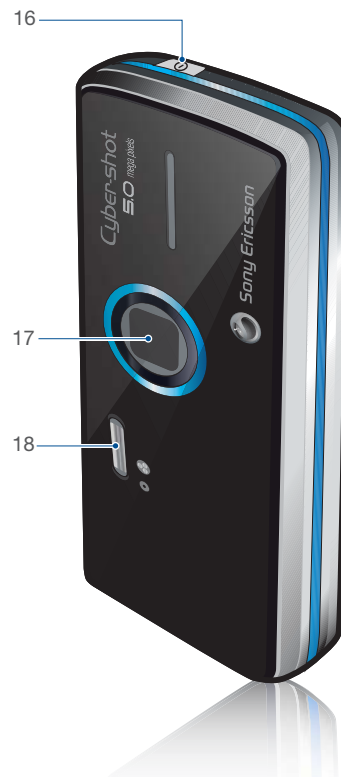



## Menu overview



PlayNow™\*



Internet\*



Entertainment

- Online services\*
- Games
- TrackID™
- VideoDJ™
- PhotoDJ™
- MusicDJ™
- Remote control
- Record sound
- Demo tour



Cyber-shot™

 


Messaging

- Write new
- Inbox
- Email
- Web feeds
- Drafts
- Outbox
- Sent messages
- Saved messages
- My friends\*
- Call voicemail
- Templates
- Manage messages
- Settings



Media



Alarms



Contacts

- Myself
- New contact



Radio



10 Getting started



### Calls\*\*

 All

 Answered

 Dialed

 Missed

### Organizer

File manager\*\*  
Applications  
Video call  
Calendar  
Tasks  
Notes  
Synchronization  
Timer  
Stopwatch  
Calculator  
Code memo

### Settings\*\*

 General

Profiles  
Time & date  
Language  
Update service  
Voice control  
New events  
Shortcuts  
Flight mode  
Security  
Setup wizard  
Accessibility  
Phone status  
Master reset

 Sounds & alerts

Ring volume  
Ringtone  
Silent mode  
Increasing ring  
Vibrating alert  
Message alert  
Key sound

 Display

Wallpaper  
Themes  
Startup screen  
Screen saver  
Clock size  
Brightness  
Edit line names\*

 Calls

Speed dial  
Smart search  
Divert calls  
Switch to line 2\*  
Manage calls  
Video share\*  
Time & cost\*  
Show/hide my no.  
Handsfree

 Connectivity\*

Bluetooth  
USB  
Phone name  
Network sharing  
Synchronization  
Device management  
Mobile networks  
Internet settings  
Streaming settings  
Message settings\*  
Accessories

 
\* Some menus are operator-, network- and subscription-dependent.

\*\* You can use the navigation key to scroll between tabs in submenus. For more information, see Navigation on page 12.

## Navigation

The main menus are shown as icons. Some submenus include tabs.

### To navigate the phone menus

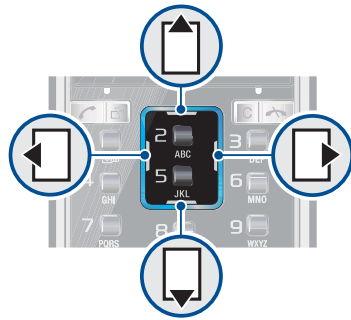


- 1 From standby select **Menu**.
- 2 Use the navigation key to move through the menus.

### To scroll between the tabs

 - Scroll to a tab by pressing the navigation key left or right.

### To use the touch options

#### Touch options

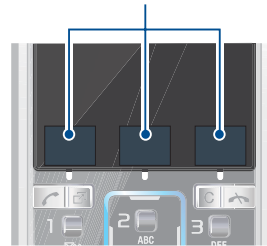

- Select an action shown at the bottom of the screen by pressing the left, centre or right touch option.

#### To view options for an item

- Select **Options** to, for example, edit.

#### To return to standby

- Press .

#### To end a function

- Press .

#### To navigate your media

- 1 From standby select **Media**.
- 2 Use the navigation key to move up, down, left and right through the menus.

#### To delete items

- Press **(C)** to delete items such as numbers, letters, pictures and sounds.

#### Shortcuts

You can use keypad shortcuts to go directly to a menu. Menu numbering starts from the top left icon and moves across and then down row by row.

#### To go directly to a main menu

- From standby select **Menu** and press **(1)** - **(9)**, **(\*)**, **(0)** or **(#)**.

#### To use navigation key shortcuts

- From standby press **(↑)**, **(↓)**, **(←)** or **(→)** to go directly to a function.

#### To edit a navigation key shortcut

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Shortcuts**.
- 2 Scroll to an option and select **Edit**.
- 3 Scroll to a menu option and select **Shortc..**

#### Activity menu

The activity menu gives you quick access to certain functions.

#### To open the activity menu

- Press **(F)**.

#### Activity menu tabs

- **New events** – missed calls and new messages.
- **Running apps** – applications that are running in the background.
- **My shortcuts** – add your favourite functions to access them quickly.
- **Internet** – quick access to the Internet.

#### File manager

 
You can use the file manager to handle files saved in the phone memory or on a memory card.

! You may have to purchase a memory card separately.

#### Memory card


Your phone supports Memory Stick Micro™ (M2™) or MicroSD™ memory card adding more storage space to your phone. It can also be used as a portable memory card with other compatible devices.

#### To insert a memory card

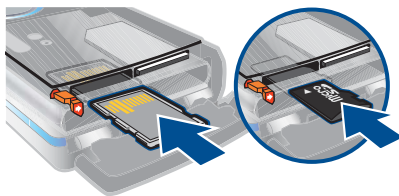

- Open the battery cover. Insert a Memory Stick Micro™ (M2™) memory card with the golden contacts facing up or insert a MicroSD™ memory card with the golden contacts facing down.

#### To remove a memory card

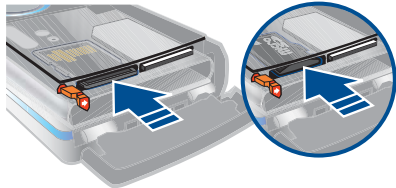 

- Open the battery cover and press the edge of the memory card to release and remove it.

#### To view memory card options

- 1 From standby select **Menu > Organizer > File manager > the On memory card tab.**
- 2 Select **Options.**

#### Handling files

You can move and copy files between your phone, a computer and a memory card. Files are saved on the memory card first and then in the phone memory. Unrecognized files are saved in the **Other** folder.

You can create subfolders to move or copy files to. You can select more than one or all the files in a folder at the same time for all folders except **Games** and **Applications**.

If the memory is full, delete some content to create space.

#### File manager tabs

The file manager is divided into three tabs, and icons indicate where the files are saved.

- **All files** – all content in the phone memory and on a memory card
- **In phone** – all content in the phone memory
- **On memory card** – all content on a memory card



**To view information about files**

- 1 From standby select **Menu > Organizer > File manager**.
- 2 Find a file and select **Options > Information**.

**To move a file in the file manager**

- 1 From standby select **Menu > Organizer > File manager**.
- 2 Find a file and select **Options > Manage file > Move**.
- 3 Select an option.

**To select more than one file in a folder**

- 1 From standby select **Menu > Organizer > File manager**.
- 2 Scroll to a folder and select **Open**.
- 3 Select **Options > Mark > Mark several**.
- 4 For each file you want to mark, scroll to the file and select **Mark**.

**To delete a file from the file manager**

- 1 From standby select **Menu > Organizer > File manager**.
- 2 Find the file and press **(C)**.

**Phone language**

You can select a language to use in your phone.

**To change the phone language**

- 1 From standby select **Menu > Settings > the General tab > Language > Phone language**.
- 2 Select an option.

**Entering text**

You can use multitap text input or T9™ Text Input **T9** to enter text. The T9 Text Input method uses a built-in dictionary.

**To change text input method**

- When you enter text, press and hold down **(\*)**.

**To shift between capitals and lower-case letters**

- When you enter text, press **(\*)**.

**To enter numbers**

- When you enter text, press and hold down **(0+)** – **(9)**.

**To enter full stops and commas**

- When you enter text, press **(1)**.

**To enter text using T9™ Text Input**

- 1 From standby select, for example, **Menu > Messaging > Write new > Text message**.
- 2 If **T9** is not displayed, press and hold down **(\*)** to change to T9 Text Input.

- 3 Press each key only once, even if the letter you want is not the first letter on the key. For example, to write the word "Jane", press **5**, **2**, **6**, **3**. Write the whole word before looking at the suggestions.
- 4 Use **↵** or **↶** to view suggestions.
- 5 Press **#↵** to accept a suggestion.

#### To enter text using multitap

- 1 From standby select, for example, **Menu > Messaging > Write new > Text message**.
- 2 If **T9** is displayed, press and hold down **\*↵** to change to multitap text input.
- 3 Press **2** – **9** repeatedly until the desired letter appears.
- 4 When a word is written, press **#↵** to add a space.

#### To add words to the built-in dictionary

- 1 When you enter text using T9 Text Input, select **Options > Spell word**.
- 2 Write the word using multitap input and select **Insert**.


## Calling

### Making and receiving calls

You need to turn on your phone and be within range of a network.

#### To make a call

- 1 From standby enter a phone number (with international enter country code and area code, if applicable).
- 2 Press **↵**.  
See *Video call* on page 18.


 You can call numbers from your contacts and call list. See *Contacts* on page 18, and *Call list* on page 21. You can also use your voice to make calls. See *Voice control* on page 22.

#### To make international calls

- 1 From standby press **0+** until a "+" sign appears.
- 2 Enter the country code, area code (without the first zero) and phone number.
- 3 Press **↵**.

#### To re-dial a number

- When **Retry?** appears select **Yes**.

 Do not hold your phone to your ear when waiting. When the call connects, your phone gives a loud signal.

**To answer a call**

- Press .

 
 
**To reject a call**

- Press .

**To change the ear speaker volume during a call**


- Press the volume key up or down.

**To mute the microphone during a call**



- 1 Press and hold down .
- 2 Press and hold down  again to resume.

**To turn the loudspeaker on during a call**

- Select **SpkrOn**.

 **Do not hold your phone to your ear when using the loudspeaker. This could damage your hearing.**

**To view missed calls from standby**

- Press  and scroll to the **New events** tab and select a number.
- Press  to open the call list.

**Networks**


Your phone switches automatically between GSM and 3G (UMTS) networks depending on availability. Some network operators allow you to switch networks manually.

**To switch networks manually**


- 1 From standby select **Menu > Settings > the Connectivity tab > Mobile networks > GSM/3G networks**.
- 2 Select an option.

**Emergency calls**

Your phone supports international emergency numbers, for example, 112 and 911. These numbers can normally be used to make emergency calls in any country, with or without the SIM card inserted, if a 3G (UMTS) or GSM network is within range.

 **In some countries, other emergency numbers may also be promoted. Your network operator may therefore have saved additional local emergency numbers on the SIM card.**


**To make an emergency call**

- From standby enter 112 (the international emergency number) and press .

**To view your local emergency numbers**

- 1 From standby select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Special numbers > Emergency nos**.



### Video call

See a person on the screen during calls. Both parties need a subscription that supports the 3G (UMTS) service, and you need to be within range of a 3G (UMTS) network. 3G (UMTS) service is available when  appears.

#### To make a video call

- 1 From standby enter a phone number (with international country code and area code, if applicable).
- 2 Select **Options** > **Make video call**.

#### To use the zoom with an outgoing video call

- Press  or .

#### To view video call options

- During the call, select **Options**.

## Contacts

You can save names, phone numbers and personal information in **Contacts**. Information can be saved in the phone memory or on the SIM card.

### Default contact

You can choose which contact information is shown as default. If **Phone contacts** is selected as default, your contacts show all the information saved in **Contacts**.

If you select **SIM contacts** as default, your contacts show names and numbers saved on the SIM card.

#### To select default contacts

- 1 From standby select **Menu** > **Contacts**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Default contacts**.
- 3 Select an option.

### Phone contacts


Phone contacts can contain names, phone numbers and personal information. They are saved in the phone memory.


#### To add a phone contact

- 1 From standby select **Menu** > **Contacts**.
- 2 Scroll to **New contact** and select **Add**.
- 3 Enter the name and select **OK**.
- 4 Enter the number and select **OK**.
- 5 Select a number option.
- 6 Scroll between tabs and select the fields to add information.
- 7 Select **Save**.

### Calling contacts

#### To call a phone contact

- 1 From standby select **Menu** > **Contacts**.
- 2 Scroll to a contact and press .

 To go directly to a contact, from standby press and hold down **(2)** – **(9)**.

#### **To call a SIM contact from phone contacts**

- 1 From standby select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > SIM contacts**.
- 3 Scroll to a contact and press **↵**.

#### **To call with Smart search**

- 1 From standby press **(1)** – **(9)** to enter a contact name or a phone number. All entries which match the sequence of digits or letters are shown in a list.
- 2 Scroll to a contact or a phone number and press **↵**.

#### **To turn Smart search on or off**


- 1 From standby select **Menu > Settings > the Calls tab > Smart search**.
- 2 Select an option.

#### **Editing contacts**

##### **To add information to a phone contact**

- 1 From standby select **Menu > Contacts**.
- 2 Scroll to a contact and select **Options > Edit contact**.
- 3 Scroll between the tabs and select **Add**.

- 4 Select an option and an item to add.
- 5 Select **Save**.

 If your subscription supports Calling Line Identification (CLI) service, you can assign personal ringtones to contacts.

#### **To copy names and numbers to the SIM card**

- 1 From standby select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Copy to SIM**.
- 3 Select an option.

#### **To automatically save names and phone numbers on the SIM card**

- 1 From standby select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Auto save on SIM**.
- 3 Select an option.

#### **To save contacts on a memory card**

- 1 From standby select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Back up to m. card**.

#### **SIM contacts**

SIM contacts can contain names and numbers only. They are saved on the SIM card.

#### **To add a SIM contact**

- 1 From standby select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Add**.

- 3 Enter the name and select **OK**.
- 4 Enter the number and select **OK**.
- 5 Select a number option and add more information, if available.
- 6 Select **Save**.

! *When you copy all contacts from your phone to the SIM card, all existing SIM card information is replaced.*

#### **To call a SIM contact**

- 1 From standby select **Menu > Contacts**.
- 2 Scroll to a contact and press **↵**.

#### **To copy names and numbers to phone contacts**

- 1 From standby select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Copy from SIM**.
- 3 Select an option.

#### **Deleting contacts**

##### **To delete a contact**

- 1 From standby select **Menu > Contacts**.
- 2 Scroll to a contact and press **⌫**.

##### **To delete all phone contacts**

- 1 From standby select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Delete all contacts**.

#### **Sending contacts**

##### **To send a contact**

- 1 From standby select **Menu > Contacts**.
- 2 Scroll to a contact and select **Options > Send contact**.
- 3 Select a transfer method.

! *Make sure the receiving device supports the transfer method you select.*

#### **Memory status**

The number of contacts you can save in your phone or on the SIM card depends on available memory.

##### **To view memory status**

- 1 From standby select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Advanced > Memory status**.

#### **Synchronizing contacts**

Contacts can be synchronized with a Microsoft Exchange Server (Microsoft® Outlook®). For more information see *Synchronizing* on page 54.

#### **Myself**

You can enter information about yourself and, for example, send your business card.