

Contents

Getting started.....6

Assembly.....	6
Turning on the phone.....	7
Help.....	8
Charging the battery.....	9
Phone overview.....	11
Homescreen overview.....	13
Menu overview.....	14
Navigation.....	16
Memory.....	17
Phone language.....	18
Entering text.....	18

Internet.....20

Bookmarks.....	20
History pages.....	20
More browser features.....	20
Internet security and certificates.....	22
Web feeds.....	22
Wi-Fi™.....	23
Unique.....	24

Calling.....25

Making and receiving calls.....	25
---------------------------------	----

Address Book.....	27
Speed dial.....	30
More calling features.....	30

Messaging.....34

Text and multimedia messages.....	34
Voice messages.....	36
Email.....	36
Orange Messenger.....	37

Imaging.....39

Using the camera.....	39
More camera features.....	40
Viewing and tagging photos.....	40
Working with photos.....	41
Printing photos.....	42

Music.....42

Stereo portable handsfree.....	42
Music player.....	43
TrackID™.....	44
Online music and video clips.....	44
Video player.....	44
Radio.....	45
MusicDJ™.....	45

Record sound.....46

Transferring and handling content.....46

Handling content in the phone.....46

Sending content to another phone.....47

Transferring content to and from a computer.....47

Using the USB cable.....48

Phone name.....49

Using Bluetooth™ wireless technology.....49

Backing up and restoring.....51

GPS.....53

Using GPS.....53

Driving directions.....53

More GPS features.....53

Synchronising.....55

Synchronising using a computer.....55

Synchronising using an Internet service.....55

More features.....56

Flight mode.....56

Update Service.....56

Alarms.....57

Calendar.....58

Notes.....59

Tasks.....59

Profiles.....60

Time and date.....60

Theme.....60

Main menu layout.....61

Ringtones.....61

Screen orientation.....61

Games.....61

Applications.....62

Orange applications.....62

Locks.....63

Troubleshooting.....65

Common questions.....65

Error messages.....68

Important information.....69

Index.....84

Sony Ericsson G705u

UMTS HSDPA 2100 GSM EDGE 850/900/1800/1900

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved.

©Sony Ericsson Mobile Communications AB, 2008

Publication number: 1216-1384.1

Please note:

Some of the services in this User guide are not supported by all networks. *This also applies to the GSM International Emergency Number 112.*

Please contact Orange or your service provider if you are in doubt whether you can use a particular service or not.

Please read the *Important information* before you use your mobile phone.

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones.

The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone.

Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

Smart-Fit Rendering is a trademark or a registered trademark of ACCESS Co., Ltd.

Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under license.

TrackID™ is powered by Gracenote Mobile MusicID™. Gracenote and Gracenote Mobile MusicID are trademarks or registered trademarks of Gracenote, Inc.

Lotus Notes is a trademark or a registered trademark of International Business Machines Corporation.

Sony, Memory Stick Micro™ and M2™ are trademarks or registered trademarks of Sony Corporation.

SyncML is a trademark or registered trademark of Open Mobile Alliance LTD.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.

Adobe Photoshop Album Starter Edition is a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries.

Microsoft, ActiveSync, Windows, Outlook, and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

T9™ Text Input is a trademark or a registered trademark of Tegic Communications. T9™ Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057, United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade. Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. End-user license agreement for Sun™ Java™ J2ME™.

This product is licensed under the MPEG-4 visual and AVC patent portfolio licenses for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard ("MPEG-4 video") or the AVC standard ("AVC video") and/or (ii) decoding MPEG-4 or AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 and/or AVC video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained from MPEG LA, L.L.C. See <http://www.mpegla.com>. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.

Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract,

or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.

Export Regulations: This product, including any software or technical data contained in or accompanying the product, may be subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations and the U.S. sanctions programs administered by the U.S. Treasury Department's Office of Foreign Assets Control, and may be additionally subject to export or import regulations in other countries. The user and any possessor of the product agrees to comply strictly with all such regulations and acknowledges that it is their responsibility to obtain any required licenses to export, re-export, or import this product. Without limitation this product, including any software contained therein, may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, or an entity in, Cuba, Iraq, Iran, North Korea, Sudan, Syria (as such listing may be revised from time to time) or any country to which the U.S. has embargoed goods; or (ii) to any person or entity on the U.S. Treasury Department's list of Specially Designated Nationals or (iii) any person or entity on any other export prohibition list that may be maintained from time to time by the United States Government, including but not limited to the U.S. Commerce Department's Denied Persons List or Entity List, or the U.S. State Department's Nonproliferation Sanctions List.

Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved.
All illustrations are for illustration only and may not accurately depict the actual phone.

Instruction symbols

These symbols may appear in the User guide.



Note



Tip



Warning



A service or function is network- or subscription-dependent. Contact Orange for details.

- > Use a selection or navigation key to scroll and select. See *Navigation* on page 16.

Getting started

Assembly

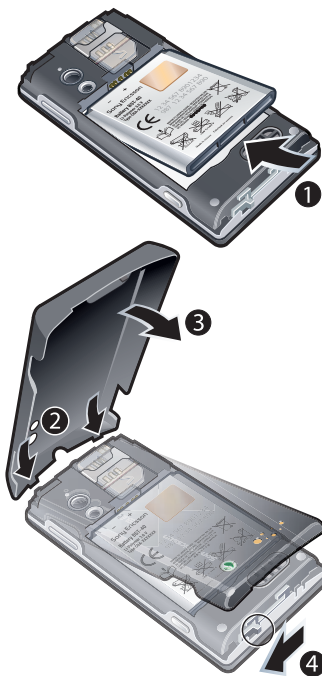 
Before you start using your phone, you need to insert a SIM card and the battery.

To insert the SIM card



- 1 Unlock the battery cover lock.
- 2 Remove the battery cover.
- 3 Slide the SIM card into its holder with the gold-coloured contacts facing down.

To insert the battery



- 1 Insert the battery with the label side up and the connectors facing each other.

- 2 Attach the battery cover and lock it.

Turning on the phone

To turn on the phone



- 1 Press and hold down ①.
- 2 Enter your SIM card PIN, if requested, and select **OK**.
- 3 Select a language.
- 4 Follow the instructions to use the setup wizard for basic settings and useful tips.

💡 If you want to correct a mistake when you enter your PIN, press **C**.


SIM card

When you register as a subscriber with Orange, you get a SIM (Subscriber

Getting started


7

Identity Module) card, which contains information about your subscription. Always turn off your phone and detach the charger before you insert or remove the SIM card.

 You can save contacts on the SIM card before you remove it from your phone. See *To copy names and numbers to the SIM card on page 28*.

PIN

You may need a PIN (Personal Identification Number) to activate the services and functions in your phone. Your PIN is supplied by Orange. Each PIN digit appears as *, unless it starts with emergency number digits, for example, 112 or 911. You can see and call an emergency number without entering a PIN.

 If you enter the wrong PIN three times in a row, the SIM card is blocked. See *SIM card lock on page 63*.

Homescreen

After you turn on your phone and enter your PIN, icons appear on the left side of the screen. This is called Homescreen.

To change Homescreen type

- From Homescreen select [Go to > Homescreen type](#).

Using other networks

Making and receiving calls, using messaging, and data transfer, for example, Internet-based services, outside your home network (roaming), may incur additional costs. Contact Orange for more information.

Help

In addition to this User guide, Feature guides and more information are available at www.sonyericsson.com/support.

Help and information are also available in your phone.

To view tips and tricks

- 1 From Homescreen select [Menu > Settings > the General tab > Setup wizard](#).
- 2 Select [Tips and tricks](#).

To view information about functions

- Scroll to a function and select [Info](#), if available. In some cases, [Info](#) appears under [Options](#).

To view the phone demonstration

- From Homescreeen select [Menu](#) > [Entertainment](#) > [Demo tour](#).

To view the phone status

- From Homescreeen press the volume key. Phone, memory and battery information is shown.

Charging the battery

The phone battery is partly charged when you buy it.

To charge the battery



- 1 Connect the charger to the phone. It takes approximately 2.5 hours to fully charge the battery. Press a key to view the screen.
- 2 Remove the charger by tilting the plug upwards.

💡 You can use your phone while it is charging. You can charge the battery at

any time and for more or less than 2.5 hours. You can interrupt the charging without damaging the battery.

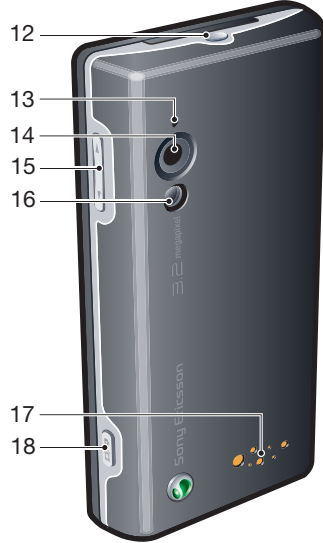 
10 Getting started

Phone overview







- 1 Ear speaker
- 2 Light sensor
- 3 Screen
- 4 Connector for charger, handsfree and USB cable
- 5 Selection keys
- 6 Call key
- 7 Multitasking key
- 8 Video call camera
- 9 End, on/off key
- 10 C key (Clear)
- 11 Navigation key



- 12 Play/stop key
- 13 Indicator light
- 14 Camera lens
- 15 Volume, digital zoom keys
- 16 Light
- 17 Loudspeaker
- 18 Camera key






Homescreen overview

	Today New appointment Alarms Time & date
	Address Book New contact Key contacts
	Call History Missed Answered Dialled
	Write message Inbox Email Messenger* Web feeds
	Music player Orange Photo* Radio Camera Camera album
	Orange World TV Player* Ligue 1* Bookmarks

* Some menus are operator-, network- and subscription-dependent.



To navigate Homescreen

- Press  and  to scroll through the icons.
- To expand a menu, scroll to it and press .
- To close a menu, select **Back**.

To go to the main menu

- Select **Menu**.

To turn off Homescreen

- From Homescreen select **Menu** > **Settings** > **the General tab** > **Homescreen** > **Sony Ericsson**.

Menu overview



Profiles*/Downloads*



Alarms



Entertainment

Orange Games*
Online services*
Radio
TrackID™
Games
VideoDJ™
PhotoDJ™
MusicDJ™
Remote control
Record sound
Demo tour



Media

Photo
My music
Video
Games
Web feeds
Settings



Messaging

Write message
Inbox
Messenger*
Orange Mail*
Messages
Email
Call Answer Phone



Orange World



Call History**

All
Answered
Dialled
Missed



Address Book

Myself
New contact



Organiser

Media Album**
Alarms
My applications
Video call
Calendar
Tasks
Notes
Synchronisation
Timer
Stopwatch
Light
Calculator
Code memo



Camera



Location services

Orange Local*
My favourites
Status info
Log
Settings



Settings**

General
Profiles
Time & date
Language
Update service
Voice control
Homescreen
Shortcuts
Flight mode
Security
Setup wizard
Unique setup
Phone status
Master reset
Sounds & alerts
Ring volume
Ringtone
Silent mode
Increasing ring
Vibrating alert
Message alert
Key sound



Display
Wallpaper
Main menu layout
Theme
Screen saver
Clock size
Brightness



Calls
Speed dial
Smart search
Divert calls
Manage calls
Time & cost*
Show/hide my no.
Handsfree
Open to answer
Close to end call



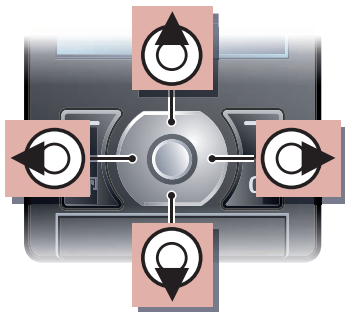 
Connectivity
Bluetooth
Wi-Fi
USB
Phone name
Network sharing
Synchronisation
Device management
Mobile networks
Internet settings
Streaming settings
Message settings*
Accessories

* Some menus are operator-, network- and subscription-dependent.

** You can use the navigation key to scroll between tabs in submenus. For more information, see *Navigation* on page 16.

Navigation

To navigate the phone menus



- 1 From Homescreen select **Menu**.
- 2 Use the navigation key to move through the menus.

To select actions on the screen

- Press the left, centre or right selection key.

To view options for an item

- Select **Options** to, for example, edit.

To end a function

- Press .

 
To return to Homescreen

- Press .

To navigate your media

- 1 From Homescreen select **Menu** > **Media**.
- 2 Scroll to a menu item and press the navigation key right.
- 3 To go back, press the navigation key left.

To delete items

- Press  to delete items such as numbers, letters, pictures and sounds.

Tabs

Tabs may be available. For example, **Settings** have tabs.









To scroll between tabs

- Press the navigation key left or right.

Shortcuts

You can use keypad shortcuts to go directly to functions.

To use navigation key shortcuts

- From Homescreen press , ,  or  to go directly to a function.
- ! *Navigation key shortcuts  and  are only available if Homescreen is set to Sony Ericsson.*

 
 
 


To edit a navigation key shortcut

- 1 From Homescreen select **Menu** > **Settings** > the **General** tab > **Shortcuts**.
- 2 Scroll to an option and select **Edit**.
- 3 Scroll to a menu option and select **Shortc..**

Main menu shortcuts

Menu numbering starts from the top left icon and moves across and then down row by row.

To go directly to a main menu item

- From Homescreen select **Menu** and press  - , ,  or .
- ! *The **Main menu layout** must be set to **Grid**. See *To change the main menu layout on page 61*.*

Multitasking

Get quick access to Open items that are running in the background.

To view your open items

- Press .

Memory

You can save content on the memory card, in the phone memory and on the SIM card. Photos and music are saved on the memory card, if a memory card is inserted. If not, or if the memory card is full, photos and music are saved in the phone memory. Messages and contacts are saved in the phone memory, but you can choose to save them on the SIM card.

Memory card

- ! *You may have to purchase a memory card separately.*

Your phone supports Memory Stick Micro™ (M2™) memory card adding more storage space to your phone. It can also be used as a portable memory card with other compatible devices.

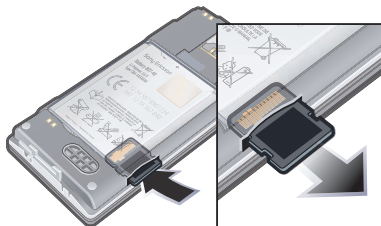 
You can move content between the memory card and the phone memory. See *Handling content in the phone on page 46*.

To insert a memory card



- Remove the battery cover and insert the memory card with the gold-coloured contacts facing up.

To remove a memory card



- Remove the battery cover and press the edge of the memory card to release and remove it.

Phone language

You can select a language to use in your phone.

To change the phone language

- 1 From Homescreen select **Menu** > **Settings** > the **General** tab > **Language** > **Phone language**.
- 2 Select an option.

Entering text

You can use multitap text input or T9™ Text Input **T9** to enter text. The T9 Text Input method uses a built-in dictionary.

To change text input method

- When you enter text, press and hold down **(*)a/A**.

To shift between capitals and lower-case letters

- When you enter text, press **(*)a/A**.

To enter numbers

- When you enter text, press and hold down **(0+)** – **(9)**.

To enter full stops and commas

- When you enter text, press **(1)**.

To enter a symbol

- 1 When you enter text, select **Options > Add symbol**.
- 2 Scroll to a symbol and select **Insert**.

To enter text using T9™ Text Input

- 1 From Homescreen select, for example, **Menu > Messaging > Write message > Message**.
- 2 If **T9** is not displayed, press and hold down **(*)a/A** to change to T9 Text Input.
- 3 Press each key only once, even if the letter you want is not the first letter on the key. For example, to write the word “Jane”, press **(5)**, **(2)**, **(6)**, **(3)**. Write the whole word before looking at the suggestions.
- 4 Use **(←)** or **(→)** to view suggestions.

- 5 Press **(#→?)** to accept a suggestion.

To enter text using multitap

- 1 From Homescreen select, for example, **Menu > Messaging > Write message > Message**.
- 2 If **T9** is displayed, press and hold down **(*)a/A** to change to multitap text input.
- 3 Press **(2)** – **(9)** repeatedly until the desired letter appears.
- 4 When a word is written, press **(#→?)** to add a space.

To add words to the built-in dictionary

- 1 When you enter text using T9 Text Input, select **Options > Spell word**.
- 2 Write the word using multitap input and select **Insert**.

Internet

If you cannot use the Internet, see *I cannot use Internet-based services* on page 66.

To start browsing

- 1 From Homescreen select [Search](#).
- 2 Enter a Web address, a search phrase or the name of a bookmark.
- 3 Scroll to an item in the list and select [Go to](#) or [Search](#).

To exit the browser

- When you browse the Internet, select [Options](#) > [Exit browser](#).

Bookmarks

You can create and edit bookmarks as quick links to your favourite Web pages.

To create a bookmark

- 1 When you browse the Internet, select [Options](#) > [Tools](#) > [Add bookmark](#).
- 2 Enter a title and an address. Select [Save](#).

To select a bookmark

- 1 From Homescreen select [Menu](#) > [Orange World](#).
- 2 Select [Options](#) > [Go to](#) > [Bookmarks](#).
- 3 Scroll to a bookmark and select [Go to](#).

To send a bookmark

- 1 From Homescreen select [Menu](#) > [Orange World](#) > [Options](#) > [Go to](#) > [Bookmarks](#).
- 2 Scroll to a bookmark.
- 3 Select [Options](#) > [Send](#) and select a transfer method.

History pages

 

You can view Web pages you have browsed.

To view history pages

- From Homescreen select [Menu](#) > [Orange World](#) > [Options](#) > [Go to](#) > [History](#).

More browser features

To use pan and zoom on a Web page

- 1 When you browse the Internet, press .
- 2 Use the navigation key to move the frame.
- 3 Press [Zoom](#).
- 4 To switch back to pan, press .

- ! *To use pan and zoom, Smart-Fit must be turned off.*