



Sony Ericsson Vivaz™ pro User guide

Please read the *Important information* before you use your mobile phone.

Experience more. Discover how.

Fill it with pop and let it rock. Share your life in pictures. Or why not go online for the latest updates? Your new phone is the key to a wider world. And it's just around the corner. Get started with this User guide. And join us online to get the full picture. Music, games, apps, updates, downloads, support and more.

All in one place: www.sonyericsson.com/Vivazpro

- Don't forget to update your phone software. See *Updating your phone* on page 8.

Help in the phone

An extended User guide is saved on your phone memory card. You can also access this document at www.sonyericsson.com/support. Help on most applications is available from the **Organiser** in your phone.

To access the extended User guide

- Select **Menu > Organiser > File manager**.
- Select your memory card and then select the User guide pdf file.

To view Help when you are in an application

- Select **Options > Help**.

Getting started

Assembly

Before you start using your phone, you need to insert a SIM (Subscriber Identity Module) card and the battery.

To insert the SIM card



- Remove the battery cover.
- Put the SIM card into its holder with the gold-coloured contacts facing down.

 
To insert the battery



- Insert the battery with the label side up and the connectors facing each other.
- Put the battery cover into place.


Charging the phone

The phone battery is partly charged when you buy it. The indicator light is on when you charge the phone.

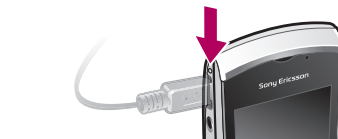

- For more information on how the indicator light functions, see the extended User guide.
- When the battery is completely discharged, it may take several minutes before the indicator light turns on, but the charging function will still be running.

 To charge the phone using the power adapter

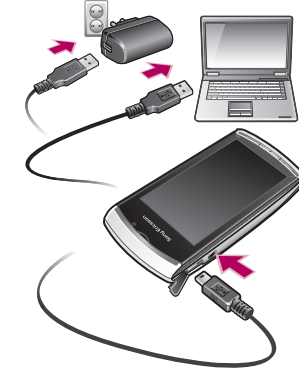

- Connect the phone to a power outlet using the USB cable provided and the power adapter.
- You can use your phone while it is charging. You can charge the battery at any time and for more or less than 3 hours using the power adapter. You can interrupt the charging without damaging the battery.

 
To charge the phone using a computer

- Connect the phone to a USB port on a computer using the USB cable provided.

Memory card

Your phone supports memory cards, adding more storage space to your phone. A memory card used in your phone can also be used with other compatible devices. You can move content between your memory card and the phone memory.

To insert or remove a memory card

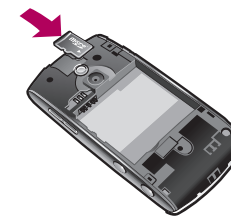

- Insert the memory card with the gold-coloured contacts facing down.
- To release and remove the memory card, press the release button and select **Remove memory card**, then press the edge of the memory card inwards.

Turning on the phone

To turn on the phone



- Press and hold down the power key.
- Enter your SIM card PIN, if requested, and select **OK**.
- The first time you turn on the phone, follow the instructions to use the setup wizard for basic settings and useful tips.

Updating your phone

You can update your phone to the most recent software for optimal performance and to get the latest enhancements. You need a USB cable and an Internet-connected PC. To learn how, go to www.sonyericsson.com/update.

- Remember to back up your phone content before updating. To see how to back up your phone content, see the *Extended User guide* pre-loaded on the memory card. You can also access this document at www.sonyericsson.com/support.

Multitasking

Your phone lets you view and switch between all running applications.

To view running applications

- Press and hold down the main menu key.
- To switch to a running application, tap it.

- Leaving applications running in the background increases the demand on battery power and reduces the battery life.

 
To end a function

- In most cases, select **Options > Exit**.

To delete items

- In most applications, to delete items such as files, folders, messages, or media files, select an item, and then select **Options > Delete**.

Phone overview

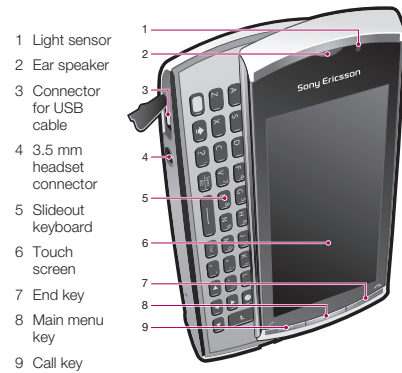

- Light sensor
- Ear speaker
- Connector for USB cable
- 3.5 mm headset connector
- Slideout keyboard
- Touch screen
- End key
- Main menu key
- Call key



- On/off key
- Tally light
- Camera light
- Camera
- Volume, digital zoom keys
- Video key
- Photo key
- Loud speaker

Menu overview*

- PlayNow™**
- Internet**
- Applications**
 - Radio, TrackID™, Media server, Downl. chat apps, IM, Conv. msging, Web publishing, Record sound
- Camera**
- Media**
 - Photo, Music, Video
- Location services**
 - Google Maps, Location, Wisesplit
- Contacts**
- Calendar**
- Log****
- Organiser**
 - File manager, Clock, RoadSync, SonyEricsson Sync, Google, Search, Notes, Dictionary, Converter, Calculator, Adobe PDF, Quickoffice, Help
- Settings**
 - Personal**
 - Profiles, Themes, Standby
 - Phone**
 - Date and time, Language, Display, Download settings, Sensor settings, Touch input, Accessories, Application sett., Phone management

Application mgr
Installed app., installation files, install settings

Telephony
Call sett., Speed dialling, Voicemail, Divert calls, Call barring

Connectivity
Network, Wi-Fi, Bluetooth, USB, Destinations, Connection mgr, Data transfer, Remote drives, Admin. settings

* Some menus are operator-, network- and subscription-dependent. ** You can use touch functionality to scroll between tabs in submenus. For more information, see *Navigation* on page 15.

Icons on the main menu may change as the theme changes.

Status icons

Status icons appear at the top of the screen. You can tap status icons to view more information or change settings.

- Battery fully charged
- Network signal strength
- Messages in the outbox
- GSM available
- Missed call
- Handset connected
- Call diverted
- Text message received
- New email received
- Headphone inserted
- GPS connected
- Alarm activated
- Bluetooth™ connected
- Keylock activated
- USB data transferring
- Data synchronising
- Flight mode activated
- Secure Wi-Fi™ network connected
- Wi-Fi™ network connected

- 3G available
- HSDPA available
- EGPRS available

Navigation

You can move through menus with your fingertips or with a stylus. Tap or double-tap an item to select or open it. You can also switch between running applications.

To access the main menu

- Press the main menu key.

To unlock the phone manually

- Press the power key and select **Unlock**.

To lock the phone manually

- Press the power key twice.

To view running applications

- Press and hold down the main menu key.
- To switch to a running application, tap it.

- Leaving applications running in the background increases the demand on battery power and reduces the battery life.

To end a function

- In most cases, select **Options > Exit**.

To delete items

- In most applications, to delete items such as files, folders, messages, or media files, select an item, and then select **Options > Delete**.

- Standby theme** – change the appearance of the standby screen.

To save your changes, select **Back**.

To change shortcut settings

- Tap the shortcut key.
- Tap the shortcut key.
- Select a shortcut and tap **Options > Change**.
- When **Shortcut type** appears, select **Application** or **Bookmark**.
- Double-tap an item.
- To save your settings, select **Back**.

Contacts

You can save names, phone numbers and personal information in **Contacts**. Information can be saved in the phone memory or on the SIM card.

- You can synchronise your contacts using the *Sony Ericsson PC Suite*.

To add a new contact

- Select **Menu > Contacts**.
- Tap the contact icon.
- Add contact information. To close the text input window, tap the checkmark.
- Select **Done**.

To select which contacts to display

- Select **Menu > Contacts > Options > Settings > Contacts to display**.

To copy contacts between the memory card and the SIM card

- Select **Menu > Contacts**.

- Select a contact and then select **Options > Mark/Unmark > Mark**.
- To mark more than one contact, repeat step 2.
- Select **Options > Copy**.
- Select an option.

When you copy contacts from the Phone memory to the SIM memory, only the contact name, phone number and email address will be saved to the SIM card.

To find a contact

- In the search field, enter the first letters of the contact name. The matching contact or contacts appear.

Entering text

You can enter letters, numbers and special characters using the slideout keyboard, on-screen keyboards or handwriting recognition. You can switch between these input methods.

Text input icons

These icons may appear in the text input window.

- Tap to accept the text in the input window and close the on-screen keyboard view
- Tap to open the input options menu to change, for example, the **Writing language**, or view **Help**
- Tap to switch character cases
- Tap to display numbers and symbols
- Tap to move the cursor left or right
- Tap to delete a character

- Tap to enter a space
- Tap to insert a carriage return
- Tap to change to another input method: **Mini QWERTY keyboard**, **Full QWERTY keyboard**, **Alphanumeric keypad** or **Handwriting**
- Tap and hold to move the input window around the screen
- When using handwriting recognition, tap to open the symbol table
- When using handwriting recognition, tap to switch to number input mode
- Tap to turn predictive text input modes on or off, change the character case, and switch between letter and number modes
- When using handwriting recognition, tap to switch character case

To copy and paste text

- Tap to place the cursor at the beginning of the text you want to select for copying. Then drag your fingertip or stylus to the end of the text.
- To copy the selected text, tap **Copy** and select **Copy**.

- To paste the text within the same text field, move the cursor to where you want the text to be inserted, tap **Paste** and select **Paste**.
- To paste the text to another text field, go to that text field, move the cursor to where you want to insert the text and select **Options > Paste**.

Media

You can manage media files in your phone or on your memory card. You can also manage photos and video clips in albums on the web.

Viewbar and touchbar

You can use the viewbar and touchbar to navigate through different views and manage your media files.

- Viewbar** – a bar that appears at the top of the screen (in portrait view) after you select an application in **Media**. Using this bar, you can navigate to play view, to various list views within the same application, or to the main **Media** menu.
- Touchbar** – a bar at the bottom of the screen where you can manage your media files or go back to the previous level.

To get tips for an icon in the bars, touch and hold the icon.

To update media libraries manually

- Tap **Refresh** in the touchbar.

Your media libraries update automatically when you use **Media** for the first time.

To go to the play view

- Tap **Play** at the top of the screen.

To view more commands in the touchbar

- Tap **More** in the touchbar.

Mark mode

You can mark several files and manage them in batches.

To mark media files

- When the files are in list or grid view, tap **Mark** in the touchbar.
- Tap the files to mark them.
- To exit mark mode, tap **Done**.

You can use the icons in the touchbar to manage the files you mark.

Photo

You can view, send and manage photos in your phone and on your memory card. You can also edit and arrange your online photo albums.

To view a photo in full screen

- Select **Menu > Media > Photo**.
- Select a view option and tap a thumbnail to view the photo.
- To view the next or previous photo, flick left or right.

To edit a photo

- When viewing a photo, tap **Edit** in the touchbar.
- Select **Options** and select an item.

Photo tags

You can manage your photos easily by creating tags for them.

- Only photos with EXIF (Exchangeable Image File Format) info can be tagged.

To create a tag

- When viewing a photo, tap > .
- Tap , enter a new name and select **OK**.
- Select a tag icon.
- Select the created tag to add it to your photo.

To tag a photo

- When in play view or mark mode, tap > .
- Select a tag.

Music

You can listen to music, audiobooks, podcasts and your recordings.

Playback controls

The following playback controls may appear in your music player and video player:

- Pause
- Play
- Touch and hold to rewind. Tap to go to the previous track
- Touch and hold to fast forward. Tap to go to the next track

Additional music controls

The following music controls may appear in your music player:

- SHUF** Turn on shuffle to play tracks in the current playlist in a random order

SHUF

Turn off shuffle

- Repeat all tracks in the current playlist
- Repeat the current track several times
- Disable repeating tracks

To play music or other audio tracks

- Select **Media** in the touchbar of the standby screen > **Music**.
- Look for tracks in **Artists, Albums, Tracks, Playlists, Audiobooks, Podcasts and My recordings**.
- Tap a track.

To change the volume

- Press the volume key up or down.

To minimise the music player

- When the music player is open, tap .
- To restore the music player on the screen, tap the minimised album artwork.

- When you minimise the music player, the album artwork is also minimised.

Playlists

You can create playlists to organise your music. You can add tracks and folders to a playlist. It may take a few minutes for the phone to create a playlist.

To create a playlist

- Select **Menu** > **Media** > **Music** > **Playlists**.
- Tap **New playlist**.
- Enter a name and select **OK**.
- To add tracks, select, for example, from the viewbar and tap .
- Select the tracks you want to add to the playlist and tap .
- Select the playlist.

Video

You can browse and play video clips saved in your phone and on your memory card.

To play a video clip

- Tap in the touchbar of the standby screen and select **Video**.
- Select an option.
- Tap a video clip.

Transferring and handling content

You can transfer and handle your content such as pictures and music.

- You are not allowed to exchange some copyright-protected material.

Using a USB cable

You can connect your phone to a computer using a USB cable to synchronise, transfer and back up phone content, and to use your phone as a modem.

Before using a USB cable

Only use a USB cable supported by your phone. Do not remove the USB cable from your phone or computer during transfer as this may corrupt the memory card or the phone memory.

To use mass storage

- Connect the USB cable to the phone and the computer.
- Phone:** Select **Mass storage**.
- Computer:** Wait until your memory card appears as the external disk in *Microsoft® Windows® Explorer*.
- Computer:** On the computer desktop, double-click the *My Computer* icon.
- Computer:** To view the memory card folders, double-click the icon representing your memory card.
- Copy and paste your file, or drag and drop it, into a folder on your computer or on your memory card.

- You cannot view the transferred files in your phone until you remove the USB cable from the phone.

PC Companion

PC Companion lets you:

- Explore content in your phone.
- Use your phone as a modem.
- Install PC Software used to synchronise, transfer and back up phone content.

For more information, go to www.sonyericsson.com/support.

To install PC Companion

- Connect your phone to a PC using a USB cable supported by your phone.
- Computer:** Select **Mass storage**.
- Computer:** Wait until the memory card in your phone appears as the external disk in *Microsoft® Windows® Explorer*.
- Computer:** On the computer desktop, double-click the *My Computer* icon.
- Computer:** To launch the PC Companion installer from the memory card, double-click the icon representing your memory card and double-click **Starmte.exe** under the folder **pccompanion**.
- Computer:** Follow the instructions that appear.

Required operating systems

You need one of these operating systems to use Sony Ericsson PC software:

- Microsoft® Windows Vista™
- Microsoft® Windows XP, Service Pack 3 or higher

Transferring media files

You can use Media Go™ to transfer media files from CDs or from your computer to the memory card in your phone. Media Go™ computer software and USB drivers are available for download at www.sonyericsson.com/support.

Sending content to another phone

You can send content, for example, using **Messaging** or using Bluetooth™ wireless technology.

File manager

You can use **File manager** in your phone to handle content saved in the phone memory or on a memory card. If the memory is full, delete some content to create space.

PlayNow™ application

When you select the **PlayNow™** application, you enter the PlayNow™ online service where you can download music, games, ringtones, themes and wallpapers. You can preview or listen to content before you purchase and download it to your phone.

- This service is operator-, network- and subscription-dependent, and may not be available in all countries.

For extended functionality, you can also access the PlayNow™ web shop on a computer from www.sonyericsson.com/playnow. For more information, go to www.sonyericsson.com/support.

- Before you use the PlayNow™ application, you must have the required Internet connection settings in your phone.

To use the PlayNow™ application

- Select **Menu** > **PlayNow™**.
- Search through the PlayNow™ online service and follow the instructions to preview and purchase content.

TrackID™ application

The TrackID™ application is a music recognition service. You can search for the title, artist and album name of a track you hear playing through a loudspeaker.

- Before you use the TrackID™ application, you must have the required Internet connection settings in your phone.

To search for track information

- When you hear a track through a loudspeaker outside your phone, select **Menu** > **Applications** > **TrackID™** > **Start**.

- For best results, use the TrackID™ application in a quiet area.

- You get a vibrating alert when the recording is finished or if the recording fails.

Calls

Making and receiving calls

You need to turn on your phone and be within range of a network.

- The touch screen is disabled automatically during calls when you place your phone next to your ear.

To make a call

- Select to open the dialler and enter a phone number (with international country code and area code, if applicable).

card. You can also access this document at www.sonyericsson.com/support.

To start the Internet browser

- Select **Menu** > **Internet**.
- Tap , and enter a web address.
- Select **Go to**.

Location services

Your phone has a GPS receiver that uses satellite signals to calculate your location. You can get help to find your way to a destination and save your favourite locations. With information from mobile towers near you, you may be able to view your approximate location on a map.

To access location services

- Select **Menu** > **Location services**, and select an application.

- Sony Ericsson does not warrant the accuracy of any location services, including but not limited to navigational services.

Using GPS

Your location can be found when you have a clear view of the sky. If your location is not found after a few minutes, move to another location. To help the search, stand still and do not cover the GPS antenna, which is located in the upper right part of the phone.

- Some GPS features use the Internet. Data rates and charges may apply.

2

- You can call numbers from your contacts and call lists.

To end a call

- Press .

To answer a call

- Press .

To reject a call

- Press .

To change the ear speaker volume during a call

- Press the volume key up or down.

Emergency calls

Your phone supports international emergency numbers, for example, 112 or 911. You can normally use these numbers to make emergency calls in any country, with or without the SIM card inserted, if you are within range of a network.

- In some countries, other emergency numbers may also be promoted. Your network operator may therefore have saved additional local emergency numbers on the SIM card.

Call list

You can view information about recent calls.

To call a number from the call list

- Press and select a tab.
- Select a name or a number and press .

 
Using the camera

Your phone has touch capture, face detection, smile detection, light, and image stabiliser functions.

To activate the camera

- To activate the photo camera, press .
- To activate the video camera, press .

Viewfinder

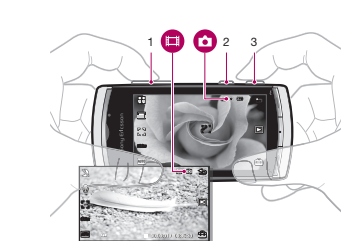

- Zoom in or out
- Enter video mode and shoot video clips
- Enter photo mode and take photos

To turn off the camera

- Press .

To take a photo

- To activate the camera, press .
- To use auto focus, press halfway down. begins to blink.
- When turns green, press fully down to take the photo. The photo is saved automatically.

- To take a photo more quickly, you can skip step 2 and press fully down.

- Do not take photos when there is a strong light source in the background. Use a support or the self timer to avoid blurred photos.

To record a video clip

- Press .
- Press fully down to start recording.
- To stop recording, press fully down. The video is saved automatically.

More camera features

You can touch a point on the screen to choose where the camera should focus. The image stabiliser reduces the impact from vibrations.

To change settings

- Activate the camera and tap .

To view information about a setting

- Tap a setting and tap .

Face detection

You can use face detection to bring an off-centre face into focus. The camera automatically detects one face, indicated by a white frame. The frame becomes green when focus is locked. Focus is set to the face closest to the camera.

To set face detection

- To activate the camera, press .
- Tap > .

- Face detection is not available in Landscape, Document or Twilight landscape scenes.

Smile detection

Smile detection is a technology that detects a person's smile and automatically takes the photo.

To use smile detection

- To activate the camera, press .
- Tap > .
- To start smile detection, press , blinks.
- When the face in the viewfinder smiles, stops blinking and the photo is taken automatically.

Panorama

The panorama feature helps you take wide panorama photos automatically. Three photos are taken sequentially in a row and connected to each other to form a seamless wide photo.

To take a panorama photo

- To activate the camera, press .

2 Tap > . appears at the top of the screen.

- To take the first photo, press .

- To take the second photo, move the camera left or right until the indicator fits into and becomes fully green. The photo is taken automatically and the direction of the panorama is now fixed.

- To take the third photo, move the camera in the same direction as the previous shot until the indicator fits into and becomes fully green. The photo is taken automatically.

Touch capture

In touch capture mode, you can touch the screen to focus and capture a photo. A white border in the viewfinder indicates the touchable area.

To take a photo in touch capture mode

- To activate the camera, press .
- Tap > .
- Tap within the white border to select the focus point. A photo is then taken automatically.

- Do not touch the viewfinder until you want to take a photo.

Image stabiliser

The image stabiliser compensates for small movements of the hand to ensure steady photos. When you turn on this function, appears in the viewfinder.

To activate the image stabiliser

- Activate the camera.
- Tap .

Locks

SIM card lock

This lock only protects your subscription. Your phone will work with a new SIM card. If the lock is on, you have to enter a PIN.

The PIN2 is required to access some network services, and your SIM card must support these services.

If you enter your PIN incorrectly three times in a row, the SIM card is blocked and you need to enter your PUK (Personal Unblocking Key). Your PIN, PIN2 and PUK are supplied by your network operator.

To unblock your SIM card

- When **PIN blocked**, **Enter PUK**: appears, enter your PUK and select **OK**.
- Enter a new four-to-eight-digit PIN and select **OK**.
- Re-enter the new PIN and select **OK**.

To turn on the SIM card lock

- Select **Menu** > **Settings** > **Phone** > **Phone management** > **Security** > **Phone and SIM card** > **Phone code request** > **On**.
- Enter your PIN and select **OK**.

To edit your PIN

- Select **Menu** > **Settings** > **Phone** > **Phone management** > **Security** > **Phone and SIM card** > **PIN code**.
- Follow the instructions to enter your old PIN once and new PIN twice.

Phone lock

You can stop unauthorised use of your phone. The default phone lock code is 0000. You can change the phone lock code to any four-to-eight-digit personal code. When the touch screen and keys are locked, the touch screen and the keys are inactive.

- It is important that you remember your new code. If you forget it, you need to take your phone to your local Sony Ericsson retailer.

To turn on the phone lock

- Select **Menu** > **Settings** > **Phone** > **Phone management** > **Security** > **Phone and SIM card** > **Phone auto-lock period** > **User defined**.
- To automatically lock your phone when you do not use it for a defined time, tap the text input field under **Lock after (minutes)**; and enter the time-out period.
- Enter your phone lock code and select **OK**.
- To unblock the phone, press and follow the instructions that appear.

To edit your phone lock code

- Select **Menu** > **Settings** > **Phone** > **Phone management** > **Security** > **Phone and SIM card** > **Lock code**.
- Follow the instructions to enter your old lock code once and your new lock code twice.

Legal information

Sony Ericsson Vivaz™ pro U8i/U8a

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements

and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide. All rights reserved.

©Sony Ericsson Mobile Communications AB, 2010

Publication number: 1234-4886.1

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

This User guide may reference services or applications provided by third parties. Use of such programming or services may require separate registration with the third party provider and may be subject to additional terms of use. For applications accessed on or through a third-party website, please review such website's terms of use and applicable privacy policy in advance. Sony Ericsson does not warrant or guaranty the availability or performance of any third-party websites or offered services.

Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under license.

The Liquid Identity logo, Vivaz, PlayNow and TrackID are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB. TrackID™ is powered by Gracenote Mobile MusicID™. Gracenote and Gracenote Mobile MusicID are trademarks or registered trademarks of Gracenote, Inc.

microSD is a trademark or a registered trademark of SanDisk Corporation.

RoadSync is a trademark or registered trademark of DataViz, Inc. Quickoffice is a registered trademark of Quickoffice, Inc. Wapeplot is a registered trademark of Appello Systems AB.

Adobe and Flash are trademarks or registered trademarks of Adobe Systems Incorporated in the United States and/or other countries. This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Other product and company names mentioned herein may be the trademarks of their respective owners. Any rights not expressly granted herein are reserved. All illustrations are for illustration only and may not accurately depict the actual phone.

Sony and make.believe are trademarks or registered trademarks of Sony Corporation.

Media Go is a trademark or registered trademark of Sony Media Software and Services.

Wi-Fi is a trademark or a registered trademark of the Wi-Fi Alliance.

DLNA is a trademark or registered trademark of the Digital Living Network Alliance.

Google™, Google Maps™, YouTube and the YouTube logo are trademarks or registered trademarks of Google, Inc.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.

Microsoft, Windows and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

microSD is a trademark or a registered trademark of SanDisk Corporation.

RoadSync is a trademark or registered trademark of DataViz, Inc. Quickoffice is a registered trademark of Quickoffice, Inc. Wapeplot is a registered trademark of Appello Systems AB.

Adobe and Flash are trademarks or registered trademarks of Adobe Systems Incorporated in the United States and/or other countries.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved.

All illustrations are for illustration only and may not accurately depict the actual phone.

www.sonyericsson.com



Sony Ericsson Mobile Communications AB
SE-221 88 Lund, Sweden

1234-4886.1

www.sonyericsson.com



Sony Ericsson Mobile Communications AB
SE-221 88 Lund, Sweden



1235-6329.1

Sony Ericsson U8i

UMTS HSPA band 1 8 GSM GPRS/EDGE 850/900/1800/1900

Important Information

United States & Canada

THIS PHONE MODEL HAS BEEN CERTIFIED IN COMPLIANCE WITH THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

The Series mobile phones have been designed to comply with applicable safety requirements for exposure to radio waves. Your wireless phone is a radio transmitter and receiver. It is designed to not exceed the limits* of exposure to radio frequency (RF) energy set by governmental authorities. These limits establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by international scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a safety margin designed to assure the safety of all individuals, regardless of age and health.

The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate (SAR). Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands. While there may be differences between the SAR levels of various phone models, they are all designed to meet the relevant guidelines for exposure to radio waves. For more information on SAR, please refer to the safe and efficient use chapter in the User Guide.

The highest SAR value as reported to the authorities for this phone model when tested for use by the ear is 1.05 W/kg*, and when worn on the body is 0.59 W/kg* for speech and 0.94 W/kg* for data calls. Body worn measurements are made while the phone is in use and worn on the body with a Sony Ericsson accessory supplied with or designated for use with this phone. It is therefore recommended that only Ericsson and Sony Ericsson original accessories be used in conjunction with Sony Ericsson phones.

**Before a phone model is available for sale to the public in the US, it must be tested and certified by the Federal Communications Commission (FCC) that it does not exceed the limit established by

2

the government-adopted requirement for safe exposure*. The tests are performed in positions and locations (i.e., by the ear and worn on the body) as required by the FCC for each model. The FCC has granted an Equipment Authorization for this phone model with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. While there may be differences between the SAR levels of various phones, all mobile phones granted an FCC equipment authorization meet the government requirement for safe exposure. SAR information on this phone model is on file at the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID PY7A3880077. Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) website at <http://www.phonefacts.net>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a margin of safety to give additional protection for the public and to account for any variations in measurements.

**This paragraph is only applicable to authorities and customers in the United States.

Renseignements importants

États-Unis et Canada

CE MODÈLE DE TÉLÉPHONE A ÉTÉ CERTIFIÉ CONFORME AUX EXIGENCES GOUVERNEMENTALES RELATIVES À L'EXPOSITION AUX ONDES RADIOÉLECTRIQUES.

Les téléphones mobiles ont été conçus pour répondre aux normes de sécurité en vigueur en matière d'exposition aux ondes radioélectriques. Votre téléphone sans fil est un émetteur et un récepteur radio. Il est conçu de manière à ne pas dépasser les limites* d'exposition aux signaux radiofréquences (RF) établies par les autorités gouvernementales. Ces limites fixent les niveaux maximaux d'énergie radiofréquence auxquels peut être soumis le grand public. Ces lignes directrices sont basées sur des normes qui ont été élaborées par des organisations scientifiques internationales par le biais d'évaluations périodiques et approfondies des études scientifiques. Ces normes prévoient une marge de sécurité visant à assurer la protection de toutes les personnes, quels que soient leur âge et leur état de santé.

Les lignes directrices relatives à l'exposition aux ondes radioélectriques utilisent une unité de mesure appelée "Débit d'absorption spécifique" (SAR). Les tests de SAR sont effectués selon des méthodes standardisées dans lesquelles le téléphone émet dans toutes les bandes de fréquences utilisées, à la plus forte puissance pour laquelle il a été homologué. Bien que le débit d'absorption spécifique puisse être différent d'un modèle de téléphone à un autre, tous les appareils sont conçus pour respecter les lignes directrices relatives aux ondes radioélectriques. Pour en savoir plus sur le débit d'absorption spécifique, reportez-vous au chapitre sur l'utilisation efficace et sans danger de ce présent guide.

Le débit d'absorption spécifique le plus élevé relevé par les autorités pour ce modèle de téléphone est de 1,05 W/kg* lorsqu'il est testé en utilisation près de l'oreille, et de 0,59 W/kg* (pour les appels vocaux) et de 0,94 W/kg* (pour les appels de données) lorsqu'il est porté sur le corps. Lors des mesures de port sur le corps, le téléphone était maintenu par un accessoire Sony

4

Ericsson fourni avec ce téléphone ou conçu pour être utilisé avec l'appareil. Il est par conséquent recommandé de n'utiliser que les accessoires authentiques Ericsson et Sony Ericsson avec les téléphones Sony Ericsson.

**Avant qu'un modèle de téléphone ne soit offert au public aux États-Unis, la FCC (Federal Communications Commission) doit le tester et certifier qu'il respecte les limites fixées dans les exigences gouvernementales d'exposition sans danger*. Pour chaque modèle, les tests sont effectués en position et aux endroits d'usage (c'est-à-dire près de l'oreille et porté sur le corps), tel que l'exige la FCC. La FCC a accordé une autorisation d'équipement (Equipment Authorization) pour ce modèle de téléphone, après que tous les débits d'absorption spécifique indiqués aient été évalués et considérés conformes aux lignes directrices de la FCC en matière d'exposition aux radiofréquences. Même s'il peut y avoir des différences entre les niveaux de SAR des différents téléphones, tous les téléphones mobiles auxquels la FCC a accordé une autorisation d'équipement répondent aux normes gouvernementales en matière d'exposition sans danger. La FCC conserve dans ses dossiers l'information relative aux débits d'absorption spécifique relevés pour ce modèle de téléphone. Vous pouvez la consulter au <http://www.fcc.gov/oet/fccid>, sous la rubrique "Display Grant". Vous trouverez des renseignements supplémentaires concernant le débit d'absorption spécifique (SAR) sur le site Web de la Cellular Telecommunications & Internet Association (CTIA) au <http://www.phonefacts.net>.

*Aux États-Unis et au Canada, la limite de débit d'absorption spécifique (SAR) des téléphones mobiles utilisés par le public est de 1,6 watt/kg (W/kg) en moyenne sur un gramme de tissu. Cette norme comporte une marge importante de sécurité afin d'assurer une protection supplémentaire et de tenir compte de toute variation dans les mesures.

**Ce paragraphe ne concerne que les autorités et les clients des États-Unis.

Información importante

Estados Unidos y Canadá

ESTE MODELO DE TELÉFONO HA SIDO CERTIFICADO Y CUMPLE CON LOS REQUISITOS GUBERNAMENTALES DE EXPOSICIÓN A LAS ONDAS DE RADIO.

El teléfono móvil ha sido diseñado para cumplir con los requisitos de seguridad aplicables de exposición a las ondas de radio. El teléfono inalámbrico es un transmisor y receptor de radio. Está diseñado para no superar los límites* de exposición a la energía de radiofrecuencia (RF) establecidos por las autoridades gubernamentales. Estos límites establecen los niveles permitidos de energía de RF para la población en general. Las especificaciones se basan en los estándares desarrollados por organizaciones científicas internacionales mediante una evaluación periódica y minuciosa de estudios científicos. Estos estándares incluyen un margen de seguridad destinado a garantizar la seguridad de todas las personas, independientemente de su edad y condición de salud.

Las especificaciones de exposición a las ondas de radio emplean una unidad de medición conocida como Tasa específica de absorción (SAR). Las pruebas de SAR se realizan usando métodos estandarizados mientras el teléfono transmite al nivel de potencia más alto certificado en todas las bandas de frecuencia utilizadas. Si bien puede haber diferencias entre los niveles de SAR de diversos modelos de teléfono, todos los teléfonos han sido diseñados para cumplir con las especificaciones pertinentes de exposición a las ondas de radio. Para obtener más información acerca de SAR, consulte el capítulo sobre uso seguro y eficaz en la Guía del usuario.

El mayor valor SAR según lo informado a las autoridades para este teléfono cuando se evaluó para su uso cerca del oído fue de 1,05 W/kg*, y cuando se utilizó cerca del cuerpo fue de 0,59 W/kg* para llamadas de voz y 0,94 W/kg* para llamadas de datos. Las mediciones para el uso cerca del cuerpo se realizan mientras el teléfono está en uso y ubicado cerca del cuerpo con un accesorio Sony Ericsson proporcionado con el teléfono o diseñado para su

6

uso con este teléfono. Por lo tanto, se recomienda utilizar sólo accesorios originales Ericsson y Sony Ericsson en conjunto con los teléfonos Sony Ericsson.

**Antes de que un modelo de teléfono esté disponible para la venta al público en los EE.UU., se debe probar y certificar ante la Comisión Federal de Comunicaciones (FCC) que no supera el límite establecido por los requisitos gubernamentales de exposición segura*. Las pruebas se realizan en las posiciones y lugares (es decir, en el oído y cerca del cuerpo) exigidos por la FCC para cada modelo. La FCC ha otorgado una Autorización de equipo para este modelo de teléfono con todos los niveles SAR informados y que han sido evaluados en cumplimiento con las especificaciones de exposición de RF de la FCC. Si bien puede haber diferencias en los niveles SAR entre distintos modelos de teléfonos móviles, todos los teléfonos móviles que han recibido una autorización de equipo de la FCC cumplen con los requisitos gubernamentales de exposición segura. La información de SAR acerca de este modelo de teléfono está archivada en la FCC y se puede encontrar en la sección Display Grant de <http://www.fcc.gov/oet/fccid> luego de buscar en FCC ID PY7A3880077. Si desea información adicional acerca de SAR, puede encontrarla en el sitio Web de la Asociación de Telecomunicaciones Celulares e Internet (CTIA, Cellular Telecommunications & Internet Association) en la dirección <http://www.phonefacts.net>.

* En los Estados Unidos y Canadá, el límite SAR para teléfonos móviles utilizados por el público es de 1,6 watts/kilogramo (W/kg) promediado sobre un gramo de tejido. El estándar incorpora un margen de seguridad para entregar protección adicional al público y para representar las variaciones en las mediciones.

**Este párrafo sólo es aplicable a las autoridades y clientes en los Estados Unidos.

7

Important Information

Latin & South America

Radio wave exposure and Specific Absorption Rate (SAR) information

The Series mobile phones have been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.

While there may be differences between the SAR levels of various phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

For more information on SAR, please refer to the safety chapter in the User Guide.

SAR data information for residents in countries that have adopted the SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2 W/kg averaged over ten (10) gram of tissue (for example European Union, Japan, Brazil and New Zealand):

The highest SAR value for this model phone when tested by Sony Ericsson for use at the ear is 1.03 W/kg (10g).

8

Información importante

Latinoamérica y América del Sur

Información acerca de la exposición a ondas de radio y la Tasa específica de absorción (SAR)

El teléfono móvil ha sido diseñado para cumplir con los requisitos de seguridad aplicables de exposición a las ondas de radio. Dichos requisitos se basan en directrices científicas que establecen márgenes de seguridad con el fin de evitar perjuicios a todas las personas, independientemente de su edad o estado de salud.

Las directrices de exposición a ondas de radio utilizan una unidad de medida denominada coeficiente de absorción específica o SAR. Las pruebas de SAR se llevan a cabo utilizando métodos normalizados, con el teléfono transmitiendo en el nivel más elevado de potencia autorizado en todas las bandas de frecuencia utilizadas.

Aunque puede existir diferencias entre los niveles de SAR de diferentes modelos de teléfono, todos han sido diseñados para cumplir las directrices pertinentes sobre exposición a ondas de radio.

Para obtener más información sobre el SAR, consulte el capítulo sobre seguridad en la guía del usuario.

Información sobre datos de SAR para residentes de países en los que se haya adoptado el límite de SAR recomendado por la International Commission on Non-Ionizing Radiation Protection (ICNIRP, Comisión internacional de protección contra la radiación no ionizantes (ICNIRP, International Commission on Non-Ionizing Radiation Protection), es 2 W/kg promedio por cada diez (10) gramos de tejido (por ejemplo, la Unión Europea, Japón, Brasil y Nueva Zelanda):

El valor de SAR más elevado para este modelo de teléfono cuando Sony Ericsson realizó la prueba para su uso en la oreja era de 1,03 W/kg (10g).

9

Informação importante

América do Sul e Latina

Informações sobre SAR (Taxa de Absorção Específica) e exposição à radiofrequência

O celular foi projetado para cumprir os requisitos de segurança aplicáveis para exposição à radiofrequência. Esses requisitos têm como base diretrizes científicas que incluem as margens de segurança para garantir a segurança de todas as pessoas, independentemente da idade e da saúde.

As diretrizes de exposição à radiofrequência usam uma unidade de medida conhecida como SAR ou Taxa de Absorção Específica. Os testes de SAR são conduzidos por métodos padronizados com a transmissão telefônica em seu nível certificado de energia mais alto em todas as faixas de frequência usadas.

Embora possa haver diferenças entre os níveis de SAR de vários modelos de telefone, todos foram projetados para atender as diretrizes relevantes de exposição à radiofrequência.

Para obter mais informações sobre SAR, consulte o capítulo de segurança do Guia do Usuário.

Informações sobre os dados de SAR para moradores de países que adotaram o limite SAR recomendado pelo ICNIRP (International Commission on Non-Ionizing Radiation Protection) que é o limite médio de 2 W/kg em dez (10) gramas de tecido (por exemplo, União Européia, Japão, Brasil e Nova Zelândia).

Quando testado pela Sony Ericsson, o valor de SAR mais alto para este modelo de telefone para uso junto ao ouvido foi de 1,03 W/kg (10g).

10

FCC Statement

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions: (1)

This device may not cause harmful interference, and (2)

This device must accept any interference received, including interference that may cause undesired operation.

Any change or modification not expressly approved by Sony Ericsson may void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



11

Industry Canada Statement

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

12

Declaration of Conformity for U8i

We, **Sony Ericsson Mobile Communications AB** of

Nya Vattentorget

SE-221 88 Lund, Sweden

declare under our sole responsibility that our product

Sony Ericsson type AAD-3880077-BV

and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards EN 301

511:V9.0.2, EN 301 908-1:V3.2.1, EN 301 908-2:V3.2.1, EN 300

440-2:V1.3.1, EN 300 328:V1.7.1, EN 301 489-7:V1.3.1, EN 301

489-17:V2.1.1, EN 301 489-24:V1.4.1, EN 301 489-3:V1.4.1 and

EN 60 950-1:2006 following the provisions of, Radio Equipment and Telecommunication Terminal Equipment directive **1999/5/EC**.

Lund, April 2010



Dan Redin,
Corporate Vice President, Head of Development

We fulfil the requirements of the R&TTE Directive (1999/5/EC).

Ce produit est conforme aux directives de R&TTE (**1999/5/EC**).

Cumplimos con los requisitos de la Directiva R&TTE – Normas sobre equipos de terminales de radio y telecomunicaciones (**1999/5/EC**).

Atendemos aos requisitos da Diretriz R&TTE (**1999/5/EC**).

13

Sony Ericsson

Important information

Sony Ericsson Consumer Web site

At www.sonyericsson.com/support there is a support section where help and tips are only a few clicks away. Here you will find the latest computer software updates and tips on how to use your product more efficiently.

Service and support

You have access to a portfolio of exclusive service advantages such as:

- Global and local Web sites providing support.
- A global network of Contact Centers.
- An extensive network of Sony Ericsson service partners.
- A warranty period. Learn more about the warranty conditions in the *Limited warranty* section.

At www.sonyericsson.com/support, you can find the latest support tools and information. For operator-specific services and features, please contact your network operator.

You can also contact our Contact Centers. If your country/region is not represented in the list below, please contact your local dealer. (Calls are charged according to national rates, including local taxes, unless the phone number is a toll-free number.)

If your product needs service, please contact the dealer from whom it was purchased, or one of our service partners. For warranty claims, save proof of purchase.

Guidelines for Safe and Efficient Use

Please follow these guidelines. Failure to do so might entail a potential health risk or product malfunction. If in doubt as to its proper function, have the product checked by a certified service partner before charging or using it.



Recommendations for care and safe use of our products

- Handle with care and keep in a clean and dust-free place.

- **Warning!** May explode if disposed of in fire.
- Do not expose to liquid or moisture or excess humidity.
- For optimum performance, the product should not be operated in temperatures below $-10^{\circ}\text{C}(+14^{\circ}\text{F})$ or above $+45^{\circ}\text{C}(+113^{\circ}\text{F})$. Do not expose the battery to temperatures above $+60^{\circ}\text{C}(+140^{\circ}\text{F})$.



- Do not expose to flames or lit tobacco products.
- Do not drop, throw or try to bend the product.
- Do not paint or attempt to disassemble or modify the product. Only Sony Ericsson authorised personnel should perform service.



- Consult with authorised medical staff and the instructions of the medical device manufacturer before using the product near pacemakers or other medical devices or equipment.



- Discontinue use of electronic devices, or disable the radio transmitting functionality of the device, where required or requested to do so.
- Do not use where a potentially explosive atmosphere exists.
- Do not place the product, or install wireless equipment, in the area above an air bag in a car.
- **Caution:** Cracked or broken displays may create sharp edges or splinters that could be harmful upon contact.
- Do not use the Bluetooth Headset in positions where it is uncomfortable or will be subject to pressure.

Children

Warning! Keep out of the reach of children. Do not allow children to play with mobile phones or accessories. They could hurt themselves or others.



Products may contain small parts that could become detached and create a choking hazard.

Power supply (Charger)

Connect the charger to power sources as marked on the product. Do not use outdoors or in damp areas. Do not alter or subject the cord to damage or stress. Unplug the unit before

cleaning it. Never alter the plug. If it does not fit into the outlet, have a proper outlet installed by an electrician. When a power supply is connected there is a small drain of power. To avoid this small energy waste, disconnect the power supply when the product is fully charged. Use of charging devices that are not Sony Ericsson branded may pose increased safety risks.

Battery

New or idle batteries can have short-term reduced capacity. Fully charge the battery before initial use. Use for the intended purpose only. Charge the battery in temperatures between +5°C(+41°F) and +45°C(+113°F). Do not put the battery into your mouth. Do not let the battery contacts touch another metal object. Turn off the product before removing the battery. Performance depends on temperatures, signal strength, usage patterns, features selected and voice or data transmissions. Only Sony Ericsson service partners should remove or replace built-in batteries. Use of batteries that are not Sony Ericsson branded may pose increased safety risks. Replace the battery only with another Sony Ericsson battery that has been qualified with the product per the standard IEEE-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

Personal medical devices

Mobile phones may affect implanted medical equipment. Reduce risk of interference by keeping a minimum distance of 15 cm(6 inches) between the phone and the device. Use the phone at your right ear. Do not carry the phone in your breast pocket. Turn off the phone if you suspect interference. For all medical devices, consult a physician and the manufacturer.

Driving

Some vehicle manufacturers forbid the use of phones in their vehicles unless a handsfree kit with an external antenna supports the installation. Check with the vehicle manufacturer's representative to be sure that the mobile phone or Bluetooth

handsfree will not affect the electronic systems in the vehicle. Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

GPS/Location based functions

Some products provide GPS/Location based functions. Location determining functionality is provided "As is" and "With all faults". Sony Ericsson does not make any representation or warranty as to the accuracy of such location information.

Use of location-based information by the device may not be uninterrupted or error free and may additionally be dependent on network service availability. Please note that functionality may be reduced or prevented in certain environments such as building interiors or areas adjacent to buildings.

Caution: Do not use GPS functionality in a manner which causes distraction from driving.

Emergency calls

Calls cannot be guaranteed under all conditions. Never rely solely upon mobile phones for essential communication. Calls may not be possible in all areas, on all networks, or when certain network services and/or phone features are used.

Antenna

Use of antenna devices not marketed by Sony Ericsson could damage the phone, reduce performance, and produce SAR levels above the established limits. Do not cover the antenna with your hand as this affects call quality, power levels and can shorten talk and standby times.

Radio Frequency (RF) exposure and Specific Absorption Rate (SAR)

When the phone or Bluetooth handsfree is turned on, it emits low levels of radio frequency energy. International safety guidelines have been developed through periodic and thorough evaluation of scientific studies. These guidelines establish

permitted levels of radio wave exposure. The guidelines include a safety margin designed to assure the safety of all persons and to account for any variations in measurements.

Specific Absorption Rate (SAR) is used to measure radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but because the phone is designed to use the minimum power necessary to access the chosen network, the actual SAR level can be well below this value. There is no proof of difference in safety based on difference in SAR value.

Products with radio transmitters sold in the US must be certified by the Federal Communications Commission (FCC). When required, tests are performed when the phone is placed at the ear and when worn on the body. For body-worn operation, the phone has been tested when positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the phone or when properly used with an appropriate Sony Ericsson accessory and worn on the body.

For more information about SAR and radio frequency exposure, go to: www.sonyericsson.com/health.

Flight mode

Bluetooth and WLAN functionality, if available in the device, can be enabled in Flight mode but may be prohibited onboard aircraft or in other areas where radio transmissions are prohibited. In such environments, please seek proper authorisation before enabling Bluetooth or WLAN functionality even in Flight mode.

Malware

Malware (short for malicious software) is software that can harm the mobile phone or other computers. Malware or harmful applications can include viruses, worms, spyware, and other unwanted programs. While the device does employ security measures to resist such efforts, Sony Ericsson does not warrant or represent that the device will be impervious to the introduction of malware. You can however reduce the risk of malware attacks

by using care when downloading content or accepting applications, refraining from opening or responding to messages from unknown sources, using trustworthy services to access the Internet, and only downloading content to the mobile phone from known, reliable sources.

Accessories

Use only Sony Ericsson branded original accessories and certified service partners. Sony Ericsson does not test third-party accessories. Accessories may influence RF exposure, radio performance, loudness, electric safety and other areas. Third-party accessories and parts may pose a risk to your health or safety or decrease performance.

Accessible Solutions/Special Needs

In the US, compatible Sony Ericsson phones may offer compatibility with TTY terminals (with use of necessary accessory). For more information call the Sony Ericsson Special Needs Center on 877 878 1996 (TTY) or 877 207 2056 (voice), or go to www.sonyericsson-snc.com.

Disposal of old electrical and electronic equipment

Electronic equipment and batteries should not be included as household waste but should be left at an appropriate collection point for recycling. This helps prevent potential negative consequences for the environment and human health. Check local regulations by contacting your local city office, your household waste disposal service, the shop where you purchased the product or calling a Sony Ericsson Contact Center. Do not attempt to remove internal batteries. Internal batteries shall be removed only by a waste treatment facility or trained service professional.



Disposing of the battery

Check local regulations or call a Sony Ericsson Contact Center for information. Never use municipal waste.



Memory card

If the product comes complete with a removable memory card, it is generally compatible with the handset purchased but may not be compatible with other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use. If the product is equipped with a memory card reader, check memory card compatibility before purchase or use.

Memory cards are generally formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or contact customer support.

Warning!

If the device requires an adapter for insertion into the handset or another device, do not insert the card directly without the required adapter.

Precautions on memory card use

- Do not expose the memory card to moisture.
- Do not touch terminal connections with your hand or any metal object.
- Do not strike, bend, or drop the memory card.
- Do not attempt to disassemble or modify the memory card.
- Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.
- Do not press or bend the end of the memory card adapter with excessive force.
- Do not let dirt, dust, or foreign objects get into the insert port of any memory card adapter.
- Check you have inserted the memory card correctly.

- Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- We recommend that you make a backup copy of important data. We are not responsible for any loss or damage to content you store on the memory card.
- Recorded data may be damaged or lost when you remove the memory card or memory card adapter, turn off the power while formatting, reading or writing data, or use the memory card in locations subject to static electricity or high electrical field emissions.

Protection of personal information

Erase personal data before disposing of the product. To delete data, perform a master reset. Deleting data from the phone memory does not ensure that it cannot be recovered.

Sony Ericsson does not warrant against recovery of information and does not assume responsibility for disclosure of any information even after a master reset.

Loudness warning!

Avoid volume levels that may be harmful to your hearing.

End User Licence Agreement

Software delivered with this device and its media is owned by Sony Ericsson Mobile Communications AB, and/or its affiliated companies and its suppliers and licensors.

Sony Ericsson grants you a non-exclusive limited licence to use the Software solely in conjunction with the Device on which it is installed or delivered. Ownership of the Software is not sold, transferred or otherwise conveyed.

Do not use any means to discover the source code or any component of the Software, reproduce and distribute the Software, or modify the Software. You are entitled to transfer rights and obligations to the Software to a third party, solely together with the Device with which you received the Software,

provided the third party agrees in writing to be bound by the terms of this Licence.

This licence exists throughout the useful life of this Device. It can be terminated by transferring your rights to the Device to a third party in writing.

Failure to comply with any of these terms and conditions will terminate the licence immediately.

Sony Ericsson and its third party suppliers and licensors retain all rights, title and interest in and to the Software. To the extent that the Software contains material or code of a third party, such third parties shall be beneficiaries of these terms.

This licence is governed by the laws of Sweden. When applicable, the foregoing applies to statutory consumer rights.

In the event Software accompanying or provided in conjunction with your device is provided with additional terms and conditions, such provisions shall also govern your possession and usage of the Software.

Export regulations

Export regulations: This product, including any software or technical data contained in or accompanying the product, may be subject to import and export regulations of the European Union, the United States and other countries. The user and any possessor of the product agrees to comply strictly with all such regulations and acknowledges that it is their responsibility to obtain any required licenses to export, re-export, or import this product. Without limiting the foregoing, and as an example, the user and any possessor of the product: (1) must not knowingly export or re-export Products to destinations identified pursuant to Articles in Chapter II of European Council Regulation (EC) 1334/2000; (2), must comply with U.S. government Export Administration Regulations ("EAR", 15 C.F.R. §§ 730-774, <http://www.bis.doc.gov/>) administered by Department of Commerce, Bureau of Industry and Security; and (3) must comply with economic sanctions regulations (30 C.F.R. §§ 500 et. seq.,, <http://www.treas.gov/offices/enforcement/ofac/>) administered by

the U.S. Department of Treasury, Office of Foreign Assets Control. The user and any possessor of the product may not transport or deliver the product, its accessories or separate software to any country, region, entity or person prohibited by these regulations.

Limited Warranty

Sony Ericsson Mobile Communications AB, SE-221 88 Lund, Sweden, (Sony Ericsson) or its local affiliated company, provides this Limited Warranty for your mobile phone, original accessory delivered with your mobile phone, and/or your mobile computing product (hereinafter referred to as "Product").

Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Sony Ericsson Contact Center (national rates may apply) or visit www.sonyericsson.com to get further information.

Our warranty

Subject to the conditions of this Limited Warranty, Sony Ericsson warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer. This Limited Warranty will last for a period of two (2) years as from the original date of purchase of the Product for your mobile phone, and for a period of one (1) year following the original purchase date of the Product for all original accessories (such as the battery, charger or handsfree kit) which may be delivered with your mobile phone.

What we will do

If, during the warranty period, this Product fails to operate under normal use and service, due to defects in design, materials or workmanship, Sony Ericsson authorised distributors or service partners, in the country/region* where you purchased the Product, will, at their option, either repair or replace the Product in accordance with the terms and conditions stipulated herein.

Sony Ericsson and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads and other information may be lost when your Sony Ericsson Product is repaired or replaced. At present, Sony Ericsson may be prevented by applicable law, other regulation or technical restrictions from making a backup copy of certain downloads. Sony Ericsson does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Sony Ericsson Product such as downloads, calendar and contacts before handing in your Sony Ericsson Product for repair or replacement.

Conditions

1. This Limited Warranty is valid only if the original proof of purchase for this Product issued by a Sony Ericsson authorised dealer specifying the date of purchase and serial number**, is presented with the Product to be repaired or replaced. Sony Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
2. If Sony Ericsson repairs or replaces the Product, the repair for the defect concerned, or the replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony Ericsson.
3. This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sony Ericsson instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, software or hardware

modification or adjustment, acts of God or damage resulting from liquid.

A rechargeable battery can be charged and discharged more than a hundred times. However, it will eventually wear out – this is not a defect and corresponds to normal wear and tear. When the talk-time or standby time is noticeably shorter, it is time to replace the battery. Sony Ericsson recommends that you use only batteries and chargers approved by Sony Ericsson.

Minor variations in display brightness and colour may occur between phones. There may be tiny bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and can not be adjusted. Two defective pixels are deemed acceptable.

Minor variations in camera image appearance may occur between phones. This is nothing uncommon and is not regarded as a defective camera module.

4. Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony Ericsson, Sony Ericsson will not be responsible for the operation, availability, coverage, services or range of that system.
5. This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony Ericsson authorised person.
6. The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony Ericsson branded original accessories intended for use with the Product.

Sony Ericsson disclaims any and all warranties, whether express or implied, for failures caused to the Product or peripheral devices as a result of viruses, trojan horses, spyware, or other malicious software. Sony Ericsson strongly recommends that you install appropriate virus protection software on your Product and any peripheral devices connected to it, as available, and update it regularly, to better protect your device. It is understood, however, that such software will never fully protect your Product or its peripheral

devices and Sony Ericsson disclaims all warranties, whether express or implied, in case of failure by such antivirus software to fulfil its intended purpose.

7. Tampering with any of the seals on the Product will void the warranty.
8. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY ERICSSON OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

***Geographical scope of the warranty**

If you have purchased your Product in a country member of the European Economic Area (EEA) or in Switzerland or the Republic of Turkey, and such Product was intended for sale in the EEA or in Switzerland or in Turkey, you can have your Product serviced in any EEA country or in Switzerland or in Turkey, under the warranty conditions prevailing in the country in which you require servicing, provided that an identical Product is sold in such country by an authorised Sony Ericsson distributor. To find out if your Product is sold in the country you are in, please call the local Sony Ericsson Contact Center. Please observe that certain

services may not be available outside the country of original purchase, for example, due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other countries. Please note in addition that it may sometimes not be possible to repair SIM-locked Products.

** In some countries/regions additional information (such as a valid warranty card) may be requested.

Trademarks and acknowledgements

The Liquid Identity logo and Xperia are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB. Sony is a trademark or a registered trademark of Sony Corporation.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.

Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under license.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved.

Support

Anguilla	1-800-080-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Antigua and Barbuda	1-800-081-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Argentina	0800-333-7427 (número gratuito)	questions.CO@support.sonyericsson.com
Australia	1300 650-050 (Toll Free)	questions.AU@support.sonyericsson.com
The Bahamas	1-800-205-6062 (Toll Free)	questions.CO@support.sonyericsson.com
Barbados	1-800-082-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Belgique/ België	02-0745 1611	questions.BE@support.sonyericsson.com
Belize	AN 815, PIN 5597 (Toll Free)	questions.CO@support.sonyericsson.com
Bermuda	1-800-083-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Bolivia	800-100-542 (número gratuito)	questions.CO@support.sonyericsson.com
Brasil	4001-0444 (ligação gratuita)	questions.BR@support.sonyericsson.com
Canada	1 866 766 9374 (Toll Free / sans frais)	questions.CA@support.sonyericsson.com
Cayman Islands	1-800-084-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Central and Southern Africa	+27 11 506 0123	questions.CF@support.sonyericsson.com
Česká republika	844 550 055	questions.CZ@support.sonyericsson.com
Chile	800-646-425 (número gratuito)	questions.CO@support.sonyericsson.com
Colombia	01800-0966-080 (número gratuito)	questions.CO@support.sonyericsson.com
Costa Rica	0 800 011 0400 (número gratuito)	questions.CO@support.sonyericsson.com
Danmark	3331 2828	questions.DK@support.sonyericsson.com

Deutschland	0180 534 2020 (ortsübliche Gebühren)	questions.DE@support.sonyericsson.com
Dominica	1-800-085-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Ecuador	1-800-0102-50 (número gratuito)	questions.CO@support.sonyericsson.com
Eesti	06 032 032	questions.EE@support.sonyericsson.com
Egypt/مصر	16727	questions.EG@support.sonyericsson.com
Ελλάδα	801 11 810 810 +30 210 899 19 19 (από κινητό τηλέφωνο)	questions.GR@support.sonyericsson.com
El Salvador	800-6323 (número gratuito)	questions.CO@support.sonyericsson.com
España	902 180 576 (tarifa local)	questions.ES@support.sonyericsson.com
France	09 69 32 21 21 09 69 32 21 22 (Xperia™ uniquement)	questions.FR@support.sonyericsson.com
Guatemala	1-800-300-0057 (número gratuito)	questions.CO@support.sonyericsson.com
Haïti/Ayiti	AN 193, PIN 5598 (numéro gratuit / nimewo gratis)	questions.CO@support.sonyericsson.com
Honduras	AN 8000122, PIN 5599 (número gratuito)	questions.CO@support.sonyericsson.com
Hong Kong/香港	+852 8203 8863	questions.HK@support.sonyericsson.com
Hrvatska	062 000 000	questions.HR@support.sonyericsson.com
India/भारत	1800 11 1800 (Toll Free) +91 (011) 39011111	questions.IN@support.sonyericsson.com
Indonesia	021 2701388	questions.ID@support.sonyericsson.com
Ireland	1850 545 888 (Local rate)	questions.IE@support.sonyericsson.com
Italia	06 48895206 (tariffa locale)	questions.IT@support.sonyericsson.com
Jamaica	1-800-442-3471 (Toll Free)	questions.CO@support.sonyericsson.com

Kύπρος/ Kıbrıs	0800 90 909	questions.CY@support.sonyericsson.com
Latvija	67 21 43 01	questions.LV@support.sonyericsson.com
Lietuva	8 700 55030	questions.LT@support.sonyericsson.com
Magyarország	01 880 47 47	questions.HU@support.sonyericsson.com
Malaysia	1800-88-9900 (Toll Free / bebas tol)	questions.MY@support.sonyericsson.com
Maroc/ المغرب	+212 2 2958 344	questions.MA@support.sonyericsson.com
México	0 1800 000 4722 (número gratuito)	questions.MX@support.sonyericsson.com
Nederland	0900 8998318	questions.NL@support.sonyericsson.com
Nederlandse Antillen	001-866-509-8660 (gratis nummer)	questions.CO@support.sonyericsson.com
New Zealand	0800-100-150 (Toll Free)	questions.NZ@support.sonyericsson.com
Nicaragua	AN 1800-0166, PIN 5600 (número gratuito)	questions.CO@support.sonyericsson.com
Norge	815 00 840 (lokaltakst)	questions.NO@support.sonyericsson.com
Österreich	0810 200 245	questions.AT@support.sonyericsson.com
Pakistan/ پاکستان	021 - 111 22 55 73	questions.PK@support.sonyericsson.com
Panamá	00800-787-0009 (número gratuito)	questions.CO@support.sonyericsson.com
Paraguay	009 800 54 20032 (número gratuito)	questions.CO@support.sonyericsson.com
Perú	0800-532-38 (número gratuito)	questions.CO@support.sonyericsson.com
Philippines/ Pilipinas	+63 2 7891860	questions.PH@support.sonyericsson.com
Polska	+48 22 22 77 444	questions.PL@support.sonyericsson.com
Portugal	808 204 466 (chamada local)	questions.PT@support.sonyericsson.com
República Dominicana	1-800-751-3370 (número gratuito)	questions.CO@support.sonyericsson.com
România	+40 21 401 0401	questions.RO@support.sonyericsson.com
Saint Kitts and Nevis	1-800-087-9518 (Toll Free)	questions.CO@support.sonyericsson.com

Saint Vincent and the Grenadines	1-800-088-9518 (Toll Free)	questions.CO@support.sonyericsson.com
Schweiz/ Suisse/ Svizzera	0848 824 040	questions.CH@support.sonyericsson.com
Singapore	+65 6744 0733	questions.SG@support.sonyericsson.com
Slovenia	01 600 5000	questions.SI@support.sonyericsson.com
Slovensko	02 5443 6443	questions.SK@support.sonyericsson.com
South Africa	0861 632222	questions.ZA@support.sonyericsson.com
South Korea/ 대한민국	(+82) 1588 4170	questions.KO@support.sonyericsson.com
Suomi	09 299 2000	questions.FI@support.sonyericsson.com
Sverige	013 24 45 00 (lokal taxa)	questions.SE@support.sonyericsson.com
Trinidad and Tobago	1-800-080-9521 (Toll Free)	questions.CO@support.sonyericsson.com
Türkiye	+90 212 473 77 77	questions.TR@support.sonyericsson.com
United Kingdom	08705 237 237 (Local rate)	questions.GB@support.sonyericsson.com
United States	1 866 766 9374	questions.US@support.sonyericsson.com
Uruguay	000-401-787-013 (número gratuito)	questions.CO@support.sonyericsson.com
Venezuela	0-800-1-00-2250 (número gratuito)	questions.CO@support.sonyericsson.com
Việt Nam	1900 1525 (miễn phí)	questions.VN@support.sonyericsson.com
Беларусь	8 82 00 361 0001	questions.BY@support.sonyericsson.com
България	0800 1 8778	questions.BG@support.sonyericsson.com
Россия	+7 (495) 7870986	questions.RU@support.sonyericsson.com
Україна	(+380) 44 590 1515	questions.UA@support.sonyericsson.com
الأردن	+971 4 3919 880	questions.JO@support.sonyericsson.com
الإمارات العربية المتحدة	+971 4 3919 880 (UAE)	questions.AE@support.sonyericsson.com
الكويت	+971 4 3919 880	questions.KW@support.sonyericsson.com
المملكة العربية السعودية	800-8200-727	questions.SA@support.sonyericsson.com
中国	+86 400 810 0000	questions.CN@support.sonyericsson.com
台灣	+886 2 25625511	questions.TW@support.sonyericsson.com
ไทย	02 2483 030	questions.TH@support.sonyericsson.com

www.sonyericsson.com



Sony Ericsson Mobile Communications AB
SE-221 88 Lund, Sweden

1222-9269.2