


EZ Service menu

You can access the information sites on EZweb and use EZ Navi, EZ Channel-Plus/
EZ Channel, etc.

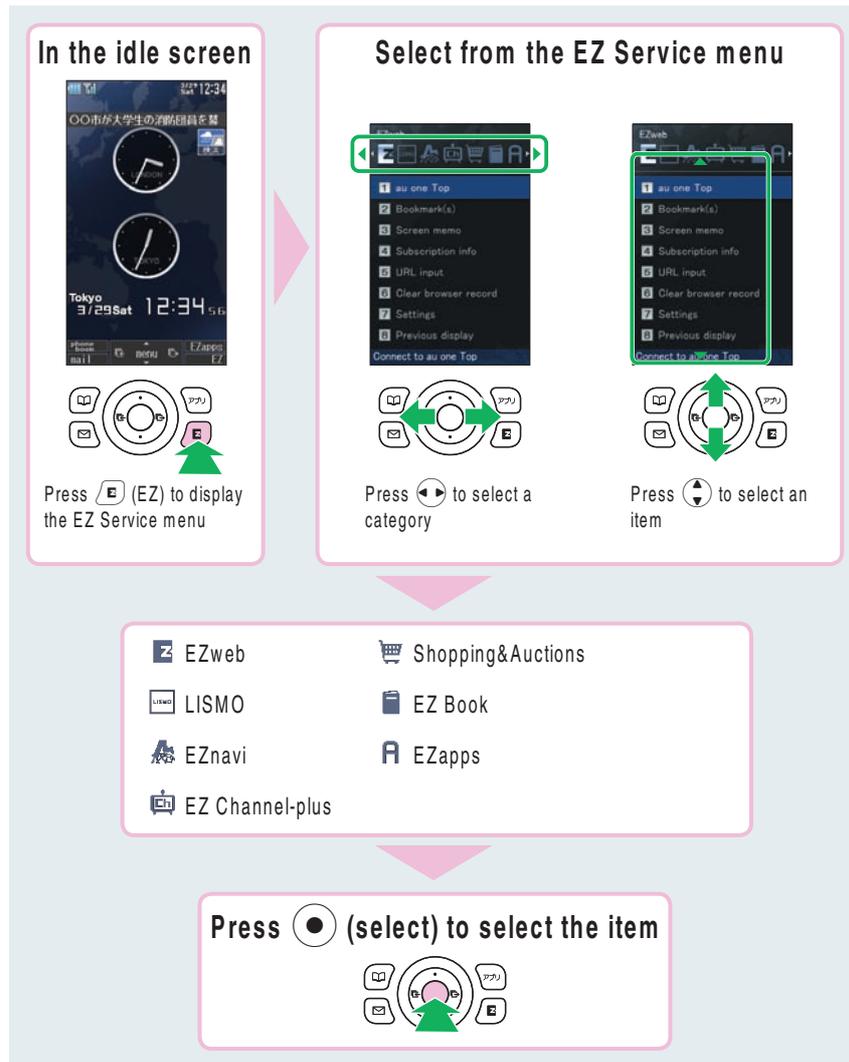


 The default menu screen design depends on the color of the main unit.

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
---------------	---	----

Initial settings for e-mail and EZweb


If you subscribed to the EZweb service, make the following initial settings.

1 Press  (mail) in the idle screen, and press  (ok).

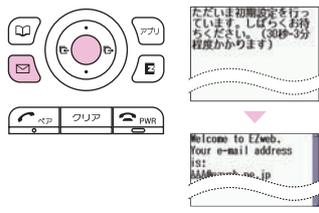

The diagram shows a phone keypad with icons for Mail, OK, and EZweb. Below it, a screen displays a message in Japanese: "ただし、初期設定を行っています。しばらくお待ちください。(30秒-3分程度かかります)" and a "Welcome to EZweb. Your e-mail address is: XXXXXXX@au.ne.jp" screen.

2 Press  (OK).

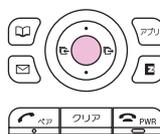

The diagram shows a phone keypad with the OK icon highlighted.

 Without EZ News Flash settings, EZ News Flash setting screen appears.


-  Initial settings cannot be made in Overseas (GSM) mode.
-  You can also initialize the settings by pressing  (EZ) or  (EZapps) in the idle screen.
-  Your e-mail address is automatically determined when you initialize the settings.

If you have not subscribed to EZweb service yet
 Contact an au shop or Customer Service Center. You need to subscribe to the EZweb service to use e-mail, EZweb or other EZ services.

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

Confirming your cellphone number/e-mail address

1 Press  (menu) in the idle screen.

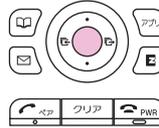

2 Press . You can confirm your cellphone number and e-mail address.



 You can also confirm your cellphone number and e-mail address by pressing  in the idle screen, and use  and  to select "Func/Settings" → "Profile."

Before use


<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------

Changing your e-mail address



e-mail address
 Example: △△△@ezweb.ne.jp
 Changeable part Domain

Before use



1 Press (mail) in the idle screen.
 Press to select "Settings,"
 and press (select).

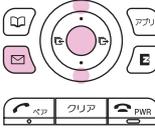



2 Press to select "Other," and
 press (select).
 Press to select "Yes," and
 press (select).

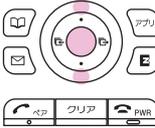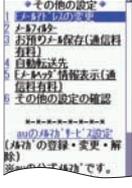3 Press to select "Eメール
 アドレスの変更," and press
 (Select).



4 Press to select the input field,
 and press (Edit).
 Enter your security code, and
 press (ok).

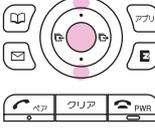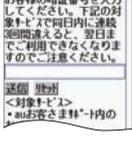
Security code is the 4-digit number that you wrote in the application form when subscribing.
 Note that no setting operation is allowed until the following day if you enter the wrong security code three times a day.

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

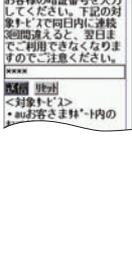5 Press to select "送信," and press (Select).
Press to select "承諾する," and press (Select).

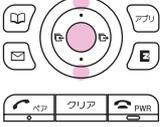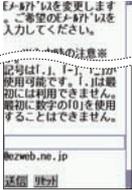



6 Press to select the input field, and press (Edit).
Enter the text before @, and press (ok).

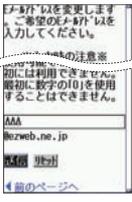
For details on how to input e-mail addresses, see page 38.

7 Press to select "送信," and press (Select).

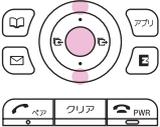


When the e-mail address cannot be changed
The e-mail address that you entered is already used. Enter a different e-mail address.

8 Press to select "OK," and press (Select).

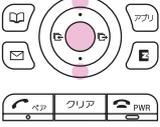


For details on how to confirm your e-mail address, see page 23.

Before use

<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------


Using W62S overseas

You can use your W62S overseas just by changing the Area Setting to "Overseas (GSM)".

1

Press  (menu) in the idle screen.

Press  to select "GlobalAssort Menu," and press  (select).

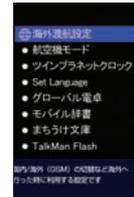

仮

2

Press  to select "Overseas Settings," and press  (select).



仮

3


Press  to select "Area Setting," and press  (select).



4

Press  to select "Overseas (GSM)," and press  (select).

W62S will restart after the power is automatically off, then **GSM** and "Important notice" appears in the idle screen.

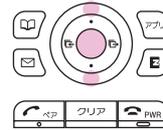

 Change Area Setting after finishing currently running functions.

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	



Changing network from abroad

Select the network to connect when using W62S overseas.

1

Press  (menu) in the idle screen.

Press  to select "GlobalAssort Menu," and press  (select).

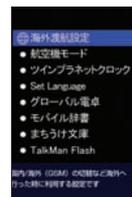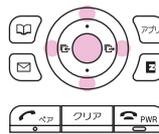


仮

Before use

2


Press  to select "Overseas Settings," and press  (select).

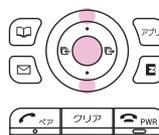

仮



3

Press  to select "Network Search Set," and press  (select).

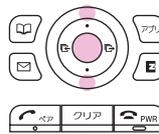

4

Press  to select "NW re-search," and press  (select).

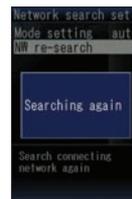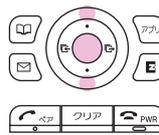

<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------

001 KOKUSAI MOBILE TALK

Application required. For inquiries, please contact the KDDI Customer Service Center.

0077-7160 (toll-free; open 9:00 to 20:00 on everyday including weekends and national holiday)

Example: To call 212-123-△△△ in the USA

001|0077|123|001|123|212|123|321|△△△ → Press

↑ KDDI International access code ↑ Country code (USA) ↑ Area code ↑ Phone number

- Charges for 001 KOKUSAI MOBILE TALK are charged separately from monthly au telephone charges.
- Please check the Country code at the au Customer Center.
- For charges, please refer to au MOBILE PHONE SERVICE GUIDE or au Customer Center.


Making an international call from overseas

- ① See steps 1 to 4 in "Using W62S overseas" (page 26) to set the Area Setting to "Overseas (GSM)."
- ② Press to to enter the other party's phone number, and press (call).
- ③ Press to select how to call, and press (select).
 - "Call" : Make a call
 - "Dial to Japan (+81)": Automatically delete the first "0" of the entered phone number and attach "+" (international code) and "81" (Japan country code); then make a call
 - "Int'l call (+)" : Automatically attach "+" (international code) before the phone number and call

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
----------------------	---	----

Receiving a call

1 Press or (call) to answer the call.

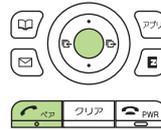

When you have finished the call, press .

The display when you receive a call

Phone number	When the other party has set to notify Caller ID ※If the other party's name and phone number are already saved in the phone book, that person's name is also displayed
"ID Unsent"	When the other party has set not to notify Caller ID
"Payphone"	When you have received a call from a payphone
"Not support"	When you have received a call from a party that is not able to notify Caller ID

The display if you are unable to answer a call

If you are unable to answer a call, you are notified that you had a call on the display.

If you press (select), you can confirm the phone number of the other party that called you and redial that party.





PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

Redialing the number (Dialed/Received)

1 Press  in the idle screen.

 : Display Received calls.

 : Display Dialed calls.

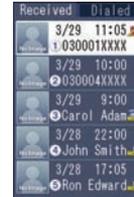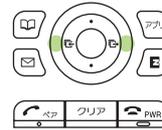

Icons of Received calls

: The call that you did not answer (missed call)

: The call within three seconds of incoming time (one-ring call)

: The message stored at the Voice Mail center

2 Press  to select the phone number you want to call, and press



The call is connected to the phone number you selected.

 In each memory, the phone numbers of last 30 calls can be saved.

Changing the volume during a call

1 Press  during a call.

: The volume increases (Level 1 to 5).

: The volume decreases (Level 5 to 1).



<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------

Setting the manner mode

The W62S vibrates to notify you of incoming calls.

1 Hold down **マナー** for at least one second in the idle screen.

The manner mode is set, and  and  appear in the display. At the same time, record message is set, and  appears in the display.



■ ■ To cancel the manner mode

Hold down **マナー** for at least one second in the idle screen.


 There are four types of manner settings: "Manner," "Silent," "Drive" and "Original."

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	


Changing the volume and tone of the ringtone

Example: When setting a "preset" ringtone

- 1** Press  (menu) in the idle screen.

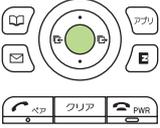


- 2** Press  to select "Func/Settings," and press  (select).

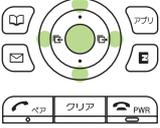


- 3** Press  to select "Sound/Vibrator," and press  (select).



- 4** Press  to select "Incoming set," and press  (select).

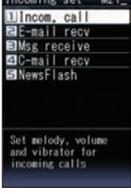

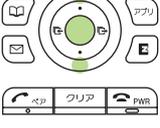- 5** Press  to select "Incom. call," and press  (select).




➔ Continued on the next page

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある 理由:	

6 Press   to select "Volume," and press  (select).



7 Press   to adjust the volume, and press  (ok).



"OFF" :The ringtone does not sound.


"1" to "5" :The ringtone sounds at the level you set.

"Step down" :The volume of the ringtone decreases.

"Step up" :The volume of the ringtone increases.

 "Step down" and "Step up" can be selected by pressing  over "5."

8 Press   to select "Melody," and press  (select).

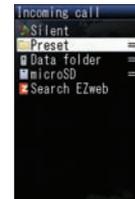

 "Hold Up" is set by default.

9 Press   to select "Preset," and press  (select).



 If you press  (play), the ringtone you selected plays back.

If you press  (■) while the ringtone is being played, W62S stops playing.

- | | | |
|--------------------------|--------------------|----|
| <input type="checkbox"/> | 操作説明、画面が仕様とあっているか。 | 確認 |
| <input type="checkbox"/> | 数値(スペック値)が正しいか。 | |
| <input type="checkbox"/> | 注意文や説明文に誤り、不足がないか。 | |
| <input type="checkbox"/> | チェックできない箇所がある理由: | |

10

Press  to select a ringtone, and press  (save).



Setting the record message

1

Hold down  for at least one second in the idle screen.

Record message is set, and  appears in the display.



 You can also use the record message to record a message from the other party by pressing  (memo) while receiving a call.

 You can record up to ten messages within 60 seconds each.

To cancel record message

Hold down  for at least one second in the idle screen.

 If the record message still contains any message,  remains in the display even after canceling record message.  disappears when record message data is deleted.

 When you turn the power off or when you are in a place where the signal is weak, use Answering Service (Voice Mail).

Phone call

<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------


Playing back recorded messages

When a message is recorded


A message and  (number of recorded messages) appear in the idle screen.



1 Press in the idle screen.

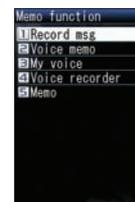

2 Press to select "Record msg," and press (select).

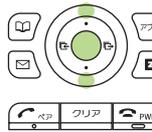

3 Press to select "Play msg," and press (select).



4 Press to select the recorded message to play back, and press (play).



 You can delete recorded messages by pressing  (delete) while the recorded message is playing back, or by pressing  (delete) after playing the recorded message.

<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------

Text input

Changing the input mode


Input text by changing the input modes below.




Input mode

- :Kanji/Hiragana mode
- :Kana mode (single/double byte)
- :English mode (single/double byte)
- :Number mode (single/double byte)

Press (mode) in the text input screen.

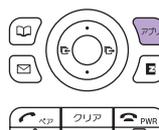

Each time you press (mode), the input mode changes in following order:
English → Number → Kanji/Hiragana → Kana → English...

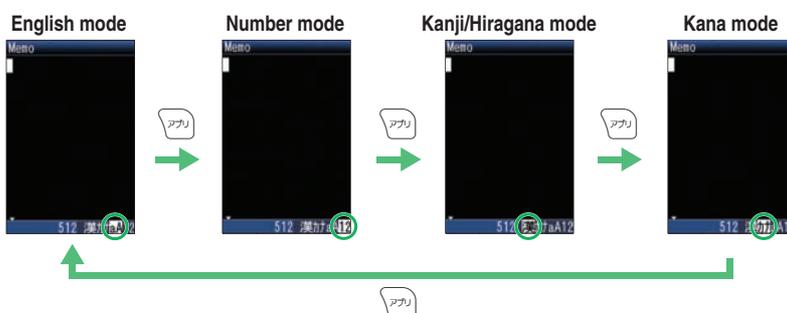

The input mode that you can select is different depending on the current input screen.

<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------

Inputting text

To input alphanumerics

In the text input screen, press the keys as described in the table below.

Example: a → b → c → A → B → C → 2

◆ Character key assignment table (single byte alphanumerics)

Key	Number of times to press the key																																		
	1	2	3	4	5	6	7	8	9																										
	.	@	-	_	/	:	~	1																											
	a	b	c	A	B	C	2																												
	d	e	f	D	E	F	3																												
	g	h	i	G	H	I	4																												
	j	k	l	J	K	L	5																												
	m	n	o	M	N	O	6																												
	p	q	r	s	P	Q	R	S	7																										
	t	u	v	T	U	V	8																												
	w	x	y	z	W	X	Y	Z	9																										
	Space	0	!	#	\$	%	&	'	()	*	+	,	-	.	/	:	;	<	=	>	?	@	[¥]	^	_	`	{		}	~		
	.	,	-	!	?																														
	Break lines Back space function when entering characters ^{※2}																																		

※1 is also used to switch between uppercase and lowercase of current displayed characters.

※2 When you enter the characters by pressing keys, is used to reverse the order of characters to be appeared (Back Space function).

Example: a → b → c → → a

You can input your e-mail address using up to 30 single bytes alphanumeric in lowercase including "-" (hyphen), "." (dot), and "_" (underscore). Note, however, "." (dot) and "0" cannot be used at the beginning of your e-mail address. Characters and symbols with blue background in the above table cannot be used before @ of "△△△@ezweb.ne.jp."



- 操作説明、画面が仕様とあっているか。
- 数値(スペック値)が正しいか。
- 注意文や説明文に誤り、不足がないか。
- チェックできない箇所がある理由:

Example: To input "Meeting at 1 p.m." in the mail subject

1 Input "Meeting" in the text input screen.

- M: Press  once.
- e : Press  twice.
- e : Press  twice.
- t : Press  once.
- i : Press  three times.
- n : Press  twice.
- g : Press  once.



Prediction candidate appears. You do not have to enter "Meeting" entirely if the word you want to enter appears in the Prediction candidate.

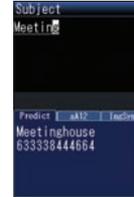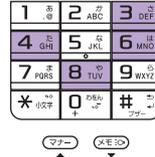

2 Press , Press to select "Meeting," and press (select).



"Meeting (space)" is entered, and Phrase Item appears.

 A space is automatically entered after a word.

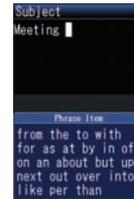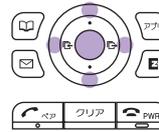

3 Press , Press to select "at" from the Phrase Item, and press (select).

You can also input "at" by pressing  once and  once.

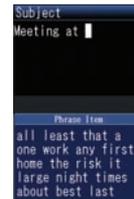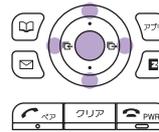



➡ Continued on the next page

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある 理由:	

4

Enter "1," and press  (fix).

1: Press  eight times.
Or, press  once and  once.

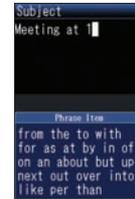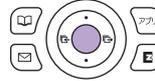

When you selected from the Phrase Item, jump to step 6.

5

Press , and enter a space.



6

Input "p.m."


p : Press  once.
.: Press  once.
m: Press  once.
.: Press  once.



7

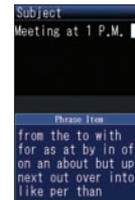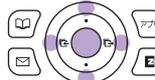Press , Press  to select "p.m.," and press  (select).

8

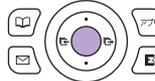Press  (ok).

- 操作説明、画面が仕様とあっているか。
- 数値(スペック値)が正しいか。
- 注意文や説明文に誤り、不足がないか。
- チェックできない箇所がある理由:

■ ■ To consecutively input characters assigned to the same key

Input the first character, press  and press the next character key.

After inputting the first character, no operation for about four seconds automatically moves entering position.

Example: To input "ab"



■ ■ To input uppercase characters

Example:  →  → 
 a → A → a

■ ■ To delete characters

Example: Press  once.

abcd → abcd

Hold down  for at least one second.

abcd → 
 (All characters are deleted.)



 Continued on the next page

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある 理由:	

To input pictorial characters, symbols and emoticons



Press **E** (😊/smb) in the text input screen.

Each time you press **E** (😊/smb), the character group changes in following order: Pictorial characters→Symbols (double byte)→Symbols (single byte)→Emoticons→Pictorial characters...

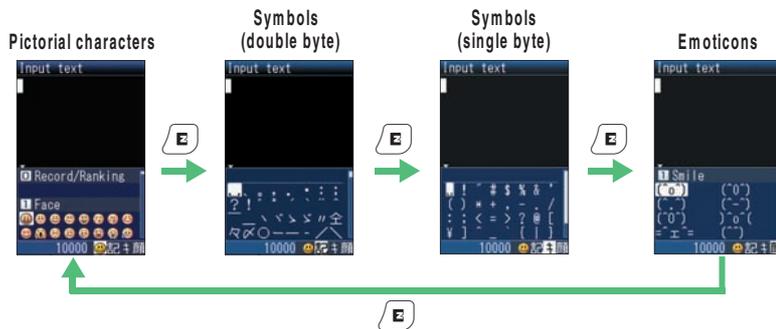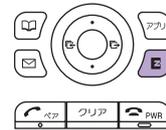

You can switch categories of pictorial characters or emoticons by pressing **E** (category) on each selection screen.

2 Press **⬆** to select the character group you want to use, and press **●** (select).

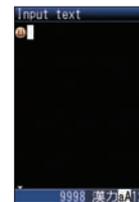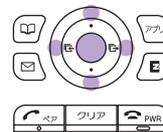

The character group that you can select is different depending on the current input screen.



PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

■ ■ To input useful sentences


You can enter your frequently used sentences using our useful sentence list.

Example: To input "@ezweb.ne.jp" in the mail address


1 Press  (option) in the text input screen.

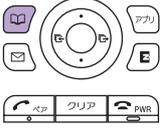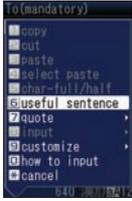
2 Press  to select "useful sentence," and press  (select).

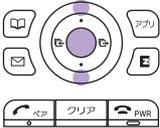


3 Press  to select "Internet," and press  (select).

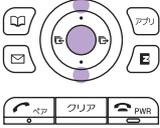


4 Press  to select "@ezweb.ne.jp," and press  (select).

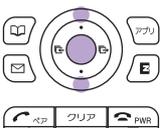


Text input


<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------

Phone book


You can save up to 1,000 phone numbers or e-mail addresses.

Saving to the phone book


1 Hold down  (phone book) for at least one second in the idle screen.

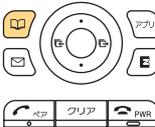


2 Press  to select **NAME** (Name), and press  (select).

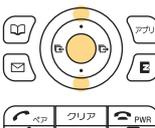




3 Enter the name, and press  (ok).
 (JP reading) is automatically entered.

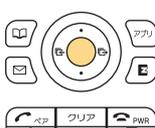



 For details on how to enter text, see page 37.

4 Press  to select  (Phone no.1), and press  (select).

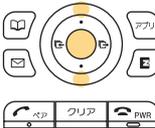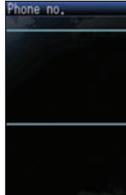PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

5

Enter the phone number, and press **OK** (ok).

"**Mobile**" is automatically entered to **Mobile** (phone type).



- When saving a regular phone number, start with the area code.
- To end saving to the phone book, jump to step 8.

6

Press **Up** to select **Mail address1**, and press **OK** (select).



7

Enter the e-mail address, and press **OK** (ok).

"**Mobile**" is automatically entered to **Mobile** (e-mail address type).



- For details on how to enter e-mail addresses, see page 38.

8

Press **App** (cmplt).



- The entry is automatically saved to the smallest available memory number from 000 to 999.
- You can also save other items such as groups, ringtones, postal addresses and birthdays.



<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。</p> <p><input type="checkbox"/> 数値(スペック値)が正しいか。</p> <p><input type="checkbox"/> 注意文や説明文に誤り、不足がないか。</p> <p><input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------

Editing the phone book


Example: To edit phone numbers

- 1** Press  (phone book) in the idle screen.


To switch from the "あ" to "ETC" display lines
Press .

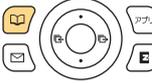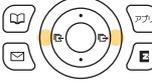

- 2** Press  to select the entry to edit, and press  (select).

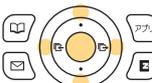

- 3** Press  (edit).

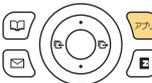

- 4** Press  to select the item you want to edit (in this case, , and press  (select).

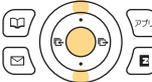


PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

5


Edit the information, and press

● (ok).



6

Press (cmplt).

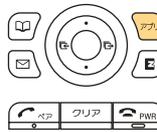

Deleting the phone book


Example: To delete one entry

- ① Press (phone book) in the idle screen. Press to select the entry to delete, and press ● (select).
- ② Press (option). Press to select "delete," and press ● (select).
- ③ Press to select "Yes," and press ● (select).

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある 理由:	確認
---------------	---	----


Making a call from the phone book

1 Press  (phone book) in the idle screen.

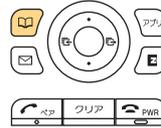

To switch from the "あ" to "ETC" display lines

Press .

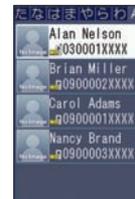

2 Press  to select the person to call, and press  (select).



3 Press  to select the phone number, and press .





<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------

Saving from Dialed/Received calls

1 Press in the idle screen.

: Display Received calls.


: Display Dialed calls.

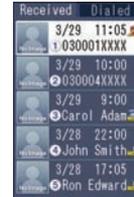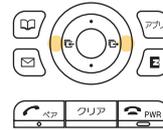

2 Press to select the phone number to save in the phone book, and press (save).

"New": Create and save a new address.

"Add": Add and save newly added information.

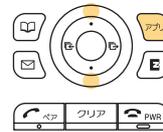

3 Press to select "New," and press (select).

The phone book edit screen appears.

The phone number you selected is automatically entered.



For details on how to save information in the phone book, see steps 2 to 8 on pages 44 and 45.

<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------


Pair Function

Saving to the Pair Function

You can save up to five phone numbers (like frequently used ones) from the phone book, and make calls or send mails with a simple operation.

You need to save Pair Partners to the phone book beforehand. For details on how to save numbers in the phone book, see pages 44 and 45.

- 1** Press  in the idle screen, press   to display the tab you want to save a partner to.

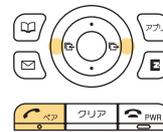

- 2** Press  (set).



- 3** Press   to select the person to save, and press  (save).



Name, Phone no., Mail address and image of the person you selected are saved.


 Deleting Pair Partner's data from the phone book also cancel the Pair Function for those data.

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

Making a call by using Pair Function



1

Press  in the idle screen.

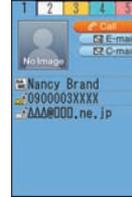

2

Press   to select the person to call.

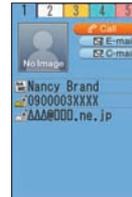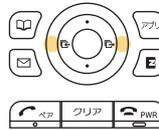

3

Press  to select  (Call), and press  (select).



To send mail

Press  to select  E-mail (E-mail) or  C-mail (C-mail), and press  (select) in step 3.

 For details on how to create or send e-mail, see steps 7 to 11 on pages 54 and 55.

 For details on how to create or send C-mail, see steps 3 to 4 on page 62.

<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------

Mail

Using e-mail

 EZweb subscription required


About e-mail

E-mail allows you to exchange mail with PCs or cellphones that supports e-mail. You can send mail comprising up to 5,000 double/10,000 single byte characters, also photos and movies.

Before using e-mail

- You need to subscribe to the EZweb service to use the e-mail service. Contact an au shop or Customer Service Center if you did not subscribe to the service at the time of purchase.
- Make initial settings before using the e-mail and EZweb services. See page 22 to make initial settings.
- You can send e-mail to up to five recipients^{※1} at a time.
- You can send up to 1,000 e-mails (counted by recipients of messages) in one day.
- It may take a short while to send/receive mails when they have attachments.

※1 When address number restrict is set to "off," you can send e-mail to up to 30 recipients.

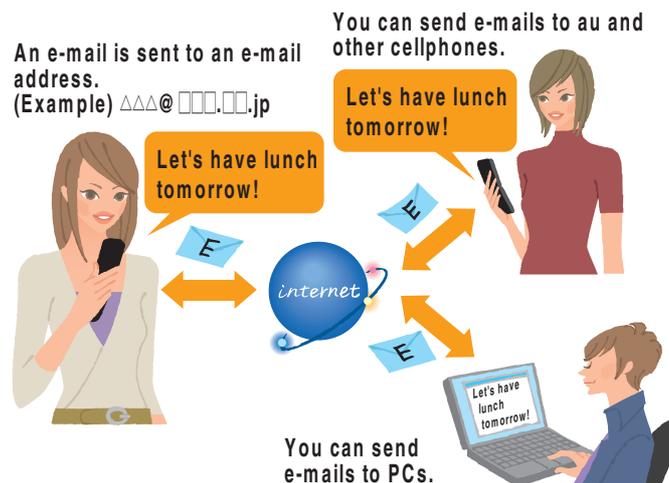


 Data communications fee (varied by the data amount) is charged when sending/receiving e-mail.

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

Creating and sending e-mail


1

Press  (mail) in the idle screen.

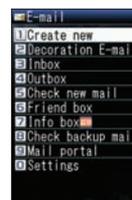

2

Press  to select "Create new," and press  (select).

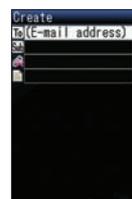

Icons

To (E-mail address): The e-mail address of the recipient

Sub (Subject) : The subject of the e-mail

 (Attached data) : The data attached to e-mail

 (Text) : The main text of the e-mail

3

Press  to select **To** (E-mail address), and press  (select).



 There are three types of destinations: To, Cc and Bcc. You can send e-mail to several destinations at a time.

4

Press  to select "Phone book," and press  (select).




 You can also select an address from sent/received record or enter an address manually.


 Continued on the next page

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある 理由:	確認
---------------	---	----


5 Press to select a person you want to send an e-mail to, and press (select).

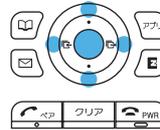


6 Press to select an e-mail address, and press (select).

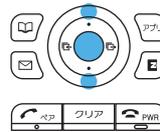


7 Press to select Sub (Subject), and press (select).

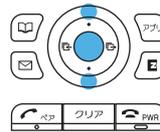

8 Enter the subject, and press (ok).

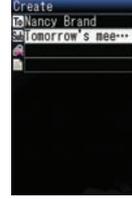

9 Press to select (Text), and press (select).

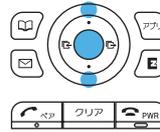

<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------

10

Enter the main text, and press

● (ok).



11

Press  (send).

The e-mail is sent.



Mail

55

PTX-924 初校	<input checked="" type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
---------------	--	----

Opening a received e-mail

When you receive an e-mail

A message and  appear in the idle screen.



1

Press  (select).

Icon

: The folder containing new mail



2

Press  to select the folder containing new mail, and press  (select).

Icons

: The "read mail" that has already been read


: The "unread mail" that has not yet been read



3

Press  to select the new mail, and press  (viewer).

How to view received mail

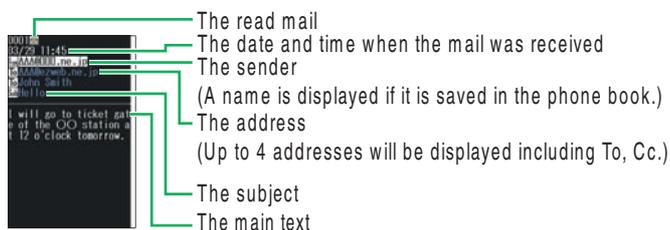



 Hold down  for at least one second to change the font size.

 Press  or  to return to the received messages.

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	


☐ To open an e-mail in the Inbox

1 Press  (mail) in the idle screen.

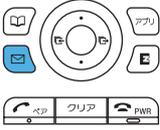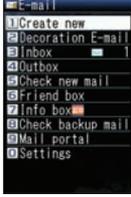



Icon
:The "unread mail" that has not yet been read
 The number on the right side is the number of unread mails.


2 Press  to select "Inbox," and press  (select).

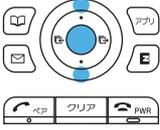


3 Press  to select the folder containing the mail you want to read, and press  (select).

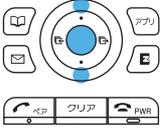


4 Press  to select the mail you want to read, and press  (viewer).

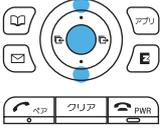



PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
---------------	---	----

Replying to a received e-mail


1

See steps 1 to 4 in "To open an e-mail in the Inbox" (page 57) to display the e-mail to reply.

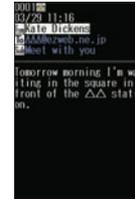

2


Press (reply).

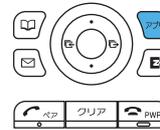

Sub (Subject) is prefixed with "Re:," and the main text of the e-mail is quoted.


3

Press to select , and press (select).

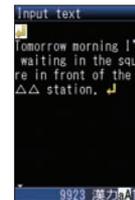

4

Input the main text, and press (ok).

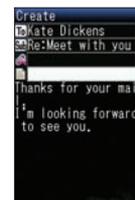

5

Press (send).

The e-mail is sent.



PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

Reading e-mails with photo or movie attached

Example: To read an e-mail with photo and movie attached

1 See steps 1 to 3 in "Opening a received e-mail" (page 56) to view a mail.

The photo is displayed.



2 Press to select Attached data field, and press (select).

The Attachment list screen appears.



3 Press to select a file name, and press (recv).

The movie is received. Press (play) to view the movie.



- Press to select a photo, and press (view) to display the entire photo on the screen.
- Some attached data do not appear automatically depending on their size. If they do not appear, go to step 3.
- It may take a short while to send/receive mails depending on the data attached to them or the reception strength of the place you are in.

<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------

Filtering spam


We recommend that you set our mail filter function to block spam.

Using Supportive setting, you can set mail filter function with simple operations answering onscreen questions.

Setting the mail filter

Example: To access the Supportive setting

- ① Press  (mail) in the idle screen. Press  to select "Settings" → "Mail filter," and press  (select).
- ② Press  to select "Yes," and press  (select). Press  to select "次へ," and press  (Select).
- ③ Enter your security code. Press  to select "送信," and press  (Select).
- ④ Press  to select the item you want to confirm, and press  (Select).

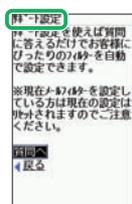

Simple settings

サポート設定 Supportive setting

You can set your mail filter preferences by answering questions.

This is recommended for those who want to confirm one's preferences step by step.

フィルターレベル(高) Filter level (Strict)

You can block all incoming e-mails from PC.

This is recommended for those who use e-mail only between cellphones.

フィルターレベル(中) Filter level (Moderate)

You can block the incoming e-mail from specified sender, also the e-mail with "未承諾広告※" in its title, and spoof e-mail.

This is recommended for those who have troubles with spam sender.

フィルターレベル(低) Filter level (Normal)

You can block the incoming e-mail containing "未承諾広告※" in its title, and spoof e-mail.

This is recommended for all e-mail users.



By changing your e-mail address, you can prevent spam from being received. For details on how to change e-mail address, see pages 24 and 25.

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	