 



Using C-mail

■ About C-mail

C-mail allows you to exchange mail among other au cellphones that supports C-mail using cellphone numbers. You can send C-mail comprising up to 50 double/100 single byte characters.

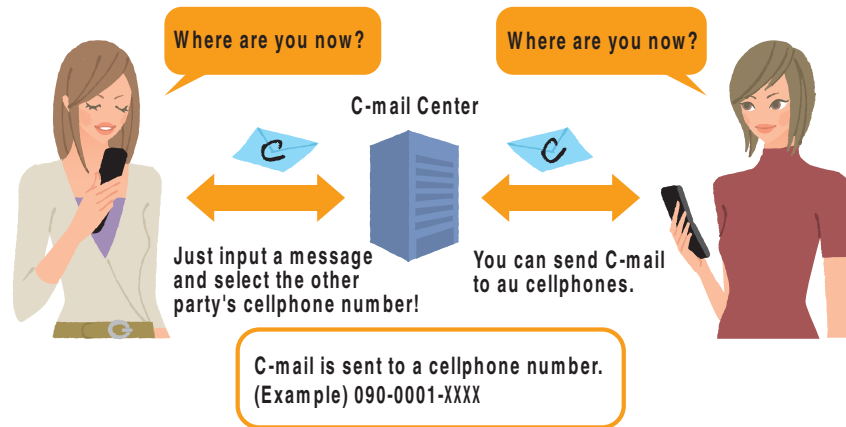

 C-mail transmission fee is charged when sending C-mail.

■ C-mail Safety Block



C-mail Safety Block allows you to reject C-mails that include URL (<http://△△△>, <https://△△△>) or phone numbers in the C-mail main text.



C-mail Safety Block is valid by default. You can cancel the setting to receive C-mails that include URL or phone numbers.


PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
---------------	---	----

  
Creating and sending C-mail

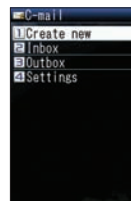
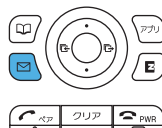
1 Hold down  (mail) for at least one second in the idle screen.




 
2 Press  to select "Create new," and press  (select).

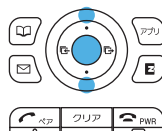

3 Enter the main text, and press  (ok).

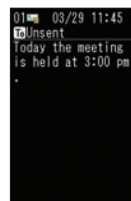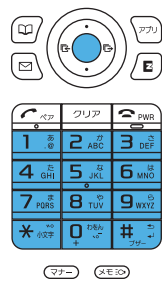  


4 Press  (send).

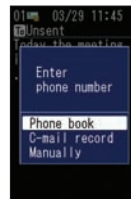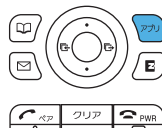  


PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

 5 Press to select "Phone book," and press (select).


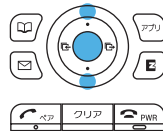


You can also select a phone number from sent/received messages or enter a phone number manually.

 
6 Press to select a person you want to send a C-mail to, and press (select).

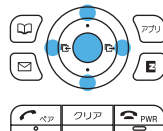

  7 Press to select a phone number, and press (select).

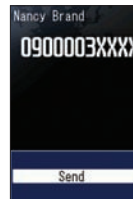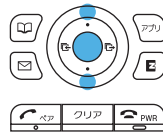

8 Press (select).
The C-mail is sent.

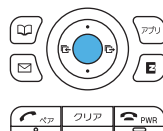 

Mail

<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------

 
 
Opening a received C-mail

When you receive a C-mail

A message and  appear in the idle screen.



Press  (select).

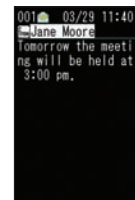
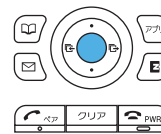


<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------


To open a C-mail in the Inbox

  1

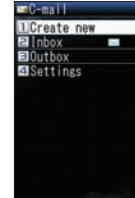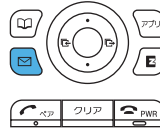

Hold down  (mail) for at least one second in the idle screen.

 
 


Icon



:The "unread mail" that has not yet been read
The number on the right side is the number of unread mails.



2

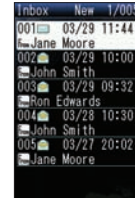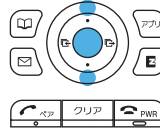Press  to select "Inbox," and press  (select).



3

  Press  to select the C-mail you want to read, and press  (viewer).

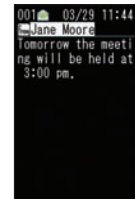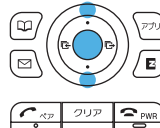

Mail

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
---------------	---	----


Camera

The W62S has a 2.01 Megapixel camera and allows you to take photos and record movies.

What you can do with the camera

You can use images on the W62S.

You can set photos you took as the image for the idle screen, set them to display when you have an incoming call, or save photos or movies to the phone book.

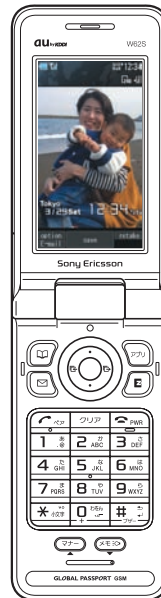 

You can mail photos and movies.

You can send images up to 500 KB^{**1} by attaching to an e-mail.

 
^{**1} It may take a short while to send/receive mails depending on the reception strength of the place you are in.



Page
71

You can print out photos or browse them using a PC.

You can save photos you took in the microSD™ Memory Card and print them out with a printer or at a DPE shop, or browse them using a PC.

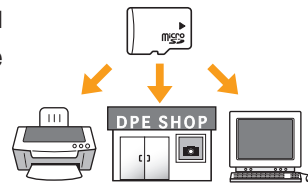


PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	


Successful taking of photos

How to hold the W62S

 To take "QVGA" or "WideQVGA" photos

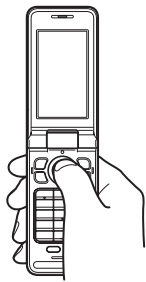

 To take "0.3M," "1M," "1.5M(Wide)," "2M" photos or record movie

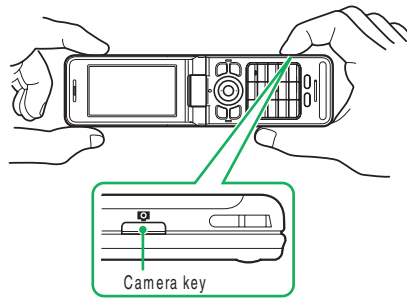

How to set the W62S

- ① **Hold your bent arm tight against your body.**
- ② **Hold the main unit not to shake it.**
If your armpits are open or your arms are stretched, the main unit may move and it may cause a blur.
- ③ **Be sure not to cover the lens with your fingers.**
Smearred lens (with fingerprint, etc.) can blur your images.

To stabilize the shot


- ① **Do not move the main unit.**
Do not move the main unit after you press the shutter until the shutter sound stops.
Be careful especially when you shoot in the dark.
- ② **Use self-timer.**
You can prevent a blur caused by pressing the shutter.

Camera


<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある 理由:</p>	<p>確認</p>
-----------------------	--	-----------


Taking photos

1

Press  (camera key) on the side of your cellphone in the idle screen.

 
The photo monitor screen appears.

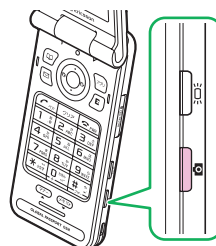

 The photo monitor screen appears in the previous selected size. "2M" is set by default.

2

 
Hold the W62S horizontally with both hands. View the subject you want to take on the photo monitor screen.

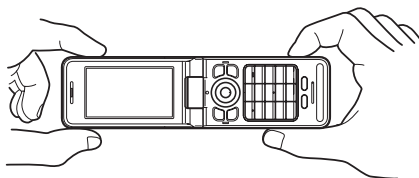




3

 Press  (AFlock).

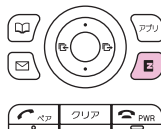 W62S camera automatically focuses on the subject. And you hear a short sound then frame's color turns into green from white.





 To automatically focus on the subject, half-press  (camera key) on the side of your cellphone continuously. When you hear a short sound and frame's color turns into green from white, full-press  (camera key).

4

Press  (shoot).

  You hear the shutter sound, and the photo you have taken is displayed (preview screen).

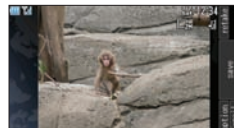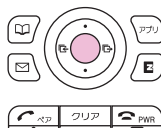


PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

5

Press ● (save).

 "Saved in data folder" appears, and the display returns to the monitor screen.

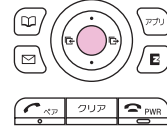

- You can also save photos by pressing (camera key) on the side of your cellphone.
- Photos are saved in the "Photo folder" in the data folder if the microSD™ Memory Card is not inserted.
- Six photo shooting modes (shown below) are available.

QVGA			
WideQVGA			
0.3M			
1M			
		1.5M(Wide)	2M



About the microSD™ Memory Card
 If you take photos with "0.3M," "1M," "1.5M(Wide)," or "2M" with inserting the microSD™ Memory Card in the W62S, the images are saved in the "DigiGame folder" in the microSD™ Memory Card.

Camera


PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
----------------------	---	----



  Viewing photos you have taken

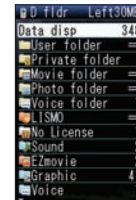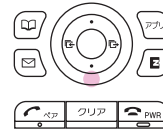 
1 Hold down  for at least one second in the idle screen.



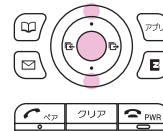

 2 Press  to select "Photo folder," and press  (select).

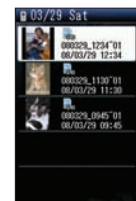

3 Press  to select the date folder containing the photo you want to view, and press  (select).




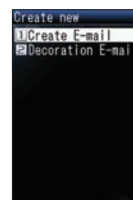 
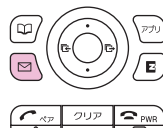 
4 Press  to select the photo you want to view, and press  (view).






<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------

Attaching a photo to e-mail

 1 Press  (E-mail) in the preview screen immediately after you have taken the image.





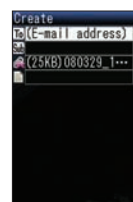





2 Press  to select "Create E-mail," and press  (select).



The create screen appears.

For details on how to create and send e-mail, see steps 3 to 11 on page 53 to 55.

-  The photo or the movie you have taken is automatically attached to an e-mail  (Attached data).
-  "Other phone cannot play size over case happen" may appear. Press  to select "Attach on," and press  (select).
-  "Cannot attach over 500KB Resize?" may appear. Press  to select "Yes," and press  (select) to select the size.

<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------

 
EZweb


 EZweb subscription required

About EZweb

EZweb is an information service that allows you to enjoy the Internet on your cellphone. With EZweb, you can obtain Chaku-Uta-Full®(full songs), the latest news, and other contents from information sites.

- You need to subscribe to the EZweb service to use the EZweb service. Contact an au shop or Customer Service Center if you did not subscribe to the service at the time of purchase.
- Make initial settings before using. If you have not made initial settings yet, see page 22.

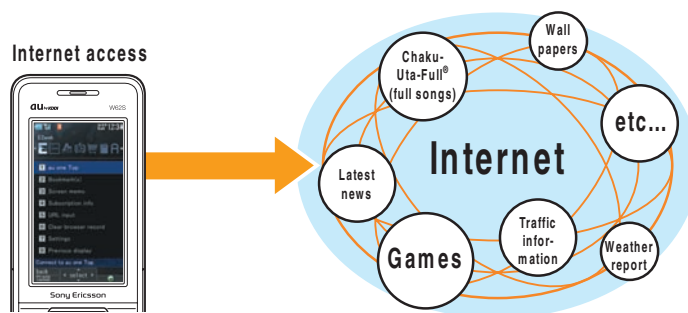




 Data communications fee (varied by the sent/received data amount, regardless of the connection time) is charged when connecting EZweb.

Displaying the au one Top

 Press **E** (EZ) in the idle screen.

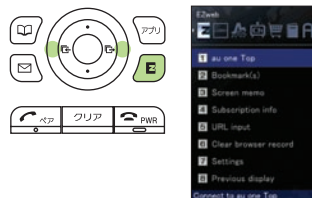

Press **◀▶** to select **Z** (EZweb).





 Press **E** () in the EZweb screen, and you can access to "PlayNow by Sony Ericsson."

<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------

2

  Press  to select "au one Top," and press  (select).

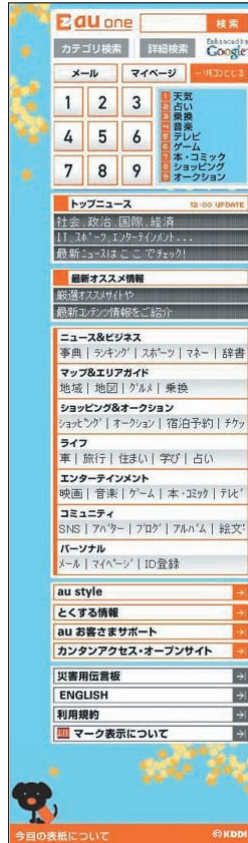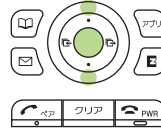



キーワード検索機能 (Keyword search function)	Provides information search function by keywords
メール (Mail)	Provides another e-mail address for both cellphone and PC use
マイページ (My Page)	Provides various information, useful tools or mass storage capabilities to suit your needs
①天気(Weather) ②占い(Fortune-telling) ③乗換(Transfer) ④音楽(Music) ⑤テレビ(TV programs) ⑥ゲーム(Games) ⑦本・コミック(Books・Comics) ⑧ショッピング(Shopping) ⑨オークション(Auction)	
トップニュース (Top news)	Provides the automatically-updated latest news
最新オススメ情報 (Latest recommended information)	Introduces various genre's special features or contents on EZweb
ニュース&ビジネス (News & Business information)	Provides the latest news such as weather, and other information beneficial for business
マップ&エリアガイド (Map & Regional information)	Provides regional information such as transit or map search
ショッピング&オークション (Shopping & Auction information)	Provides information about shopping malls where you can purchase goods with your cellphone and the information about the auction where you can put up or go for easily
ライフ (Useful daily life information)	Provides information beneficial for daily life
エンターテインメント (Entertainment information)	Provides the latest information on hobby such as games, music and e-book, and entertainment trends
コミュニティ (Community information)	Provides appealing information about features like SNS, Blog, etc. you might want to try
パーソナル (Personal information)	Provides another e-mail address, information and tools to suit your needs, ID registration for convenient use of au one services
au style	Introduces au-recommended information and sites
とくする情報 (Valuable information)	Provides gifts and beneficial information exclusively for EZweb service subscribers for free
auお客さまサポート (au Customer Support)	Provides phone bills, procedures, au information, and au on-line manual
カンタンアクセス・オープンサイト (Simple Access & Open Site)	Introduces Simple Access and Open Site
災害用伝言板 (Disaster Message Board)	Registers/checks the vital information in disasters
ENGLISH	Introduces English sites

➡ Continued on the next page

EZweb


PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある 理由:	

-  It may take a short while for each screen to appear.
-  The screen layout and contents are just examples. These are subject to change.



Saving your favorite sites


 
1

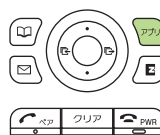Display the site you want to save, and press  (Browser Menu).



2

  Press  to select "New bookmark," and press  (Select).

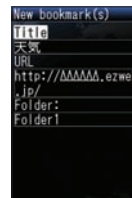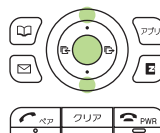

3

Press  (cmplt).





-  You can save up to 100 sites in the Bookmark. However, some sites may not be saved.



<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。</p> <p><input type="checkbox"/> 数値(スペック値)が正しいか。</p> <p><input type="checkbox"/> 注意文や説明文に誤り、不足がないか。</p> <p><input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------

Viewing a site saved to the Bookmark

 
 
1 Press (EZ) in the idle screen.
Press to select (EZweb).

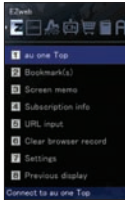
2 Press to select "Bookmark(s)," and press (select).

 3 Press to select a folder, and press (select).

  4 Press to select the site you want to view, and press (select).

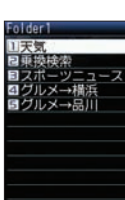


EZweb

 
<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------

 Confirming your call costs


 


You can confirm call and communication charges.

1

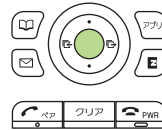Press  (menu) in the idle screen.



2





Press  .
Press  to select "Yes," and press  (select).

 
 


Select the item you want to confirm.



Downloading Chaku-Uta® (ringtones)/Chaku-Uta-Full® (full songs)

1

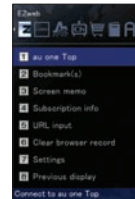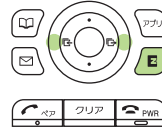Press  (EZ) in the idle screen.
Press   to select  (EZweb).




2

Press  to select "au one Top," and press  (select).




<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	---	-----------

 3 Press to select "カテゴリ検索," and press (OK).

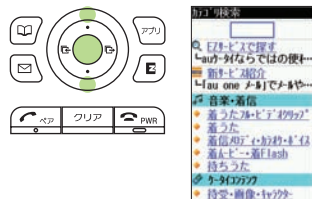


 4 Press to select "着うた" or "着うたフル・ビデオクリップ," and press (Select).

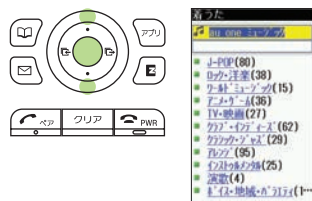


5 Press to select the desired site, and press (Select).

 Follow the on-screen instructions to select the melody you want to download.

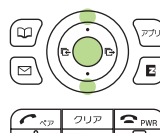

 6 Select and download a melody.
Download the melody by following the on-screen instructions.

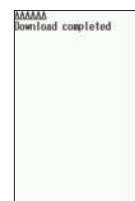

To use paid information site, you must enter the EZ Password or the Premium EZ Password. EZ Password or Premium EZ Password is any 4-digit number that you wrote in the application form.

The screen layout and contents are just examples. These are subject to change.

EZweb

<p>PTX-924 初校</p>	<p><input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:</p>	<p>確認</p>
-----------------------	--	-----------

EZ News Flash

 
 EZweb subscription required




What you can do with EZ News Flash

EZ News Flash is a service distributing updated news, weather, and fortune telling information to the idle screen for no charge.

Updated news is always displayed on the idle screen as a scrolling ticker, and you can browse detailed information by selecting it. You can use EZ News Flash easily with simple settings just after making initial settings for EZweb (page 22). All information is distributed for no charge.

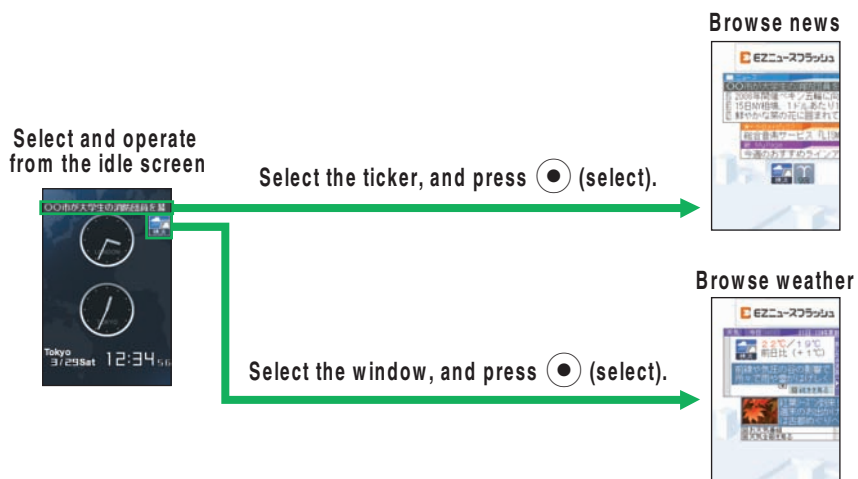※When updating EZ News Flash by manual operation or connecting to EZweb site, data communications fee may be required. If data communications fee is required, confirmation screen appears.





-  The information is updated in regular time intervals.  appears while receiving information.
-  If you are using "au one My Page," you can confirm the updated contents by selecting "My Page" from the top page of EZ News Flash.


PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

Setting EZ News Flash service





 You can use EZ News Flash with simple settings for no charge.


Make settings for EZ News Flash after making initial settings for EZweb (page 22).

- 1** Press  in the idle screen to select the ticker, and press  (select).



仮

 - 2** Press  to select "はい," press  (選択), press  to select "OK," and press  (Select).




 







仮

Setup is complete.

When you complete setup and return to the idle screen, a message "次回配信までしばらくお待ちください" will be displayed on the ticker.

 Canceling EZ News Flash service

- ① Press  in the idle screen to select the ticker, and press  (select).
- ② Press  (メニュー), press  to select "サービス設定解除," and press  (選択).
- ③ Press  to select "YES," press  (選択), press  to select "OK," and press  (Select).

Changing settings of receiving notifications

You can change the settings of volume, tone, vibrator, and indicator which notifies EZ News Flash was distributed.

If you do not need notifications when receiving EZ News Flash, set the volume to "off".


PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
---------------	---	----

EZ Navi

 EZweb subscription required


What you can do with EZ Navi

 EZ Navi is a handy service using location information by GPS.
The service may be unavailable in Overseas (GSM) mode.

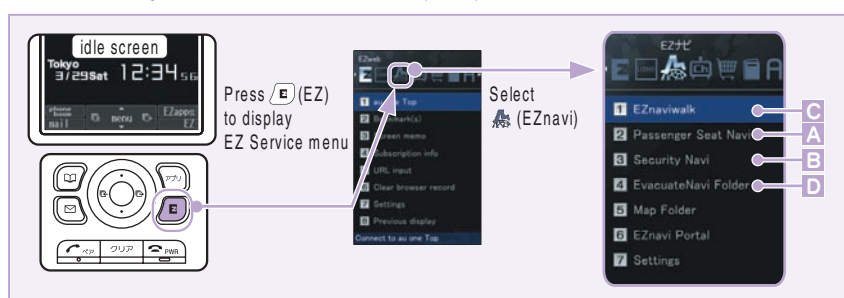

A When the front passenger check for driving route information: "Passenger Seat Navi"

 Passenger Seat Navi is the service for the passenger (sitting next to the driver) to provide the optimum route information to the destination using map and voice navigation.

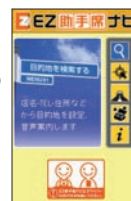

B When you want to know where your child is: "Security Navi"

"Security Navi" application provides three features.

"Auto Position Search" (paid), "Area Message" (free), "Position Search Mail" (free)

With the operation from W62S, you can check the position of an au cellphone supporting "Position Search." Also, W62S automatically sends a notice message to specified au cellphone under the following condition; during specified time frame, the person (with W62S) enters (or stays)/leaves (or is no longer in) specified area.



PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

C When you go out: "EZ Navi Walk"

You can display various menus convenient for going out.



ナビをする★	Route information (voice prompt) for your destination or search shops/facilities around
地図を見る(無料)★	See your current position or selected map
乗換検索する(無料※1)★	Search transit/time table or railway information
道路情報を見る	See real time route information nationwide
もっとナビウォーク	Help information for various settings or search by web
インフォメーション	Membership registration or inquiries

The star symbol shows that you can use your voice to enter search terms. This is called "Voice input" function.

※1 Some menus are paid service.

Measuring current position



The result of the first measurement is displayed as ★ on the map. Your current location will be displayed as a person icon in real time by successive measurement.

3D Navi



Change to 3D display around guidance point or your destination. Navigation engine by NAVITIME JAPAN Map: Shobunsha Publications, Inc./ Sumitomo Electric Industries, Ltd. 3D data: ZENRIN CO., LTD./ GEO Technical Laboratory Co., Ltd. Z06A-No. 2137

D When you try to find nearest evacuation sites or your way home: "Evacuate Navi"

Even when you have difficulty to get connected due to large scale disaster, W62S provides map/route information for evacuation sites or your way home using preset map data ("Evacuate Area Map"). Also, you can download various application programs from "Evacuate Navi" EZwebsite (for example, "Route Home Map" program provides map/route information between two places you specified, like "Office to Home").

- To get these map/route information, you need to save GPS information of your home to phone book on au cellphone, and set it as destination beforehand.
- To use some of the programs, application fee is charged respectively.

Evacuate Area Map Route Home Map



Map: Shobunsha Publications, Inc./ Preparation: Asia Air Survey Co., Ltd.


- hm For the use of EZ Navi, data communications fee is charged. And to use some of the services, information fee is charged in addition to the data communications fee.
- hm Regarding evacuation sites or other disaster related information, follow instructions by police, fire brigade, or local authority. Those instructions always take priority over the provided map/route information on the screen.
- hm For the use of "Evacuate Navi," it may take a short while to get GPS information of your current location depending on the GPS satellite conditions.
- hm The screen layout and contents are just examples, and may differ from the actual screen.

PTX-924 初校	<input checked="" type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

LISMO

What you can do with LISMO

 You can enjoy a variety of music with LISMO services.

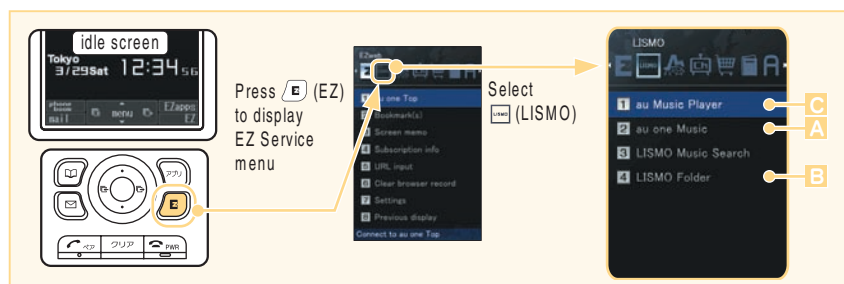


A To download Chaku-Uta-Full® (full song): "au one Music"

You can download Chaku-Uta-Full® (full song) by accessing official site.

B To save audio files/movie files/Play lists: "LISMO Folder"

Downloaded Chaku-Uta-Full® (full song)/Video clip/Play lists are saved in LISMO Folder. Transferred audio/movie files from au Music Port (files from CDs, Chaku-Uta-Full®/Video clip purchased from LISMO Music Store) are also saved in LISMO folder.

 C To enjoy music: "au Music Player"

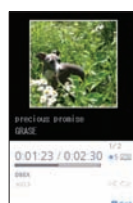





You can use au Music Player to play downloaded Chaku-Uta-Full® (full song)/Video clip, or data transferred from au Music Port. au Music Player also allows you to make the list of your favorite music and send that list by e-mail. You can enjoy music with "Uta-tomo®" function or "LISMO Music Search" function.



The screen layout and contents are just examples. These are subject to change.


PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

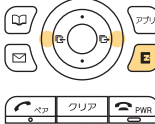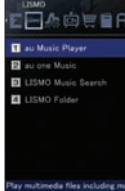  

Playing back an audio/movie file


- 1** Press  (EZ) in the idle screen.
Press  to select  (LISMO).





 
 
- 2** Press  to select "au Music Player," and press  (select).






- 3** Press  to select "ライブラリ," and press  (選択).



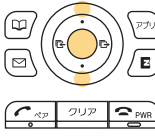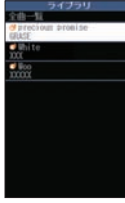

- 4** Press  to select "全曲一覧," and press  (選択).






- 5** Press  to select an audio/movie file you want to play, and press  (選択).











 Continued on the next page

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
---------------	---	----

 You can enjoy sounds through speaker (with no stereo earphone connected). When you do not want to play back from the speaker, connect stereo earphone to W62S beforehand (page 13).

 The screen layout and contents are just examples. These are subject to change.

 Operations during playing back



 
 
 
 

 
 
-  : Skip to the beginning of the current audio/movie file
-  (1 second) : Rewind
-  : Skip to the next audio/movie file
-  (1 second) : Fast forward
-  : Pause/play back
-  /  : Adjust the volume

OWS10



84

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

Troubleshooting

Symptom	Items to check	Solution	Page
Unable to turn the power on.	Is the battery pack properly installed?	Properly install the battery pack.	—
	Is the battery pack charged?	Charge the battery pack.	12
	Did you hold down  for at least one second?	Hold down  for at least one second.	17
Unable to make calls.	Is "圏外" displayed on the screen?	Make a call from a location where "圏外" is not displayed.	17
	Did you enter the area code when entering the phone number?	When making a call to a phone other than a cellphone, first enter the area code even when both parties are inside the same city.	28
	Is the power turned on?	Hold down  for at least one second.	17
	Did you press  ?	Press  .	28
	Is the Area Setting properly set?	For making a call in Japan, set "Japan" in Area Setting.	26
Unable to receive calls.	Is "圏外" displayed on the screen?	Move to a location where "圏外" is not displayed.	17
	Is the power turned on?	Hold down  for at least one second.	17
No reaction when a key is pressed.	Is the power turned on?	Hold down  for at least one second.	17
	Is the keylock set?	Hold down  for at least one second to cancel keylock.	15
Warning tone sounds, and power turns off.	There is not enough power remaining in the battery pack.	Charge the battery pack.	12
Incoming calls are automatically answered.	Is the record message set?	Hold down  for at least one second to cancel the record message.	35
Unable to hear the other party.	Is the volume during a call set too low?	Press  while you are talking. The volume during a call will increase.	31

Please visit the au web site for more information.

- From W62S ⇒  (EZ) ⇒  (EZweb) ⇒ "au one Top" ⇒ "auお客さまサポート" (au Customer Support) ⇒ "調べる" ⇒ "オンラインマニュアル" ⇒ "故障診断Q&A"
- From your PC ⇒ (<http://www.kddi.com/customer/service/au/trouble/kosho/index.html>)

PTX-924 初校	<input checked="" type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	





Remote Ctrl Lock

 
In case you have lost your W62S








Using Remote Ctrl Lock, you can lock your W62S (Auto lock, FeliCa lock and Phone book lock) remotely against unauthorized use.

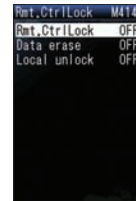■ ■ To set up the working environment of Remote Ctrl Lock

Auto lock, FeliCa lock and Phone book lock are enabled by calling to your W62S specific times from the phone number specified beforehand.

- ① Press  (menu) in the idle screen → press   .
- ② Enter Lock No., and press  (ok).




- ③ Press  to select "Rmt.CtrlLock," and press  (select). Set each item below:
 - "Set" : Select "ON"/"OFF."
 - "Duration" : Enter the time (1 to 10 minutes) as for the time frame starting with the first incoming call to be ended with set times call.
 - "Frequency" : Enter the times of incoming call (3 to 10 times) to set and release Remote Ctrl Lock.
 - "Caller" : Register phone number (up to 3 numbers) to use when setting and releasing Remote Ctrl Lock.
- ④ Press  to select "Data erase" → "Erase"/"Not erase," and press  (select).
Set whether to delete saved data when setting Remote Ctrl Lock or not.
- ⑤ Press  to select "Local unlock" → "ON"/"OFF," and press  (select).
Set whether to release Remote Ctrl Lock by entering Lock No. or not.
- ⑥ Press  (back).

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

■ ■ To set Auto lock, FeliCa lock and Phone book lock on W62S by Remote Ctrl Lock

Make a call to W62S under the working condition (Duration, Frequency, Caller) set by Remote Ctrl Lock.

Remote Ctrl Lock is set, and announcement is played notifying that Remote Ctrl Lock is set.

 Remote Ctrl Lock cannot be set if W62S is turned off or in the area where reception strength is not good.

 "Not erase" (for "Data erase") and "OFF" (for "Local unlock") are set by default.

■ ■ To lock on W62S by Security Lock Service

With no Remote Ctrl Lock setting has been made, call au Customer Service Center or visit our web site from your PC to set Auto lock, FeliCa lock and Phone book lock. You can use Security Lock Service with no charge.

au Customer Service Center

From au cellphones: 113 area code not required (toll free)

From other operators'/regular phones:  0077-7-113 (toll free)
(24 hrs a day)


Follow the voice guidance to set the lock.

au Customer Support

Visit our au Customer Support web site (<http://cs.kddi.com/>) and follow the onscreen instructions to set the lock.

※ Application required for the first time use (we also accept your application after the loss).

※ MyKDDI has changed its name to "auお客様サポート" (au Customer Support) in late February, 2008. The procedures for using this service remain unchanged.

 You cannot set the lock if W62S is turned off or in the area where reception strength is not good.






PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
---------------	---	----


 
Other features

Safety Buzzer

To show that you are in emergencies, you can use the Safety Buzzer function in extreme volume sound. To use this function, set the Safety Buzzer to "ON" beforehand.

To set the Safety Buzzer "ON"

- 1 Press  (menu) in the idle screen → press  .
- 2 Press  to select "ON," and press  (select).

 
 While Safety Buzzer is set to "OFF," you can set Safety Buzzer "ON" by holding down  for at least one second in the idle screen.




To use the Safety Buzzer

Hold down  for at least one second in the idle screen.

To stop the Safety Buzzer sound

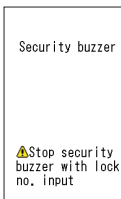Enter the Lock No..



-  The Safety Buzzer sound continues until Lock No. is entered or battery is fully discharged.
-  Even with the manner mode set or stereo earphone connected, the Safety Buzzer sounds from speaker.
-  While the Safety Buzzer sound continues, you cannot turn W62S off or perform other operations. But you can dial 110 (Police), 118 (Japan Coast Guard), and 119 (Fire brigade).

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

Other Functions

④ GLOBAL Passport GSM

W62S supports GLOBAL Passport GSM Service using au IC-Card. GLOBAL Passport GSM is an international roaming service for the customers to insert the au IC-Card to a GSM compatible cellphone for overseas use. No special application procedure or daily/monthly fee is required, and the call cost is added to domestic call, making the payment procedure simple.

EZ keitai-arrange

You can set/change ringtones or designs of the idle screen, icons, etc. collectively. Also, you can use downloaded data for those settings.

au one My Page

You can save data such as a phone book, e-mail, or the data in the data folder to au one My Page.

Various ways to get audio files

You can enjoy your favorite songs by EZ "Chaku-Uta-Full[®]" (full songs), the full length music download service, and also enjoy other audio files transferred from your music CDs via au Music Port.

EZ apps (BREW[®])

You can download game software from EZweb sites and play games.


Infrared data exchange feature

You can exchange data such as a phone book, profile, or the data in the data folder between au cellphones that support infrared data exchange.

PC Site Viewer

You can view WEB sites intended for PC on W62S with smooth high-speed data communication.

Fake Incoming Call

Holding down  for at least one second makes ringtone sound as if you have an incoming call.

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある 理由:	確認
---------------	---	----

Radio Wave Exposure and Specific Absorption Rate (SAR) Information

★Mobile Phone GSM/GPRS 900/1800/1900

United States & Canada

THIS PHONE MODEL HAS BEEN CERTIFIED IN COMPLIANCE WITH THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

The W62S mobile phones have been designed to comply with applicable safety requirements for exposure to radio waves. Your wireless phone is a radio transmitter and receiver. It is designed to not exceed the limits* of exposure to radio frequency (RF) energy set by governmental authorities. These limits establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by international scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a safety margin designed to assure the safety of all individuals, regardless of age and health.

The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate (SAR). Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands. While there may be differences between the SAR levels of various phone models, they are all designed to meet the relevant guidelines for exposure to radio waves. For more information on SAR, please refer to the safe and efficient use chapter in the User Guide.

The highest SAR value as reported to the authorities for this phone model when tested for use by the ear is 0.73 W/kg*, and when worn on the body is 0.42 W/kg* for speech and 0.66 W/kg* for data calls. Body worn measurements are made while the phone is in use and worn on the body with a Sony Ericsson accessory supplied with or designated for use with this phone. It is therefore recommended that only Ericsson and Sony Ericsson original accessories be used in conjunction with Sony Ericsson phones.

**Before a phone model is available for sale to the public in the US, it must be tested and certified by the Federal Communications Commission (FCC) that it does not exceed the limit established by the government-adopted requirement for safe exposure*. The tests are performed in positions and locations (i.e., by the ear and worn on the body) as required by the FCC for each model. The FCC has granted an Equipment Authorization for this phone model with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. While there may be differences between the SAR levels of various phones, all mobile phones granted an FCC equipment authorization meet the government requirement for safe exposure. SAR information on this phone model is on file at the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID PY7A5025011 Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) website at <http://www.phonefacts.net>.

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
---------------	---	----

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The standard incorporates a margin of safety to give additional protection for the public and to account for any variations in measurements.

** This paragraph is only applicable to authorities and customers in the United States.

Europe

This mobile phone model W62S has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized methods with the phone transmitting at its highest certified power level in all used frequency bands.

While there may be differences between the SAR levels of various phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

For more information on SAR, please refer to the safety chapter in the User's Guide.

SAR data information for residents in countries that have adopted the SAR limit recommended by the International Commission of Non-Ionizing Radiation Protection (ICNIRP), which is 2 W/kg averaged over ten (10) gram of tissue (for example European Union, Japan, Brazil and New Zealand):

The highest SAR value for this model phone tested by Sony Ericsson for use at the ear is 0.75 W/kg (10g).

PTX-924 初校	<input checked="" type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある 理由:	確認
---------------	--	----

Radio Frequency (RF) Exposure and SAR

Your mobile phone is a low-power radio transmitter and receiver. When it is turned on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.g. ICNIRP (International Commission on Non-ionizing Radiation Protection) and IEEE (The Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while operating can be well below this value. This is because the mobile phone is designed to use the minimum power required to reach the network.

Variations in SAR below the radio frequency exposure guidelines do not mean that there are variations in safety. While there may be differences in SAR levels among mobile phones, all Sony Ericsson mobile phone models are designed to meet radio frequency exposure guidelines.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (that is, at the ear and worn on the body) as required by the FCC for each model. For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when the handset is positioned a minimum of 15 mm from the body without any metal parts in the vicinity of the phone or when used with the original Sony Ericsson body worn accessory intended for this phone. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

SAR information for this mobile phone model is included with the material that comes with this mobile phone. This information can also be found, together with more information on radio frequency exposure and SAR, on:
www.sonyericsson.com

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある 理由:	

Guidelines for Safe and Efficient Use

Please read this information before using your mobile phone.



These instructions are intended for your safety. Please follow these guidelines. If the product has been subject to any of the conditions listed below or you have any doubt as to its proper function make sure you have the product checked by a certified service partner before charging or using it. Failure to do so might entail a risk of product malfunction or even a potential hazard to your health.

Recommendations for safe use of product (mobile phone, battery, charger and other accessories)

- Always treat your product with care and keep it in a clean and dust-free place.
- **Warning!** May explode if disposed of in fire
- Do not expose your product to liquid or moisture or humidity.
- Do not expose your product to extremely high or low temperatures. Do not expose the battery to temperatures above +35° C (+95° F).
- Do not expose your product to open flames or lit tobacco products.



- Do not drop, throw or try to bend your product. Do not paint your product.
- Do not attempt to disassemble or modify your product.



- Do not close your product with an object inserted between keypad and display if you have a clamshell phone; this may damage your product.
- Do not use your product near medical equipment without requesting permission from your treating physician or authorized medical staff.
- Do not use your product when in, or around aircraft, or areas showing the sign "turn off two-way radio".
- Do not use your product in an area where a potentially explosive atmosphere exists.
- Do not place your product or install wireless equipment in the area above an air bag in your car.
- **Caution:** Cracked or broken displays may create sharp edges or splinters that could be harmful upon contact.

CHILDREN



KEEP OUT OF CHILDRENS REACH. DO NOT ALLOW CHILDREN TO PLAY WITH YOUR MOBILE PHONE OR ITS ACCESSORIES. THEY COULD HURT THEMSELVES OR OTHERS, OR COULD ACCIDENTALLY DAMAGE THE MOBILE PHONE OR ACCESSORY. YOUR MOBILE PHONE OR ITS ACCESSORY MAY CONTAIN SMALL PARTS THAT COULD BECOME DETACHED AND CREATE A CHOKING HAZARD.

PTX-924 初校	<input checked="" type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある 理由:	確認
---------------	--	----

Power supply (Charger)

Connect the AC power adapter only to designated power sources as marked on the product. Make sure the cord is positioned so that it will not be subjected to damage or stress. To reduce risk of electric shock, unplug the unit from any power source before attempting to clean it. The AC power adapter must not be used outdoors or in damp areas. Never alter the cord or plug.

Battery

We recommend that you fully charge the battery before you use your mobile phone for the first time. A new battery or one that has not been used for a long time could have reduced capacity the first few times it is used. The battery should only be charged in temperatures between +5° C (+41° F) and +35° C (+95° F).

Use only original batteries intended for use with your mobile phone. Using other batteries and chargers could be dangerous.

Talk and standby times depend on several different conditions such as signal strength, operating temperature, application usage patterns, features selected and voice or data transmissions when the mobile phone is being used.

Turn off your mobile phone before removing the battery. Do not put the battery into your mouth. Battery electrolytes may be toxic if swallowed. Do not let the metal contacts on the battery touch another metal object. Doing this could short-circuit and damage the battery. Use the battery for the intended purpose only.

Personal medical devices

Mobile phones may affect the operation of pacemakers and other implanted equipment. Please avoid placing the mobile phone over the pacemaker, e.g. in your breast pocket. When using the mobile phone, use it at the ear on the opposite side of the body to the pacemaker. If a minimum distance of 22 cm (8.7 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you have any reason to suspect that interference is taking place, immediately turn off your mobile phone. Contact your medical doctor for more information.

For other medical devices, please consult your physician and the manufacturer of the device.

Driving

Do not use your product while you are driving.

Always pay full attention to driving and pull off the road and park before making or answering a call if driving conditions so require.

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

Emergency calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. You should therefore never rely solely upon any mobile phone for essential communications (e.g. medical emergencies).

Emergency calls may not be possible in all areas, on all cellular networks, or when certain network services and/or mobile phone features are in use. Check with your local service provider.

Efficient use

Hold your mobile phone as you would any other phone. Do not cover the hinge area when the phone is in use, as this affects call quality and may cause the phone to operate at a higher power level than needed, thus shortening talk and standby times.

Disposal of old electrical and electronic equipment



This symbol indicates that all electrical and electronic equipment included shall not be treated as household waste. Instead it shall be left at the appropriate collection point for recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Disposing of the battery



Please check local regulations for disposal of batteries or call your local Sony Ericsson Call Center for information.

The battery should never be placed in municipal waste. Use a battery disposal facility if available.

Memory Card

If your product comes complete with a removable memory card, it is generally compatible with the handset purchased but may not be compatible with other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use. If your product is equipped with a memory card reader, check memory card compatibility before purchase or use.

Memory cards are generally formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or contact customer support.

PTX-924 初校	<input checked="" type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある 理由:	確認
---------------	--	----

WARNING:

If your device requires an adapter for insertion into the handset or another device, do not insert the card directly without the required adapter.

Precautions on Memory Card Use

- Do not expose the memory card to moisture.
- Do not touch terminal connections with your hand or any metal object.
- Do not strike, bend, or drop the memory card.
- Do not attempt to disassemble or modify the memory card.
- Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.
- Do not press or bend the end of the memory card adapter with excessive force.
- Do not let dirt, dust, or foreign objects get into the insert port of any memory card adapter.
- Check you have inserted the memory card correctly.
- Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- We recommend that you make a backup copy of important data. We are not responsible for any loss or damage to content you store on the memory card.
- Recorded data may be damaged or lost when you remove the memory card or memory card adapter, turn off the power while formatting, reading or writing data, or use the memory card in locations subject to static electricity or high electrical field emissions.

Protection of personal information

To safeguard your privacy and prevent information being accessible to a third party, you should erase all personal data before selling or disposing of the product.

To delete personal data, perform a master reset, remove the memory card or format the media memory. DELETION OF MATERIAL FROM THE PHONE AND MEDIA MEMORIES DOES NOT ENSURE THAT SAID INFORMATION CANNOT BE RECOVERED BY A SUBSEQUENT USER. KDDI/SONY ERICSSON DOES NOT WARRANT AGAINST A SUBSEQUENT USER OF THE DEVICE ACCESSING YOUR INFORMATION AND DOES NOT ASSUME ANY RESPONSIBILITY FOR SUBSEQUENT DISCLOSURE OF SAID INFORMATION EVEN IF A MASTER RESET AND A MEDIA MEMORY FORMAT HAS BEEN PERFORMED. If you are concerned about such potential disclosure retain your device or secure its permanent destruction.

Accessories

KDDI recommends use of KDDI's original accessories for safe and efficient use of its products. Use of third-party accessories may decrease performance or pose a risk to your health or safety.

LOUDNESS WARNING:

Please adjust the audio volume cautiously when using third-party audio accessories to avoid volume levels that may be harmful to your hearing. KDDI does not test use of third-party audio accessories with this mobile phone. KDDI recommends using only KDDI's original audio accessories.

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
---------------	---	----

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions :



- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Declaration of Conformity for W62S

We, Sony Ericsson Mobile Communications AB of Nya Vattentorget SE-221 88 Lund, Sweden declare under our sole responsibility that our product

Sony Ericsson type AAH-5025011-BV

and in combination with KDDI AC-charger 02 (0203PQA), KDDI Desktop stand (62SOPUA) and Sony Earphone (MDR-E0921SP), to which this declaration relates is in conformity with the appropriate standards EN 301 511:V9.0.2, EN 301 489-7:V1.3.1, and EN 60950-1:2006, following the provisions of Radio Equipment and Telecommunication Terminal Equipment Directive 1999/5/EC

Lund, February 2008

C E0682

Signature

Yukio Kubota, Head of Product Business Unit JAPAN

We fulfill the requirements of the R&TTE Directive (1999/5/EC)

Other features

97

PTX-924 初校	<input checked="" type="checkbox"/> 操作説明、画面が仕様とあっているか。 <input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	確認
---------------	--	----

Index

A	
accessories	10
au IC-Card	11
au one Top	72
B	
battery pack	10
battery power, remaining	4
before use	10
Bookmark	
saving	74
viewing	75
C	
C-mail	61
C-mail Safety Block	61
creating and sending	62
icon	65
opening	64, 65
receiving	64
camera	66
photo	68
successful taking	67
cellphone etiquette	1
charge indicator	12
charging the battery pack	12
confirming your call costs	76
confirming your cellphone number	23
cross controller™	15
D	
desktop holder	12
Dialed calls	31
Disaster Message Board Service	
(demonstration)	7
display	18
domain	24
downloading Chaku-Uta-Full®	76
(full songs)	76
downloading Chaku-Uta®	76
(ringtones)	76
drive mode	5
E	
e-mail	
attaching photo	71
creating and sending	53
icons	53, 56, 57
initial settings	22
opening	56, 57
receiving	56
replying	58
viewing attached photo/movie	59
e-mail address	
changing	24
confirming	23
English display	18
EZ Navi	80
EZ News Flash	78
EZ Service menu	21
EZweb	72
Bookmark	75
confirming your call costs	76
initial settings	22
I	
icons	18, 19
idle screen	17
ID Unsent	30
incoming indicator	11
initial settings	22
international call	28
Internet (See "EZweb")	
L	
LISMO	
Playing back	83
M	
mail	
C-mail	61
e-mail	52
mail filter	60
Main menu	20

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	

manner mode 4, 32

N

names of parts 11

O

one-ring call 6

optional accessories 10

P

Pair Function 50

 making a call 51

 saving 50

phone book 44

 deleting 47

 editing 46

 making a call 48

 saving 44

 saving from dialed/received calls 49

Phone call 28

 if you are unable to answer 30

 making 28

 making an international call 28

 notify/not notify the other party 28

 receiving 30

photo

 attaching to e-mail 71

 saving 69

 taking 68

 viewing 70

playing back audio/movie files 83

power 4

R

Received calls 31

reception strength 4

record message 4, 35

 playing back 36

redialing 31

Remote Ctrl Lock 86

ringtone 33

S

Safety Buzzer 88

Security Lock Service 87

soft key 16

spam 6, 60

stereo earphone 13

T

text input 37

 alphanumerics 38

 Back Space function 38

 changing input mode 37, 38

 character key assignment table 38

 characters assigned to the same key
 41

 deleting characters 41

 emoticons 42

 pictorial characters 42

 sentences 43

 symbols 42

 uppercase characters 41

troubleshooting 85

U

using W62S overseas 26

 changing network from abroad 27

V

volume during a call 31

PTX-924 初校	<input checked="" type="checkbox"/> 操作説明、画面が仕様とあっているか。	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。 <input type="checkbox"/> 注意文や説明文に誤り、不足がないか。 <input type="checkbox"/> チェックできない箇所がある理由:	

For inquiries, call:
au Customer Service Center

From EZweb site:

How to access

- EZ ▶ EZweb ▶ au one Top
- ▶ auお客さまサポート
(au Customer Support)
- ▶ お問い合わせ (Inquiries)



※Menu structure is subject to change without prior notice.

■ **For general information and charges**

From regular phones:

 **0077-7-111**
フリーコール (toll free)

From au cellphones:

157 area code not required
(toll free)

■ **For loss, theft or damage and operation information**

From regular phones:

 **0077-7-113**
フリーコール (toll free)

From au cellphones:

113 area code not required
(toll free)

Pressing "zero" will connect you to an operator,
after calling "157" on your au cellphone.

Sales : KDDI Corporation
Okinawa Cellular Telephone Company
Manufacturer : Sony Ericsson Mobile Communications Japan, Inc.



Cellphone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the ♻️ logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

Read this to access to au online manual



A-CWW-100-11(1)
February 2008, 1st Edition

PTX-924 初校	<input type="checkbox"/> 操作説明、画面が仕様とあっているか	確認
	<input type="checkbox"/> 数値(スペック値)が正しいか。	
	<input type="checkbox"/> 注意文や説明文に誤り、不足がないか。	
	<input type="checkbox"/> チェックできない箇所がある理由:	