

MMR-60**ENGLISH**

Listen to Music Using the MMR-60

1. Phone: Open WALKMAN or Media player and play the music you want to listen to.
2. Receiver: Tune into an unused ("white noise") frequency channel.
3. Attach the MMR-60 to your phone.
4. Phone: In the pop-up, select the same frequency as for the receiver. To select the suggested frequency, press **OK**. To manually enter a frequency, press **Edit**. Delete the suggested frequency, enter the frequency you want (use * to enter .) and press **OK** twice.

Factors Affecting the Sound Quality:

- Sound settings in the phone.
- Recommended: Set the volume level to 80% and the equalizer option to **Normal**.
- Solid objects between the transmitter and the antenna of the receiver.
- Transmission on similar frequencies.

MMR-60 Light Effects

The following light effects notifies you of different events:

- Continual blinks - no connection
- A few blinks at a rapid pace - confirmation
- Pulsating light - transmission

Turn Off the Pulsating Light Effect

You can turn off the light effect that indicates transmission. Go to **Settings**, the **Connectivity** tab, **Accessories**, **MMR-60** and select **Light effect**.

MMR-60 Characteristics

- Plays music from the Media player over the FM-radio frequency band.
- Remembers the last used frequency.
- Range of up to 10 meters.
- Mutes the music during calls.
- Powered by the phone.
- Can be connected to any phone incorporating the Fast Port.

Important information!

- Follow regional guidelines/legislation for use of FM-radio transmitters.
- The MMR-60 will not work in Music only mode.
- The MMR-60 are not to be used in air-planes.

FRENCH

Listen to Music Using the MMR-60

1. Phone: Open WALKMAN or Media player and play the music you want to listen to.
2. Receiver: Tune into an unused ("white noise") frequency channel.
3. Attach the MMR-60 to your phone.
4. Phone: In the pop-up, select the same frequency as for the receiver. To select the suggested frequency, press **OK**. To manually enter a frequency, press **Edit**. Delete the suggested frequency, enter the frequency you want (use * to enter .) and press **OK** twice.

Factors Affecting the Sound Quality:

- Sound settings in the phone.
- Recommended: Set the volume level to 80% and the equalizer option to **Normal**.
- Solid objects between the transmitter and the antenna of the receiver.
- Transmission on similar frequencies.

MMR-60 Light Effects

The following light effects notifies you of different events:

- Continual blinks - no connection
- A few blinks at a rapid pace - confirmation
- Pulsating light - transmission

Turn Off the Pulsating Light Effect

You can turn off the light effect that indicates transmission. Go to **Settings**, the **Connectivity** tab, **Accessories**, **MMR-60** and select **Light effect**.

MMR-60 Characteristics

- Plays music from the Media player over the FM-radio frequency band.
- Remembers the last used frequency.
- Range of up to 10 meters.
- Mutes the music during calls.
- Powered by the phone.
- Can be connected to any phone incorporating the Fast Port.

Important information!

- Follow regional guidelines/legislation for use of FM-radio transmitters.
- The MMR-60 will not work in Music only mode.
- The MMR-60 are not to be used in air-planes.

SPANISH

Listen to Music Using the MMR-60

1. Phone: Open WALKMAN or Media player and play the music you want to listen to.
2. Receiver: Tune into an unused ("white noise") frequency channel.
3. Attach the MMR-60 to your phone.
4. Phone: In the pop-up, select the same frequency as for the receiver. To select the suggested frequency, press **OK**. To manually enter a frequency, press **Edit**. Delete the suggested frequency, enter the frequency you want (use * to enter .) and press **OK** twice.

Factors Affecting the Sound Quality:

- Sound settings in the phone.
- Recommended: Set the volume level to 80% and the equalizer option to **Normal**.
- Solid objects between the transmitter and the antenna of the receiver.
- Transmission on similar frequencies.

MMR-60 Light Effects

The following light effects notifies you of different events:

- Continual blinks - no connection
- A few blinks at a rapid pace - confirmation
- Pulsating light - transmission

Turn Off the Pulsating Light Effect

You can turn off the light effect that indicates transmission. Go to **Settings**, the **Connectivity** tab, **Accessories**, **MMR-60** and select **Light effect**.

MMR-60 Characteristics

- Plays music from the Media player over the FM-radio frequency band.
- Remembers the last used frequency.
- Range of up to 10 meters.
- Mutes the music during calls.
- Powered by the phone.
- Can be connected to any phone incorporating the Fast Port.

Important information!

- Follow regional guidelines/legislation for use of FM-radio transmitters.
- The MMR-60 will not work in Music only mode.
- The MMR-60 are not to be used in air-planes.

PORTUGUESE

Listen to Music Using the MMR-60

1. Phone: Open WALKMAN or Media player and play the music you want to listen to.
2. Receiver: Tune into an unused ("white noise") frequency channel.
3. Attach the MMR-60 to your phone.
4. Phone: In the pop-up, select the same frequency as for the receiver. To select the suggested frequency, press **OK**. To manually enter a frequency, press **Edit**. Delete the suggested frequency, enter the frequency you want (use * to enter .) and press **OK** twice.

Factors Affecting the Sound Quality:

- Sound settings in the phone.
- Recommended: Set the volume level to 80% and the equalizer option to **Normal**.
- Solid objects between the transmitter and the antenna of the receiver.
- Transmission on similar frequencies.

MMR-60 Light Effects

The following light effects notifies you of different events:

- Continual blinks - no connection
- A few blinks at a rapid pace - confirmation
- Pulsating light - transmission

Turn Off the Pulsating Light Effect

You can turn off the light effect that indicates transmission. Go to **Settings**, the **Connectivity** tab, **Accessories**, **MMR-60** and select **Light effect**.

MMR-60 Characteristics

- Plays music from the Media player over the FM-radio frequency band.
- Remembers the last used frequency.
- Range of up to 10 meters.
- Mutes the music during calls.
- Powered by the phone.
- Can be connected to any phone incorporating the Fast Port.

Important information!

- Follow regional guidelines/legislation for use of FM-radio transmitters.
- The MMR-60 will not work in Music only mode.
- The MMR-60 are not to be used in air-planes.

ENGLISH

Listen to Music Using the MMR-60

1. Phone: Open WALKMAN or Media player and play the music you want to listen to.
2. Receiver: Tune into an unused ("white noise") frequency channel.
3. Attach the MMR-60 to your phone.
4. Phone: In the pop-up, select the same frequency as for the receiver. To select the suggested frequency, press **OK**. To manually enter a frequency, press **Edit**. Delete the suggested frequency, enter the frequency you want (use * to enter .) and press **OK** twice.

Factors Affecting the Sound Quality:

- Sound settings in the phone.
- Recommended: Set the volume level to 80% and the equalizer option to **Normal**.
- Solid objects between the transmitter and the antenna of the receiver.
- Transmission on similar frequencies.

MMR-60 Light Effects

The following light effects notifies you of different events:

- Continual blinks - no connection
- A few blinks at a rapid pace - confirmation
- Pulsating light - transmission

Turn Off the Pulsating Light Effect

You can turn off the light effect that indicates transmission. Go to **Settings**, the **Connectivity** tab, **Accessories**, **MMR-60** and select **Light effect**.

MMR-60 Characteristics

- Plays music from the Media player over the FM-radio frequency band.
- Remembers the last used frequency.
- Range of up to 10 meters.
- Mutes the music during calls.
- Powered by the phone.
- Can be connected to any phone incorporating the Fast Port.

Important information!

- Follow regional guidelines/legislation for use of FM-radio transmitters.
- The MMR-60 will not work in Music only mode.
- The MMR-60 are not to be used in air-planes.

MMR-60**ENGLISH**

Listen to Music Using the MMR-60

1. Phone: Open WALKMAN or Media player and play the music you want to listen to.
2. Receiver: Tune into an unused ("white noise") frequency channel.
3. Attach the MMR-60 to your phone.
4. Phone: In the pop-up, select the same frequency as for the receiver. To select the suggested frequency, press **OK**. To manually enter a frequency, press **Edit**. Delete the suggested frequency, enter the frequency you want (use * to enter .) and press **OK** twice.

Factors Affecting the Sound Quality:

- Sound settings in the phone.
Recommended: Set the volume level to 80% and the equalizer option to **Normal**.
- Solid objects between the transmitter and the antenna of the receiver.
- Transmission on similar frequencies.

MMR-60 Light Effects

The following light effects notifies you of different events:

- Continual blinks - no connection
- A few blinks at a rapid pace - confirmation
- Pulsating light - transmission

Turn Off the Pulsating Light Effect

You can turn off the light effect that indicates transmission. Go to **Settings**, the **Connectivity** tab, **Accessories**, **MMR-60** and select **Light effect**.

MMR-60 Characteristics

- Plays music from the Media player over the FM-radio frequency band.
- Remembers the last used frequency.
- Range of up to 10 meters.
- Mutes the music during calls.
- Powered by the phone.
- Can be connected to any phone incorporating the Fast Port.

Important information!

- Follow regional guidelines/legislation for use of FM-radio transmitters.
- The MMR-60 will not work in Music only mode.
- The MMR-60 are not to be used in air-planes.

**FCC Statement**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.