 


User guide


English
Language
Language
Language

VH310


1

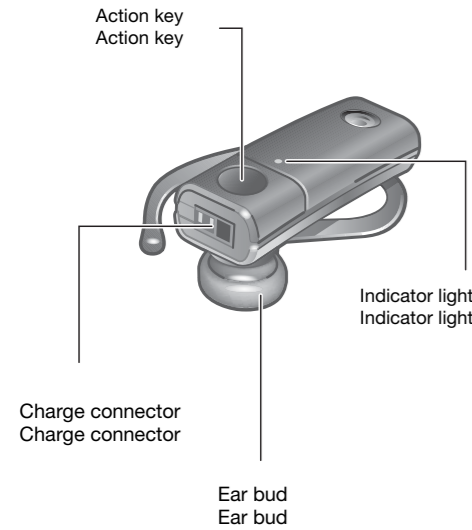

 
2

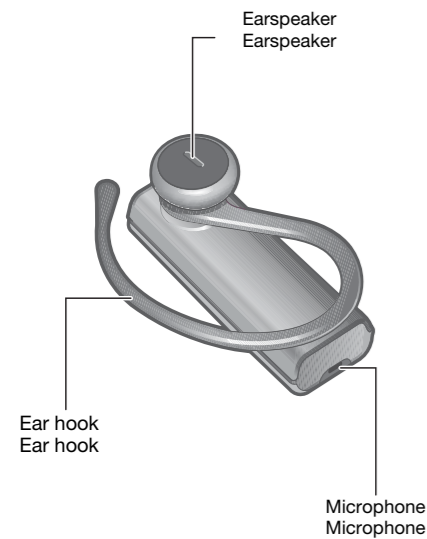


4

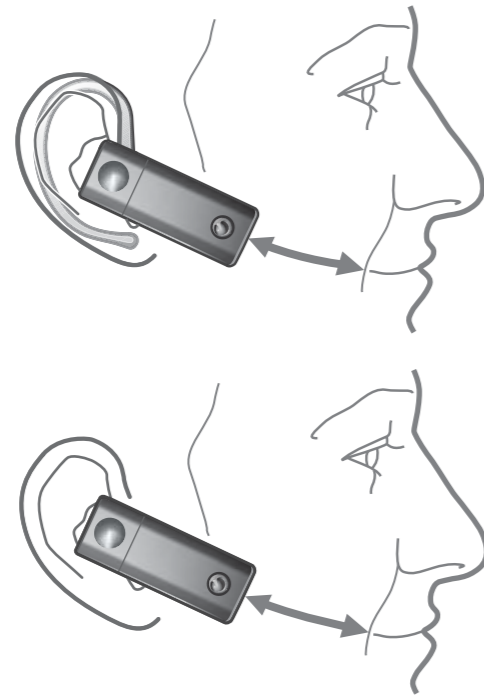 

5

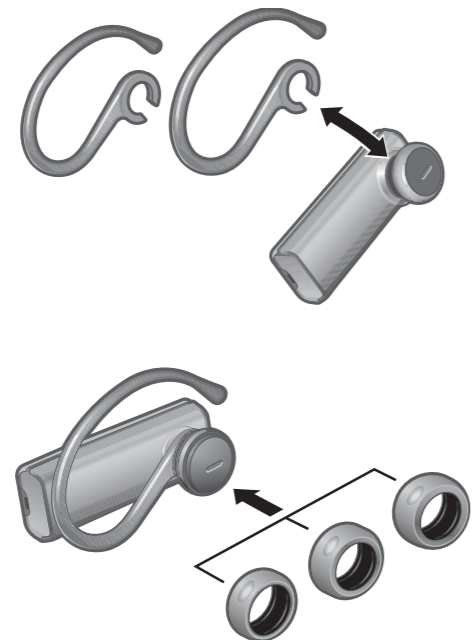 

6

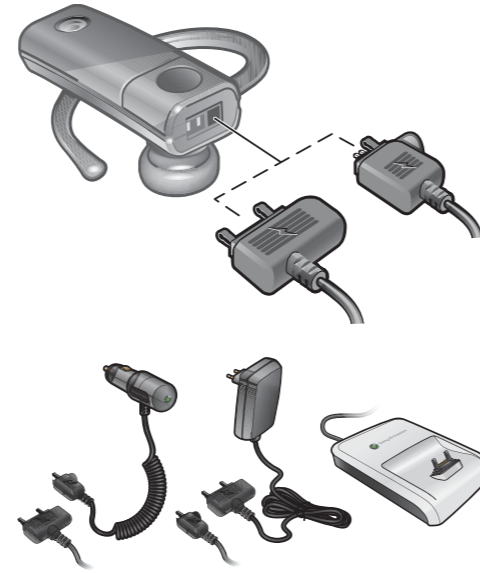 

Normal charging: about 2 hours
Normal charging: about 2 hours

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Any change or modification not expressly approved by Sony Ericsson may void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Statement

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Declaration of conformity for VH310

We, Sony Ericsson Mobile Communications AB of Nya Vattenornet SE-221 88 Lund, Sweden declare under our sole responsibility that our product Sony Ericsson type DDA-0002024 and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards EN 300 328:V1.7.1, EN 301 489-7:V1.3.1, EN 301 489-17:V1.3.2 and EN 60950-1:2006 following the provisions of Radio Equipment and Telecommunication Equipment directive 1999/5/EC. Lund, May 2009

 **CE 0682**

Jacob Sten, Head of Product Business Unit Accessories
We fulfil the R&TTE Directive.
We fulfil the R&TTE Directive.
We fulfil the R&TTE Directive.
We fulfil the R&TTE Directive.

For product support go to www.sonyericsson.com/support

English

The Bluetooth™ Handsfree VH310 can be connected to devices with Bluetooth wireless technology that supports the handsfree or headset profile. This User guide focuses on use with a Sony Ericsson mobile phone.

Charging the headset

Before using the VH310 for the first time, you need to charge it with the supplied charger or your phone charger, see figure 6. For compatible chargers, see figure 6.

Charging status

- Red light indicates charging (not ready),
- Green light indicates completed charging (ready).

Turning on and off the headset

To turn on the headset

- Press and hold down the action key (see figure 1) until the indicator light shows a steady green light. After 3 seconds, the light turns off and the headset is on.

To turn off the headset

- Press and hold down the action key until the indicator light shows a steady green or red light. If the light is red, the headset needs charging). After 2 seconds, the light turns off and the headset is off.

Pairing the headset

Before you can use the headset it has to be paired once with your phone.

To pair the headset with your phone

1. Make sure the headset is turned off.
2. Turn on the Bluetooth function in the phone. For instructions, see the phone User guide.
3. Place the phone within 20 cm (8 inches) of the headset.
4. Press and hold down the action key until the indicator light flashes green and red alternately.
5. The first time you turn on the headset it automatically enters pairing mode.
6. In your phone: Search for and add a new device.
7. The headset passcode is 0000.

To pair the headset with another phone

1. Make sure the headset is turned off.
2. Repeat the instructions for how to pair the headset with your phone.

Putting on the headset

You can either use the headset with or without the ear hook.

To put on the headset

- Slide the ear hook behind your right ear and point the microphone towards your mouth. See figure 3-4.

Calling

When you have paired the headset with your phone, you can make and receive calls as long as the headset is turned on.

Solid objects, walls and a greater distance than 5 metres (16.5 feet) can affect the sound quality negatively.

To make a call

- Use the phone keys to dial the number as normal. The call is automatically activated in the headset.

To end a call

- Press the action key briefly.

To answer a call

- Press the action key briefly.

To reject a call (not possible with a second incoming call)

- Press and hold down the action key until you hear a short beep (after 2 seconds).

To redial the last number

- Double-click the action key.

To answer a second call

- Press the action key briefly. The ongoing call is put on hold.

To switch between two calls

- Press and hold down the action key until you hear a beep.

To adjust the speaker volume

- During a call, press a volume key on the phone.

Calling using voice commands

Voice commands can be useful when you are using the headset and the phone is not close to you. For

more information on voice commands, see your phone User guide.

To make a call using voice commands

- Press the action key briefly, wait for a beep and say your command.

Note: Make sure voice commands are enabled and recorded in your phone before you use them.

Transferring sound

To transfer sound from the phone to the headset

- During a call, press the action key briefly. The sound is transferred to the headset.

To transfer sound from the headset to the phone

- See the phone User guide.

Battery

A new, or infrequently used, battery could have reduced capacity. It may need to be recharged a number of times.

When the battery needs charging, the indicator light flashes red and you hear a low beep. If you do not charge the headset, it automatically turns off.

To check the battery status

- Press the action key briefly:
 - One red flash - the battery needs charging soon.
 - One green flash - the battery is half full or fully charged.

Resetting the headset

To reset the headset

1. Connect briefly to a charger
2. Press and hold down the action key until the indicator light flashes red and green alternately.
3. Pair the headset.

Bluetooth™ Headset VH310



User guide
User guide
User guide
User guide

Sony Ericsson VH310
This User guide is published by Sony Ericsson Mobile Communications AB, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide. All rights reserved.

©Sony Ericsson Mobile Communications AB, 2009

Publication number: 1223-5615.1

 
Some of the services in this User guide are not supported by all networks. This also applies to the GSM International Emergency Number 112. Contact your network operator or service provider if you are in doubt whether you can use a particular service.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Ericsson is under license. Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.


For product support go to www.sonyericsson.com/support

Draft for Sony Ericsson Internal Use Only


2

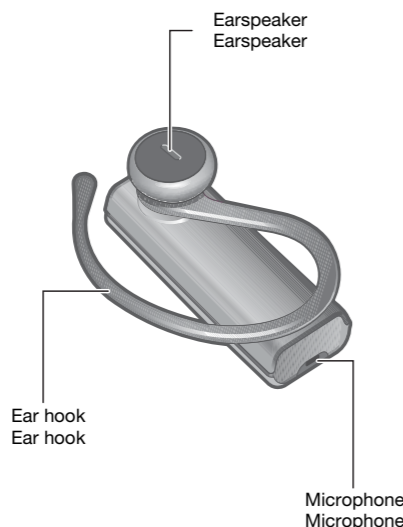


1

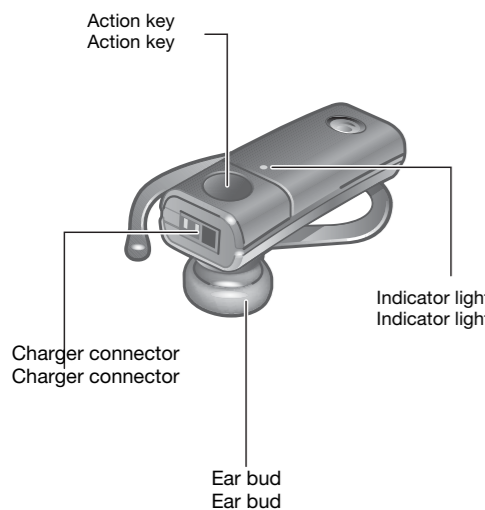 


3

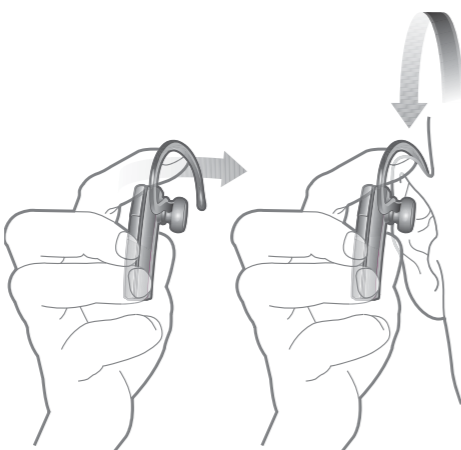 


4

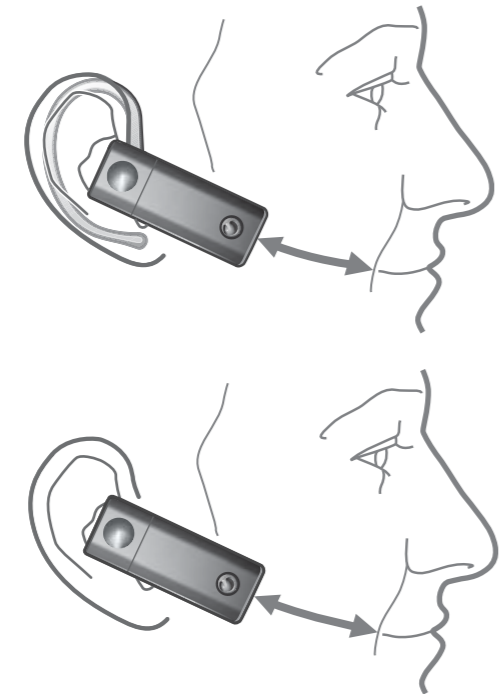 

5

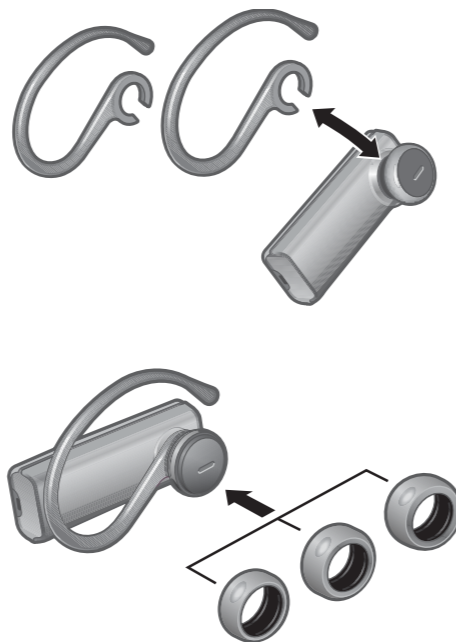 

6

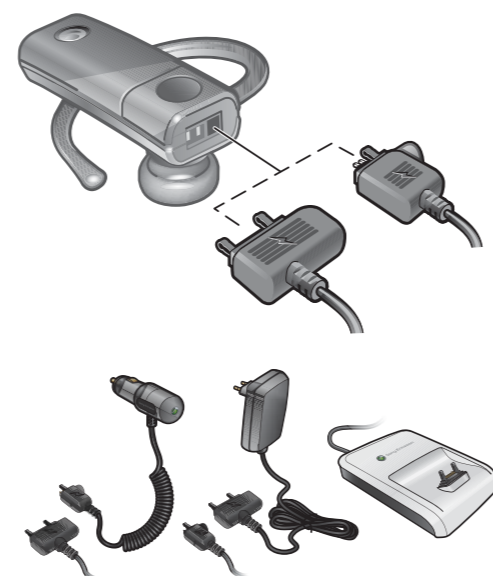 

Normal charging: about 2 hours
Normal charging: about 2 hours

Language 3

The Bluetooth™ Handsfree VH310 can be connected to devices with Bluetooth wireless technology that supports the handsfree or headset profile. This User guide focuses on use with a Sony Ericsson mobile phone.

Charging the headset

Before using the VH310 for the first time, you need to charge it with the supplied charger or your phone charger, see figure 6. For compatible chargers, see figure 6.

Charging status

- Red light indicates charging (not ready).
- Green light indicates completed charging (ready).

Turning on and off the headset

To turn on the headset

- Press and hold down the action key (see figure 1) until the indicator light shows a steady green light. After 3 seconds, the light turns off and the headset is on.

To turn off the headset

- Press and hold down the action key until the indicator light shows a steady green or red light. If the light is red, the headset needs charging). After 2 seconds, the light turns off and the headset is off.

Pairing the headset

Before you can use the headset it has to be paired once with your phone.

To pair the headset with your phone

1. Make sure the headset is turned off.
2. Turn on the Bluetooth function in the phone. For instructions, see the phone User guide.
3. Place the phone within 20 cm (8 inches) of the headset.
4. Press and hold down the action key until the indicator light flashes green and red alternately.
5. The first time you turn on the headset it automatically enters pairing mode.
6. In your phone: Search for and add a new device.
7. The headset passcode is 0000.

To pair the headset with another phone

1. Turn off the headset if it is turned on.
2. Repeat the instructions for how to pair the headset with your phone.

Putting on the headset

You can either use the headset with or without the ear hook.

To put on the headset

- Slide the ear hook behind your right ear and point the microphone towards your mouth. See figure 3-4.

Calling

When you have paired the headset with your phone, you can make and receive calls as long as the headset is turned on.

Solid objects, walls and a greater distance than 5 metres (16.5 feet) can affect the sound quality negatively.

To make a call

- Use the phone keys to dial the number as normal. The call is automatically activated in the headset.

To end a call

- Press the action key briefly.

To answer a call

- Press the action key briefly.

To reject a call (not possible with a second incoming call)

- Press and hold down the action key until you hear a short beep (after 2 seconds).

To redial the last number

- Double-click the action key.

To answer a second call

- Press the action key briefly. The ongoing call is put on hold.

To switch between two calls

- Press and hold down the action key until you hear a beep.

To adjust the speaker volume

- During a call, press a volume key on the phone.

Calling using voice commands

Voice commands can be useful when you are using the headset and the phone is not close to you. For

more information on voice commands, see your phone User guide.

To make a call using voice commands

- Press the action key briefly, wait for a beep and say your command.

Note: Make sure voice commands are enabled and recorded in your phone before you use them.

Transferring sound

To transfer sound from the phone to the headset

- During a call, press the action key briefly. The sound is transferred to the headset.

To transfer sound from the headset to the phone

- See the phone User guide.

Battery

A new, or infrequently used, battery could have reduced capacity. It may need to be recharged a number of times.

When the battery needs charging, the indicator light flashes red and you hear a low beep. If you do not charge the headset, it automatically turns off.

To check the battery status

- Press the action key briefly:
 - One red flash - the battery needs charging soon.
 - One green flash - the battery is half full or fully charged.

Resetting the headset

To reset the headset

1. Connect briefly to a charger
2. Press and hold down the action key until the indicator light flashes red and green alternately.
3. Pair the headset.

Language 4