

Bluetooth™ Music
Receiver MBR-100
English
Language
Language
Language

Sony Ericsson

Bluetooth™ Music Receiver MBR-100



2

User Guide
User Guide
User Guide
User Guide

FCC statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Sony Ericsson MBR-100

This manual is published by Sony Ericsson Mobile Communications AB, without any warranty. Improvements and changes to this manual necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this manual. All rights reserved.

©Sony Ericsson Mobile Communications AB, 2007

Publication number: LZT 108 9089/x P3A

Some of the services in this manual are not supported by all networks. This also applies to the GSM International Emergency Number 112. Contact your network operator or service provider if you are in doubt whether you can use a particular service or not.

Bluetooth is a trademark or registered trademark of Bluetooth SIG Inc.



This product is leadfree and halogenfree.

Introduction
Introduction
Introduction
Introduction

3

Bluetooth™ Music Receiver MBR-100

With the Bluetooth™ Music Receiver MBR-100 you can enjoy wireless stereo audio from a phone or other device to your own home stereo equipment. Your phone or other device should support the following Bluetooth profiles:

- Bluetooth Advanced Audio Distribution.
- Bluetooth Audio/Video Remote Control.

Bluetooth™ Music Receiver MBR-100

With the Bluetooth™ Music Receiver MBR-100 you can enjoy wireless stereo audio from a phone or other device to your own home stereo equipment. Your phone or other device should support the following Bluetooth profiles:

- Bluetooth Advanced Audio Distribution.
- Bluetooth Audio/Video Remote Control.

Bluetooth™ Music Receiver MBR-100

With the Bluetooth™ Music Receiver MBR-100 you can enjoy wireless stereo audio from a phone or other device to your own home stereo equipment. Your phone or other device should support the following Bluetooth profiles:

- Bluetooth Advanced Audio Distribution.
- Bluetooth Audio/Video Remote Control.


Bluetooth™ Music Receiver MBR-100

With the Bluetooth™ Music Receiver MBR-100 you can enjoy wireless stereo audio from a phone or other device

to your own home stereo equipment. Your phone or other device should support the following Bluetooth profiles:

- Bluetooth Advanced Audio Distribution.
- Bluetooth Audio/Video Remote Control.

Overview
Overview
Overview
Overview

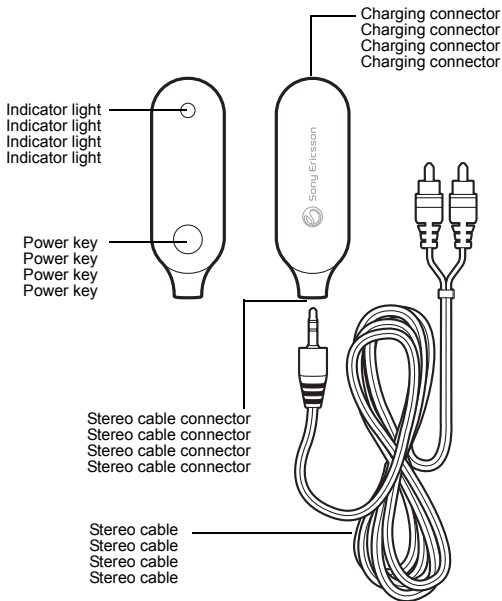

User guide symbols
User guide symbols
User guide symbols
User guide symbols

6



Press and release
 Press and release
 Press and release
 Press and release



Press and hold
 Press and hold
 Press and hold
 Press and hold



Steady red light
 Steady red light
 Steady red light
 Steady red light



Steady green light
 Steady green light
 Steady green light
 Steady green light



 
Red flash
 Red flash
 Red flash
 Red flash



Green flash
 Green flash
 Green flash
 Green flash

Charging
Charging
Charging
Charging

7

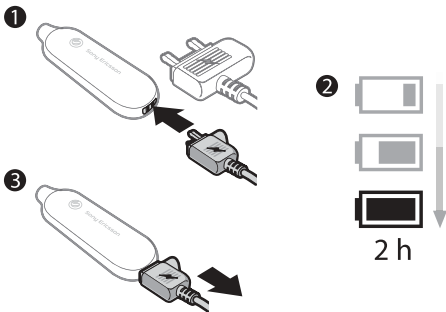

First time use: Charge approximately 8 hours.
First time use: Charge approximately 8 hours.
First time use: Charge approximately 8 hours.
First time use: Charge approximately 8 hours.



Charging
Charging
Charging
Charging



Fully charged
Fully charged
Fully charged
Fully charged



Battery needs charging
Battery needs charging
Battery needs charging
Battery needs charging

Adding the music receiver to your phone
Adding the music receiver to your phone
Adding the music receiver to your phone
Adding the music receiver to your phone

8



Before you can use your Bluetooth music receiver with your phone it has to be added once to your phone. Follow the instructions from the phone User guide on how to turn on Bluetooth in your phone.

1. Turn on Bluetooth in your phone.
2. Turn on Bluetooth visibility in your phone. This makes your phone visible to other Bluetooth devices.
3. Prepare the music receiver according to page 13.

4. Prepare your phone according to the phone User guide on how to add a Bluetooth device. Enter the music receiver passcode (0000).

After you have added the music receiver to your phone, it will automatically connect to your phone as soon as it is turned on and within range.



The music receiver flashes green when successfully added
The music receiver flashes green when successfully added
The music receiver flashes green when successfully added
The music receiver flashes green when successfully added

Before you can use your Bluetooth music receiver with your phone it has to be added once to your phone. Follow the instructions from the phone User guide on how to turn on Bluetooth in your phone.

1. Turn on Bluetooth in your phone.
2. Turn on Bluetooth visibility in your phone. This makes your phone visible to other Bluetooth devices.
3. Prepare the music receiver according to page 13.

4. Prepare your phone according to the phone User guide on how to add a Bluetooth device. Enter the music receiver passcode (0000).

After you have added the music receiver to your phone, it will automatically connect to your phone as soon as it is turned on and within range.



The music receiver flashes green when successfully added
The music receiver flashes green when successfully added
The music receiver flashes green when successfully added
The music receiver flashes green when successfully added

Before you can use your Bluetooth music receiver with your phone it has to be added once to your phone. Follow the instructions from the phone User guide on how to turn on Bluetooth in your phone.

1. Turn on Bluetooth in your phone.
2. Turn on Bluetooth visibility in your phone. This makes your phone visible to other Bluetooth devices.
3. Prepare the music receiver according to page 13.

4. Prepare your phone according to the phone User guide on how to add a Bluetooth device. Enter the music receiver passcode (0000).

After you have added the music receiver to your phone, it will automatically connect to your phone as soon as it is turned on and within range.



The music receiver flashes green when successfully added
The music receiver flashes green when successfully added
The music receiver flashes green when successfully added
The music receiver flashes green when successfully added

Before you can use your Bluetooth music receiver with your phone it has to be added once to your phone. Follow the instructions from the phone User guide on how to turn on Bluetooth in your phone.

1. Turn on Bluetooth in your phone.
2. Turn on Bluetooth visibility in your phone. This makes your phone visible to other Bluetooth devices.
3. Prepare the music receiver according to page 13.

4. Prepare your phone according to the phone User 12
guide on how to add a Bluetooth device. Enter
the music receiver passcode (0000).

After you have added the music receiver to your phone, it
will automatically connect to your phone as soon as it is
turned on and within range.



The music receiver flashes green when successfully added
The music receiver flashes green when successfully added
The music receiver flashes green when successfully added
The music receiver flashes green when successfully added

 
Preparing the music receiver
Preparing the music receiver
Preparing the music receiver
Preparing the music receiver

Make sure the music receiver is turned off (see p.17).

Make sure the music receiver is turned off (see p.17).

Make sure the music receiver is turned off (see p.17).

Make sure the music receiver is turned off (see p.17).

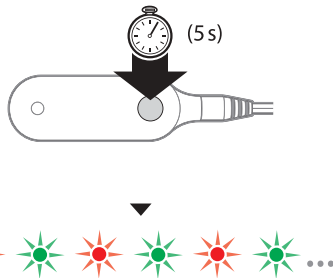

Make sure the indicator light flashes red/green

Make sure the indicator light flashes red/green

Make sure the indicator light flashes red/green

Make sure the indicator light flashes red/green


Range
Range
Range
Range

Note: *Objects, walls and a greater distance than 5 metres can affect the sound.*

Note: *Objects, walls and a greater distance than 5 metres can affect the sound.*

Note: *Objects, walls and a greater distance than 5 metres can affect the sound.*

Note: *Objects, walls and a greater distance than 5 metres can affect the sound.*

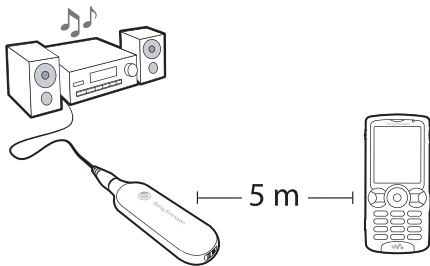


Connecting to music equipment
Connecting to music equipment
Connecting to music equipment
Connecting to music equipment

15




 Turning the music receiver on
Turning the music receiver on
Turning the music receiver on
Turning the music receiver on



Indicator light when the music receiver is on
 Indicator light when the music receiver is on
 Indicator light when the music receiver is on
 Indicator light when the music receiver is on

 Turning the music receiver off
 Turning the music receiver off
 Turning the music receiver off
 Turning the music receiver off

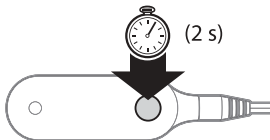

The indicator light is turned off
 The indicator light is turned off
 The indicator light is turned off
 The indicator light is turned off

Listening to music
Listening to music
Listening to music
Listening to music


18

Start the media player in your phone to listen to music. If needed, follow the instructions from the phone User guide to select the music receiver.

Start the media player in your phone to listen to music. If needed, follow the instructions from the phone User guide to select the music receiver.

Start the media player in your phone to listen to music. If needed, follow the instructions from the phone User guide to select the music receiver.

Start the media player in your phone to listen to music. If needed, follow the instructions from the phone User guide to select the music receiver.

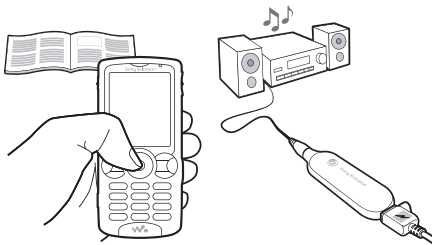

Reconnecting (listening to music)

Reconnecting (listening to music)

Reconnecting (listening to music)


Reconnecting (listening to music)

Press to reconnect if no sound is received.

Press to reconnect if no sound is received.

Press to reconnect if no sound is received.

Press to reconnect if no sound is received.

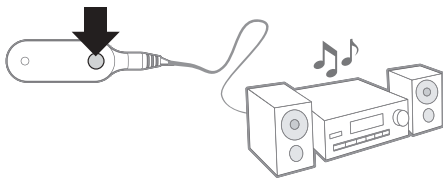


Making or receiving calls**Making or receiving calls****Making or receiving calls****Making or receiving calls**

Use your phone or a headset for call functions.

Use your phone or a headset for call functions.

Use your phone or a headset for call functions.

Use your phone or a headset for call functions.

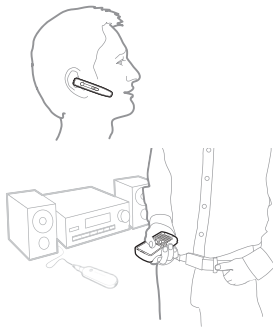

When you make a call or receive a call, the music automatically pauses.

When you make a call or receive a call, the music automatically pauses.

When you make a call or receive a call, the music automatically pauses.

When you make a call or receive a call, the music automatically pauses.

Adjusting volume**Adjusting volume****Adjusting volume****Adjusting volume**

Adjust the volume on your music equipment, or follow the instructions from the phone User guide to adjust the volume with your phone.

Note: *Your phone or device must support the Bluetooth Audio/Video Remote Control profile.*

Adjust the volume on your music equipment, or follow the instructions from the phone User guide to adjust the volume with your phone.

Note: *Your phone or device must support the Bluetooth Audio/Video Remote Control profile.*

Adjust the volume on your music equipment, or follow the instructions from the phone User guide to adjust the volume with your phone.

Note: *Your phone or device must support the Bluetooth Audio/Video Remote Control profile.*

Adjust the volume on your music equipment, or follow the instructions from the phone User guide to adjust the volume with your phone.

Note: *Your phone or device must support the Bluetooth Audio/Video Remote Control profile.*

Master reset
Master reset
Master reset
Master reset


22

Make sure you have prepared the music receiver according to page 13.

Make sure you have prepared the music receiver according to page 13.

Make sure you have prepared the music receiver according to page 13.

Make sure you have prepared the music receiver according to page 13.

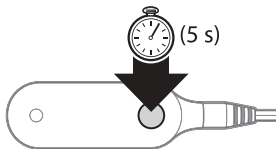

Troubleshooting
Troubleshooting
Troubleshooting
Troubleshooting

23

No connection between music receiver and phone

Make sure the music receiver is charged and within range of your phone. Check or redo the Bluetooth settings in the phone. Try to pair the music receiver again (see page 8).

For more information on Bluetooth and pairing, go to www.sonyericsson.com/learnabout.

The music receiver is automatically switched off

- The battery is too low. The indicator light on the music receiver flashes red and you hear a low beep.
- The music receiver switches off if you do not add it to your phone within 10 minutes.

The music receiver does not connect to my music source

Make sure your device is available, and supports Bluetooth Advanced Audio Distribution profile.

The sound is interrupted

Make sure the music receiver is charged and within range of your phone. Try to reconnect to the phone (see page 19).

The remote control functions do not work

Make sure your device supports Bluetooth Audio/Video Remote Control profile.

Unexpected behaviour

24

Reset the music receiver (see page 22).

Battery capacity

A battery that has been infrequently used, or a new one, could have reduced capacity. You may need to recharge it a number of times.

No connection between music receiver and phone

Make sure the music receiver is charged and within range of your phone. Check or redo the Bluetooth settings in the phone. Try to pair the music receiver again (see page 8).

For more information on Bluetooth and pairing, go to www.sonyericsson.com/learnabout.

The music receiver is automatically switched off

- The battery is too low. The indicator light on the music receiver flashes red and you hear a low beep.
- The music receiver switches off if you do not add it to your phone within 10 minutes.

The music receiver does not connect to my music source

Make sure your device is available, and supports Bluetooth Advanced Audio Distribution profile.

The sound is interrupted

Make sure the music receiver is charged and within range of your phone. Try to reconnect to the phone (see page 19).

The remote control functions do not work

Make sure your device supports Bluetooth Audio/Video Remote Control profile.

Unexpected behaviour

Reset the music receiver (see page 22).

Battery capacity

A battery that has been infrequently used, or a new one, could have reduced capacity. You may need to recharge it a number of times.

No connection between music receiver and phone

Make sure the music receiver is charged and within range of your phone. Check or redo the Bluetooth settings in the phone. Try to pair the music receiver again (see page 8).

For more information on Bluetooth and pairing, go to www.sonyericsson.com/learnabout.

The music receiver is automatically switched off

- The battery is too low. The indicator light on the music receiver flashes red and you hear a low beep.
- The music receiver switches off if you do not add it to your phone within 10 minutes.

The music receiver does not connect to my music source

Make sure your device is available, and supports Bluetooth Advanced Audio Distribution profile.

The sound is interrupted

Make sure the music receiver is charged and within range of your phone. Try to reconnect to the phone (see page 19).

The remote control functions do not work

Make sure your device supports Bluetooth Audio/Video Remote Control profile.

Unexpected behaviour

Reset the music receiver (see page 22).

Battery capacity

A battery that has been infrequently used, or a new one, could have reduced capacity. You may need to recharge it a number of times.

No connection between music receiver and phone

Make sure the music receiver is charged and within range of your phone. Check or redo the Bluetooth settings in the phone. Try to pair the music receiver again (see page 8).

For more information on Bluetooth and pairing, go to www.sonyericsson.com/learnabout.

The music receiver is automatically switched off

- The battery is too low. The indicator light on the music receiver flashes red and you hear a low beep.
- The music receiver switches off if you do not add it to your phone within 10 minutes.

The music receiver does not connect to my music source 27

Make sure your device is available, and supports Bluetooth Advanced Audio Distribution profile.

The sound is interrupted

Make sure the music receiver is charged and within range of your phone. Try to reconnect to the phone (see page 19).

The remote control functions do not work

 
 
 
 
 
Make sure your device supports Bluetooth Audio/Video Remote Control profile.

Unexpected behaviour

Reset the music receiver (see page 22).

Battery capacity

A battery that has been infrequently used, or a new one, could have reduced capacity. You may need to recharge it a number of times.



Declaration of conformity

We, **Sony Ericsson Mobile Communications AB** of
Nya Vattentorget
SE-221 88 Lund, Sweden

declare under our sole responsibility that our product

Sony Ericsson type DGA-0002002

and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards EN 300 328, EN 301 489-17 and EN 60950 following the provisions of Radio Equipment and Telecommunication Terminal Equipment directive **1999/5/EC** with requirements covering EMC directive **89/336/EEC** and Low Voltage directive **73/23/EEC**.

Lund, February 2007



CE 0682

Jacob Sten, Head of Product Business Unit Accessories

We fulfill the R&TTE Directive.

We fulfill the R&TTE Directive.

We fulfill the R&TTE Directive.

We fulfill the R&TTE Directive.

정보통신기기인증에 대한 사항



기기의 명칭(모델명) : **MBR-100**
인증번호 : **SOK-MBR-100**
인증받은자의 상호 : 소니코리아(주)
제조년월 : 별도표기
제조사/제조국: Sony Ericsson Mobile Communications AB/

당해 무선설비는 전파혼신 가능성이 있으므로
인명안전과 관련된 서비스를 할 수 없습니다.

www.sonyericsson.com



Sony Ericsson

Sony Ericsson Mobile Communications AB
SE-221 88 Lund, Sweden

LZT 108 9089/x P3A

Printed in XXXX