 


Digital Photo Printer

Read This First

 
Welcome to the Sony DPP-FP85/FP95 Digital Photo Printer.

This leaflet explains preparations and basic printing procedures. To enjoy a variety of printing options or customize your printer, please read the operating instructions also supplied.

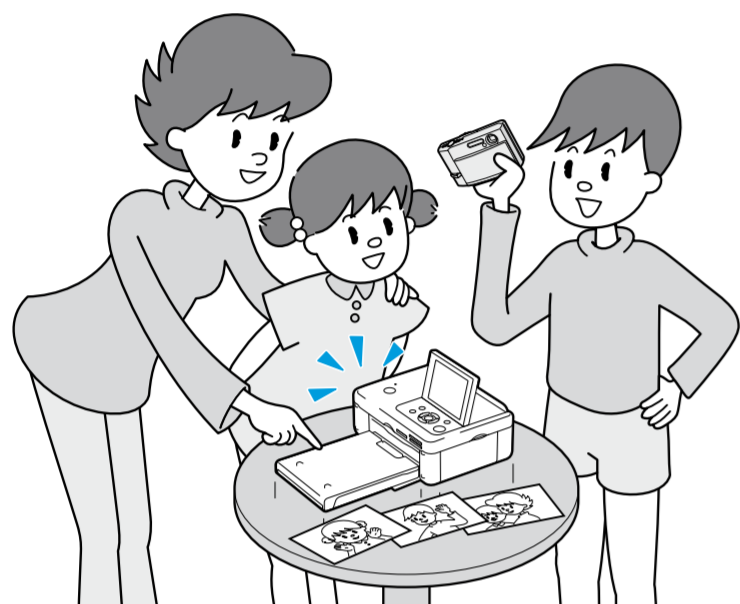

1 Insert the print paper into the paper tray.


1 Open the paper tray cover.

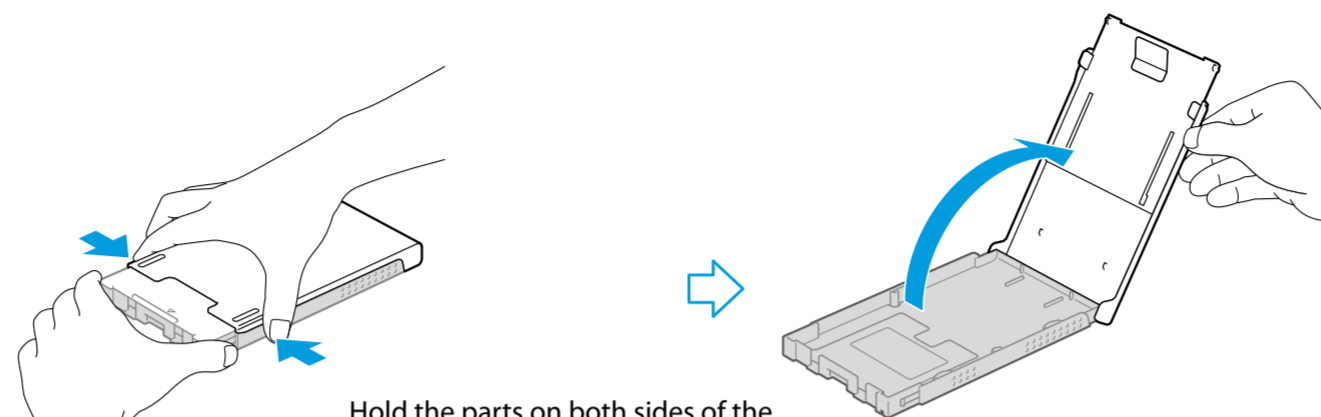

Hold the parts on both sides of the paper tray cover (shown with arrows) and open the paper tray cover.

2 Set the print paper into the paper tray.

 - ① Insert the print paper into the paper tray with the printing surface (the side with no imprint) facing up.
- ② Remove the protective sheet.

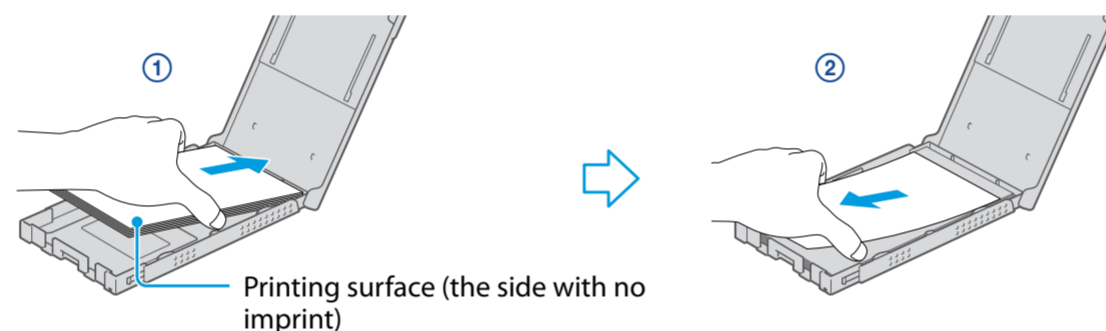


Printing surface (the side with no imprint)




You cannot print on a protective sheet. (Doing so may cause a malfunction.)

Notes

 
- You can use Sony optional color print packs designed for this printer, only. You cannot use the other print packs.
- For color print packs you can use, refer to "About print packs" also supplied.
- You can set up to 20 sheets of print paper.

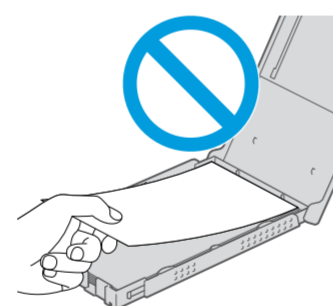

Do not touch the printing surface!

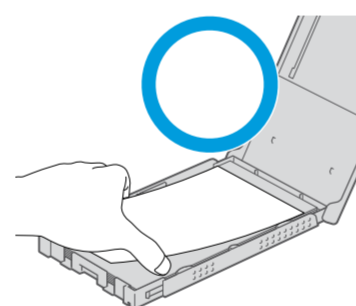 


 Do not cut off from perforated portions!

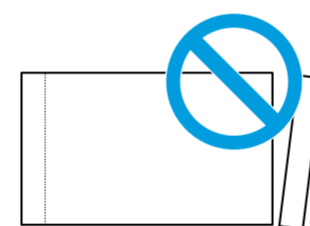


Do not bend!

 3 Close the paper tray cover.

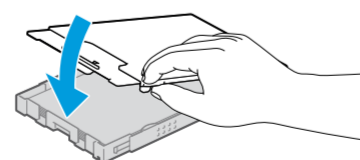


If you cannot close the tray cover

 Stretch out the slide cover, and then close the tray cover.

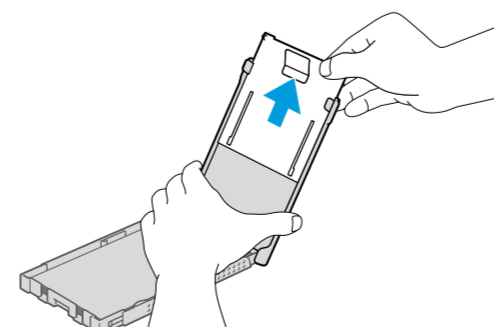


2 Insert the paper tray and ink ribbon into the printer.

 
1 Open the doors.

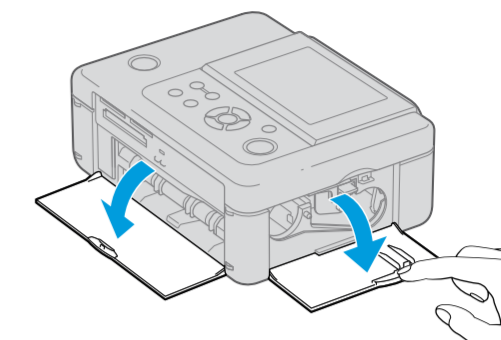

 2 Open the slide cover of the paper tray.

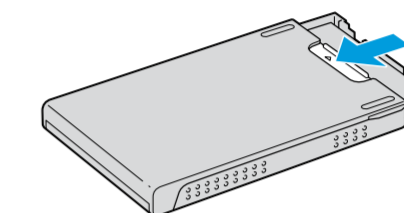


 3 Insert the paper tray and ink ribbon until each clicks into place.

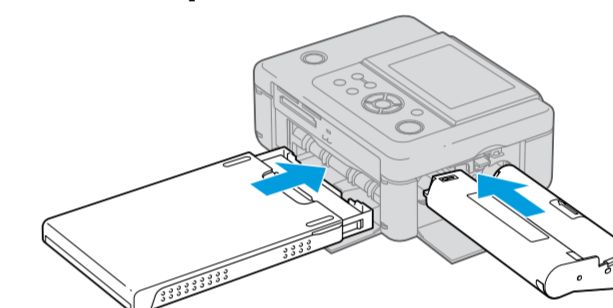

Removing the ink ribbon

 
Open the ink ribbon compartment door, push up the blue eject lever, and remove the used ink ribbon.

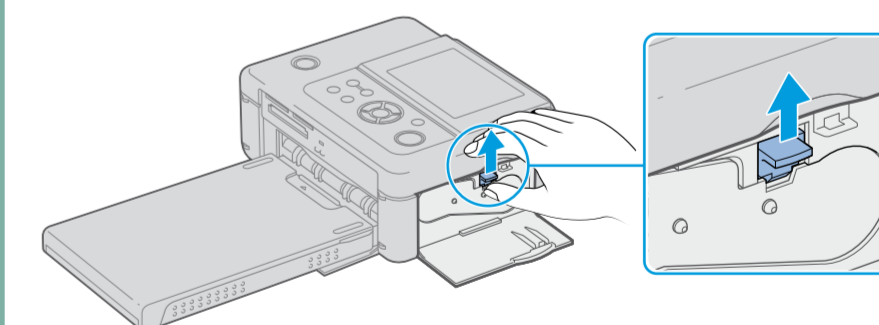


Checking the contents of the package

(Illustrations used in this leaflet are for the DPP-FP95. The button locations and names for the DPP-FP85 are identical.)

 
Printer (1)

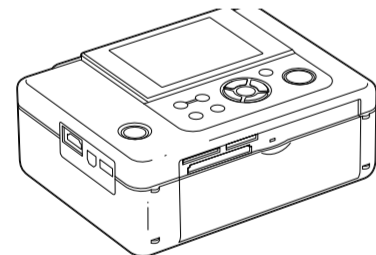

 
Cleaning cartridge (1)/
Cleaning sheet (1)
(Used for cleaning inside the printer.)

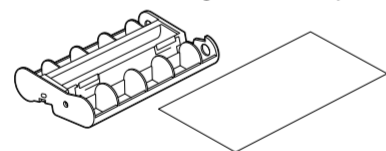

Paper tray (1)

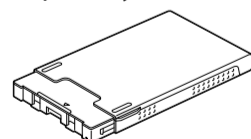 


CD-ROM (1)

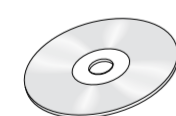 


Operating Instructions (1)



 AC adaptor (1)

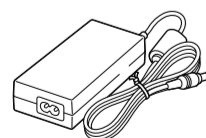


About print packs (1)

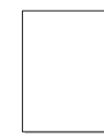 

Read This First (this leaflet) (1)



 AC power cord (1)

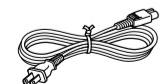

Warranty (1)
(In some regions, the warranty is not supplied.)
Sony End User Software License Agreement (1)

Note

The plug shape and specifications of the AC power cord differ depending on the region in which you purchased the printer.

When storing the print paper in the paper tray

 
Remove the paper tray from the printer and shut the slide cover.

3 Connect to the AC power source.

1 Insert the plug of the AC adaptor into the DC IN 24 V jack on the back of the printer.


2 Connect one plug of the AC power cord to the connector of the AC adaptor and the other plug to the wall outlet.

Install the printer in a location with 10 cm (13/32 inch) or more of space at the rear.

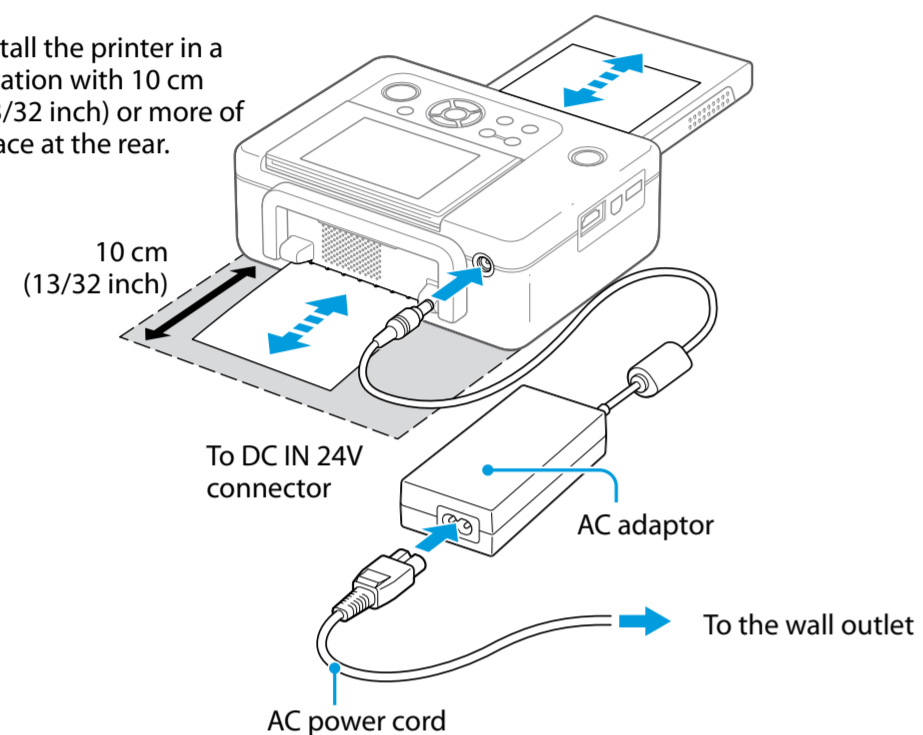

4 Insert a memory card into the slot.

 Insert the memory card containing an image for printing into the appropriate slot with its terminal side facing toward the slot.

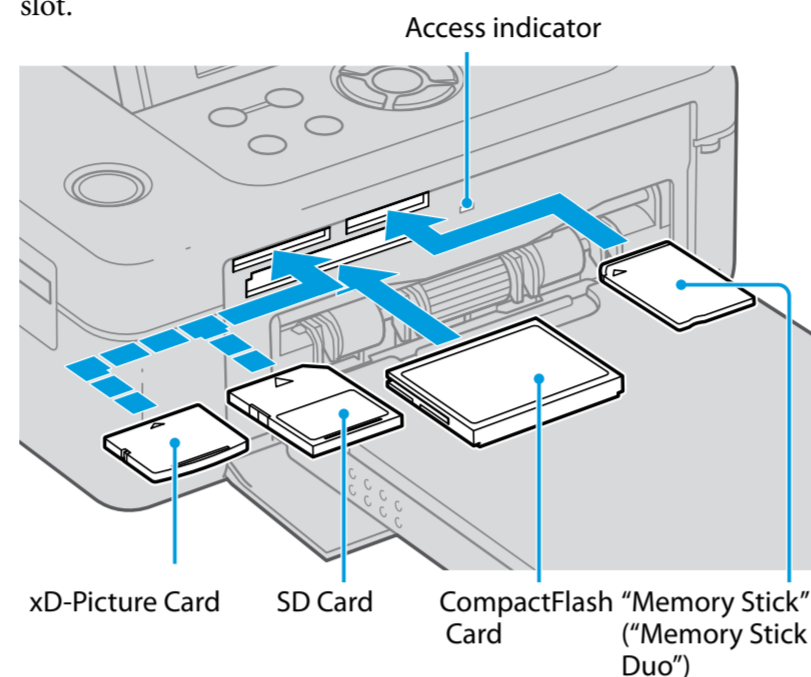

Notes


- Insert a memory card with its label side facing up.
- When carrying your printer, make sure to remove the memory card, AC adaptor, cables or cords, and paper tray. Otherwise, the printer may be damaged.

5 Turn on the printer.

An image stored on the memory card is displayed.

6 Select an image for printing.

 Press $\triangleleft/\triangleright$ button repeatedly until the image that you want to print appears.

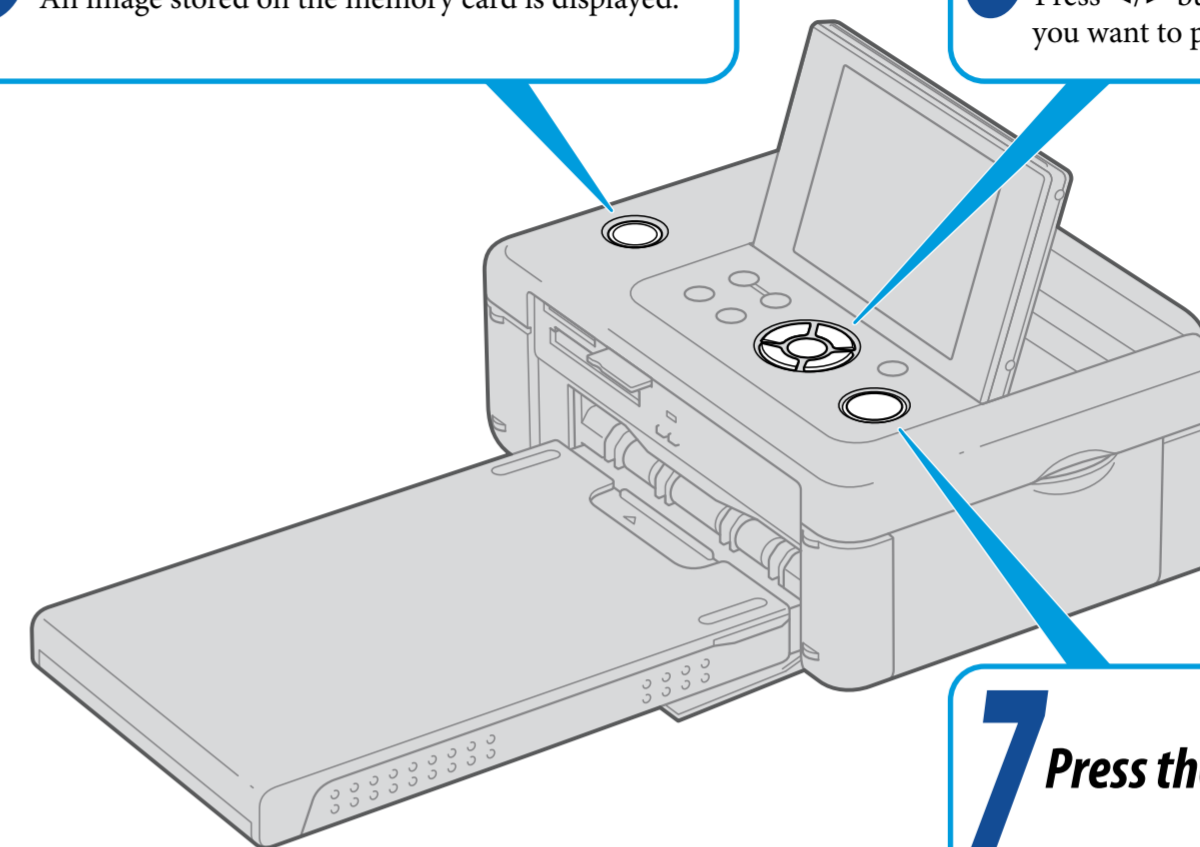


7 Press the PRINT button.

What you can do with the digital photo printer (See the Operating Instruction for the operations below.)

You can make a variety of prints as listed below:

Direct Printing

 
You can print directly from a memory card or an external device such as a photo storage device.

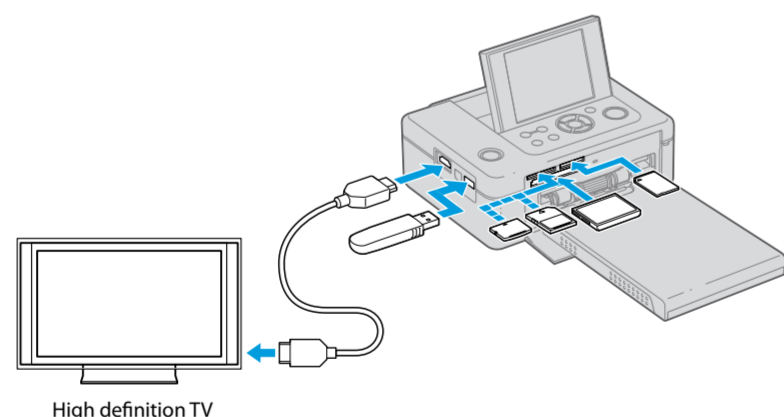


- Calendar print** → Page 27 in the Operating Instructions
- Layout print** → Page 32 in the Operating Instructions
- Adding a frame** → Page 31 in the Operating Instructions
- ID Photo print** → Page 32 in the Operating Instructions

- Superimposed print** → Page 29 in the Operating Instructions
- Scrapbook print** → Page 26 in the Operating Instructions
- Batch printing** (Index Print/DPOF Print/Print All) → Page 33 in the Operating Instructions
- Adding a special filter** (Cross Filter/Partial Color/Sepia/Monochrome/Painting/Single Color/Fish-eye) → Page 22 in the Operating Instructions

 
Printing from a PictBridge or other camera

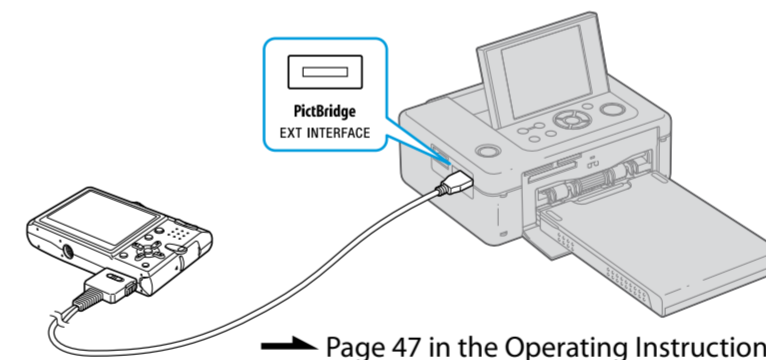

Printing via Bluetooth communication

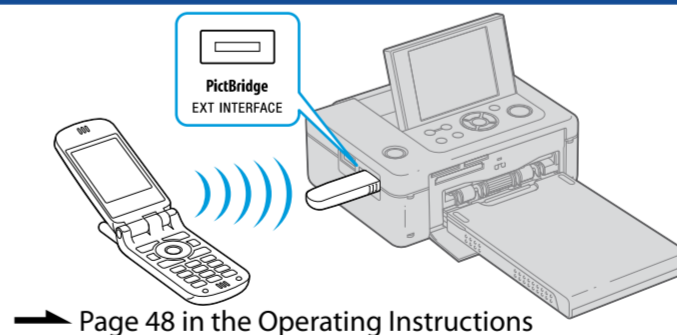 


Printing from a PC

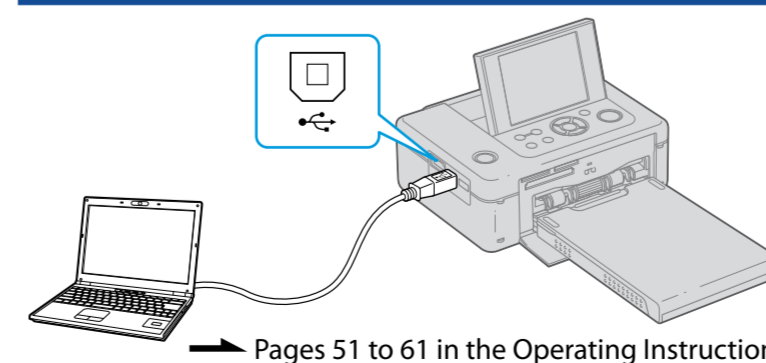 

The printing process

 The printer employs a dye sublimation printing system. In this printing system, the thermal print head heats up as it passes over the yellow, magenta, and then cyan layer of the ink ribbon, causing the dyes to vaporize and permeate the surface of the print paper. Then the final cycle lays a laminate layer as an overcoating to protect the printed surface:

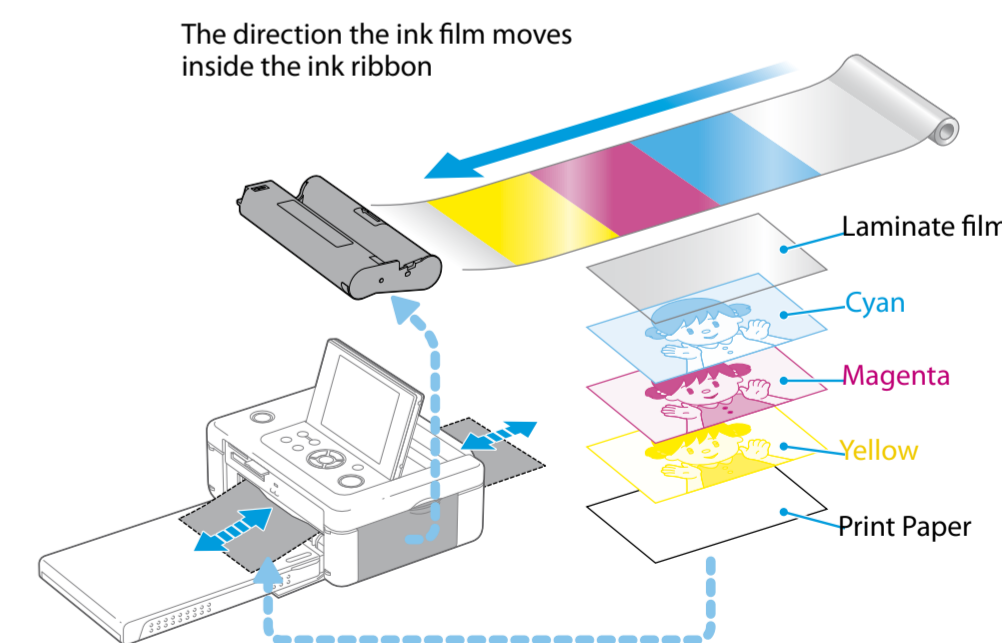

Notes

- The ink ribbon cannot be reused. After you print 40 sheets of print paper, the ink ribbon runs out. You cannot reuse it by rewinding.
- Print paper emerges from the back and front paper outlets each time a color is printed. Please wait until printing is completed and the print paper is automatically ejected onto the paper tray.