
 
 





Navigation



There are several ways to navigate menus and select items in your phone. You can use the 5-way navigation key, back button, stylus, keyboard navigation keys, touch options or your fingertips.

5-way navigation

 The navigation key consists of a ring and a center key. The ring is used for going up  and down , left  and right . The center key  is used for selection.

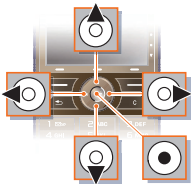

Back key

  You can press  to return to the previous screen or menu. You can press and hold down  to return to Standby.

Stylus

Use the stylus to select items on the screen and to navigate menus or to pan multimedia pictures.

Finding the applications



Standby

The Standby application is displayed when you turn on your phone.




To change view in Standby

- 1 Select **Main menu > Settings > Display > Standby application.**
- 2 Select:
 - **Business** to show the Today view.
 - **None** to show an enlarged clock. No panels or shortcuts will be shown.
 - **Default** to show the panels.

Panels

Using panels you get quick access to applications and tasks. By default four panels are always shown. These four are **My shortcuts**, **Favourite contacts**, **Calendar** and **New messages**. There are several other panels you can add and remove. For more information about panels, see the *Web guide at www.sonyericsson.com/support*.

To use panels

- Use  and  to scroll through the panels. Press  to select a panel.


To add additional panels

- 1 From Standby select **More >**
Settings.
- 2 Mark the panels you want and select **Save**.

Main menu

All applications in your phone can be found in Main menu.

To access Main menu

- From Standby select  or **Menu** depending on what Standby application is active.

To change the view of Main menu


- 1 From Standby select **Main menu**.
- 2 Select **More**.
- 3 Select an option.

Using the applications

To start an application

- Select the application.

To close an application

- Press and hold down .

To switch to another application


- Switch to another application using Task manager.

For more information see *Task manager* on page 16.


Task manager

Task manager helps you switch between applications. Leaving an application via Task manager rather than closing it, lets you return to the the application in the state that you left it. This is useful, for example, when cutting and pasting text from one application to another.

 
To switch to another application

- 1 Select  in the status.
- 2 Scroll to the wanted application and select **Switch**.

To end an application

- 1 Select  in the status.
- 2 Scroll to the wanted application and select **End**.

Connecting accessories

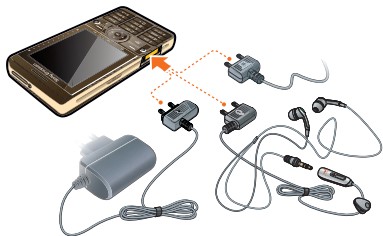

To connect an accessory

- Connect the accessory to the side of your phone.

! *Tilt the plug upwards when you disconnect the accessory.*

Updating software

When an improved software version for your phone is available, you can update the phone using the Sony Ericsson update Service on www.sonyericsson.com/support.

Main menu overview*



Organizer

File manager, Tasks, Notes, Quickoffice™, Time & alarms, Torch, Calculator, Converter and more



Monternet*

Internet browser



Entertainment

Camera, Music applications, TrackID™, RSS feeds, radio, games, and more



Calendar

3.2 MP camera



Messaging

Messaging application



Media

Media application, where you can handle all your media files, such as music, videos, and more



Calls

Call log



Contacts

Your contacts



Settings























Email wizard and various settings

* Some menus are operator-, network-, and subscription-dependent.

Status bar

Status bar icons

You can select an icon to get more information or to start an application. Below is a short description of the most common icons appearing in the status bar.


Icon	Function
	Battery strength
	Bluetooth headset connected
	Bluetooth activated
	Current line selection (Alternative Line Service available on the SIM card)
	All calls diverted
	Email message received
	Flight mode
	Internet connection activated (flashes when data is transferred)
	Keylock activated
	Missed incoming call
	Picture message received
	Muted microphone
	English Predictive text activated
	Chinese Predictive text activated
	Ring volume set to zero
	Signal strength in phone mode
	Silent mode
	Text message received
	Speakerphone activated
	Status bar menu
	Task manager
	Voicemail received

Status bar menu

You can use the status bar menu to quickly access extra settings:

- New call, SMS, MMS and more.
- Connections.
- Volume, time and keylock.

To access the status bar menu

- Select  in the status bar.

Importing contact entries

You can import contact information by:


- Copying contacts stored on your SIM card.
- Transferring contacts from a computer application using the synchronize function.
- Transferring contacts from another phone using Bluetooth™ wireless technology.

Sound

To set the ear speaker volume during a phone call



- Press the volume up and volume down keys.

To set the volume for multimedia, alarm, ringtones and message alerts

- 1 Select  > **Volume**.
- 2 Select the corresponding slider.
- 3 Adjust the volume using the stylus.

To set the phone to silent

- 1 Select  > **Volume**.
- 2 Mark the **Silent mode** check box.

 *From Standby you can press and hold down  to switch silent mode on or off.*

Transfer sound

During an ongoing call or when listening to music, you can transfer the sound to a connected accessory such as a Bluetooth headset.

To transfer sound

 
- 1 Select  > **Volume**.
- 2 Select **More** > **Transfer sound**.

Memory card

The phone has a slot for Memory Stick Micro™ (M2™) memory cards next to the connector. The phone supports up to 8GB memory cards. This memory behaves like a normal disk drive. You can access it as a USB mass storage device from a PC, to transfer files quickly.


To insert the memory card

- 1 Open the battery cover.
- 2 Insert the memory card into the slot.

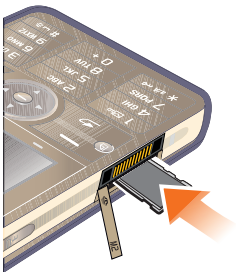

To remove the memory card

 - Press the edge of the memory card and then release it.

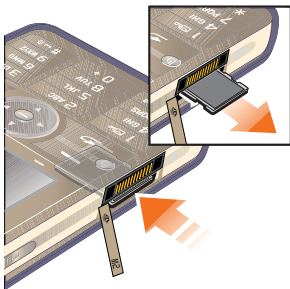

- ! Do not remove the memory card during file transfer.

Notes

You can take notes by entering text or draw sketches, and set reminders for important events.

To create a new note

- 1 Press **Ⓜ** and select **New**.
- 2 Use the toolbar to create your note.
- 3 Select **File** to classify your note.

Notes toolbar icons



Scribble mode selected. Select to switch to text mode



Text mode selected. Select to switch to scribble mode



Use the stylus as an eraser for sketches





Select a background colour



Set a reminder


To edit a note

- 1 Press  and select a note.
- 2 Edit the text by switching to text mode.
- 3 Edit the sketch by switching to scribble mode. Select  to use the stylus as an eraser.


Managing your notes

You can classify your notes, show them in a grid or a list, or synchronize them with a remote server.


To change notes view

- 1 Press  and select **More > Settings**.
- 2 Select an option.

To view different notes folders

- 1 Press  and select **More > View folder**.
- 2 Select an option.

To search for notes

- 1 Press  and select **More > Find**.
- 2 Enter the search phrase and select **Find**.

To synchronize your notes

- Select **More > Notes manager > Synchronize**.
- ! *Only the text part of your notes will be synchronized.*
- ! *You need a remote synchronization account first. For more information, see the Web guide, Synchronizing data remotely.*

Torch

To start the Torch application

- Select **Torch > On**.
- ! *The Torch will be lit until you manually stop from within the application or from Task manager.*

Entering text


You can enter text by using the keypad, handwriting recognition or on-screen keyboard.

Entering text using the keypad






You can enter English by using keypad prediction or multitap:

- Keypad prediction – enter words by a single press of a key to input any of the characters associated with that key.
- Multitap – enter latin letters by pressing a key containing the letter, until the desired letter appears.

You can enter Chinese characters by using Pinyin or Stroke:

- Pinyin – enter Chinese characters by pressing the keys containing its Pinyin letters.
- Stroke – enter Chinese characters by pressing the keys containing its strokes. Strokes are grouped into five categories and represented by  -

 .

Number Key	Stroke Category	Basic Stroke	Example
	一	一	王 十 在 七 天
		丿	海 红 牡 状 习
	丨	丨	中 业 上 门 丑
		冫	小 水 打 子 承
		丨	直 真 质 草
	丿	丿	八 九 丹 风 片
		ノ	香 千 匕 后 丢
		ノ	而 页 面 学 殷
	丶	丶	六 学 雷 心 性
		丶	人 火 又 送 林
		乚	四 西 酉 酸
	㇇	㇇	山 巨 屯 母 凶
		㇇	么 去 公 约 能
		㇇	女 要 好 巡 巢
		㇇	衣 以 饭 收 长
		㇇	我 或 民 成 伐
		㇇	心 必 思 忘
		㇇	电 也 毛 兄 孔
		㇇	专 传 转
		㇇	马 与 张 号 费
		㇇	鼎 鼐
		㇇	写 字 皮 通 免
		㇇	口 已 户 书 骨
		㇇	力 习 也 同 永
㇇	又 之 登 多 社		
㇇	及 极 延 建		
㇇	阿 队 陈 那 部		
㇇	乃 透 鼐 隼 杨		