




### *To use panels*

- Use  and  to scroll through the panels. Press  to select a panel.


### *To add additional panels*

- 1 From Standby select **More >**  
**Settings**.
- 2 Mark the panels you want and select **Save**.

### **Main menu**

All applications in your phone can be found in Main menu.

### *To access Main menu*

- From Standby select  or **Menu** depending on what Standby application is active.

### *To change the view of Main menu*


- 1 From Standby select **Main menu**.
- 2 Select **More**.
- 3 Select an option.

## **Using the applications**

### *To start an application*

- Select the application.

### *To close an application*

- Press and hold down .

### *To switch to another application*


- Switch to another application using Task manager.

For more information see *Task manager* on page 15.


## **Task manager**

Task manager helps you switch between applications. Leaving an application via Task manager rather than closing it, lets you return to the the application in the state that you left it. This is useful, for example, when cutting and pasting text from one application to another.


### *To switch to another application*

- 1 Select  in the status.
- 2 Scroll to the wanted application and select **Switch**.

### *To end an application*

- 1 Select  in the status.
- 2 Scroll to the wanted application and select **End**.

## Connecting accessories

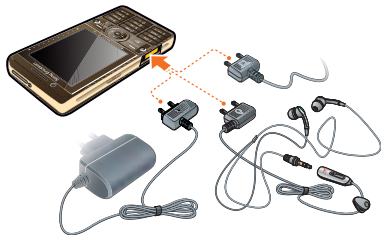

### *To connect an accessory*

- Connect the accessory to the side of your phone.

! *Tilt the plug upwards when you disconnect the accessory.*

## Updating software

When an improved software version for your phone is available, you can update the phone using the Sony Ericsson update Service on [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

## Main menu overview\*



### Organizer

File manager, Tasks, Notes, Quickoffice™, Time & alarms, Torch, Calculator, Converter and more



### Internet

Internet browser



### Entertainment

Camera, Music applications, TrackID™, RSS feeds, radio, games, and more



### Calendar

Touch calendar



### Messaging

Messaging application



### Media

Media application, where you can handle all your media files, such as music, videos, and more



### Calls

Call log



### Contacts

Your contacts



### Settings

Email wizard and various settings










\* Some menus are operator-, network-, and subscription-dependent.














## Status bar

### Status bar icons

You can select an icon to get more information or to start an application. Below is a short description of the most common icons appearing in the status bar.

Icon	Function
------	----------

	3G available
	Battery strength
	Bluetooth headset connected
	Bluetooth activated
	Current line selection (Alternative Line Service available on the SIM card)
	All calls diverted
	Email message received
	Flight mode
	Internet connection activated (flashes when data is transferred)

	Keylock activated
	Missed incoming call
	Picture message received
	Muted microphone
	Predictive text activated
	Ring volume set to zero
	Signal strength in phone mode
	Silent mode
	Text message received
	Speakerphone activated
	Status bar menu
	Task manager
	Voicemail received

### Status bar menu

You can use the status bar menu to quickly access extra settings:

- New call, SMS, MMS and more.
- Connections.
- Volume, time and keylock.