

## **Additional Information for Using Sony Wall-Mount Bracket (SU-WL100)**

Compatible TV models for this Wall-Mount Bracket information:

**KDL-22EX308**

**For product protection and safety reasons, Sony strongly recommends that you use the Wall-Mount Bracket model designed for your TV and that the wall-mounting of your TV is performed by Sony dealers or licensed contractors.**

To Customers

Please provide your licensed contractor with this installation supplement as well as the instructions (supplied with the SU-WL100 Wall-Mount Bracket). Read these documents carefully for safety and proper installation.

To Sony Dealers and Contractors

Provide full attention to safety during the installation, periodic maintenance and examination of this product.

Sufficient expertise is required in installing this product, especially to determine the strength of the wall for withstanding the TV's weight. Be sure to entrust the attachment of this product to the wall to Sony dealers or licensed contractors and pay adequate attention to safety during the installation. Sony is not liable for any damage or injury caused by mishandling or improper installation.


For proper installation, follow your wall-mount bracket instructions and the directions below.

## Installing the Wall-Mount Bracket

Install the Base Plate and Mounting Hooks.

- 1** Open the Wall-Mount Bracket package and check for all the required parts along with the Instructions.
- 2** Adjust the position of the holders of the Base Plate.  
Refer to the Instructions for SU-WL100.
- 3** Decide where you want to install your TV. Refer to the TV installation dimensions table.

### Dimension Table

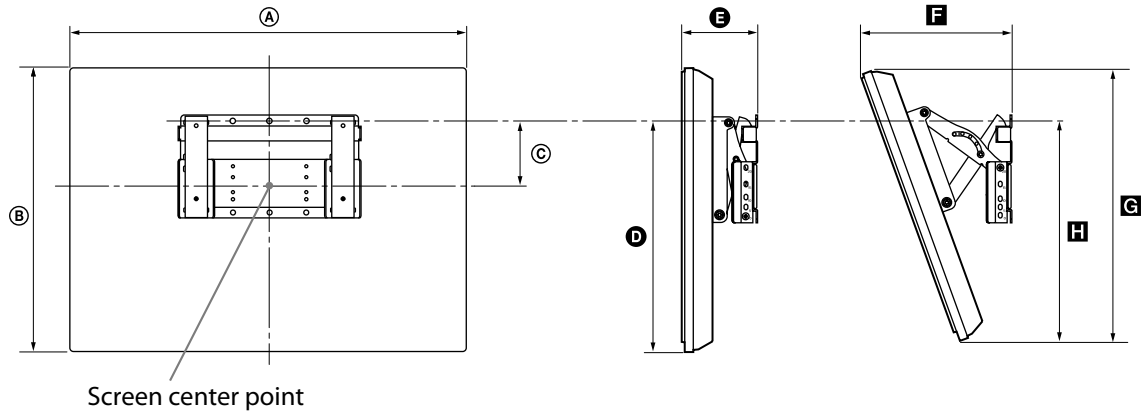

Unit: inches (mm)

Model Name	Display dimensions		Screen center dimensions	Length for each mounting angle				
				Angle (0°)		Angle (20°)		
	A	B	C	D	E	F	G	H
KDL-22EX308	21 <sup>3</sup> / <sub>4</sub> (551)	14 <sup>1</sup> / <sub>2</sub> (367)	5 <sup>1</sup> / <sub>4</sub> (133)	13 (329)	5 <sup>3</sup> / <sub>4</sub> (143)	8 <sup>3</sup> / <sub>4</sub> (222)	13 <sup>3</sup> / <sub>4</sub> (348)	13 (328)

Figures in the above table may differ slightly depending on the installation.

### CAUTION


The wall that the TV will be installed on should be capable of supporting a weight of at least four times that of the TV. Refer to your TV's operating instructions for its weight.

- 4** Install the Base Plate on the wall.  
Refer to the Instructions for SU-WL100.
- 5** Disconnect all the cables from the TV.

6

### Secure the Mounting Hook to the left side of the rear of the TV.


Secure it to the TV using two screws (supplied with SU-WL100).

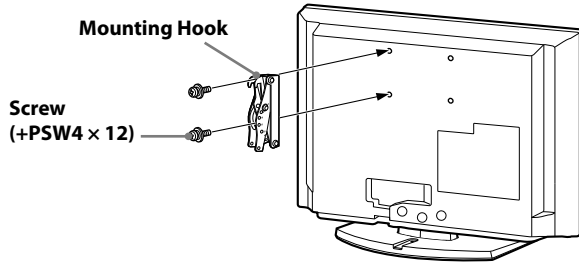

- Place the TV on the Table-Top Stand, when securing the Mounting Hook.
- The availability of this Wall-Mount Bracket (SU-WL100) varies depending on the country/region.

7


### Adjust the angle of the Mounting Hook.

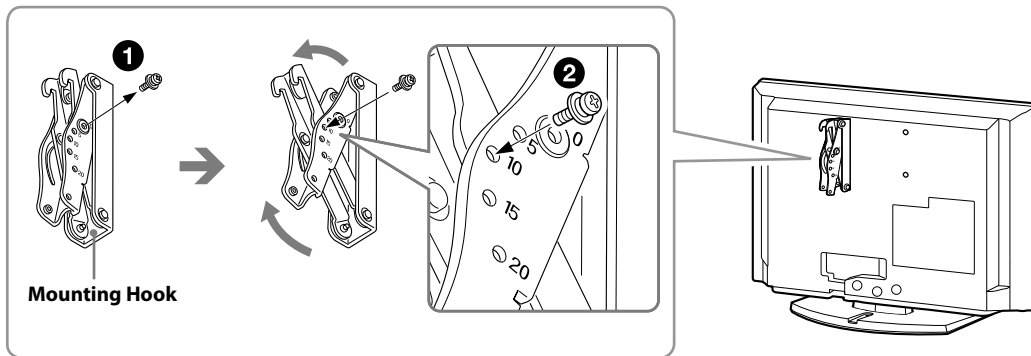

8

### Secure the Mounting Hook to the right side of the rear of the TV.

Secure it to the TV using two screws (supplied with SU-WL100).

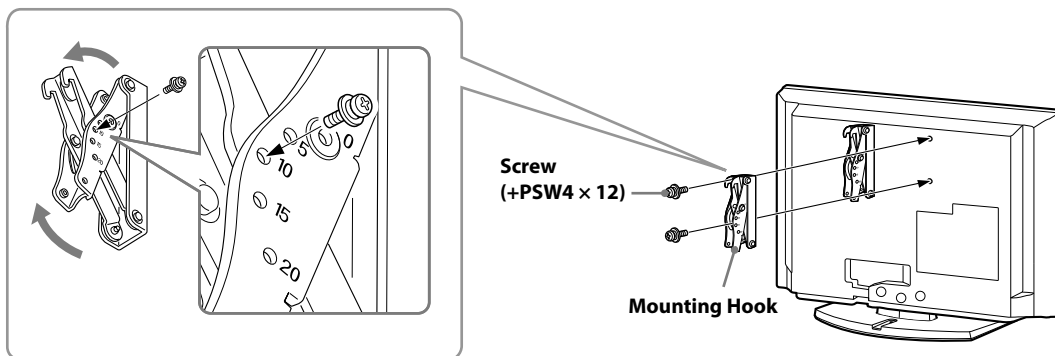


## Hook Locations Diagram/Table

Model Name	Hook Location
KDL-22EX308	b

### Hook Location

When installing the TV onto the Base Bracket.

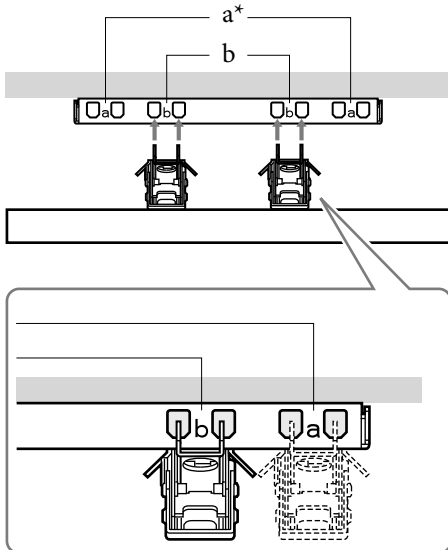


\* Hook position "a" cannot be used for the models in the table above.

**9**

### Remove the screws from the back of the TV.

Do not remove any other screws from the TV.

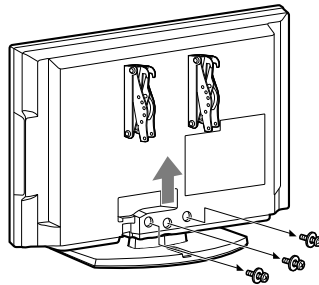


10

### Lift the TV off the stand.

Do not attempt to lift the TV by yourself.

For holding and carrying the TV, refer to your TV's instructions.

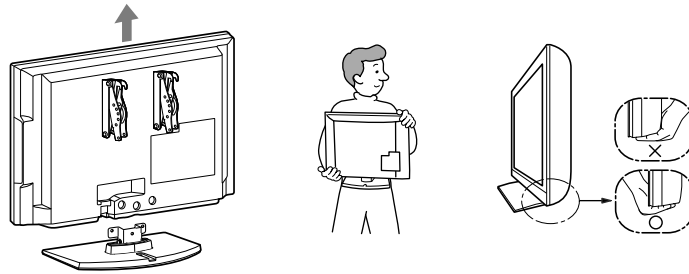

11

### Install the TV on the Wall.

Refer to the Instructions for SU-WL100.

- 1 Connect the AC power cord and cables to the corresponding inputs on the rear of the TV.  
For details on the cable connection, refer to the Operating Instructions for your TV.
- 2 Install the TV onto the Base Plate.  
Be sure to secure the TV to the Base Plate.