

SONY®

Startup guide

Xperia™ E3
D2243



BC logo indicates this product battery charging system is California Energy Commission certified

XPERIA

Sony Mobile Communications Inc.
1-8-15 Konan, Minato-ku, Tokyo 108-0075, Japan
www.sonymobile.com

 
 


1289-5543.1

Important Information

Before you use your device, please read the *Important Information* provided in your device regarding warranty, safety, and handling information.


Overview

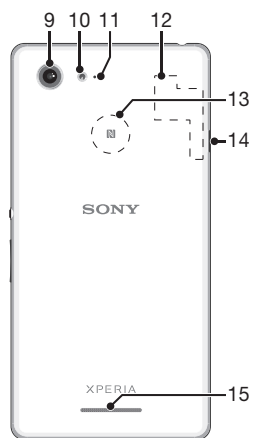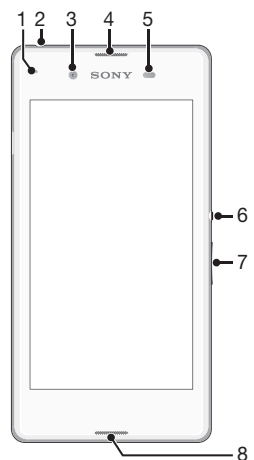

- | | |
|--------------------------------|--------------------------------------|
| 1. Charging/Notification light | 9. Main camera lens |
| 2. Headset jack | 10. Camera light |
| 3. Front camera lens | 11. Second microphone |
| 4. Speaker | 12. Wi-Fi/GPS/Bluetooth antenna area |
| 5. Proximity/Light sensor | 13. NFC™ detection area |
| 6. Power key | 14. Port for charger/USB cable |
| 7. Volume/Zoom key | 15. Loudspeaker |
| 8. Main microphone | |


Assembly

 To remove the back cover




To insert the micro SIM card

 ! If you insert a micro SIM card while the device is powered on, the device restarts automatically.

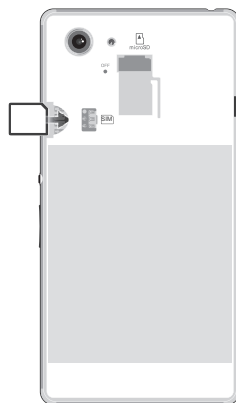

To insert the memory card

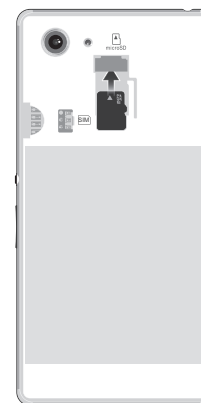 

! The memory card may not be included at purchase in all markets.

To attach the back cover



 
Basics

Turning on the device

Make sure that the battery is charged for at least 30 minutes before you turn on the device for the first time.

To turn on the device

! Make sure that the battery is charged for at least 30 minutes before you turn on the device for the first time.

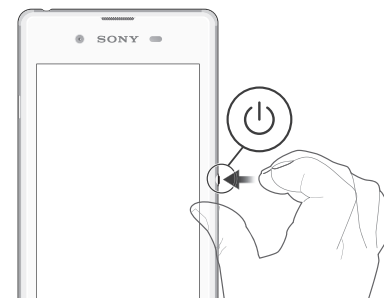

- 1 Press and hold down the power key until the device vibrates.
- 2 Wait a while for the device to start.

Waking up the screen

To activate the screen

- Briefly press the power key .

Setting up your device

Setup guide

The first time you start your device, a setup guide opens to help you configure basic settings, sign in to some accounts (for example, your Google™ account), and personalize your device. You can also manually access the setup guide at a later stage.

To access the setup guide manually

- 1 From the Homescreen, tap .
- 2 Tap > Setup guide.

Accessing settings

View and change settings for your device from the Settings menu. The Settings menu is accessible from both the Application screen and the Quick settings panel.

To access your device settings

- 1 From your Homescreen, tap .
- 2 Find and tap .

Transferring your contacts

Xperia™ Transfer is an application within the PC Companion and the Sony Bridge for Mac computer programs that helps you to collect contacts from your old device and transfer them to your new device. Xperia™ Transfer supports several device brands, including iPhone, Samsung, HTC, BlackBerry, LG, and Nokia.

You need:

- An Internet-connected computer.
- A USB cable for your old device.
- A USB cable for your new Android™ device.
- Your old device.
- Your new Android™ device.

 
To transfer contacts to your new device

- 1 Search and download PC Companion (on a PC) or Bridge for Mac (on a Mac computer) from www.sonymobile.com if the application is not already installed.
- 2 After successful installation, open the PC Companion application or the Sony Bridge for Mac application, then click *Xperia™ Transfer* and follow the relevant instructions to transfer your contacts.

Finding your way



Using the keys

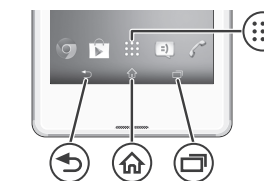

- Back navigation key
 - Go back to the previous screen within an application or close the application.
- Home navigation key
 - Exit an application and go back to the Home screen.
- Task navigation key
 - Open the recently used applications window and the small apps bar.
- Application screen
 - Open the Application screen.

Basic applications and settings

- Make phone calls by dialing the number manually, or by using the smart dial function.
- Use the Messaging application to send and receive text and multimedia messages.
- Go to Google Play™ to download free and paid applications for your device.
- Optimize the device settings to suit your own requirements.

Status and notifications

To open or close the Notification panel



- ⚡ Drag down two fingers instead of one to open the Quick settings panel instead.

Support on the web



Visit www.sonymobile.com/support to access a range of support options for your device, including downloads, troubleshooting tips and a User guide.

Mobile TV

Using the Mobile TV application

 
Mobile TV is a terrestrial digital TV broadcasting service which allows you to receive and play digital TV programs on your mobile device. Before you get started, you must connect the dedicated Mobile TV antenna cable and then connect a headset to your device.

- ⚠ The Mobile TV application is not available in all markets.

To connect the Mobile TV antenna cable

- Plug the male connector of the Mobile TV antenna cable into the headset jack of your mobile device.

To connect a headset

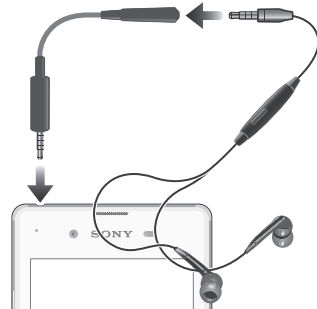


- Plug the headset connector into the Mobile TV antenna cable.




Getting started

The first time you start the Mobile TV application, your device scans for available channels before the application is ready to use.

To get started using the Mobile TV application

- 1 From your Home screen, tap , then tap Mobile TV. Your device scans for the available channels automatically.
- 2 When the scan is complete, select the desired channel to start watching Mobile TV.




To view Mobile TV content

- 1 From your Home screen, tap , then tap Mobile TV.
- 2 On the Mobile TV screen, tap  or  to switch between channels.




Settings

You can edit a number of settings for the Mobile TV application.

To edit the aspect ratio

- 1 From your Home screen, tap , then tap Mobile TV.
- 2 Tap  > Settings > Aspect Ratio.
- 3 Select an option.
- 4 When you are done, tap .

To edit the parental controls

- 1 From your Home screen, tap , then tap Mobile TV.
- 2 Tap  > Settings > Parental Control.
- 3 Enter your PIN, then tap OK.
- 4 Edit the information as desired.
- 5 When you are finished, tap .

Legal information

Sony D2243

Publication number: 1289-5543.1

This Startup guide is published by Sony Mobile Communications Inc. or its local affiliated company, without any warranty. Improvements and changes to this Startup guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Mobile Communications Inc. at any time and without notice. Such changes will, however, be incorporated into new editions of this Startup guide. All illustrations are for illustration only and may not accurately depict the actual device.

Remove the back cover to see regulatory information such as the CE mark.

 
All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. Any rights not expressly granted herein are reserved. Visit www.sonymobile.com/us/legal/ for more information.

Product compliance: This product has been manufactured by or on behalf of Sony Mobile Communications Inc., 1-8-15 Konan, Minato-ku, Tokyo 108-0075, Japan. Inquiries related to product compliance based on national legislation shall be addressed to Sony Mobile Quality Office, Sony Mobile Communications Inc., 1-8-15 Konan, Minato-ku, Tokyo 108-0075, Japan. For any service or guarantee matters, please refer to the contact details provided in the separate service or guarantee documents.

© 2014 Sony Mobile Communications Inc.

All rights reserved.

To view the CE mark

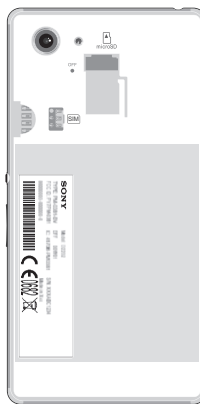

- Remove the back cover.