XPFRIA

Basic Manual

Preface

Thank you for buying "Xperia[™] Z Ultra" (simply called the

"product" from here on) Before using the product read "Basic Manual" (this manual) and "取扱説明書詳細版 (Full Instruction Manual)" (Japanese) to ensure safe use and handling

About Operating Instructions

Basic Manual (this manual)

Handles only basic operations for main features For detailed descriptions on various functions, refer to the Instruction Manual" (Japanese) application installed on the product or "取扱説明書詳細版 (Full Instruction Manual) (Japanese)" available on the au homepage. http://www.au.kddi.com/support/mobile/guide/manual/ · Company names and product names referred to in this

manual are trademarks or registered trademarks of respective companies. The TM, ® marks may be omitted in this manual "Instruction Manual" (Japanese) application

This product allows you to use the "Instruction Manual" (Japanese) application on the product to confirm detailed operational procedures.

Certain functions can be directly activated from the application screens on which their operations are described From the Home screen, [**III**] [Basic Manual] (Japanese)

3456

SONY

1 au Micro IC Card (LTE) insertion slot/microSD memory card

1 Insert the microUSB plug of Common AC Adapter 04 (sold

2 Insert the power plug of Common AC Adapter 04 (sold

3 Install the product to the Desktop Holder and move it

When the product and the magnetic connector of the

Desktop Holder are connected correctly, the notification

separately) into an outlet

left or right until it clicks

LED of the product turns on.

separately), with the engraved side (\blacktriangle) facing up, straight into the microUSB connection terminal of the Desktop

0

8

 When you activate for the first time, follow the onscreen instructions to download and install application.

Getting Ready

① Second microphone:

easy to listen.

antenna part*1

(3) Proximity sensor:

④ Front camera

Notification LED

⑦ Display (Touch panel)

(9) Headset connection

(12) Volume key/Zoom key

(13) Infrared data port

1 Power key/Screen lock key:

(5) Earpiece

(8) Microphone

terminal

(14) Camera

0

insertion slot

Reduces noise to make

Switches touch panel on

during a call/Auto-control

and off to prevent from

erroneous operation

for display brightness

2 Bluetooth®/Wi-Fi®/GPS

Names and functions of parts

Do you have everything?

Before your start using the product, make sure that you have all the following packaged with the product. Xperia[™] Z Ultra^{*1} Desktop Holder (SOL24PUA)*





SOL24

 Sony Mobile TV antenna cable 01 (01SOHSA)

*1 Including warranty

- 取扱説明書 (Instruction Manual) (Japanese) Xperia[™] Z Ultra)ご利用にあたっての注意事項 (Cautions on using Xperia[™] Z Ultra) (Japanese)
- 携帯電話機の比吸収率などについて (Radio Frequency (RF)
- exposure and Specific Absorption Rate (SAR)) (Japanese
- ・設定ガイド (Setting Guide) (Japanese) The following items are not included in the package.
- microSD memory card AC adapter
- Farphones
- microUSB cable
- Information
- · Purchase a specified charger (sold separately).
- · Illustrations used in this manual are just images for explanations. They may be different from actual ones.

Charging

When you purchase your product, the internal battery is not fully charged. Charge the battery before use

Information

- When the charging starts, notification LED turns in red/orange/ green according to the battery level. Green LED indicates that the battery charge reaches 90 percent or more. To check the battery level, see the status bar in the top of the Home screen. Alternatively, from the Home screen, [**∰**]▶[Settings]▶[About phone]▶[Status] and see "Battery level". When the battery charge reaches 100 percent, "100%" is shown on the status bar
- and "Battery level", "Charged" appears on the unlock screen. When the battery level becomes low a pop-up window. "Connect charger" appears. Tap "Battery info" to check battery usage etc.
- . When you start charging with the product powered off, the power turns on even though operation is not available. Do not charge the battery in a place where the use is prohibited such as in airplane or hospital.
- It may take longer to complete for charging with a PC or while using the camera function

Charging with the Desktop Holder

Charging with the supplied Desktop Holder (SOL24PUA) and Common AC Adapter 04 (sold separately) is explained

For Those Requiring an English Instruction Manual You can download the English version of the Basic Manual from the au website (available from approximately one month after the product is released)


Download URL: http://www.au.kddi.com/support/mobile/ guide/manual/

Safety Precautions

Before you start using the product, make sure to read the Cautions on using Xperia[™] Z Ultra" to ensure correct use. Before you assume that the product is malfunctioning, check for possible remedies in the following au Customer Support site of au homepage:

http://www.au.kddi.com/support/mobile/trouble/repair When using the product

- Communication is not possible even inside the service area in places where the signal does not reach (e.g. tunnels and basements). Also, communication is sometimes not possible in poor reception areas. Communication is sometimes interrupted if you move into a poor reception areas during communications.
- Since this product uses radio waves, the possibility of communication intercepts by third parties cannot be eliminated (Though LTE/CDMA/GSM/UMTS system has highly secure confidential communication features).
- This product is compatible with the international roaming service. Each network service described in this manual varies depending on the area and service content. For details, refer to the "Instruction Manual" (Japanese) application installed on the product or "取扱説明書詳細版 (Full Instruction Manual)" (Japanese) available on the au homepage.

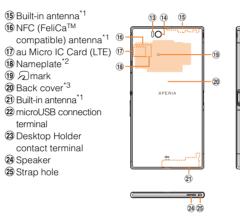

- *1 The antenna is built in. Covering around the antenna by the
- hand may affect the quality of call/communication
- *2 Do not remove the nameplate with stickers of IMEI information printed.
- *3 Back cover is not removable. Removing so forcibly might cause loss of data or a fault. Also, battery is built into the main unit and

not removable by customers.

9

- 4 When charging is complete, lift the product to remove while pressing the Desktop Holder
- 5 Remove the Common AC Adapter 04 (sold separately) from the outlet

Information

- · You cannot charge the battery by connecting the Desktop Holder to a PC.
- · Be sure to attach the supplied attachment to the Desktop holder when charging. If the product is installed without the attachment attached, charging may fail.

Charging with the AC Adapter

Charging with Common AC Adapter 04 (sold separately) is explained.

- Since this product is a radio station under the Badio Law you may be asked to temporarily submit the product for nspection in accordance with the Radio Law.
- The IMEL information of the cell phone is automatically sent to KDDI CORPORATION for maintenance and monitoring operational status of your cell phone. Take care not to inconvenience people around you when
- you use the product in a public place.
- Before you start using the product overseas, check the
- relevant laws and regulations of the country/region you visit. When the product is used by a child, parents or quardians. should thoroughly read the "Basic Manual" "Cautions on using Xperia[™] Z Ultra[™] and "Specific Absorption Rate (SAR) of cell phones" and teach the child how to use it.

Use of the product is not allowed in the following places!


• Do not use a cell phone while driving a car or riding a motorbike or bicycle. Failure to do so might cause a traffic accident. Use of a cell phone while driving a car or motorbike is prohibited by law. Use of a cell phone while riding a bicycle may be punishable by some regulations. Do not use this product while you are aboard an airplane. Use of electric devices transmitting radio waves in airplane is prohibited by law. Some airline companies, however, allow their passengers to use cell phones. For details. contact the airline company you use.

Regarding notations used in this document

 In this manual, keys (key icons) are represented by simplified illustrations such as 🗩, 🝙, 🗇, 🍥, 🗖 · Operations of tapping menu items/icons/buttons on the screen etc. are indicated as [(name of the item etc.)]. 3

CE mark and FCC ID

2

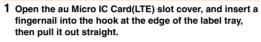

	1
Mioro IC Card (ITE)	

au Micro IC Card (LTE)

cannot use the product with an au

switched from an au cell phone or

Do not insert an au Nano IC Card

(LTE) with a conversion adapter.

Doing so may cause a fault.

IC-card or micro au IC card

au smartphone.

Your phone number etc. is recorded in the au Micro IC Card (LTE). The product is compatible only au Micro IC Card (LTE) with au Micro IC Card (LTE). You



trav.

Information

Information

(LTE).

removed

product

- USB port of the PC

0

- Information
- MTP driver

Turning the power on

1 (over 1 sec)

- appears.
- **1** (over 1 sec) 2 Insert the USB plug of the microUSB cable into the USB
 - 2 [Power off]▶[OK]

Information

Notification LED lights on the product. When a confirmation screen for installation of software appears on the product tap "Skip" When a screen for new hardware detection etc. appears on the PC, select "Cancel". Ð

separately), with the engraved side (\blacktriangle) facing up, straight into the microUSB connection terminal of the product 2 Insert the power plug of Common AC Adapter 04 (sold separately) into an outlet Notification LED lights on the product

 ${\bf 3}\,$ When charging is complete, remove the microUSB plug of Common AC Adapter 04 (sold separately) from the product and close the microUSB connection terminal cover firmly

4 Remove Common AC Adapter 04 (sold separately) from

Charging with a PC

port of a PC

The followings describe charging procedure by connecting the product to chargeable USB port on a PC using the microUSB cable of Sony Mobile AC adapter 05 (sold separately).

1 Open the microUSB connection terminal cover of the

product while hooking the groove with your fingernail, and

insert the microUSB plug of Common AC Adapter 04 (sold

1 Open the microUSB connection terminal cover of the product while hooking the groove with your fingernail, and insert the microUSB plug of the microUSB cable, with the engraved side (+>+) facing up, straight into the microUSB connection terminal of the product

 Screen illustrations shown in this manual may look different from the actual screens. In some cases, minor details or a part of a screen may be omitted.

 In this manual "microSD[™] memory card" "microSDHC[™] memory card" and "microSDXC[™] memory card" are abbreviated as "microSD memory card" or "microSD" "The Company" as appears on the product refers to the

following companies: Sold by: KDDI CORPORATION, OKINAWA CELLULAR

TELEPHONE COMPANY Manufactured by: Sony Mobile Communications Inc.

Using au 災害対策 (au Disaster Countermeasure)

You can use 災害用伝言板 (Disaster Message Board) service, 緊 急速報メール (Emergency Rapid Mail) service that distributes 緊 急地震速報 (Earthquake Early Warning), 災害 · 避難情報 (Disaster and Evacuation Information) and 津波警報 (Tsunami Warning), and

災害用音声お届けサービス (Disaster Voice Messaging Service). 1 From the Home screen, [au 災害対策 (au Disaster

Countermeasure)] au 災害対策 (au Disaster Countermeasure) menu appears.

■ Using 災害用伝言板 (Disaster Message Board) Disaster Message Board service enables you to register information of well-being from an area of distress via LTE NET in case of large-scale disaster such as earthquake with a seismic intensity of over 6 lower.

1 au 災害対策 (au Disaster Countermeasure) menu▶ [災害 用伝言板 (Disaster Message Board)]

 To register information of well-being. E-mail address (~ezweb.ne.jp) is required. Set up E-mail address beforehand. 4

Attaching/removing the au Micro IC Card (LTE)

Before attaching/removing the au Micro IC Card (LTE), make sure to turn off the product

· Note the following points, otherwise handling the au Micro IC Card (LTE) may cause malfunction or damage. · Do not touch the IC (metal) part of the au Micro IC Card

· Insert in the correct direction.

· Do not use force to attach or remove. Do not lose the au Micro IC Card (LTE) after it has been

Attaching the au Micro IC Card (LTE)

1 Open the au Micro IC Card (LTE) slot cover while hooking the groove with your fingernail, hook the projection of the tray (1) with your fingernail to slide the tray straight out, then remove the tray from the

2 Set au Micro IC Card (LTE) into the tray with IC (metal) part facing up (2), insert the tray with the card into the main unit and press it all the way

Pay attention to the orientation of the notch and pressing

Ð

3 When charging is complete, remove the microUSB plug of the microUSB cable from the product and close the microUSB connection terminal cover firmly 4 Remove the USB plug of the microUSB cable from the

• Installation of MTP driver to a PC is required to charge the product with a Microsoft Windows XP PC, since "USB connection mode" is set to "Media transfer mode (MTP)" by default. Install Windows Media Player 10 or later to install

Turning on (Initial settings)

The product vibrates and after a while the unlock screen

2 Swipe the screen up or down

Turning the power off

 Press () for over 1 second and long-touch "Power Off"
 ► [OK] to restart product in safe mode.

■ Using 緊急速報メール (Emergency Rapid Mail) Emergency Rapid Mail is a service that distributes Earthquake Early Warning or Tsunami Warning delivered from the meteorological bureau or Disaster and Evacuation Information delivered from the government or local public organization to all au cell phones in specified areas simultaneously. When you receive Earthquake Early Warning, ensure your safety and take proper action according to the situation around you. When you receive a Tsunami Warning, draw away from sea coast immediately and evacuate to safe place such as upland or well-built high building.

1 au 災害対策 (au Disaster Countermeasure) menu▶ [緊急 速報メール (Emergency Rapid Mail)]

Information

- Reception of Emergency Rapid Mail is notified by a special warning tone and vibration. It is not possible to change the warning tone.
- · Earthquake Early Warning may not arrive before strong tremors in areas near the epicenter.
- Tsunami Warning is a major tidal wave/seismic sea wave notification delivered from the meteorological bureau to the area including target coast.
- Disaster and Evacuation Information is a service that distributes bulletins concerning residents' safety including evacuation advisories, evacuation orders and other warnings issued by the national and local governments.
- The service is available only in Japan (it cannot be used overseas) No information fee or communication charge is required for receiving Emergency Rapid Mail.
- KDDI is not liable for damages suffered by customers resulting from the service's information, lack or delay in the information caused by transmission or system breakdowns or other events that are outside the responsibility of KDDI.

6

- 3 Close the au Micro IC Card (LTE) slot cover, press it firmly to ensure that there are no grooves between the cover and the main unit
- Removing au Micro IC Card (LTE)
- 1 Open the cover while hooking the groove of au Micro IC Card (LTE) slot cover with your fingernail, hook the projection of the tray with your fingernail to slide the tray straight out, then remove the tray from the main unit
- 2 Remove au Micro IC Card (LTE) out of the trav. insert the trav into the main unit and then press it all the way Pay attention to the direction of pushing the tray
- 3 Close the au Micro IC Card (LTE) slot cover, press it firmly to ensure that there are no gaps between the cover and the main unit

Attaching/Removing microSD memory card

Attaching microSD memory card

1 Open the microSD memory card slot cover while hooking the groove with your fingernail, check the orientation for inserting, and insert it until it clicks Insert the microSD memory card with the contact side down.

Ð

19

- Force-auitting
- 1 Open the au Micro IC Card (LTE) slot cover while hooking the groove with your fingernail, press the red OFF button for approximately three seconds, and release your finger after it vibrates three times

• Alternatively, press and hold (1) and upper part of the volume key at the same time for approximately three seconds, and release your finger after it vibrates three times.

Initial settings

When you turn on the product for the first time, swipe (flick) the screen up or down to unlock screen lock and follow the onscreen instructions to set language, functions, service, etc. For details. refer to "Setting Guide"

Information

• Setup items can be set or changed later as required. To change the language later, from the Home screen, [▶[設定 (Settings)]▶[言語と入力 (Language & input)]▶[地域 for au service etc., from the Home screen, [₩] [au Easy Setting]

- Refer to the Japan Meteorological Agency web page for details about distribution of Earthquake Early Warning.
- http://www.jma.go.jp/ You cannot receive Emergency Rapid Mail when your cell phone is turned off or during a call.
- Emergency Rapid Mail may not be received when your cell phone is communicating such as while sending/receiving SMS/e-mail or using the browser, or if you are in a place where signal does not reach even in the service area (e.g. in a
- tunnel, basement) or in a place with a poor reception You cannot receive the Emergency Rapid Mail that the reception is failed
- This delivery system is different from Earthquake Early Warning provided through TV. radio, or other communication procedures, which means that the time the Earthquake Early Warning arrives may vary.
- Information from someplace other than your current location may be received.
- Using 災害用音声お届けサービス (Disaster Voice Messaging Service)

Disaster Voice Messaging Service is a service which allows you to record your voice and send someone you want to inform your well-being in case of a large-scale disaster.

1 au 災害対策 (au Disaster Countermeasure) menu▶ [災害用 音声お届けサービス (Disaster Voice Messaging Service)]

Information

- To use Wi-Fi[®], initial settings via LTE/3G network is required.
- Voice message can be recorded for up to 30 seconds. · Voice messages cannot be saved or played if the product
- does not have available memory.

6

2 Close the microSD memory card slot cover, press it firmly to ensure that there are no gaps between the cover and the main unit

Information

- Insert a microSD memory card in the appropriate direction. Inserting a microSD memory card forcefully into the slot could result in failure to remove the microSD memory card or damage
- · Do not touch the terminal of the microSD memory card.
- Removing microSD memory card
- Be sure to unmount microSD memory card before removing. 1 From the Home screen, ₩→[Settings]→[Storage]→ [Unmount SD card]→[OK] When it is unmounted, " SD card safe to remove"
- appears on the status bar to notify you that reading and writing from/to the microSD memory card are disabled. 2 Open the microSD memory card slot cover while
- hooking the groove with your finger, press the microSD memory card all the way until it clicks, then pull out the microSD memory card slowly " Removed SD card" appears on status bar to inform

that the microSD memory card is removed.

3 Close the microSD memory card slot cover, press it firmly to ensure that there are no gaps between the cover and the main unit

Screen Lock

When the screen lock is set, the backlight turns off to avoid

the keys and touch panel from false operations. • When the specified time elapses, the product's screen backlight turns off automatically and screen lock is activated.

1 While the screen is displayed, (6)

Unlocking screen

The unlock screen appears when turning the power on or the backlight on by pressing ()

1 Swipe (flick) the screen up or down on the unlock screen

Information

• Drag "] left to activate the camera, and drag "] right to add widgets such as calendar, clock, etc. on the unlock screen

Basic Operation

Kev icons

The followings are the main functions of 🕒, 🍙, 🗇 keys located at the bottom of the screen



● Back	Return to the previous screen. Close a dialog box, menu, or the Notifications panel.
〔	Display the Home screen. Long-touch and drag it to "S" to activate "Google" application.
Recently used applications	Display recently used applications on a list and activate or delete them from the list. Also, you can use and set small apps.

Using the touch panel

The display on the product is a touch panel operated by touching it with your finger.

Tap/Double-tap

Tap: Gently touch a screen and then immediately release your finger. Double tap: Tap the same position twice.

Long-touch

Flick (swipe)

Keep touching an item with your finger. Slide

While your finger is gently touching the screen, trace it to the desired direction to move over

Operate the screen by quickly moving (flicking) your finger

up, down, right, or left. Pinch

Touch the screen with two fingers and widen (pinch-out) or narrow (pinch-in) the fingers' distance.

Status	Description
Green	The battery is charging when the remaining battery level is 90% or higher.
Flashing The remaining battery level is 14% or lower. red	
Flashing white	Indicates incoming, missed call, New Gmail message, new SMS message. ^{*1}

*1 Notification LED flashes when backlight turned off and unlock screen is displayed

Information

• When the remaining battery is not sufficient for turning the product ON, pressing (6) makes LED flash red three times. When you start charging with the product powered off, the

notification LED turns in red. When the status of battery appears on the display, however, the notification LED lights in color for indicating the battery level

Checking own phone number

1 From the Home screen, [₩]>[Settings]

- 2 [About phone]▶[Status]
- The phone number of the product is shown under "My phone number"

Information

 Alternatively, from the Home screen, [₩] ▶[Contacts]▶ [Myself] to check your phone number

Setting the Silent Mode

Set the ringtone volume to 0. Note that setting the product to Silent mode does not mute sounds for shutter, playback of video or music, alarm, etc. And adjusting the volume of

For inquiries, call: Customer Service Center

For general information and charges (toll free)

From fixed-line phones: | From au cell phones: 0077-7-111 157 without area code

PRESSING ZERO WILL CONNECT YOU TO AN OPERATOR AFTER CALLING 157 ON YOUR au CELLPHONE.

For loss or theft and operation information (toll free)

From fixed-line phones: | From au cell phones: 0077-7-113 113 without area code

In case above numbers are not available (toll free).


0120-977-033 (except Okinawa)

0120-977-699 (Okinawa)

Secure cell phone support center

For loss, theft, damage.

From a land-line phone/an au cell phone C 0120-925-919 (toll-free) Business hours 9:00-21:00 (7 days a week)

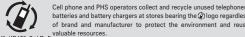

of brand and manufacturer to protect the en

y: KDDI CORPORATION, OKINAWA CELLULAR TELEPHONE COMPANY

December 2013, 1st Edition XXXX-XXXX.1

Drag Keep touching an item or icon, trace it to the desired direction to move

Home screen

Home screen consists of multiple screens. Slide/flick left or right to switch them. The center screen is the default screen to operate. Tap 🝙 to return to the Home screen any time. 1 Home screen position Indicates which screen of the five Home screens you are in. 2 Widgets 3 Wallpapers

2 [X1/1] Tap * X* to set mute (ringtone volume 0) and tap * * to set vibrator.

Slide the status bar downward and tap "
 to set vibrator

When airplane mode is set, all wireless functions (phone,

packet communication, Wi-Fi[®] function, Bluetooth[®] function,

• Slide the status bar downward ► Tap "Airplane" to switch the

The software keyboard appears when you tap the entry field

(4) Shortcuts (Applications) (5) Media folders

(WALKMAN, Movies, Album, Camera, FM radio, TV

1 (b) (over 1 sec)

Information

Information

handwriting".

During the

Outside the

Information

the product.

warranty

period

warrantv

period

28

21

PlayStation Mobile)

part of volume key cancels Silent mode.

or tap " To set mute (ringtone volume 0)

NFC Reader/Writer, P2P function) are turned off

1 (b) (over 1 sec) ▶ [Airplane mode]

Use software keyboard to enter characters.

for registering a contact, composing a mail, etc

To input Japanese, use "XperiaTM Japanese keyboard"

keyboard", "Japanese syllabary", "Kana handwriting", "Kanji

switching five input types of "Phonepad", "QWERTY

For repair, contact Secure cell phone support center.

Repairs will be done based on the terms of

We shall repair the product for a charge as

equested by the customer if repair renders it

lescribed on the warranty card.

Before handing in the product for repair make a backup of

the contents of memory since they may disappear during

repair. Note that the Company shall not be liable for any

• Recycled parts that meet the Company's quality standards

delivery service which you used before are recycled to cell

phones for replacement after repairs. Also replaced parts

by au after-sales service are collected and recycled by

The Company retains performance parts for repair of the

after discontinuation of production. "Performance parts for

Xperia[™] Z Ultra main unit and its peripherals for four years

repair" refers to parts required for maintaining the functions of

KDDI. They are not returned to customers.

Performance parts for repair

damages and loss of income should the contents of

Collected au cell phones by Replacement cell phone

services of the free-of-charge repair warranty

Setting Airplane mode

airplane mode on or off.

Entering characters

Switching keyboards

1 Tap a character input box

After-sales service

When asking for repair

isable.

memory be altered or lost.

are sometimes used for repair.

22

"Ringtone & notifications" in Sound settings or pressing upper 2 Long-touch or flick up "

ap " 💷 " for Kanii handwriting

⑥基本機能フォルダ (Basic functions folder)

Calendar, Infrared, SMS, Osaifu-Keitai)

Application key

etc. on the Home screen

WALLPAPERS Album

are displayed

2 WIDGETS

(Settings, LISMO, YouTube, Maps, Alarm & Clock

Adding to Home screen/Editing Home screen

You can change wallpaper or theme of the Home screen and

add/delete/move shortcuts of applications, widgets, folders,

You can add wallpapers by downloading from websites.

Alternatively, pinch-in on the Home screen

Vallnane

1 Long-touch an area of the Home screen where no icons

Add a widget on the Home

pplication, a setting screer

Select an image from albums

To set image range, drag

etc. to adjust cropping area

elect a content from albums

etc. on the Home screen

o set as a wallpaper.

and tap "Crop".

to set as a wallpaper

Add a shortcut of ar

- e keyboard switches to Phonepad/QWERTY keyboard/
- Japanese syllabary/Kana handwriting/Kanji handwriting. Information

- Word suggestions or direct conversion candidates for the entered characters appear. Tap a word to enter.
- Tap "
 to delete the character before the cursor.
- Long-touch or flick up " to enter symbols, facemarks etc. from the displayed list. Tap " et and " for Kanji handwriting. • On the Phonepad, you can enter characters by flicking a key up/down/left/right besides repeatedly tapping the key
- (toggle input). Tap " at the bottom left of the screen to hide the software kevboard.

Support

Introduction of related accessories

- For details, refer to the instruction manual for each device.
- Desktop Holder (SOL24PUA)
- Sony Mobile TV antenna cable 01(01SOHSA)
- au Carrying Case F Black (0105FCA) (sold separately)
- au Carrying Case G Black (0106FCA) (sold separately)
- Sony Mobile AC adapter 05 (EP880) (sold separately)
- Common AC Adapter 04 (0401PWA) (sold separately)

Information

29

35

· For the latest information on accessories, visit the au homepage 30

Warranty card

At the store of purchase, thoroughly check and read the name

of the retailer, date of purchase and other necessary details filled in on the warranty card, and be sure to keep it in a safe place

Secure cell phone support plus LTE

An after-sales service membership program on a monthly basis called "Secure cell phone support plus LTE" (monthly fee: 399 yen including tax) is available for using your au cell phone for a long time without worries. This service expands coverage for many troubles including malfunction, theft and loss. For details of this service, refer to au homepage or contact Secure cell phone support center

Information

- You can apply for membership only at the time of purchasing your au cell phone.
- Once you cancel the membership, you cannot reapply for it until you purchase an au cell phone next time.
- · Note that when changing the model or purchasing an extra cell phone, this service only covers the most recently purchased au cell phone.
- When an au cell phone is handed over to you or someone else, the Secure cell phone support plus LTE membership is also handed over to the successor of the cell phone.
- When you get a new au cell phone by changing the model or purchasing an extra cell phone, the "Secure cell phone support plus"/"Secure cell phone support plus LTE" membership for the old au cell phone is automatically canceled.

· Service contents are subject to change without notice.

36

- WALLPAPERS (Xperia™'s Select an image to set as a (allpaper) wallpaper. Images displayed to the right of "Albums"/"Live Wallpapers" are "Xperia™'s Wallpaper". THEMES Set the Home screen image o the unlock screen image
- Adding a folder
- 1 From the Home screen, long-touch an icon 2 Drag the icon onto another icon
- Deleting shortcuts/widgets/folders 1 From the Home screen, long-touch an icon or a folder you want to delete
- appears at the bottom of the screen.
- 2 Drag the icon or the folder to "mill"
- Information
- · Long-touch a shortcut, widget, or folder icon to move.

Using the Applications screen

- You can call up functions from the Applications screen Application icons installed to the product are also displayed
- When you tap application icons to use respective functions, you may incur communication charges depending on the function.

24

Sympton (Out of serv

appears.

G

theft or loss

* Charge amounts are all tax-included.

amage

heft. loss

37

Information

 Accessories described on this page can be purchased from the au Online Shop.

What you should check

For force-quite, open the Micro IC

Card (LTE) slot cover while hooking

the groove with your fingernail, press

and hold the red OFF button for

approximately three seconds

elease your finger after it vibrates

at the same time for approximately

nree seconds, and release your

inger after it vibrates three times.

The au Micro IC Card (LTE) is lent to you by au. In case of loss

or damage, the card will be replaced at your expense. When

malfunction is suspected, or in case of theft or loss, contact

If you are unsure about anything regarding after-sales service,

Customer Service Center (for service canceling procedure

From an au cell phone, **113** without area code (toll free)

C120-925-919 (toll free)

ustomer charge

1st: 5,250 yen

2nd: 8.400 ven

Secure cell phone support center (for loss, theft, damage)

From a land-line phone, **10077-7-113** (toll-free)

From a land-line phone/From an au cell phone,

Business hours 9:00 - 21:00 (7 days a week)

au after-sales service information

Replacement cell phone delivery service

Secure cell phone support plus LTE members

Spontaneous failure 1st year Free of charge

nree times. Alternatively, press and

hold () and upper part of volume key

(http://www.au.kddi.com/) or contact the Customer Service

Before you assume that the product is malfunctioning, check

Power is not turned Is the internal battery charged?

The power goes off. Is the battery running out?

The power turns off Is the battery running out?

on even though (b) Is (c) pressed for over 1 second?

http://auonlineshop.kddi.com/

Troubleshooting

Symptom

Center

the following:

is pressed.

while activation

and the power

screen is displayed

The screen freezes

annot be turned off.

au Micro IC Card (LTE)

an au shop or PiPit.

After-sales service

Spontaneous failure 2nd

Partially damage, water

soak, irreparable damage,

vear or later

theft or loss

contact the following service contact.

or operation in case of loss or theft)

Starting an application 1 From the Home screen, [

The Applications screen appears.

Slide or flick left or right to switch the Applications screen.

2 Tap an application to use

Phone,

|--|

(, 1	Phone, Contacts	(A	Play Store
ę, 💭	E-mail, SMS	0,	Camera, Album
*	Browser	24	Maps
×	Settings	8,₽	Google, Voice Search
N , 🕄	Alarm & clock, Calendar		Basic Manual

Downloading applications

You can download applications such as convenient tools and games from the Google Play and install them to use on the product To use Google Play, you need to set a Google account. For details, refer to "Setting Guide".

Deleting (uninstalling) applications

Before deleting installed applications, back up contents related to the application that you want to save including data saved in the application.

Some applications may not be deleted.

25

Symptom	What you should check
(Out of service area) appears.	Is the product out of the service area or in an area where the signal is weak?
	Is the built-in GPS antenna covered with hand etc.?
Cannot charge the battery (Notification LED does not light, the battery icon does not change into charging).	Is the specified charging equipment (sold separately) attached properly?
Cannot operate key/	Is the power turned on?
touch panel.	Is "Screen lock" set?
	Turn off the power and then turn it on again.
Cannot operate	Are you operating with gloved hands?
touch panel as intended.	Are you operating with a fingernail or foreign object on the operating screen?
Charging is not complete.	Is the temperature of the product raised or very low?
A message such as "charge the battery" appears	The battery is almost dead.

32

Non-Secure cell phone support plus LTE members

Spontaneous failure 1st year	
Spontaneous failure 2nd	
year or later	No recompense
Partially damage, water soak, irreparable damage,	
theft or loss	

Holding over and repair

Secure cell phone support plus LTE members

Spontaneous failure 1st year	Free of charge
Spontaneous failure 2nd year or later	Free of charge (three-year warranty)
Partially damage	Customer charge Upper limit: 5,250 yen
Water soak, irreparable damage	Customer charge 10,500 yen
Theft, loss	No recompense
Non-Secure cell phone supp	ort plus LTE members
Spontaneous failure 1st year	Free of charge
Spontaneous failure 2nd year or later	
Partially damage	Actual cost
Water soak, irreparable	

No recompense

38

Knowing the status of the product

Status bar

The status bar is located at the top of the product screen. On the left of the status bar, notification icons appear to inform missed calls, new mails, operations in progress, etc., and on the right, status icons appear to indicate the status of the product



Examples of notification icon

Σ	New Gmail message
X	New PC mail message
¥	New E mail (@ezweb.ne.jp) message
<u>sm</u>	New SMS/Receiving notification service message, New Receiving notification
6	Talking ^{*1} / Calling ^{*1} / Receiving
Δ	Missed call
Ĵ.	USB connecting
(? •	Wi-Fi [®] open network available
*1 Appea	rs when switched to another screen such as the Home screen.

Main status icons

Signal level (Level 4, Out of service area)

26

Symptom	What you should check
Battery usage time is short.	Is the battery fully charged? Charge until the notification LED turns green.
	Is the internal battery end-of-life?
	Is the product used for a long period at places where (out of range) appears?
The screen backlight turns off in a short while.	Is set "Sleep" period too short?
Display is dark.	Is "Brightness" set to dark?
	Is the proximity sensor covered by fingers or sticker?
Screen response is slow when you tap on the screen/press the keys.	When a large amount of data is saved in the product or transferring large- size data between the product and microSD memory card, the screen response may be delayed.
Cannot recognize a microSD memory	Is the microSD memory card inserted properly?
card.	Is the microSD memory card unmounted?

For more details, visit au Customer Support site of au homepage http://www.au.kddi.com/support/mobile/trouble/repair

33

Information

Replacement cell phone delivery service

- When you have trouble with your au cell phone, replacement cell phone (same model, same color) is delivered by calling to. Return your damaged cell phone within 14 days after replacement cell phone is delivered.
- Available up to twice in a year from the day you use this service as a start day. If you do not use this service in the past year at the subscription to this service, it will be 1st and if you use, it will be 2nd.

* For details, refer to au homepage Holding over and repair

- Damages and malfunctions intentionally caused by the customer as well as those due to modification (e.g. disassembly, change of parts, painting, etc.) by the customer are not covered by this service.
- You cannot receive a refund for replacement of the outer casing due to stains, scratches, paint removal, etc. on the outer casing.

Main specifications

Display	Approx. 5.0 inches TRILUMINOS [®] Display for mobile Approx. 16,770,000 colors	
	1,080 x 1,920 dots	
Weight	Approx. 171 g (with internal battery)	
Dimension (W x H x T)	Approx. 74 mm x 144 mm x 8.5 mm	

17E	Data communication status (LTE available, 3G available)
🗎 , 🔀	Battery level (100%, Charging)
×, 🗱	Silent mode (Vibration, Mute)
上	Airplane mode is activated.
<u>,</u>	Wi-Fi [®] connected, Wi-Fi [®] communicating

Notification panel

If any notification icons are displayed, slide down the status bar to open the Notification panel. You can check details of notification icons or start corresponding applications.

&Information

- To delete a notification, tap "Clear" or flick the notification left or right to delete from the list.
- Some notifications may not be deleted depending on the content • When you set screen lock to "Swipe", slide the status bar
- downward to check the Notification panel without unlocking the screen.

Notification LED

Notification LED informs charging prompt, battery level while charging, missed calls, new mails, etc. by turning on or flashing.

Status	Description		
Red	The battery is charging when the remaining battery level is 14% or lower.		
Orange	The battery is charging when the remaining battery level is 15% - 89%.		

Updating Software

You can update the product to the most recent software for optimal performance and to get the latest enhancements.

- You are charged for data communication when connecting to the Internet from the product by using packet communication.
- You are recommended to back up your data before updating software
- · For details, visit http://www.sonymobile.co.jp/support/ or refer to the "Instruction Manual" (Japanese) application or "取扱説明書詳細版 (Full instruction manual)" (Japanese) available on au homepage

Downloading and updating software

Update files can be downloaded from the Internet web site via wireless communication into the product directly

• To download software updates only via Wi-Fi[®], from the Home screen, [**Ⅲ**]▶['^y−Jℓ (Tool)]▶[Update Center]▶[**:**]▶[Settings]▶ Mark "Update Via Wi-Fi only". If you unmark "Via Wi-Fi only" for updating, note that when Wi-

Fi[®] communication becomes unstable, packet communication takes the place automatically, which may apply communication fees

1 From the Home screen, [Ⅲ]▶[ツール (Tool)]▶[Update Center]

2 Tap "System" tab▶[(]

Connecting to a PC for updating software You can update software using PC Companion to be installed from the product.

Install PC Companion to your PC beforehand.

34

Continuous	In Japan	Approx. 1,310 min.
call time	Overseas (GSM)	Approx. 820 min.
Continuous stand-by	In Japan	Approx. 700 hours (LTE) Approx. 710 hours (3G)
time	Overseas (GSM)	Approx. 770 hours
Charging time		Using Common AC Adapter 04 (sold separately): Approx. 170 min.
Continuous Full Seg watching time		Approx. 3 hours 30 min.
Continuous 1Seg viewing time		Approx. 5 hours 30 min.
Continuous tethering time		Approx. 610 min. (LTE on WAN) Approx. 730 min. (3G on WAN)
Wi-Fi [®] tethering maximum connection number		10

Information

 The continuous call time, continuous stand-by time continuous Full Seg watching time, continuous 1Seg viewing time and continuous tethering time may drop to less than half depending on the battery charging status, usage environment such as temperature, reception condition at the location where the product is used, and the function settings