 


## Important Information

Before you use your device, please read the *Important Information* provided in your device regarding warranty, safety and handling information.

 
## Assembly

To insert the micro SIM card

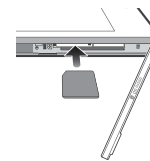



! Your phone requires a micro SIM card. For more information, contact your network operator.

To insert a memory card

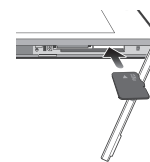

## Basics
  
### Overview

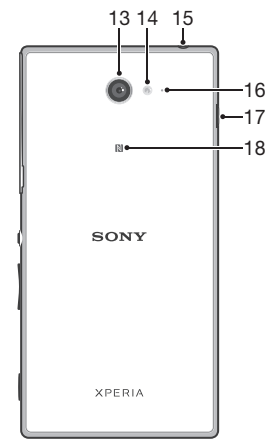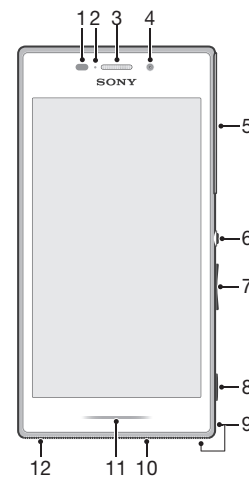


- |   |                                   |
|---|-----------------------------------|
| 1. Proximity sensor/<br>Light sensor          | 10. Speaker                       |
| 2. Charging light/<br>Notification light      | 11. Illumination bar              |
| 3. Ear speaker                                | 12. Main microphone               |
| 4. Front camera lens                          | 13. Main camera lens              |
| 5. Micro SIM and<br>memory card slot<br>cover | 14. Camera light                  |
| 6. Power key                                  | 15. Headset jack                  |
| 7. Volume/Zoom key                            | 16. Second microphone<br>cable    |
| 8. Camera key                                 | 17. Port for charger/USB<br>cable |
| 9. Strap hole                                 | 18. NFC™ detection area           |

### Turning on the device

 Make sure that the battery is charged for at least 30 minutes before you turn on the device for the first time.

To turn on the device

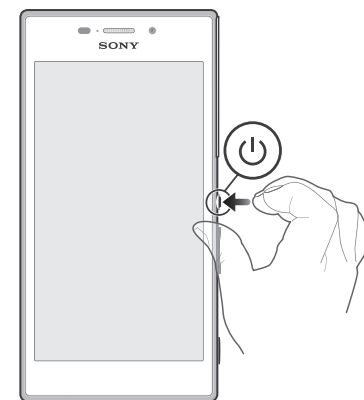

- 1 Press and hold down the power key until the device vibrates.
- 2 Wait a while for the device to start.

### Waking up the screen

To activate the screen

- Briefly press the power key .

### Setting up your device

#### Setup guide

The first time you start your device, a setup guide opens to help you configure basic settings, sign in to some accounts (for example, your Google™ account), and personalise your device. You can also manually access the setup guide at a later stage.

To access the setup guide manually

- 1 From the Home screen, tap .
- 2 Tap > Setup guide.

#### Settings menu

View and change settings for your device from the Settings menu.

To access your device settings

- 1 From your Home screen, tap .
- 2 Find and tap .

### Transferring your contacts

Xperia™ Transfer and Contacts Setup are applications within the PC Companion and the Sony™ Bridge for Mac computer programs that help you to collect contacts from your old device and transfer them to your new device. These applications support several device brands, including iPhone, Samsung, HTC, BlackBerry, LG, Motorola and Nokia. You need:

- An Internet-connected computer.
- A USB cable for your old device.
- A USB cable for your new Android™ device.
- Your old device.
- Your new Android™ device.

To transfer contacts to your new device

 
- 1 Connect your device to a computer. In the window that appears, choose to install PC Companion or Bridge for Mac if you have not already installed these applications.
- 2 After successful installation, open the PC Companion application or the Sony™ Bridge for

Mac application, then click *Xperia™ Transfer* or *Contacts Setup* and follow the relevant instructions to transfer your contacts.

### Finding your way



### Using the buttons

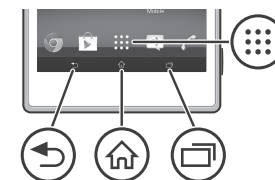

- Back
  - Go back to the previous screen.
  - Close the on-screen keypad, a dialog box, an options menu, or the Notification panel.
- Home
  - Go to the Home screen.
  - Press and hold to open a window showing your most recently used applications.
- Menu
  - Open a list of options available in the current screen or application.
- Application screen
  - Open the Application screen.

### Basic applications and settings

- Make phone calls by dialling the number manually or by using the smart dial function.
- Use the Messaging application to send and receive text and multimedia messages.

- Go to Google Play™ to download free and paid applications for your device.

- Optimise the device settings to suit your own requirements.

### Status and notifications

To open or close the Notification panel



### Support on the web



Visit [www.sonymobile.com/support](http://www.sonymobile.com/support) to access a range of support options for your device, including downloads, troubleshooting tips and a User guide.

## Legal information

 
### Sony D2303/D2305/D2306

Publication number: xxxx-xxxx.1  
This Startup guide is published by Sony Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this Startup guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this Startup guide. All illustrations are for illustration only and may not accurately depict the actual device. See regulatory information such as the CE mark in the label tray of the device.

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. All other trademarks are property of their respective owners. Any rights not expressly granted herein are reserved. Visit [www.sonymobile.com/us/legal/](http://www.sonymobile.com/us/legal/) for more information. Product compliance: This product has been manufactured by or on behalf of Sony Mobile Communications, Mobilvägen, SE-221 88 Lund, Sweden. Inquiries related to product compliance based on national legislation shall be addressed to Sony Mobile Quality Officer, Sony Mobile Communications AB, Mobilvägen, SE-221 88 Lund, Sweden. For any service or guarantee matters, please refer to the contact details provided in the separate service or guarantee documents. ©Sony Mobile Communications AB, 2013. All rights reserved.

FCC Caution: Your device can only connect to an FCC approved access point when using 5 GHz WLAN for indoor and outdoor operation. This is because operation in the 5.15 GHz to 5.25 GHz frequency band is only permitted for indoor use.

To view the CE mark and the FCC ID

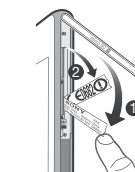

- 1 Make sure your device is turned off.
- 2 Detach the cover for the micro SIM card slot.
- 3 Using a fingernail, remove the two label trays in the order shown in the illustration.
- 4 The FCC ID is displayed on the back of the first tray. The CE mark is displayed on the front of the second tray.

## Startup guide

M2  
D2303/D2305/D2306