

## Support for you

 
Help is never far away. You can access our support website and a range of help options directly in your device using the Support application. Or you can visit [support.sonymobile.com](http://support.sonymobile.com) from any supported browser. The support options on our website include downloads, troubleshooting tips, User guides, support numbers, and chat and email support. You can access support contact information for your country or region using the **Contact us** links.

• If you don't have a network connection, you can still access support contact information such as phone numbers and email addresses in your device. Just open the Support application and select the **Contact us** option near the top of the screen.


### To access the Support application

- 1 From your Home screen, tap .
- 2 Find and tap .

## Overview

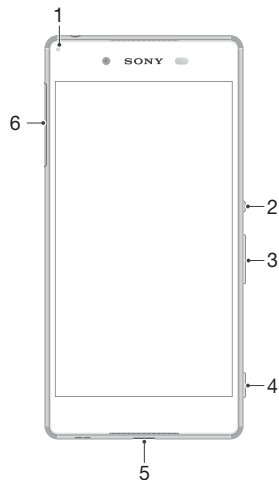

- |   |                                 |
|---|---------------------------------|
| 1 | Charging/Notification light     |
| 2 | Power key                       |
| 3 | Volume/Zoom key                 |
| 4 | Camera key                      |
| 5 | Charger/USB cable port          |
| 6 | Nano SIM/Memory card slot cover |

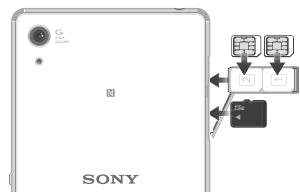 


### To insert a memory card

- 1 Open the cover for the nano SIM card and memory card slots.
  - 2 Insert the memory card into the memory card slot, then close the cover.
- Make sure you insert the memory card in the correct orientation.

### To insert the nano SIM cards

- Your device only supports nano SIM cards. Make sure you use the nano SIM card holder and don't confuse the nano SIM card slot with the memory card slot.
- 1 Open the cover for the nano SIM card and memory card slots.
  - 2 Using a fingernail or other similar object, drag out the nano SIM card holder.
  - 3 Place the nano SIM card (or cards) in the relevant nano SIM card slot (or slots) in the holder, then re-insert the holder.
  - 4 Close the cover.
- If you insert a nano SIM card while the device is powered on, the device restarts automatically.

### To turn on the device

- 1 Make sure your device is charged for at least 30 minutes before you turn it on for the first time.
- 2 Press and hold down the power key  until the device vibrates.
- 3 Wait a while for the device to start.

### To activate the screen

- Briefly press the power key .

## Protecting the screen

At purchase, there are two sheets of plastic film on the front of your device. You can peel off the outer sheet of film when you start using the device. It is not recommended to peel off the second sheet of film as it protects your screen from damage and scratching.

## Starting up

The first time you start your device, a **Setup guide** opens to help you configure basic settings, personalise your device and sign in to some accounts, for example, your Google™ account. The **Setup guide** can also be accessed later from the **Settings** menu.

## Important Information

Before you use your device, please read the **Important information** provided in the **Setup guide** in your device. From here, you can find legal information as well as warranty, safety and SAR information.

## Transferring contacts and other content

If you need help to find and transfer contacts, messages, photos and other data from an old device to your new device, we recommend that you use the Xperia™ Transfer

application. Visit [www.sonymobile.com/xperiatransfer](http://www.sonymobile.com/xperiatransfer) for more information.

## Dust and water protection

Your device is waterproof and protected against dust as long as you follow a few simple instructions: make sure all ports and attached covers are firmly closed; don't take the device deeper than 1.5m in water and for longer than 30 minutes; and only use it in fresh water. Casual use in chlorinated pools is permitted provided the device is rinsed in fresh water afterwards. Do not expose it to seawater or saltwater pools. Abuse and improper use of the device will invalidate the warranty. Your device has an Ingress Protection rating of IP65 and IP68. To see what this means and for more information, visit [www.sonymobile.com/durability](http://www.sonymobile.com/durability).

• After using your device in water, it's important that the USB port is completely dry before a USB cable is inserted into it. To remove moisture from the USB port, shake your device several times with the USB port facing downwards and then use a micro-fibre cloth to wipe the device dry. If moisture is still visible in the USB port, repeat the shaking and drying procedure.

## Learn more

You are now ready to start using your new device. To learn more about your device and its full functionality, access our support website directly in your device using the Support application or by visiting [support.sonymobile.com](http://support.sonymobile.com).

## Frequency bands and model info

Below is the model number and supported frequency bands for your device. You can find your model number under **Settings > About phone**.

### E6533

UMTS HSPA Band 1 2 4 5 8 GSM GPRS/EDGE  
850/900/1800/1900 FDD LTE Band 1 2 3 4 5 7 8 17 20 TDD  
LTE Band 38 39 40 41

• Some frequency bands might be turned off in certain markets or by certain operators.

## Legal information

### Sony E6533

 
Publication number: 1293-5388.1

This Startup guide is published by Sony Mobile Communications Inc. or its local affiliated company, without any warranty. Improvements and changes to this Startup guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Mobile Communications Inc. at any time and without notice. Such changes will, however, be incorporated into new editions of this Startup guide. All illustrations are for illustration only and may not accurately depict the actual device.

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. Any rights not expressly granted herein are reserved. Visit [www.sonymobile.com/global-en/legal/](http://www.sonymobile.com/global-en/legal/) for more information.

**Product compliance:** This product has been manufactured by or on behalf of Sony Mobile Communications Inc., 1-8-15 Konan, Minato-ku, Tokyo 108-0075, Japan. Inquiries related to product compliance based on national legislation shall be addressed to Sony Mobile Quality Office, Sony Mobile Communications Inc., 1-8-15 Konan, Minato-ku, Tokyo 108-0075, Japan. Should your device need warranty service, please return it to the dealer from whom it was purchased or visit [support.sonymobile.com/contact](http://support.sonymobile.com/contact) to contact your local Sony Mobile repair partner (national rates may apply).  
© 2014–2015 Sony Mobile Communications Inc. All rights reserved.

### To view the CE mark and FCC ID

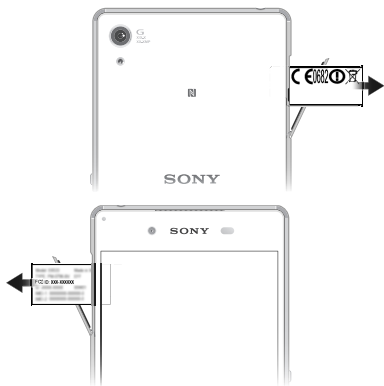

- 1 Detach the cover for the nano SIM and memory card slots.
- 2 Place a fingernail under the right or left edge of the label tray, then drag the tray outwards. The CE mark and FCC ID are displayed on the tray.

### To view the regulatory compliance mark

- Open the phone dialer, then enter **\*#07#**.

# SONY®

## Startup guide

Xperia™ Z3+ Dual  
E6533

## XPERIA

Sony Mobile Communications Inc.  
1-8-15 Konan, Minato-ku, Tokyo 108-0075, Japan



1293-5388.1  
Printed in XXX (Printers logotype)