

SONY®



US

FR



PlayStation®Portable

Instruction manual

Mode d'emploi

PSP-1001



Encontrará un manual de instrucciones en español en nuestro sitio Web en
<http://www.us.playstation.com/psp/manuals.aspx>

UMD™
UNIVERSAL MEDIA DISC

MEMORY STICK

MEMORY STICK PRO DUO
MEMORY STICK DUO

XMB™

2-657-883-12(2)

WARNINGS

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

Use the supplied AC adaptor only. If you use other types, it may cause fire, electrical shocks or a malfunction.

For customers in the U.S.A. and Canada

Caution

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

The use of optical instruments with this product will increase eye hazard.



This appliance is classified as a CLASS 1 LASER product under IEC60825-1: 2001.

For customers in the U.S.A.

If you have questions about this product, call our technical support line at 1-800-345-7669, or write to:

Sony Computer Entertainment America
Consumer Services/Technical Support
PO Box 5888, San Mateo, CA 94402-0888 U.S.A.

Declaration of Conformity

Trade Name : SONY
Model No. : PSP-1001
Responsible Party : Sony Electronics Inc.
Address : 16450 W. Bernardo Dr.
San Diego, CA 92127 U.S.A.
Telephone No. : 858-942-2230

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

FCC Radiation Exposure Statement

This transmitter complies with FCC radiation exposure limit set forth for an uncontrolled environment. To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any changes to the antenna or the device could result in the device exceeding the RF exposure requirements and void user authorization to operate the equipment. In addition, this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Owner's Record

The model and serial numbers are located inside the battery compartment of the unit. Record the serial number in the space provided below. Refer to the number whenever you call for technical assistance at 1-800-345-7669.

Model No. PSP-1001

Serial No. _____

For customers in Canada

This Class B digital apparatus complies with Canadian ICES-003.

The term "IC" before the equipment certification number only signifies that the Industry Canada technical specifications were met.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

IC Radiation Exposure Statement

This transmitter complies with IC radiation exposure limit set forth for an uncontrolled environment. To comply with the IC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any changes to the antenna or the device could result in the device exceeding the RF exposure requirements and void user authorization to operate the equipment. In addition, this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Photosensitivity

A very small percentage of individuals may experience epileptic seizures when exposed to certain light patterns or flashing lights. Exposure to certain patterns or backgrounds on a television screen or while playing video games, including games played on the PSP™ system, may trigger an epileptic seizure in these individuals. Certain conditions may trigger previously undetected epileptic symptoms even in persons who have no history of prior seizures or epilepsy. If you, or anyone in your family, has an epileptic condition, consult your physician prior to playing. If you experience any of the following symptoms while playing a video game - dizziness, altered vision, eye or muscle twitches, loss of awareness, disorientation, any involuntary movement or convulsions - IMMEDIATELY discontinue use and consult your physician before resuming play.

Radio waves

Radio waves may affect electronic equipment or medical devices (for example, pacemakers), which may cause malfunctions and possible injuries.

- If you use a pacemaker or other medical device, consult your physician or the manufacturer of your medical device before using the wireless networking feature.
- Keep the PSP™ system at least 9 inches (23 cm) away from a pacemaker or other medical devices when using the wireless networking feature.
- Do not use the wireless networking feature in the following locations:
 - Areas where its use is prohibited, such as in airplanes or hospitals. Abide by medical institution regulations when using the PSP™ system on their premises. Additionally, you may be violating air safety regulations punishable by fines by using the wireless networking feature in an airplane or by using the PSP™ system during takeoff or landing.
 - Crowded areas.
 - Areas near fire alarms, automatic doors and other types of automated equipment.
- Use caution when using the wireless networking feature in a vehicle, as radio waves may affect electronic equipment in some vehicles.



GAME

→ page 42

- Playing games
- Managing saved data



VIDEO

→ page 46

- Playing UMD™VIDEO
- Playing videos saved on a Memory Stick Duo™



MUSIC

→ page 59

- Playing UMD™MUSIC
- Playing music saved on a Memory Stick Duo™



PHOTO

→ page 72

- Displaying images saved on a Memory Stick Duo™
- Playing slideshows



NETWORK

→ page 86

- Using the Internet
- Using the LocationFree™ Player




SETTINGS

→ page 90


- Adjusting PSP™ system settings
- Creating video, photo or network settings
- Connecting to devices using the USB connector

Using the home menu

The basic operation of the PSP™ system starts from the home menu. Press the home button to display the home menu and use the directional buttons to navigate the horizontal and vertical icon bars.

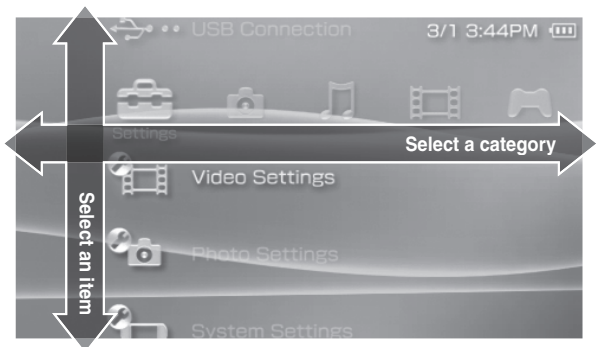

Basic button operations

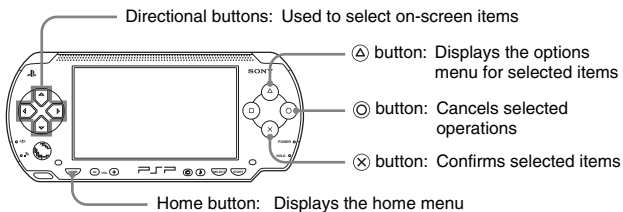

This manual includes instructions for the basic features of the PSP™ system. For additional information and answers to frequently asked questions about the PSP™ system, visit our Web site at <http://www.us.playstation.com/psp>
For more information on the use of Memory Stick Duo™ media, visit <http://www.memorystick.com/psp>

Table of contents

WARNINGS	2
Precautions	11
Battery pack precautions	17

■ Preparation

Checking the package contents	19
Part names and functions	20
Preparing the PSP™ system for use	25
Connecting the headphones with remote control	28

■ Basic operations

Turning the PSP™ system on and off	29
Using sleep mode	31
Inserting a UMD™	33
Inserting a Memory Stick Duo™	34
Avoiding unintended operation of the PSP™ system	35
Using the sound button	36
Using the display button	38
Battery	39

■ Game

Playing a game	42
Game options menu	44
Copying and deleting saved data	45

■ Video

Watching a video	46
Using the control panel	48
Operating with PSP™ system buttons or the remote control	55
Video options menu	56
Saving videos on a Memory Stick Duo™	57

■ Music

Listening to music	59
Using the control panel	62
Operating with PSP™ system buttons or the remote control	66
Music options menu	67
Transferring and saving music on a Memory Stick Duo™	69

■ Photo

Viewing images	72
Using the control panel	73
Operating with PSP™ system buttons or the remote control	77
Photo options menu	78
Playing slideshows	80
Saving images on a Memory Stick Duo™	84

■ Network

Using the Internet	86
Connecting to the Internet	87

■ Settings

Settings for the PSP™ system	90
Video Settings	92
Photo Settings	93
System Settings	94
Theme Settings	97
Date & Time Settings	98
Power Save Settings	99
Sound Settings	101
Security Settings	102
USB Connection	106
Network Settings	108
Network Update	115
How to use the keyboard	118

■ Additional information

PSP™ updates	121
Compatible media	123
Specifications	126
Troubleshooting	131
LIMITED WARRANTY	139

Precautions

Before using this product, carefully read this manual and retain it for future reference.

Safety

This product has been designed with the highest concern for safety. However, any electrical device, if used improperly, has the potential for causing fire, electrical shock or personal injury. To help ensure accident-free operation, follow these guidelines:

- Observe all warnings, precautions and instructions.
- Regularly inspect the AC adaptor and AC power cord for damage and for dust build-up around the power plug or electrical outlet.
- Stop use, unplug the AC power cord from the electrical outlet and disconnect any other cables immediately if the device functions in an abnormal manner, produces unusual sounds or smells or becomes too hot to touch.
- Call SCEA Consumer Services at 1-800-345-7669 if the device does not operate properly.

Use and handling

- Use in a well-lit area and keep the screen a safe distance from your face.
- Avoid prolonged use of the PSP™ system. To help prevent eyestrain, take a break of about 15 minutes during every hour of play.
- If you experience any of the following health problems, discontinue use of the system immediately. If symptoms persist, consult with your physician.
 - Dizziness, nausea, fatigue or symptoms similar to motion sickness
 - Discomfort or pain in a part of the body, such as eyes, ears, hands or arms
- Keep the system and accessories out of the reach of small children. Small children may swallow the Memory Stick Duo™ or wrap the cables/straps around themselves, which may inflict injury or cause an accident or a malfunction.
- Do not use the system while driving or riding a bicycle. Looking at the screen or operating the system while driving an automobile or riding a bicycle may result in a traffic accident.
- Take extra care when using the system while walking.
- Be careful not to pinch your fingers when closing the disc cover.

- Do not use the system or accessories near water.
- Use only attachments/accessories specified by the manufacturer.
- Do not use the headphones if they cause discomfort to your skin.
If the supplied headphones cause discomfort to your skin, discontinue use immediately. If symptoms do not subside even after discontinuing use, seek medical attention.
- Do not expose the system or accessories to high temperatures, high humidity, or direct sunlight.
- Do not leave the system or accessories in a car with the windows closed (particularly in summer).
- Do not expose the system or accessories to dust, smoke or steam.
- Do not allow liquid or small particles to get into the system or accessories.
- Do not place the system or accessories on surfaces that are tilted, unstable or subject to vibration.
- Do not throw, drop or step on the system or accessories, and do not subject the devices to strong physical shock. Sitting down with the PSP™ system in a pocket or placing the system in the bottom of a backpack along with heavy objects may cause damage to the system.
- Do not forcibly twist the PSP™ system or expose the system to strong physical shock during gameplay, as doing so can damage the system or cause the disc cover to open, ejecting the disc. Handle the analog stick with care.
- Do not put heavy objects on the system or accessories.
- Do not touch or insert foreign objects into the connectors of the system or accessories.
- Do not place the system close to items with a magnetic strip, such as credit cards.
- Do not touch the system or AC adaptor for an extended period of time while in use. Depending on the conditions of use, the system or AC adaptor may reach temperatures of 40°C/104°F or more. Extended contact under these conditions may cause low-temperature burns*.

* Low-temperature burns are burns that occur when the skin is in contact with objects of relatively low temperatures (40°C or more/104°F or more) for an extended period of time.

AC adaptor and AC power cord use

- Do not touch the plug of the AC power cord with wet hands.
- Do not touch the AC power cord, AC adaptor or the system, if connected to an electrical outlet, during an electrical storm.
- Do not use a power source other than the supplied battery pack, AC adaptor and AC power cord.

- Do not allow dust or foreign matter to build up around the system or accessory connectors. If there is dust or foreign matter on the system's connectors or the AC power cord, wipe it off with a dry cloth before connecting. Dust or other matter on the connectors can result in fire or electrical shock.
- Unplug the AC power cord from the electrical outlet and remove the battery pack from the system before cleaning or when you do not intend to use the system for an extended period of time.
- Protect the AC power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the system.
- When disconnecting the AC power cord, hold it by the plug and pull straight out from the electrical socket. Never pull by the cord and do not pull at an angle.
- Do not use the system to play games or video when the system is covered with any type of fabric. If you want to pause or temporarily store the system while playing games or video, put the system in sleep mode before placing it in the pouch. Also do not use the AC adaptor when covered with fabric. This may help to avoid overheating.
- Do not connect the AC power cord to a voltage transformer or inverter. Connecting the AC power cord to a voltage transformer for overseas travel or an inverter for use in an automobile may cause heat to build up in the AC adaptor and may cause burns or a malfunction.


LCD screen

- The LCD screen is made of glass and may crack if subjected to excessive force.
- Red, blue or green spots (bright spots) or black spots (dark spots) may appear in certain locations on the LCD screen. The appearance of such spots is a normal occurrence associated with LCD screens and is not a sign of a malfunction. LCD screens are made using highly precise technology. However, a very small number of dark pixels or continuously lit pixels exist on each screen. Also, a distorted image may remain on the screen for several seconds after the system has been turned off.
- Direct exposure to sunlight may damage the system's LCD screen. Be careful when using the system outdoors or near a window.
- When using the system in a cold environment, you may notice shadows on the graphics or the screen may appear darker than usual. This is not a malfunction, and the screen will return to normal when the temperature goes up.

- Do not leave still images displayed on the screen for an extended period of time. This may cause a faint image to be left permanently on the screen.

Memory Stick Duo™

For best results, follow these guidelines:

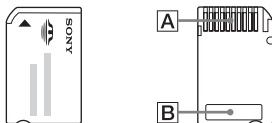

- Do not touch the connector area (A) with your hands or with metal objects.
- Do not press hard when writing on the memo area (B).
- Do not insert a Memory Stick Duo™ into a device designed to accept only standard-size Memory Stick™ media.
- Do not use or store a Memory Stick Duo™ in the following:
 - Places subject to high temperatures, such as in a hot vehicle
 - Locations exposed to direct sunlight
 - Locations that are very humid or conducive to corrosion
- Use the supplied case to carry or store the Memory Stick Duo™.
- When using Memory Stick Duo™ media without an erasure prevention switch, take care not to overwrite or delete data by accident. If your Memory Stick Duo™ media has an erasure prevention switch, you can prevent data from being saved, edited, or deleted by setting the switch in the LOCK position.

■ Recorded data

Do not use the Memory Stick Duo™ in the following ways, as doing so may result in data loss or corruption:

- Removing the Memory Stick Duo™ or turning off the system while it is loading or saving data or being formatted.
- Using it in a location that is exposed to static electricity or electrical interference.

If, for any reason, software or data loss or corruption occurs, it is usually not possible to recover the software or data. It is recommended that you regularly back up software and data. Sony Computer Entertainment Inc. and its subsidiaries and affiliates will not be held liable for any damages or injury in the case of software or data loss or corruption.

In accordance with copyright law, no recorded data may be used for purposes other than personal enjoyment without permission from the copyright holder.

US

Pouch

- If you want to pause or temporarily store the system while playing games or video, put the system in sleep mode before placing it in the pouch. This may help to avoid overheating.
- Put both the PSP™ system and the remote control in hold mode to help prevent unintended operation.

Never disassemble the system or supplied accessories

Use the PSP™ system and accessories according to the instructions in this manual. No authorization for the analysis or modification of the system, or the analysis and use of its circuit configurations, is provided. Disassembling will void the system warranty. Additionally, there is a risk of fire, electrical shock or malfunction. The LCD screen, in particular, contains dangerous, high-voltage parts, and the laser beam for reading UMD™ may cause visual impairment if exposed directly to the eyes.

Using the access point

When using the PSP™ system's 'Scan' function to select the wireless LAN access point, access points that are not intended for public use may be displayed. Only connect to a personal access point that you are authorized to use, or one that is available through a public wireless LAN or hotspot service.

Overseas use

Depending on the country, there are limitations on the use of certain types of radio waves. In some cases, use of the system may lead to a fine or other penalty.

Moisture condensation

If the PSP™ system or UMD™ is brought directly from a cold location to a warm one, moisture may condense on the lens inside the system or on the UMD™. Should this occur, the system may not operate properly. In this case, remove the UMD™ and turn off and unplug the system. Do not put the UMD™

back in until the moisture evaporates (this may take several hours). If the system still does not operate properly, contact our technical support line at 1-800-345-7669 for assistance.

UMD™ handling

- Do not touch the opening on the rear of the disc (recorded surface of the disc) with your fingers.
- Do not allow dust, sand, foreign objects or other types of dirt to get on the disc.
- If the UMD™ becomes dirty, gently wipe the exterior and recorded surfaces of the UMD™ using a soft cloth. Do not use solvents or other chemicals.

Cleaning

For safety reasons, unplug the AC power cord from the electrical outlet and remove the battery pack from the system before cleaning.

■ Cleaning the exterior surface

Wipe gently with a soft cloth. Do not use solvents or other chemicals to clean the exterior of the PSP™ system.

■ Cleaning the LCD screen

Wipe gently with a soft cloth.

■ Cleaning the connectors

- Do not use when the connectors of the system, AC adaptor or the AC power cord are not clean. Remove the dirt with a dry cloth or cotton swab. If used when dirty, the flow of electrical current may be obstructed.
- If the headphones or remote control connectors become dirty, this could cause noise or interruptions in sound. Wipe the connectors with a dry, soft cloth to keep in clean condition.

Battery pack precautions

Warnings

Do not handle a damaged or leaking battery pack.

Contact with the material can result in injury or burns to the eyes or skin. Even if foreign substances are not immediately visible, chemical changes in the material can result in injuries occurring at a later time.

If you come into contact with material from a leaking battery pack, take the following actions:

- If the material gets into the eyes, do not rub. Immediately flush the eyes with clean water and seek medical attention.
- If the material comes into contact with the skin or clothes, immediately rinse the affected area with clean water. Consult your physician if inflammation or soreness develops.

Handle the battery pack with care.

The battery pack may explode or present a fire or chemical burn hazard if it is not handled carefully.

- Do not allow the battery pack to come into contact with fire or subject it to extreme temperatures such as in direct sunlight, in a vehicle exposed to the sun or near a heat source.
- Do not cause the battery pack to short-circuit.
- Do not disassemble or tamper with the battery pack.
- Prevent damage to the battery pack. Do not carry or store the battery pack with metal items such as coins or keys. If damaged, discontinue use.
- Do not throw or drop the battery pack or subject it to strong physical shock.
- Do not put heavy objects on or apply pressure to the battery pack.
- Do not allow the battery pack to come into contact with liquids. If it becomes wet, discontinue use until it is completely dry.
- Keep the battery pack out of the reach of small children.
- If the PSP™ system will not be used for an extended period of time, remove the battery pack and store it in a cool, dry place out of the reach of children.
- Use only the supplied battery pack or a replacement marked for use with the PSP™ system.
- Use only the designated AC adaptor to charge the battery pack.

Recycling Lithium-Ion Batteries

Lithium-Ion batteries are recyclable.

You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.



For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit <http://www.rbrbc.org/>


 **Caution**

Do not handle damaged or leaking Lithium-Ion batteries.

Checking the package contents

Check that you have all of the following items. If any items are missing, contact our technical support line at 1-800-345-7669 for assistance.

- PSP™ (PlayStation®Portable) system

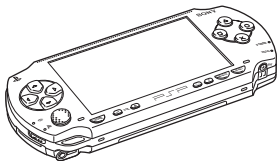

- Battery pack



- AC adaptor



- AC power cord




- Pouch

- Cloth

- Printed materials

- Headphones with remote control

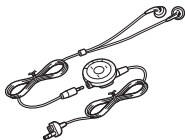

Supplied with the Value Pack:


- Memory Stick Duo™ (32 MB)
- Wrist strap

Supplied with the Giga Pack:

- Memory Stick PRO Duo™ (1 GB)
- Stand
- USB cable

Part names and functions

System front

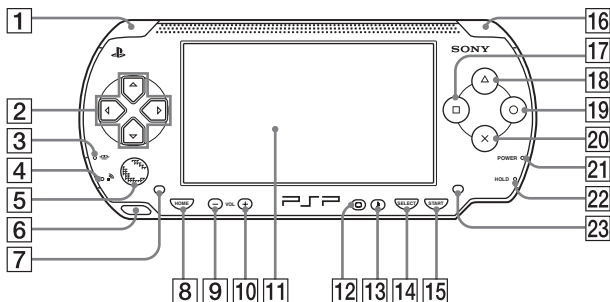

1 L button

2 Directional buttons

3 Memory Stick Duo™ access indicator

Lights up when saving and loading data

4 WLAN access indicator


Lights up when using the wireless networking feature

5 Analog stick

Can be used with games that support analog operation. To optimize the analog stick's functionality, with the "System Information" screen under "System Settings" (→ page 96) displayed, you can rotate the analog stick in a circular motion to adjust its range of movement.

6 Strap holder

Attach as shown in the diagram.

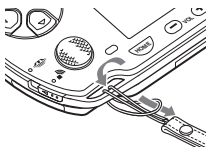

7 Left speaker

8 Home button

Displays the home menu

9 Volume - button


Turns the volume down

10 Volume + button

Turns the volume up


- 11 LCD screen**
- 12 Display button**
Adjusts screen brightness
(**► page 38)
- 13 Sound button**
Adjusts the tone (**► page 36)
- 14 Select button**
- 15 Start button**
- 16 R button**
- 17 □ button**
- 18 ▲ button**
- 19 ○ button**
- 20 × button**
- 21 Power indicator**
Lights up, flashes or changes color to indicate system status
(**► page 29)
- 22 Hold indicator**
Turns yellow when in hold mode
(**► page 35)
- 23 Right speaker**

System rear

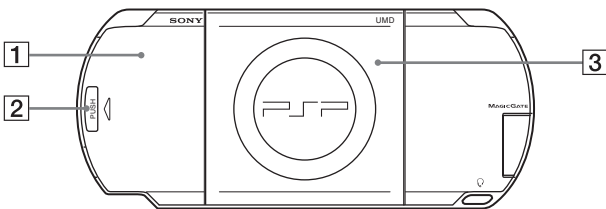

- 1 Battery cover**
- 2 Push button**
- 3 Disc cover**

System top

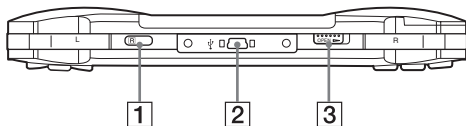


1 IR port

3 Open latch

2 USB connector

System bottom

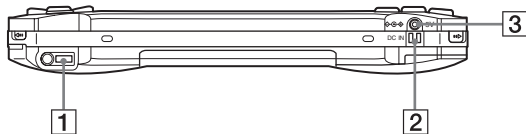


1 Headset connector

3 DC IN 5V connector

2 Charging terminals

System left side

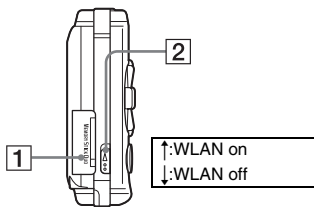


1 Memory Stick Duo™ slot*

2 WLAN switch

Turns on the wireless networking feature

System right side

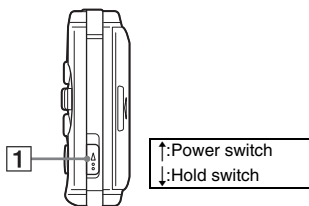


1 Power/hold switch

Turns the system on and off, puts in sleep mode (**► pages 29, 31) and locks the system buttons (**► page 35)

* References in this manual to "Memory Stick Duo™" apply to both Memory Stick Duo™ and Memory Stick PRO Duo™ unless otherwise noted. Also, the PSP™ system messages use "Memory Stick" as a general reference to Memory Stick Duo™ and Memory Stick PRO Duo™. Note that standard-size Memory Stick™ media cannot be used with the PSP™ system.


Headphones with remote control

Remote control front

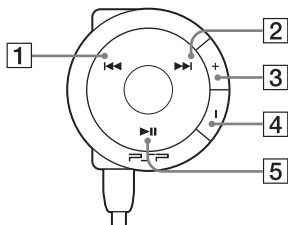

- 1 **◀◀ button**
- 2 **▶▶ button**
- 3 **Volume + button**
Turns the volume up
- 4 **Volume - button**
Turns the volume down
- 5 **▶|| button**


Remote control side

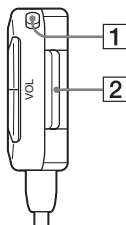

- 1 **Hold switch**
Locks the operation of the remote control. Note that this button does not lock the buttons of the PSP™ system.
- 2 **Clip**

Stand

The stand is supplied with the Giga Pack.

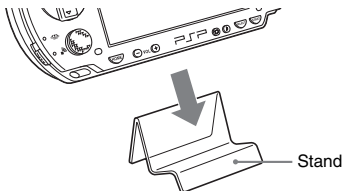

Hint

Do not place the stand on unstable surfaces.

Preparing the PSP™ system for use

Before using the PSP™ system for the first time after purchase, you must follow these steps to charge the battery.

Before inserting the battery pack, find the serial and model numbers listed within the battery compartment and make a record of the numbers in the spaces provided under Owner's Record on page 4.

 
US

Preparation

Getting started 1: Inserting the battery pack


1 Remove the battery cover.

Hold down the push button and slide the battery cover open.




2 Insert the battery pack.

Align the bottom surface of the battery pack with the system to attach.

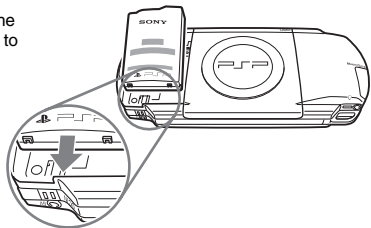

3 Replace the battery cover.

- ② Slide the battery cover in the direction of the arrow until it locks firmly into place.

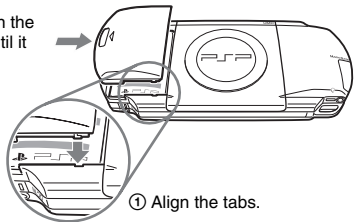


Getting started 2: Charging


Caution

- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Do not plug the AC power cord for the PSP™ system into an electrical outlet until you have made all other connections.


1 Plug the AC power cord into the AC adaptor.

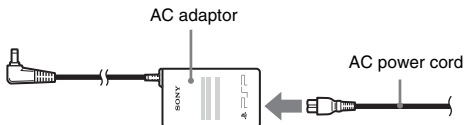

2 Connect the AC adaptor to the DC IN 5V connector on the system bottom.

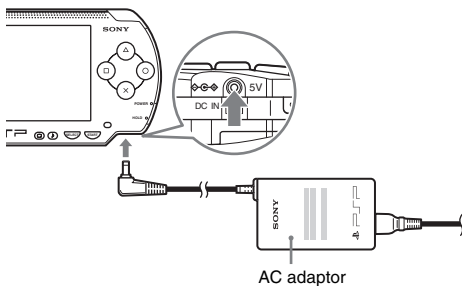

3 Plug the AC power cord into an electrical outlet.

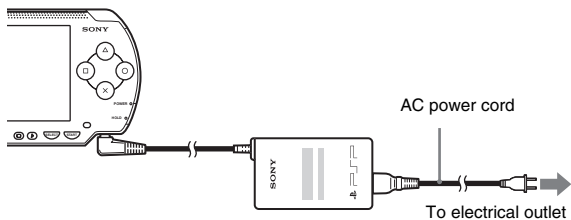

The power indicator lights up in orange, indicating that charging has begun. The power indicator will turn off when the battery is fully charged.

4 Unplug the AC power cord from the electrical outlet and disconnect the AC adaptor from the system.

Hint

For information on how to charge the battery, see "Battery" (••▶ page 39).

Getting started 3: Initial setup


1 Turn on the PSP™ system (••▶ page 29).

The power indicator lights up in green, and the initial setup screen is displayed.

2 Follow the on-screen instructions to make settings for system language, time zone, date and time and nickname.


When you have completed initial setup, the home menu (••▶ page 7) is displayed.

Hints

- See "How to use the keyboard" (••▶ page 118) for information on how to enter characters.
- Settings made during initial setup can be changed in  (Settings). See "System Settings" (••▶ page 94) and "Date & Time Settings" (••▶ page 98) for details.

Connecting the headphones with remote control

1 Connect the headphones to the PSP™ system.

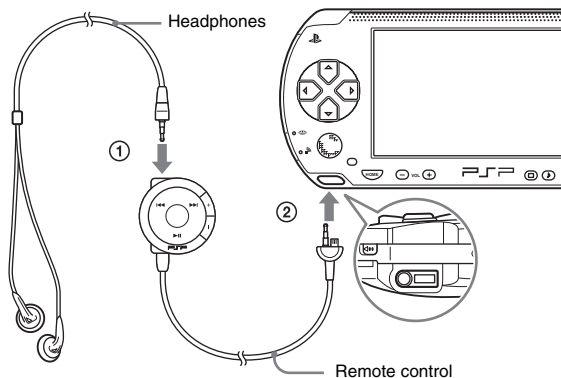

- 1 Plug the headphones into the remote control.
- 2 Plug the headphones into the headset connector on the system bottom.


Hint

The remote control is exclusively for use with the PSP™ system and accessories made exclusively for the PSP™ system. It cannot be used with other devices. Also, remote controls made for use with other devices cannot be used to operate the PSP™ system.

Turning the PSP™ system on and off

Turning the system on

- 1 Slide the power/hold switch up.

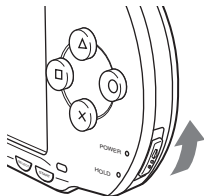

The power indicator lights up in green, and the home menu is displayed.

Hints

- If the PSP™ system is turned on with a UMD™ inserted, the UMD™ will begin playback automatically.
- The system can be used with the AC adaptor connected. In this case, charging will begin automatically. The power indicator lights up in orange while charging.
- Do not use the PSP™ system with the AC adaptor when the battery pack is not inserted in the system. If the AC adaptor is disconnected suddenly, it may result in damage to the system.

Power indicator

The color and condition (solid or flashing) of the light indicates system status.

Solid green	Power on
Solid orange	Charging
Flashing green	Charge level is low
Light off	Power off/in sleep mode

Turning the system off

- 1 Hold the power/hold switch in the up position for more than three seconds.**

The power indicator flashes and then turns off, indicating that the system is turned off.

Using sleep mode


If the PSP™ system is switched to sleep mode, the software that is playing will be paused. When sleep mode is cleared, you can begin playback from the point where the system entered sleep mode.

Notices

- Do not put the system in sleep mode while the Memory Stick Duo™ access indicator is on. This may cause data loss or corruption.
- If the battery runs out while in sleep mode, when you clear sleep mode, the system will not return to the screen that was displayed before entering sleep mode. It is recommended that you save game data before you put the system in sleep mode.

Putting into sleep mode

- 1** With the system turned on, slide the power/hold switch up.

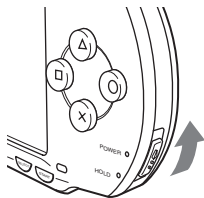

The power indicator flashes and then turns off, and the system enters sleep mode.

Hint

Some software cannot be put in sleep mode.

Clearing sleep mode

1 Slide the power/hold switch up again.

Sleep mode is cleared.

Hints

- You can also clear sleep mode by pressing the ►|| (play/pause) button of the remote control, if the system was put in sleep mode during music or video playback.
- After clearing sleep mode with video or music content, you can resume playback from the point where the system entered sleep mode by following the steps below.

Video	With the icon for the video selected, do any of the following: <ul style="list-style-type: none">- Press the start button or ⊗ button.- Press the ► button of the remote control.- Select "Play" from the options menu (•▶ page 56).
Music saved on a Memory Stick Duo™	With the icon for the Memory Stick Duo™ selected, do any of the following: <ul style="list-style-type: none">- Press the start button.- Press the ► button of the remote control.- Select "Play" from the options menu (•▶ page 67).

Inserting a UMD™

Notice


Do not eject a UMD™ during playback.

1 Slide the open latch on the PSP™ system top.

The disc cover opens.

2 Insert a UMD™.

With the disc label facing the system rear, slide the UMD™ in the direction of the arrow until it is fully inserted.

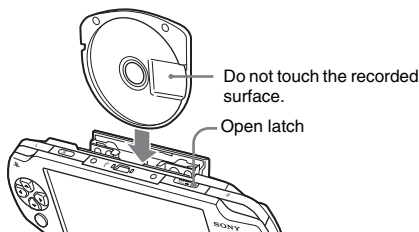

3 Close the disc cover.

Ejecting the UMD™

Slide the open latch on the system top to open the disc cover.

Hint


When ejecting, hold the PSP™ system in an upright position (as shown in the diagram above).

Inserting a Memory Stick Duo™


Warning

Keep Memory Stick Duo™ media out of the reach of small children, as the media could be swallowed by accident.

1 Open the slot cover and insert the Memory Stick Duo™.

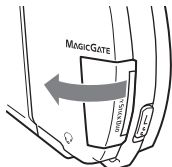


Open the slot cover in the direction of the arrow.

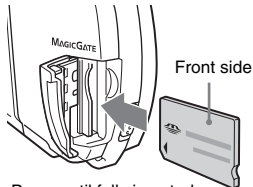

Press until fully inserted.


Ejecting the Memory Stick Duo™

Open the slot cover and press the Memory Stick Duo™ in the direction of the arrow to eject.

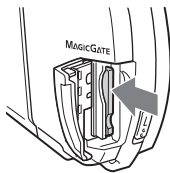


Notice

When the Memory Stick Duo™ access indicator is lit, the PSP™ system is saving or loading data. Do not eject the Memory Stick Duo™, turn off the system or put the PSP™ system in sleep mode while the indicator is lit. Doing so may cause data loss or corruption.

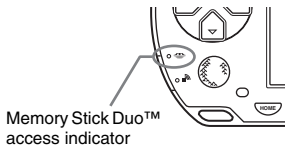

Avoiding unintended operation of the PSP™ system

- 1 Slide the power/hold switch down.**

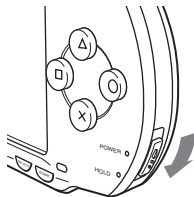

The switch locks into place.

The hold indicator turns yellow, indicating that the system buttons are locked.

Clearing hold mode

Slide the power/hold switch to its original position.


Using the sound button

The sound button is used to adjust the tone and to mute the sound for audio playback and for key tones.

Adjusting the tone

Tone can only be adjusted when using the headphones.

1 Press the sound button.

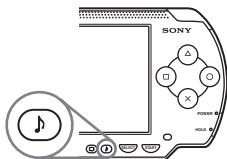

Each time you press the button, the tone changes as follows:

HEAVY	Strengthens both bass and treble to produce an intense sound
POPS	Strengthens the mid-range; ideal for vocals
JAZZ	Strengthens both bass and treble to produce a balanced sound
UNIQUE	Strengthens bass, treble and mid-range sound
OFF	Normal tone

Hint

The tone setting is temporarily set to "OFF" during gameplay.

Turning off the sound (mute)

1 Hold down the sound button for more than one second.

The sound will be muted.

Clearing mute

You can clear mute by any of the following methods:


- Pressing the sound button
- Pressing the volume + or volume - button on the system or on the remote control

Using the display button

The display button is used to adjust screen brightness.

Adjusting screen brightness

1 Press the display button.

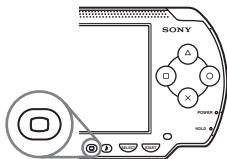

Each time you press the button, the display changes as follows:

Level 1	Darker
Level 2	↓
Level 3	
(Level 4)	
	Brighter

Hint

Level 4 can be selected only while the PSP™ system is plugged in using the AC adaptor.

Turning off the backlight

1 Hold down the display button for more than one second.


The backlight will turn off and the screen will go blank.

If you press any of the system buttons, the screen will be displayed again.

Battery

Battery charge level

The battery charge level is displayed on the screen.

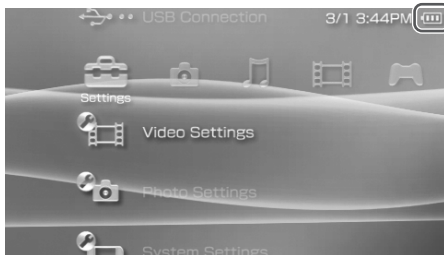

Battery charge level

US

Basic operations

Estimating the remaining battery power

	There is plenty of power left.
	The battery is getting low.
	The battery has almost run out.
	No battery power remains. The power indicator flashes green. Recharge the battery.

Hints

- If the power indicator flashes green, save game progress and recharge the battery. If the battery runs out before you save, game progress will be lost.
- The charge level display may vary slightly from the actual charge level, depending on the usage conditions and environmental factors, such as temperature. If the display is not correct, use the battery pack until it is completely out of power and then recharge. Note that the display may not be accurate in the following conditions:
 - if the battery is used for extended periods in conditions of high temperature
 - if the battery is not used for a long time after recharging
 - if the battery has been recharged many times

- Battery charge level can also be checked in "Battery Information" under "System Settings" (▶▶ page 95).
- If the PSP™ system is left unused after the battery runs out, the date and time settings may be reset. If this occurs, the date and time setting screen will be displayed the next time the system is turned on.
- The battery cannot be recharged when the WLAN feature is in use.

Estimated battery duration

Game	Approximately 3 - 6 hours* ¹
Video playback	Approximately 3 - 5 hours* ²

*1 Based on tests conducted using the supplied battery pack, with the system in single player mode, with headphones with remote control in use, and with wireless LAN not in use.

*2 Based on tests conducted using variables of system speakers versus headphones, volume level and screen brightness level.

Hint

Battery duration may vary depending on the type of content being played or usage conditions such as screen brightness and environmental factors. As battery ages, anticipate lower battery duration.

Estimating the battery charge time

When using the supplied battery pack, it takes approximately 2 hours and 20 minutes to fully charge the battery using the AC adaptor after the battery has run out.

Hints

- Charge in a temperature of 10°C to 30°C/50°F to 86°F. Charging may not be as effective in other environments.
- Charging may take longer when the system is turned on during charging.

Battery pack life

The battery pack has a limited lifespan. Battery duration will decrease with repeated usage and age. If the battery duration becomes extremely short, it may be time to replace the battery pack.