SONY

User guide

Bluetooth® Speaker BSP10

Contents


Introduction	3
Function overview	3
Hardware overview	3
Notification light status	3
Charging	4
To charge your accessory	
Getting started	5
To prepare using your accessory with an Xperia [™] device	
Disconnecting and reconnecting	6
To disconnect your Xperia [™] device from or reconnect it with	
your accessory	6
Troubleshooting	7
I cannot answer a second call	
The Bluetooth® Speaker turns off unexpectedly	7
Unexpected behaviour	7
No connection between Bluetooth® Speaker and other device	7
Legal information	8
DECLARATION OF CONFORMITY FOR BSP10	

Introduction

Function overview

The BSP10 Bluetooth® Speaker accessory lets you enjoy high-quality audio and make conference call indoors and outdoors.

Hardware overview

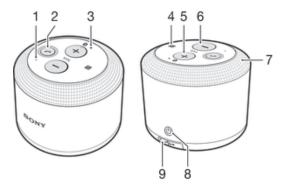

- 1 Microphone
- 2 Handsfree button Speaker
- 3 Bluetooth notification light
- 4 NFC detection area
- 5 Volume up button
- 6 Volume down button
- 7 Speaker
- 8 Power button
- 9 Power notification light/power input


Notification light status

Flashing rapidly	Pairing mode – The BSP10 accessory is ready to pair with an Xperia [™] device
Steady blue light	The BSP10 accessory is paired with an Xperia [™] device
Steady white light	Standby mode – The BSP10 accessory is not pairing with an Xperia [™] device

Charging

To charge your accessory

There are several ways to charge your accessory:

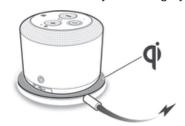



- Connect the **BSP10** to a power source.
- Place the BSP10 on any Wireless Charging Plate which supports the Qi inductive power standard.

Getting started

To prepare using your accessory with an Xperia[™] device

Before you can use your **BSP10** accessory with an Xperia[™] device, for example, to play music or handle incoming calls, you must first pair the two devices. You can pair your **BSP10** accessory with an Xperia[™] device using either the Bluetooth® or NFC functions. Once the devices are paired, your **BSP10** accessory automatically establishes a connection with the Xperia[™] device.

To pair the BSP10 accessory with an Xperia[™] device using NFC



- 1 On the Xperia[™] device, make sure that the NFC function is turned on and that the screen is active and unlocked.
- 2 Turn on the **BSP10** accessory.
- 3 Position your Xperia[™] device in such a way that the NFC detection area of each device touches the other.

To pair the BSP10 accesory with an Xperia[™] device using Bluetooth®

- 1 Xperia[™] device: Make sure the Bluetooth® function is turned on.
- 2 **BSP10** accessory: Press and hold down the Bluetooth pairing button until you hear a beep and a blue notification light flashes rapidly.
- Xperia[™] device: Search for and connect to the **BSP10** accessory. When the accessory is successfully paired with the Xperia[™] device, the notification light turns solid blue.

To use the BSP10 accessory to answer incoming calls

- 1 Make sure the **BSP10** accessory is paired with an Xperia[™] device that supports call handling.
- 2 When a call comes in, press ?.
- Please note that the calling function and call button is not supported for VoIP call.

To use the BSP10 accessory to listen to music

- 1 Make sure the **BSP10** accessory is paired with an Xperia[™] device.
- 2 Play the audio or video file on the Xperia[™] device. The sound is automatically played through the speakers of the paired BSP10 accessory.

Disconnecting and reconnecting

To disconnect your Xperia[™] device from or reconnect it with your accessory

There are several ways to disconnect your Xperia[™] device from or reconnect it with the **BSP10** accessory:

- On the Xperia[™] device, deselect or select BSP10 in the list of paired Bluetooth® devices.
- Place the Xperia[™] device over the BSP10 accessory so that the NFC detection area
 of each device touches the other.

To pair with another device

- 1 On the Xperia[™] device, deselect BSP10 accessory in the list of paired Bluetooth® devices.
- Repeat the pairing procedures using NFC, see *To pair the BSP10 accessory* with an $Xperia^{TM}$ device using NFC.
- 3 Repeat the pairing procedures using Bluetooth®, see *To pair the BSP10 accesory with an Xperia™ device using Bluetooth®*.

Troubleshooting

I cannot answer a second call

- Make sure that your calling device supports the Bluetooth® Handsfree profile.
- Make sure that the correct calling device is selected.

The Bluetooth® Speaker turns off unexpectedly

If the speaker beeps several times shortly before turning off, the battery level is low.
 Charge the battery.

Unexpected behaviour

· Reset the speaker.

No connection between Bluetooth® Speaker and other device

- Make sure that the speaker is charged and within range of the device that you want to connect to. A maximum distance of 10 metres (33 feet), with no solid objects in between, is recommended.
- Disable the Bluetooth® function in the other device so that all connections are closed, then re-enable the Bluetooth® function and pair the speaker with the device again.

Legal information

SONY BSP10

Prior to use, please read the Important information leaflet separately provided



This User guide is published by Sony Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved.

©Sony Mobile Communications AB, 2014

Interoperability and compatibility among Bluetooth® devices varies. Device generally supports products utilizing Bluetooth spec. 1.2 or higher, and Headset or Handsfree profile.

Sony is the trademark or registered trademark of Sony Corporation. Bluetooth is the trademark of the Bluetooth (SIG) Inc. and is used under license. All other marks are the property of their respective owners. All

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.

Visit www.sonymobile.com for more information.

All illustrations are for illustration only and may not accurately depict the actual accessory.

DECLARATION OF CONFORMITY FOR BSP10

We, Sony Mobile Communications AB of

Nya Vattentornet

SE-221 88 Lund, Sweden

declare under our sole responsibility that our product

Sony type RD-0160

to which this declaration relates is in conformity with the appropriate standards EN 300 328:V1.8.1, EN 300 330-2:V1.5.1, EN 301 489-7:V1.3.1, EN 301 489-17:V2.2.1, EN 301 489-3:V1.6.1 and EN 60 950-1: 2006+A11:2009+A1:2010+A12:2011, EN 62 311:2008 following the provisions of, Radio Equipment and Telecommunication Terminal Equipment directive 1999/5/EC.

Lund, July 2014

C€ 0682 ①

Pär Thuresson,

Quality Officer, SVP, Quality & Customer Services

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Any change or modification not expressly approved by Sony may void the user's authority to operate the

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

AVISO IMPORTANTE PARA MÉXICO

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Para consultar la información relacionada al número del certificado, reflérase a la etiqueta del empaque y/o del

Alimentación: 5,0 Vcc

Industry Canada Statement

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Avis d'industrie Canada

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de

L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et, and (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.