

# SONY®

## Important information

EN	PB
AR	PL
DE	RU
EL	SV
ES	TH
FA	TR
FR	UK
IN	VI
IT	ZS
JA	ZT
KO	

©2014

## English



*Note! Read this information before using your transmitting device.*

### **LIMITED WARRANTY**

Subject to the conditions found at [www.sonymobile.com/warranty](http://www.sonymobile.com/warranty), Sony Mobile warrants this device to be free from defects at the time of its original purchase by a consumer and for 1 year thereafter. Sony Mobile will either repair or replace (at its option) the device if it fails to meet this warranty. Printed version of the full set of warranty conditions can be ordered by contacting your local Sony Mobile repair partner.

### **GUIDELINES FOR SAFE AND EFFICIENT USE**

Changes or modifications to this transmitting device not expressly approved by Sony Mobile may void the user's authority to operate the equipment.

Please check for any exceptions, due to national requirements or limitations, in usage of transmitting equipment before using this device.

### **Taking care of your device**

- Do not expose your device to levels of dust, dirt, liquid, moisture or humidity above or outside the intended use.
- Treat the device with care and do not expose it to extreme high or low temperatures.
- Do not use any other accessories than Sony Mobile originals intended for use with this device.
- Do not attempt to disassemble your device.
- Only Sony Mobile repair partners should perform service and/or remove or replace the battery.

### **Radio frequency exposure**

Your transmitting device is a radio transmitter and receiver. When in operation, it communicates with a transmitting equipped mobile device by receiving and transmitting radio frequency (RF) electromagnetic fields (microwaves) in the frequency range 2400 to 2500 MHz. The output power of the radio transmitter is low, less than 0.01 watt.

Your transmitting device is designed to operate in compliance with the RF exposure guidelines and limits set by national authorities and international health agencies when used with any compatible Sony mobile device.

#### **Safety and health aspects**

- Sony Mobile recommends that the transmitting headset is worn in positions where it will not be subject to pressure since such pressure may result in bodily injury or damage to the device.
- Do not allow children to play with your transmitting device since it contains small parts that could become detached and create a choking hazard.
- Loudness warning - adjust the audio volume cautiously when using third-party head phones to avoid volume levels that may be harmful to your hearing. Sony Mobile does not test use of third-party head phones with mobile phones and accessories. Sony Mobile recommends using only Sony Mobile original head phones.
- Check the laws and regulations on the use of mobile phones and transmitting device equipment in the areas where you drive. Always give full attention to driving.

#### **Electronic equipment interference**

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment is not, therefore:

- Do not use your device near medical equipment without requesting permission. For use in proximity to personal medical devices, please consult a physician and the medical device manufacturer.
- Check with your vehicle manufacturer's representative to be sure that your transmitting device will not affect the electronic systems in your vehicle.
- Turn your transmitting device OFF before boarding any aircraft or follow the instructions given by the flight crew.

- Turn off all your electronic devices when in a blasting area or in areas posted turn off two-way radio to avoid interfering with blasting operations. Construction crews often use remote control RF devices to set off explosives.
- Turn off your electronic device when in any area with a potentially explosive atmosphere. It is rare, but your electronic device could generate sparks. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Areas with a potentially explosive atmosphere are often, but not always, clearly marked.

**Disposal of old electrical and electronic equipment and battery**

This symbol on the electronic product or on its packaging indicates that the electronic product inclusive the battery



should not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Do not attempt to remove internal batteries. Internal batteries shall be removed only by a waste treatment facility or trained service professional.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service, the shop where you purchased the product or by calling a Sony Contact Center or at [www.sonymobile.com/recycling](http://www.sonymobile.com/recycling).

**Power supply**

Connect the AC power adapter only to designated power sources as marked on the device.

**Emergency calls (applicable for Bluetooth Headsets)**

**IMPORTANT!**

Bluetooth handsfree and the electronic device connected to such handsfree operate using radio signals, cellular and landline networks as well as user-programmed functions, which cannot guarantee connection under all conditions. Therefore, Sony Mobile recommends using the mobile phone directly for essential communications (e.g. medical emergencies).

**Battery information**

A rechargeable battery has a long service life if treated properly. Do not expose the battery to extreme temperatures, never above +55°C (+131°F). For maximum battery capacity, use the battery in room temperature. If the battery is used in low temperatures, the battery capacity will be reduced. Charge the battery in temperatures between +5°C (+41°F) and +45°C (+113°F).

**Recycling the battery in your transmitting device**

The battery in your transmitting device must be disposed of properly and should never be placed in municipal waste. Sony Mobile repair partner removing the battery will dispose of it according to local regulations.

**Disclaimer**

This Sony Mobile device has been confirmed to communicate via transmitting with some devices from other manufacturers. An updated list of devices this Sony Mobile device has been confirmed to communicate with can be obtained from the Sony Mobile global web site [www.sonymobile.com](http://www.sonymobile.com) or from your local Sony Mobile dealer. Sony Mobile does not guarantee that use of this device will be uninterrupted or error free. Performance of this transmitting enabled device with other devices not listed may vary as all transmitting devices are not compatible. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. If you purchased your product in Australia, you are entitled to a replacement or refund for a major failure and compensation for any

other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. For warranty service in Australia, please contact 1300 650 050 or Sony Service Centre, Unit 4 / 189 Woodville Road Villawood NSW 2163.

### Trademarks and acknowledgements

Sony is a trademark or registered trademark of Sony Corporation. Bluetooth is a trademark or registered trademark of Bluetooth SIG Inc., and any use of such marks by Sony Mobile is under license.

## العربية

☀️ ملاحظة! اقرأ هذه المعلومات قبل استخدام الجهاز المزود بميزة النقل.

### الضمان المحدود

بموجب الشروط التي يمكن العثور عليها على الموقع [www.sonymobile.com/warranty](http://www.sonymobile.com/warranty)، تضمن شركة Sony Mobile خلو هذا الجهاز من العيوب في وقت شرائه الأصلي بواسطة المستهلك ولمدة عام واحد بعد ذلك. وستقوم شركة Sony Mobile إما بإصلاح الجهاز أو استبداله (وفق اختيارها) إذا فشل في الوفاء بهذا الضمان. يمكن طلب نسخة مطبوعة تضم المجموعة الكاملة لشروط الضمان من خلال الاتصال بشريك إصلاح Sony Mobile المحلي لديك.

### إرشادات للاستخدام الآمن والفعال

قد يتسبب إدخال أية تغييرات أو تعديلات على جهاز النقل هذا لم توافق عليها Sony Mobile صراحة إلى إبطال التحويل الممنوح للمستخدم بتشغيل هذا الجهاز. يرجى التحقق من وجود أية استثناءات، وفقاً للمتطلبات أو القيود الوطنية، في استخدام الجهاز المزود بميزة النقل قبل استخدام هذا الجهاز.

### العناية بجهازك

- تجنب تعريض الجهاز لمستويات من الغبار أو الأتربة أو السوائل أو البلى أو الرطوبة أعلى من الاستخدام المخصص أو خارجه.
- تعامل مع الجهاز بحرص ولا تعرضه لدرجات الحرارة العالية أو المنخفضة بشكل كبير.