



Active Subwoofer Altavoz de subgraves activo

Operating Instructions	GB
Mode d'emploi	FR
Manual de instrucciones	ES

<http://www.sony.net/>

© 2014 Sony Corporation Printed in Malaysia

SA-CS9

English

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation opening of the appliance with newspapers, tablecloths, curtains, etc.

Do not expose the appliance to naked flame sources (for example, lit candles).

To reduce the risk of fire or electric shock, do not expose this appliance to dripping or splashing, and do not place objects filled with liquids, such as vases, on the appliance.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.

For customers in the United States

Owner's Record

The model and serial numbers are located on the rear of the unit. Record these numbers in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. _____ Serial No. _____

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Important Safety Instructions

1) Read these instructions.

2) Keep these instructions.

3) Heed all warnings.

4) Follow all instructions.

5) Do not use this apparatus near water.

6) Clean only with dry cloth.

7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11) Only use attachments/accessories specified by the manufacturer.

12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer; or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13) Unplug this apparatus during lightning storms or when unused for long periods of time.

14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

For customers in Europe

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring that this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Notice for customers: The following information is only applicable to equipment sold in countries applying EU Directives.

This product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. Inquiries related to product compliance based on European Union legislation shall be addressed to the authorized

Hooking Up the System

Overview

Use the LINE IN jacks or the SPEAKER IN terminals of the subwoofer when you connect the amplifier ([A]).

If your amplifier has one of the following types of output jacks, connect the LINE IN jack and the amplifier's jack using the supplied audio connecting cord.

-MONO OUT jack

-MIX OUT jack

-SUBWOOFER output jack(s)

-SUPER WOOFER output jack(s)

If your amplifier does not have the above mentioned output jacks, connect the speaker terminals of the amplifier to the SPEAKER IN terminals instead.

Before you get started

Turn off the power of the amplifier and the subwoofer before making any connection.

Use the audio connecting cords that are supplied to the respective equipment. If there are not enough audio connecting cords to make the necessary connections, you need to purchase some optional audio connecting cords.

Be sure to make connections firmly to avoid noise.

Connect the AC power cord from the subwoofer to a wall outlet.

You cannot connect the CENTER output jack for use with Dolby Pro Logic function to the subwoofer. Bass sound is not output with some Dolby Pro Logic modes.

On installation

Do not place the speakers in locations that are:

-Extremely hot or cold

-Dusty or dirty

-Very humid

-Subject to vibrations

-Subject to direct sunlight

-Near magnetic cards (credit cards, commuter passes, etc.)

Magnetic cards may fail due to the magnets in the speaker units.

-Near televisions


The speakers are not magnetically shielded. Therefore, if you use the speakers near CRT-based televisions, color shading occurs on the television screen.

Good ventilation is essential to prevent internal heat build-up in the subwoofer.

Place the subwoofer in a location with adequate air circulation. Do not place the subwoofer on a soft surface or too close to a wall as this may obstruct the ventilation hole on the back.

Use caution when placing the subwoofer on a specially treated (waxed, oiled, polished, etc.) floor, as staining or discoloration may result.

Take care to avoid any possible injury on the corners of the subwoofer.

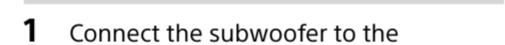

On cleaning the cabinet

Clean the cabinet with a soft cloth lightly moistened with water. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene.

If you have any questions or problems concerning your subwoofer that is not covered in this manual, please consult your nearest Sony dealer.

Installation

Since the human ear cannot detect the direction and position where the bass sound is being reproduced by a subwoofer (below 200 Hz) comes from, you can install the subwoofer wherever you like in your room. To obtain a better bass reproduction, we recommend you to install the subwoofer on a solid floor where the resonance is unlikely to occur.

You can obtain a sufficient heavy bass reproduction from a single subwoofer.

However if you use a couple of the subwoofers, you can obtain an even more effective heavy bass reproduction.

Notes

Always install the subwoofer vertically, keeping a few centimeters away from the wall.

Do not place an object on the subwoofer or sit on it.

If the subwoofer is installed in the center of a room, the bass could be extremely weakened. This is due to the influence of the standing wave of the room. If this happened, move the subwoofer away from the center of a room or eliminate the cause of the standing wave by installing a bookshelf on the wall, etc.

For customers in Europe

Treatment of old electrical & electronic equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring that this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Notice for customers: The following information is only applicable to equipment sold in countries applying EU Directives.


This product has been manufactured by or on behalf of Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. Inquiries related to product compliance based on European Union legislation shall be addressed to the authorized

representative, Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters, please refer to the addresses provided in the separate service or guarantee documents.


<http://www.sony.net/>

© 2014 Sony Corporation Printed in Malaysia


A

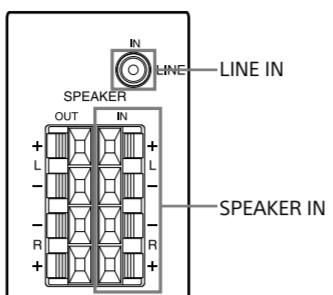


B

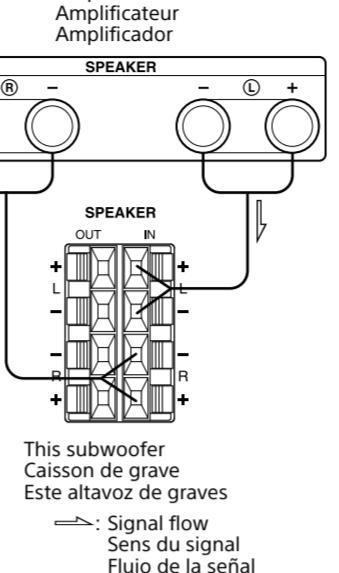


C

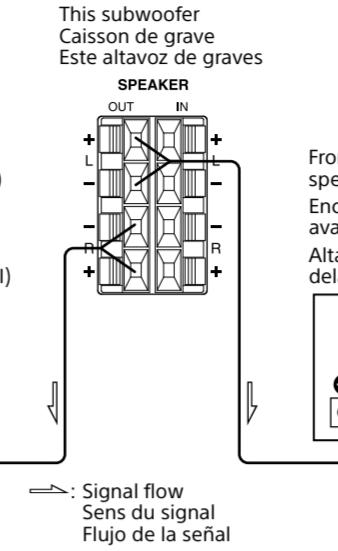

D

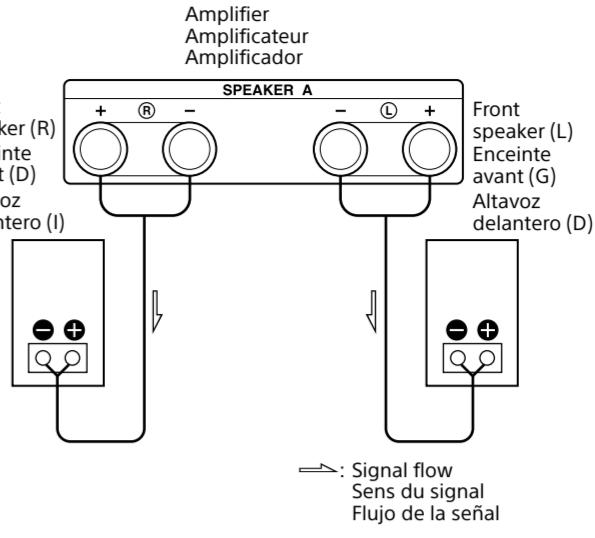

E

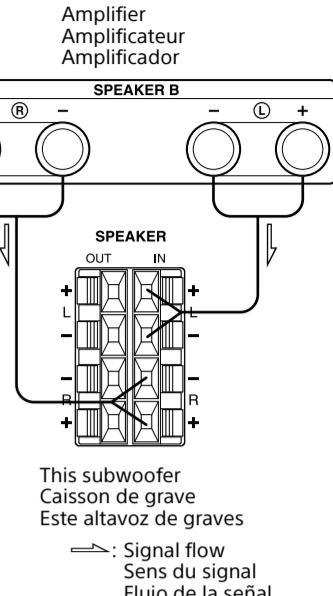

Operating Instructions



Mode d'emploi

Manual de instrucciones


Guía de uso

Guia de uso


F

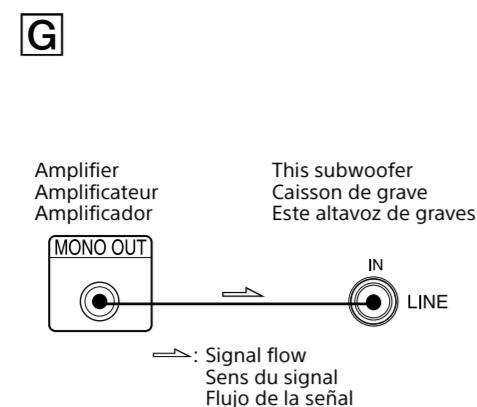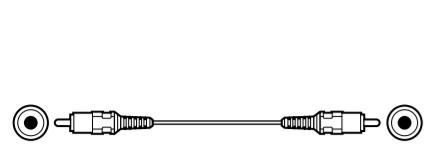

H

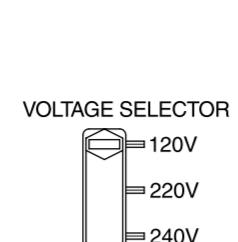


I

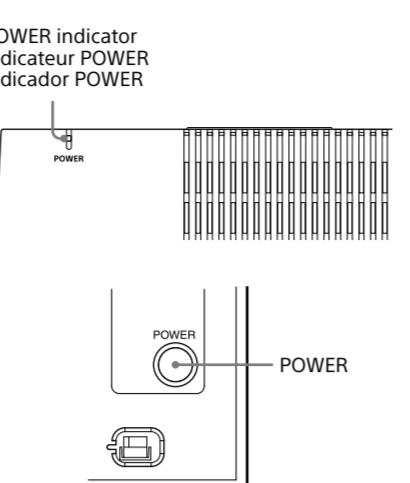


J




K

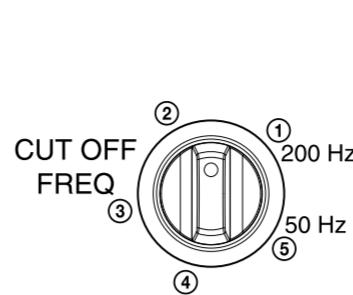


L

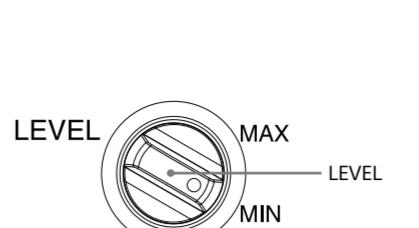

M

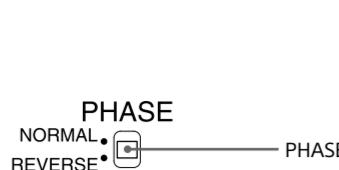

N

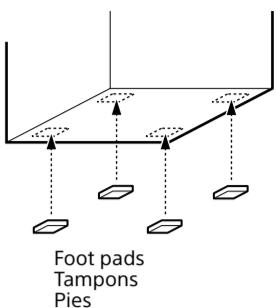

English

Connecting to an amplifier with a special jack for a subwoofer

If your amplifier has a special jack for a subwoofer (like a MONO OUT jack, MIX OUT jack, SUBWOOFER jack or SUPER WOOFER jack), connect the LINE IN jack of the subwoofer to one of those jacks using the supplied audio connecting cord. (F)

Hookups

Connect the MONO OUT jack of your amplifier to the LINE IN jack of the subwoofer with the supplied audio connecting cord. (G)

Note

If the output level of your amplifier is not large enough, the sound may not be loud enough. In this case, connect the speaker terminals of the amplifier directly to the SPEAKER IN terminals of the subwoofer.

Setting the voltage selector (voltage selector equipped models only) (H)

Check that the voltage selector on the rear panel of the subwoofer is set to the local power line voltage. If not, set the selector to the correct position using a screwdriver before connecting the AC power cord to a wall outlet.

Connecting the AC power cord

• Connect the AC power cord from the subwoofer and from your amplifier to a wall outlet.
• Make sure that power to the subwoofer is turned off before you plug in or unplug any power cord.

Listening to the Sound (I)

1 Turn on the amplifier and select the program source.

2 Press POWER. The subwoofer turns on and the POWER indicator lights up in green.

3 Play the program source. Adjust the VOLUME so that sound from the front speakers is not distorted. If it is distorted, the sound from the subwoofer will also be distorted.

To turn on and off the power automatically – Auto power on/off function (J)

When the subwoofer is on (i.e., the POWER indicator lights up green) and there is no signal input for a few minutes, the POWER indicator changes to red and the subwoofer enters power saving mode. While in this mode a signal is input to the subwoofer, the subwoofer automatically turns on (auto power on/off function).

To turn this feature off, slide the POWER SAVE switch on the rear panel to OFF.

Notes

• Never set the amplifier's tone control (BASS, TREBLE, etc.) or the equalizer output to a high level or input sine curves of 20 Hz to 50 Hz recorded on a commercially-available test disc or special sound (bass sound of electronic musical instrument, pop noise of analog disc turntable, sound with abnormally enhanced bass, etc.) in a high level to this unit. These actions may cause damage to the speakers.

• When a special disc containing abnormally enhanced bass is played, noise may be output in addition to the original sound. In such a case, decrease the sound level.

• The subwoofer output signal (DOLBY digital signal) of the digital surround processor sold singularly is set 10 dB higher by Dolby Laboratories Licensing Corporation. In the case of using normally, adjust the subwoofer level.

• If you turn down the volume level of the amplifier too low, the auto power on/off function may activate, causing the subwoofer to enter power saving mode.

Adjusting the Sound

You can adjust the sound of the subwoofer to suit the sound of your front speakers. Reinforcing the bass sound gives you a greater sense of atmosphere.

1 Adjust the cut-off frequency. (K)

Turn the CUT OFF FREQ control, depending on the reproduction frequencies of your front speakers. Refer to the following when adjusting.

① Typical very small sized speakers: 4 - 5 cm (1 5/8 - 2 in.) dia.

② Typical small sized speakers: 6 - 8 cm (2 3/8 - 3 1/8 in.) dia.

Français

Raccordement à un amplificateur doté d'une prise spéciale pour caisson de grave

Si votre amplificateur comporte une prise spéciale pour caisson de grave (comme une prise MONO OUT, MIX OUT, SUBWOOFER ou SUPER WOOFER), raccordez la prise LINE IN du caisson à l'une des prises à l'aide du câble de connexion audio fourni. (G)

Spécifications

AUDIO POWER SPECIFICATIONS For the U.S.A. model

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 6 ohm loads, from 28 - 200 Hz; rated 60 W, minimum RMS power, with no more than 6 % total harmonic distortion from 250 milliwatts to rated output.

System

Type Active Subwoofer

Speaker unit Woofer : 25 cm dia. (10 in.), cone type

Continuous RMS output 115 W (6 ohms, 80 Hz, 10% THD)

Reproduction frequency range 28 Hz - 200 Hz

High frequency cut-off frequency 50 Hz - 200 Hz

Phase selector NORMAL, REVERSE

Inputs

Input jacks LINE IN: input pin jack

SPEAKER IN: input terminals

Output jacks SPEAKER OUT: output terminals

General

Power requirements

North American models: 120 V AC, 60 Hz

European models: 220 V AC, 50/60 Hz

Australian models: 230-240 V AC, 50/60 Hz

Power consumption

70 W Standby: 0.5 W (in power-saving mode)

Dimensions Approx. 295 x 345 x 400 mm (11 5/8 x 13 3/8 x 15 1/4 in.) (W/H/D)

Mass Approx. 11.5 kg (25 lb 5 oz)

Supplied accessories

Foot pads (4) Audio connecting cord (1 phono - 1 phono), 2 m (6 ft 6 1/2 in.) (I)

Design and specifications are subject to change without notice.

Réglage du son

Vous pouvez ajuster le son du caisson de grave pour l'adapter au son des enceintes avant. L'amplification du grave intensifie l'ambiance générale.

Raccordements

Raccordez la prise MONO OUT de votre amplificateur à la prise LINE IN du haut-parleur à l'aide du câble de connexion audio fourni. (G)

Remarque

Si le niveau de sortie de l'amplificateur n'est pas suffisant, le son peut ne pas être assez puissant. Dans ce cas, reliez les bornes d'enceintes de l'amplificateur directement aux bornes SPEAKER IN du caisson.

Réglage du sélecteur de tension (sur les modèles pourvus d'un sélecteur de tension seulement) (H)

Assurez-vous que le sélecteur de tension sur le panneau arrière du caisson de graves est réglé sur la tension secteur locale. Si ce n'est pas le cas, réglez-le sur la position correcte avec un tournevis avant de brancher le cordon d'alimentation sur une prise secteur.

Raccordement du cordon d'alimentation secteur

Branchez le cordon d'alimentation secteur du caisson de grave et de l'amplificateur sur une prise murale.

Assurez-vous que le caisson de grave est hors tension avant de brancher ou de débrancher un câble d'alimentation.

Pour écouter le son (I)

1 Allumez l'amplificateur et sélectionnez la source de programme.

2 Appuyez sur POWER.

Le caisson est mis sous tension et l'indicateur POWER s'allume en vert.

3 Reproduisez la source de programme. Ajustez VOLUME pour que le son des enceintes avant soit sans distorsion. Si le son des enceintes avant présente une distorsion, il en sera de même du son du caisson de grave.

4 Sélectionnez la polarité de la phase. (M)

Utilisez le sélecteur PHASE pour sélectionner la polarité de la phase.

5 Refaites les réglages 1 à 4 pour obtenir le son qui vous convient.

Une fois que le caisson de grave a été ajusté selon vos préférences, utilisez la commande VOLUME sur l'amplificateur pour régler le volume du caisson de grave et des autres enceintes. Vous n'avez pas besoin de changer les réglages du caisson lorsque vous reglez le volume sur l'amplificateur.

Mise sous et hors tension automatique — Fonction de mise sous/hors tension automatique (J)

Si le caisson de grave est sous tension (le témoin POWER est allumé en vert) et si aucun signal n'est transmis pendant quelques minutes, le témoin POWER devient rouge et le caisson de grave se met en mode d'économie d'énergie. Si dans ce mode, un signal est entré sur le haut-parleur, le haut-parleur se met automatiquement sous tension (fonction de mise sous/hors tension automatique).

Pour désactiver cette fonction, ramenez le commutateur POWER SAVE du panneau arrière sur OFF.

Remarques

• Si le son présente une distorsion quand le système de renforcement des graves de votre amplificateur est en service (D.B.F.B., GROOVE, égaliseur graphique, etc.) mettez-le hors service et ajustez le son.

• Une inversion de polarité avec le sélecteur PHASE (réglage sur NORMAL ou REVERSE) peut assurer une meilleure reproduction du son grave dans certaines situations d'écoute (en fonction du type d'enceintes avant, de la position du caisson de grave et du réglage de la fréquence de coupure). Elle peut aussi changer la sensation d'expansion ou de contraction du son et modifier le champ sonore. Sélectionnez le réglage qui donne le son que vous préférez par rapport à votre position d'écoute habituelle.

La conception et les spécifications sont sujettes à modification sans préavis.

Installation du caisson de graves (N)

Pour éviter les vibrations ou le déplacement du caisson de graves pendant l'écoute, fixez les tampons fournis au caisson de graves.

Remarques

• Le signal de sortie d'extrême grave (signal numérique DOLBY) du processeur de son numérique vendu séparément est réglé à 10 dB plus haut par Dolby Laboratories Licensing Corporation. Pour une utilisation normale, ajustez le niveau de l'extrême grave.

• Si vous réduisez trop le volume de l'amplificateur, il se peut que la fonction de mise sous/hors tension automatique soit activée et que le caisson de grave passe en mode d'économie d'énergie.

Español

Conexión a un amplificador que disponga de una toma especial para altavoz de subgraves activo

Si el amplificador dispone de una toma especial para altavoz de subgraves activo (como una toma MONO OUT (SALIDA MONOAURAL), MIX OUT (SALIDA DE MEZCLA), SUBWOOFER (ALTAVOZ DE SUBGRAVES ACTIVO) o SUPER WOOFER (SUPER ALTAVOZ DE SUBGRAVES ACTIVO)), conecte la toma LINE IN (ENTRADA DE LÍNEA) del altavoz de subgraves activo a una de esas tomas mediante el cable de audio suministrado. (F)

Guide de dépannage

Si vous rencontrez une des difficultés suivantes quand vous utilisez le caisson de grave, lisez le guide de dépannage pour vous aider à trouver une solution. Si vous n'y parvenez pas, adressez-vous à votre revendeur Sony le plus proche.

L'indicateur POWER est allumé en rouge.

• Si aucun signal nest transmis pendant quelques minutes, l'indicateur POWER est allumé en rouge et le caisson de graves se met en mode économie d'énergie. Pour désactiver ce mode économie d'énergie, ramenez le commutateur POWER SAVE du panneau arrière sur OFF.

Connexions

Conecte la toma MONO OUT (SALIDA MONOAURAL) del amplificador a la toma LINE IN (ENTRADA DE LÍNEA) del altavoz de graves con el cable de conexión de audio suministrado. (G)

Aucun son

• Vérifiez si le caisson de grave et les différents éléments sont raccordés comme il faut.

• Tournez la commande LEVEL dans le sens des aiguilles d'une montre pour augmenter le volume.

• Réajustez le niveau.

Le son s'est soudainement arrêté.

• Il y a peut-être eu un court-circuit au niveau des cordons d'enceintes. Raccordez-les correctement.

Le son présente une distorsion.

• Le signal d'entrée n'est pas parfait.

• Le niveau du signal d'entrée est trop élevé.

• Réglez CUT OFF FREQ le plus possible lorsque vous écoutez des enregistrements en Dolby numérique.</