

# SONY


## Active Subwoofer

### SA-W3000

4-423-064-11(1)



\* 4 4 2 3 0 6 4 1 1 \* (1)

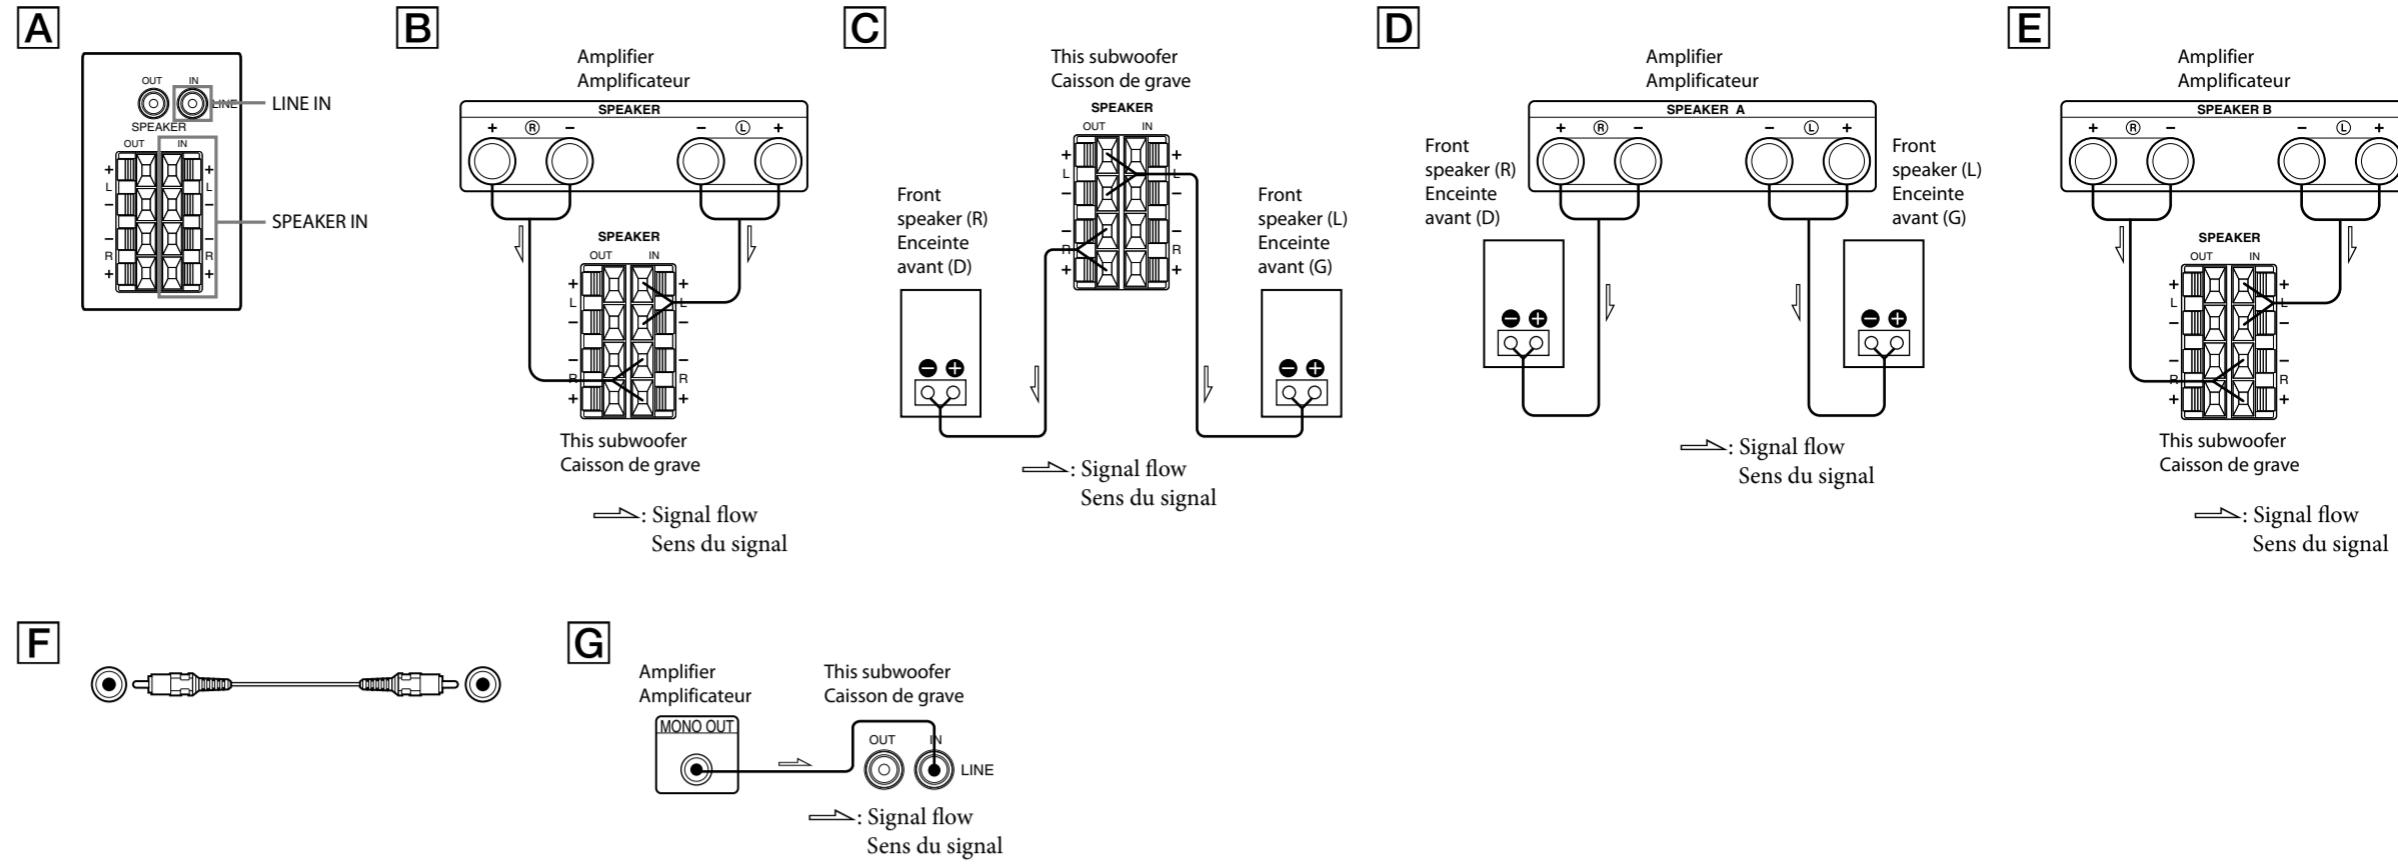

## English

### WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc.

Do not place the naked flame sources such as lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

The unit is not disconnected from the mains as long as it is connected to the AC outlet, even if the unit itself has been turned off.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

The mains switch is located on the rear exterior.

### For customers in the United States

#### Owner's Record

The model and serial numbers are located on the rear of the unit. Record these numbers in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

#### Important Safety Instructions

- 1 Read these instructions.
- 2 Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13) Unplug this apparatus during lightning storms or when unused for long periods of time.

14) Refer all servicing to qualified service personnel.

Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

To reduce the risk of electric shock, the speaker cord should be connected to the apparatus and the speakers in accordance with the following instructions.

1. Disconnect the AC power cord from the MAINS.

2. Strip 10 to 15 mm of the wire insulation of the speaker cord.

3. Connect the speaker cord to the apparatus and the speakers carefully so as not to touch the core of speaker cord by hand.

Also disconnect the AC power cord from the MAINS before disconnecting the speaker cord from the apparatus and the speakers.

### Precautions

#### On safety

- Before operating the subwoofer, be sure that the operating voltage of your subwoofer is identical with that of your local power supply.
- Unplug the subwoofer from the wall outlet if it is not to be used for an extended period of time. To disconnect the cord, pull the cord by grasping the plug. Never pull the cord itself.
- Should any liquid or solid object fall into the subwoofer, unplug the subwoofer and have the subwoofer checked by qualified personnel before operating it any further.
- AC power cord must be changed only at the qualified service shop.

#### When turning on or off an amplifier or other equipment

Lower the volume of the amplifier to minimum.

#### To avoid damaging the subwoofer

- Be careful in setting the volume control of the amplifier to avoid an excessive input power.
- Do not attempt to open the enclosure or remove speaker units and networks.
- Do not press the dust cap intentionally or unintentionally.

#### In case color irregularity is observed on the nearby TV screen

With the magnetically shielded type of the speaker system, the subwoofer can be installed near a TV set. However, color irregularity may still be observed on the TV screen depending on the type of your TV set.

#### If color irregularity is observed...

- Turn off the TV set once, then turn it on after 15 to 30 minutes.

#### If color irregularity is observed again...

- Place the subwoofer further apart from the TV set.

#### When howling occurs

Relocate the speaker or turn down the volume of the amplifier.

#### On installation

- Do not install the subwoofer near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- Good ventilation is essential to prevent internal heat build-up in the subwoofer. Place the subwoofer in a location with adequate air circulation. Do not place the subwoofer on a soft surface or too close to a wall as this may obstruct the ventilation hole on the back.
- Use caution when placing the subwoofer on a specially treated (waxed, oiled, polished, etc.) floor, as staining or discoloration may result.
- Take care to avoid any possible injury on the corners of the subwoofer.



#### On cleaning the cabinet

Clean the cabinet with a soft cloth lightly moistened with water. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

If you have any questions or problems concerning your subwoofer that is not covered in this manual, please consult your nearest Sony dealer.

### Installation

Since the human ear cannot detect the direction and position where the bass sound being reproduced by a subwoofer (below 200 Hz) comes from, you can install the subwoofer wherever you like in your room.

To obtain a better bass reproduction, we recommend you to install the subwoofer on a solid floor where the resonance is unlikely to occur.

You can obtain a sufficient heavy bass reproduction from a single subwoofer.

When using the double (A + B) sets of speakers, make sure that you select the "A + B" position with your amplifier.

**Note**  
When you are using SPEAKER A terminals only (front speaker only) or when the power of the amplifier is turned off, turn down the volume or turn off the power of the subwoofer otherwise, hum noise may be heard.

#### Connecting to an amplifier with a special jack for a subwoofer

If your amplifier has a special jack for a subwoofer (like a MONO OUT jack, MIX OUT jack, SUBWOOFER jack or SUPER WOOFER jack), connect the LINE IN jack of the subwoofer to one of those jacks using the supplied audio connecting cord. (F)

### Hookups

- Connect the MONO OUT jack of your amplifier to the LINE IN jack of the subwoofer with the supplied audio connecting cord. (G)
- Note**  
If the output level of your amplifier is not large enough, the sound may not be loud enough. In this case, connect the speaker terminals of the amplifier directly to the SPEAKER IN terminals of the subwoofer.

### French

### AVERTISSEMENT

Pour éviter tout risque d'incendie ou de choc électrique, n'exposez pas l'appareil à la pluie ou à l'humidité.

Pour éviter tout risque d'incendie ou de choc électrique, n'exposez pas l'appareil à des gouttelettes ou à des éclaboussures et ne posez pas d'objets contenant du liquide, comme des vases, sur l'appareil.

Pour éviter les blessures, cet appareil doit être fermement fixé au sol/mur, conformément aux instructions d'installation.

N'installez pas l'appareil dans un espace confiné, tel que votre bibliothèque ou un meuble encastré. L'appareil n'est pas débranché de la source d'alimentation secteur tant qu'il reste raccordé à la prise secteur, même s'il est éteint.

La fiche principale étant utilisée pour débrancher l'appareil de la source d'alimentation secteur, raccordez l'appareil sur une prise secteur facilement accessible.

Si vous constatez que l'appareil ne fonctionne pas normalement, débranchez immédiatement la fiche principale de la prise secteur.

L'interrupteur d'alimentation se trouve au dos de l'extérieure.

### Précautions

#### Sécurité

- Avant d'utiliser le caisson de grave, vérifiez que sa tension de fonctionnement est identique à celle du secteur local.
- Si vous prévoyez de ne pas utiliser le caisson pendant longtemps, débranchez-le de la prise murale. Pour débrancher le cordon d'alimentation secteur, tirez sur la fiche. Ne jamais tirer sur le cordon proprement dit.
- Si un liquide ou un solide tombe dans le coffret, débranchez le caisson et faites-le contrôler par un technicien qualifié avant de le remettre en service.
- Le cordon d'alimentation secteur doit être changé par un professionnel seulement.

#### Avant d'allumer ou d'éteindre l'amplificateur ou un autre appareil

Oubliez pas de baisser complètement le volume.

#### Pour éviter d'endommager le caisson de grave

- Réglez avec soin le volume de l'amplificateur pour éviter toute entrée de son excessive.
- Ne pas essayer d'ouvrir le coffret ou de modifier les haut-parleurs et les circuits.
- Ne pas appuyer sur le cache-poussière, ni intentionnellement ni par erreur.

#### Si vous observez des anomalies de couleurs sur l'écran du téléviseur installé à proximité du caisson

Le caisson de graves peut être installé près d'un téléviseur car ce système acoustique est à blindage magnétique. Mais il est possible d'observer des anomalies de couleurs avec certains types de téléviseur.

#### Si vous observez des anomalies de couleurs...

- Éteignez le téléviseur, puis rallumez-le 15 à 30 minutes plus tard.

#### S'il n'y a aucun changement...

- Placez le caisson de graves un peu à l'écart du téléviseur.

#### En cas de réaction acoustique

Changez l'emplacement des enceintes ou baissez le volume de l'amplificateur.

#### Installation

- Ne pas installer le caisson de grave près d'une source de chaleur, comme un radiateur ou une bouche d'air chaud, dans un endroit en plein soleil ou exposé à de la poussière, des vibrations ou des chocs mécaniques.

• Une bonne ventilation est essentielle pour éviter une surchauffe interne du caisson. Installez le caisson dans un endroit où la circulation d'air est suffisante. Ne l'installez sur une surface molle ou trop près d'un mur pour ne pas boucher l'orifice de ventilation à l'arrière du caisson.

• Faites attention si le caisson de graves doit être posé sur une sol traité (ciré, huilé, poli, etc.) car il peut salir ou décolorer le sol.

• Veillez à ne pas vous blesser en heurtant les coins du caisson.



#### Nettoyage du coffret

Nettoyez le coffret avec un chiffon doux légèrement imprégné d'eau. Ne pas utiliser de tampons abrasifs, poudre à récurer ou diluant, comme l'alcool ou la benzine.

Pour toute question ou problème au sujet du caisson de grave, veuillez contacter votre revendeur Sony le plus proche.

### Raccordement à un amplificateur avec double paire (A + B) de bornes d'enceintes

Si votre amplificateur possède une double paire de bornes d'enceintes (A + B), raccordez le caisson de grave et les enceintes avant à l'amplificateur.

#### 1 Raccordez les enceintes avant à l'amplificateur. (D)

Raccordez les enceintes aux bornes SPEAKER A de votre amplificateur.

#### 2 Raccordez le caisson de grave à l'amplificateur. (E)

Raccordez les bornes SPEAKER IN du caisson de grave aux bornes SPEAKER B de l'amplificateur avec des cordons d'enceintes (non fournis).

Quand vous utilisez la double paire de prises (A + B), veillez à sélectionner la position « A + B » sur l'amplificateur.

#### Remarque

Lorsque vous utilisez les bornes SPEAKER A seulement (enceintes avant seulement) ou lorsque l'amplificateur est éteint, réduisez le volume du caisson de grave, ou éteignez-le, sinon le bruit sera audible.

### Raccordement à un amplificateur doté d'une prise spéciale pour caisson de grave

Si votre amplificateur comporte une prise spéciale pour caisson de grave (comme une prise MONO OUT, MIX OUT, SUBWOOFER ou SUPER WOOFER), raccordez la prise LINE IN du caisson à l'une de ces prises à l'aide du câble de connexion audio fourni. (E)


#### Raccordements






Raccordez la prise MONO OUT de votre amplificateur à la prise LINE IN du haut-parleur à l'aide du câble de connexion audio fourni. (G)

#### Remarque

Si le niveau de sortie de l'amplificateur n'est pas suffisant, le son peut ne pas être assez puissant. Dans ce cas, reliez les bornes d'enceintes de l'amplificateur directement aux bornes SPEAKER IN du caisson.

### E

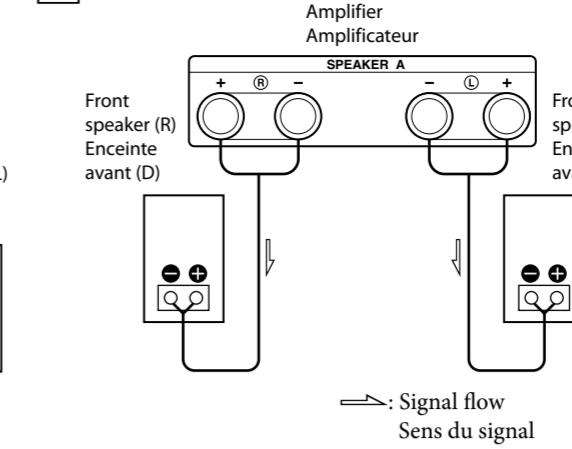

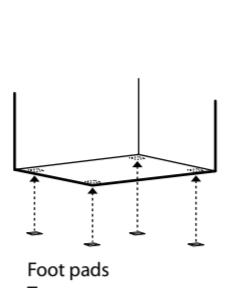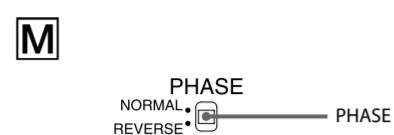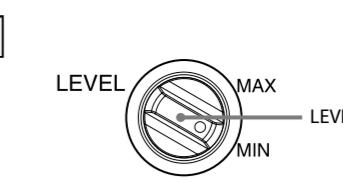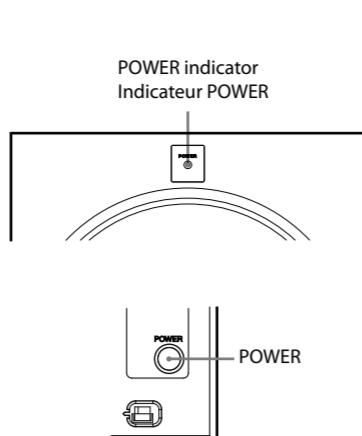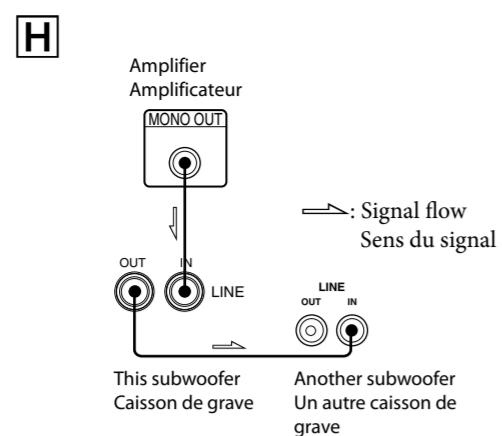

## English

### When using two or more subwoofers (H)

Connect the MONO OUT jack of your amplifier to the LINE IN jack of this subwoofer. Then, use the supplied audio connecting cord to connect the LINE OUT jack of this subwoofer to the LINE IN jack of another subwoofer.

### Connecting the AC power cord

- Connect the AC power cord from the subwoofer and from your amplifier to a wall outlet.
- Make sure that power to the subwoofer is turned off before you plug in or unplug any power cord.

### Listening to the Sound (I)

- 1 Turn on the amplifier and select the program source.

- 2 Press POWER.

The subwoofer turns on and the POWER indicator lights up in green.

- 3 Play the program source.

Adjust the VOLUME so that sound from the front speakers is not distorted.

If it is distorted, the sound from the subwoofer will also be distorted.

### To turn on and off the power automatically — Auto power on/off function (J)

When the subwoofer is on (i.e., the POWER indicator lights up green) and there is no signal input for a few minutes, the POWER indicator changes to red and the subwoofer enters power saving mode. While in this mode a signal is input to the subwoofer, the subwoofer automatically turns on (auto power on/off function). To turn this feature off, slide the POWER SAVE switch on the rear panel to OFF.

### Notes

- Never set the amplifier's tone control (BASS, TREBLE, etc.) or the equalizer output to a high level or input sine curves of 20 Hz to 50 Hz recorded on a commercially-available test disc or special sound (bass sound of electronic musical instrument, pop noise of analog disc turntable, sound with abnormally enhanced bass, etc.) in a high level to this unit. These actions may cause damage to the speakers. When a special disc containing abnormally enhanced bass is played, noise may be output in addition to the original sound. In such a case, decrease the sound level.
- The subwoofer output signal (DOLBY digital signal) of the digital surround processor sold singularly is set 10 dB higher by Dolby Laboratories Licensing Corporation. In the case of using normally, adjust the subwoofer level.
- If you turn down the volume level of the amplifier too low, the auto power on/off function may activate, causing the subwoofer to enter power saving mode.

**Notes**

- If the sound distorts when you turn on the bass reinforcement from your amplifier (such as, D.B.F.B., GROOVE, the graphic equalizer, etc.), turn off the bass reinforcement and adjust the sound.
- Do not turn the LEVEL knob to maximum. Doing so may weaken the bass sound. Moreover, extraneous noise may be heard.
- Selecting NORMAL or REVERSE with the PHASE selector reverses the polarity and may provide better bass reproduction in certain listening environments (depending on the type of front speakers, the position of the subwoofer and the adjustment of the cut-off frequency). It may also change the expansiveness and tightness of sound, and effect the feeling of the sound field. Select the setting that provides the sound you prefer when listening in your normal listening position.

### Setting the subwoofer (N)

To prevent subwoofer vibration or movement while listening, attach the supplied foot pads to the subwoofer.

### Adjusting the Sound

You can adjust the sound of the subwoofer to suit the sound of your front speakers. Reinforcing the bass sound gives you a greater sense of atmosphere.

- 1 Adjust the cut-off frequency. (K)

Turn the CUT OFF FREQ control, depending on the reproduction frequencies of your front speakers.

Refer to the following when adjusting.

- ① Typical very small sized speakers: 4 cm – 5 cm (1 3/8 in. – 2 in.) dia.
- ② Typical small sized speakers: 6 cm – 8 cm (2 1/8 in. – 3 1/8 in.) dia.
- ③ Typical medium sized speakers: 9 cm – 15 cm (3 5/8 in. – 5 7/8 in.) dia.
- ④ Typical large sized speakers: 16 cm – 24 cm (6 1/8 in. – 9 1/2 in.) dia.
- ⑤ Typical very large sized speakers: more than 25 cm (9 7/8 in.) dia.

#### To make the most of the low level converter function

When playing back the sound of LFE signals, Dolby digital, or DTS, we recommend to set the CUT OFF FREQ control to 200 Hz (maximum) to obtain the best performance from the low level converter function.

- 2 Adjust the volume level of the subwoofer. (L)

Turn the LEVEL control so that you can hear the bass sound a little more than before. To increase the volume, turn the control clockwise. To decrease the volume, turn the control counterclockwise.

- 3 Play your favorite song and movie.

Male vocal tunes and voice containing bass sounds are most suitable for adjustment. Turn the volume for front speakers to the same level as usual.

- 4 Select the phase polarity. (M)

Use the PHASE selector to select the phase polarity.

- 5 Repeat steps 1 to 4 to adjust for your preference.

Once you have adjusted the subwoofer to the settings you desire, use the VOLUME control on the amplifier to adjust the volume of the subwoofer with that of the other speakers. You don't need to adjust the subwoofer settings when you change the volume level of the amplifier.

#### Notes

- If the sound distorts when you turn on the bass reinforcement from your amplifier (such as, D.B.F.B., GROOVE, the graphic equalizer, etc.), turn off the bass reinforcement and adjust the sound.
- Do not turn the LEVEL knob to maximum. Doing so may weaken the bass sound. Moreover, extraneous noise may be heard.
- Selecting NORMAL or REVERSE with the PHASE selector reverses the polarity and may provide better bass reproduction in certain listening environments (depending on the type of front speakers, the position of the subwoofer and the adjustment of the cut-off frequency). It may also change the expansiveness and tightness of sound, and effect the feeling of the sound field. Select the setting that provides the sound you prefer when listening in your normal listening position.

### Setting the subwoofer (N)

To prevent subwoofer vibration or movement while listening, attach the supplied foot pads to the subwoofer.

### Troubleshooting

If you experience any of the following difficulties while using the subwoofer, use this troubleshooting guide to help you remedy the problem. Should any problem persist, consult your nearest Sony dealer.

#### There's no sound.

- Check that this subwoofer and components are connected correctly and securely.
- Turn LEVEL clockwise to turn the volume up.
- Reset the level.

#### The sound has suddenly stopped.

- The speaker cords may have short-circuited. Connect the cords properly.

#### The sound is distorted.

- The input signal is imperfect.
- The input signal level is too high.
- Set the CUT OFF FREQ as high as possible when playing back the Dolby digital.

#### Severe hum or noise is heard.

- Connect the ground wire of the turntable properly.
- The contacts between the plugs of the connecting cords and the corresponding jacks have not been made properly. Connect the plugs firmly.
- The audio system is picking up some noise from a TV set. Move the audio system away from the TV set or turn the TV set off.

### Specifications

#### AUDIO POWER SPECIFICATIONS For the USA model

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:  
With 6 ohm loads, from 20 – 200 Hz; rated 100 watts, minimum RMS power, with no more than 1 % total harmonic distortion from 250 milliwatts to rated output.

#### System

Type Active Subwoofer (magnetically shielded design)

Speaker unit Woofer: 300 mm (11 7/8 in.), cone type

Continuous RMS output 180 W (6 ohms, 80 Hz, 10% THD)

Reproduction frequency range 20 Hz – 200 Hz

High frequency cut-off frequency 50 Hz – 200 Hz

Phase selector NORMAL, REVERSE

#### Inputs/Outputs

LINE IN: input pin jack

SPEAKER IN: input terminals

LINE OUT: output pin jack

SPEAKER OUT: output terminals

#### General

Power requirements 120 V AC, 60 Hz

Power consumption 100 W

Dimensions (w/h/d) (Approx.) 360 mm × 425 mm × 421 mm (14 1/4 in. × 16 3/4 in. × 16 1/2 in.)

Mass Approx. 16 kg (35 lb 5 oz)

Supplied accessories Foot pads (4)

Audio connecting cord (1 phono – 1 phono), 2 m (6 ft 6 1/2 in.) (1)

Design and specifications are subject to change without notice.

#### Notes

- If the sound distorts when you turn on the bass reinforcement from your amplifier (such as, D.B.F.B., GROOVE, the graphic equalizer, etc.), turn off the bass reinforcement and adjust the sound.

- Do not turn the LEVEL knob to maximum. Doing so may weaken the bass sound. Moreover, extraneous noise may be heard.

- Selecting NORMAL or REVERSE with the PHASE selector reverses the polarity and may provide better bass reproduction in certain listening environments (depending on the type of front speakers, the position of the subwoofer and the adjustment of the cut-off frequency). It may also change the expansiveness and tightness of sound, and effect the feeling of the sound field. Select the setting that provides the sound you prefer when listening in your normal listening position.

#### Setting the subwoofer (N)

To prevent subwoofer vibration or movement while listening, attach the supplied foot pads to the subwoofer.

## French

### Si vous utilisez deux haut-parleurs d'extrêmes-graves ou plus (H)

Reliez la prise MONO OUT de votre amplificateur à la prise LINE IN de ce caisson de graves. Ensuite pour relier la prise LINE OUT de ce caisson de graves à la prise LINE IN d'un autre caisson de graves, utilisez le cordon de liaison audio fourni.

#### Raccordement du cordon d'alimentation secteur

- Branchez le cordon d'alimentation secteur du caisson de grave et de l'amplificateur sur une prise murale.
- Assurez-vous que le caisson de grave est hors tension avant de brancher ou de débrancher un câble d'alimentation.

### Pour écouter le son (I)

- 1 Allumez l'amplificateur et sélectionnez la source de programme.

- 2 Appuyez sur POWER.

Le caisson est mis sous tension et l'indicateur POWER s'allume en vert.

- 3 Reproduisez la source de programme.

Ajustez VOLUME pour que le son des enceintes avant soit sans distorsion. Si le son des enceintes avant présente une distorsion, il en sera de même du son du caisson de grave.

#### Mise sous et hors tension automatique — Fonction de mise sous/hors tension automatique (J)

Si le caisson de grave est sous tension (le témoin POWER est allumé en vert) et si aucun signal n'est transmis pendant quelques minutes, le témoin POWER devient rouge et le caisson de grave se met en mode d'économie d'énergie. Si, dans ce mode, un signal est entré sur le haut-parleur, le haut-parleur met automatiquement son tension (fonction de mise sous/hors tension automatique). Pour désactiver cette fonction, ramenez le commutateur POWER SAVE du panneau arrière sur OFF.

#### Remarques

- Ne réglez jamais le timbre (BASS, TREBLE, etc.) de l'amplificateur ou la sortie de l'égaliseur sur un niveau élevé. Ne laissez jamais entrer à niveau élevé des ondes sinusoïdales de 20 Hz à 50 Hz enregistrées sur les disques d'essai vendus dans le commerce ou des sons spéciaux (son grave d'un instrument de musique électronique, bruit de surface d'une platine tourne-disque, son avec des graves excessivement accentués, etc.), car les enceintes pourraient être endommagées. La lecture d'un disque qui contient des graves excessivement accentués peut produire des parasites en plus du son d'origine. Dans ce cas, diminez le niveau sonore.

- Le signal de sortie d'extrême grave (signal numérique DOLBY) du processeur de son numérique vendu séparément est réglé 10 dB plus haut par Dolby Laboratories Licensing Corporation. Pour une utilisation normale, ajustez le niveau de l'extrême grave.

- Si vous réduisez trop le volume de l'amplificateur, il se peut que la fonction de mise sous/hors tension automatique soit active et que le caisson de grave passe en mode d'économie d'énergie.

#### Spécifications

##### Système

Type Haut-parleur d'extrêmes-graves actif (blindage magnétique)

Haut-parleur Grave : 300 mm (11 7/8 po.), à cône

Puissance de sortie RMS continue 180 W (6 ohms, 80 Hz, 10% THD)

Plage de fréquences 20 Hz à 200 Hz

Fréquence de coupe haute fréquence 50 Hz à 200 Hz

Sélecteur de phase NORMAL (phase normale), REVERSE (phase inversée)

Entrées/Sorties LINE IN : Prise à broche d'entrée SPEAKER IN : Bornes d'entrée LINE OUT : Prise à broche de sortie SPEAKER OUT : Bornes de sortie

Généralités Alimentation 120 V CA, 60 Hz

Consommation 100 W

Dimensions (l/h/p) (environ) 360 mm × 425 mm × 421 mm (14 1/4 in. × 16 3/4 in. × 16 1/2 in.)

Poids Environ 16 kg (35 li. 5 on.)

Accessoires fournis Tampons (4)

Cordons de liaison audio (1 phono à 1 phono).

2 m (6 pi 6 1/2 in.) (1)

La conception et les spécifications sont sujettes à modification sans préavis.

#### Remarques

- Si le son présente une distorsion quand le système de renforcement des graves de votre amplificateur est en service (D.B.F.B., GROOVE, égaliseur