



C





WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To prevent fire, do not Cover the ventilation of the apparatus with news papers, table-cloths, curtains, etc. And don't place lighted candles on the apparatus To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet

About this manual

The instructions in this manual are for SA-VE325. Sony Micro Satellite Systems

The SA-VE325 is a 5.1 channel speaker system consisting of two front speakers, two rear speakers, one center speaker, and one subwoofer. It supports Sony Digital Cinema Sound, Dolby* Pro Logic, and Dolby Digital (AC-3), and is thus geared towards the enjoyment of

* Manufactured under license from Dolby Laboratories. DOLBY, the double-D symbol DD, "PRO LOGIC" and "Dolby Digital (AC-3)" are trademarks of Dolby

Precautions

On safety

- Before operating the system, be sure that the operating voltage of the system is identical with that of your local power supply.
- The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet,
- even if the unit itself has been turned off. • Unplug the system from the wall outlet if it is not to be used for an extended period of time. To disconnect the
- cord, pull the cord by grasping the plug. Never pull the cord itself. Should any liquid or solid object fall into the system, unplug the system's power cord and have the system checked by qualified personnel before operating it any
- AC power cord must be changed only at the qualified

On operation

- Do not drive the speaker system with a continuous wattage exceeding the maximum input power of the
- If the polarity of the speaker connections are not correct, the bass tones will be weak and the position of the various instruments obscure.
- Contact between bare speaker wires at the speaker terminals may result in a short-circuit.
- Before connecting, turn off the amplifier to avoid damaging the speaker system.
- The speaker grille cannot be removed. Do not attempt to remove the grille on the speaker system. If you try to remove it, you may damage the speaker.

If you encounter color irregularity on a nearby TV screen

This speaker system is magnetically shielded to allow it to be installed near a TV set. However, color irregularities may still be observed on certain types of TV

If color irregularity is observed...

→ Turn off the TV set once, then turn it on again after 15 to 30 minutes.

If color irregularity is observed again...

→ Place the speakers further away from the TV set.

If howling occurs Reposition the speakers or turn down the volume on the

amplifier.

On placement

- Do not set the speakers in an inclined position. • Do not place the speakers in locations that are:
- Extremely hot or cold
- Dusty or dirty
- Very humid
- Subject to vibrations Subject to direct sunlight

On cleaning

Clean the speaker cabinets with a soft cloth lightly moistened with a mild detergent solution or water. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine

The volume level should not be turned up to the point of distortion.

If the volume level is too high, the speaker protection circuit activates, and the sound level drops suddenly. This is not a malfunction. In this case, lower the volume level and wait for a few moments until the unit resumes normal operation.

If you have any questions or problems concerning your speaker system, please consult your nearest Sony dealer.

Hooking up the system

Connect the speaker system to the speaker output terminals of an amplifier. Make sure power to all components (included the

subwoofer) is turned off before starting the hook-up. Hookup A

This configuration is used when the amplifier is connected to a DVD player, LD player, VCR or other video devices.

Hookup B

- Try this configuration instead of "Hookup A" in the following situations:
- -When there are no jacks on the amplifier for a subwoofer
- -When you want a stronger bass sound from the subwoofer.

Notes (C)

- ullet Make sure the plus (+) and the minus (-) terminals on the speakers are matched to the corresponding plus (+) and minus (-) terminals on the amplifier.
- Be sure to tighten the screws of the speaker terminals securely as loose screws may become a source of
- Make sure all connections are firm. Contact between bare speaker wires at the speaker terminals may cause a short-circuit.
- Do not connect the subwoofer to the amplifier's CENTER output terminal (which is for Dolby Pro Logic or Dolby Digital (AC-3)). No bass sound will output from the subwoofer if you do.
- For details regarding the connections on the amplifier side, refer to the manual that was provided with your amplifier.

All strired wires are minus (-) in polarity, and should be connected to the minus (-) speaker terminals.

为防火灾或触电危险,请勿让机器暴露于雨中或潮湿处。 为防止火灾,请勿用报纸、桌布、窗帘等覆盖本装

置的通风口。请勿将点燃的蜡烛放在本装置上。 为防止火灾或电击的危险,请勿在设备上放置装满

液体的物品,例如花瓶。 为免遭触电,请勿擅自打开机壳。维修限请找持有

资格者为您服务。

不要把装置安装在诸如书橱或壁橱等密闭的地方。

关于本说明书

本说明书用于说明 SA-VE325, Sony 微型卫星系统。

SA-VE325 是含有两个前扬声器,两个后扬声器,一个中央 扬声器和一个超低音扬声器的 5.1 声道扬声器系统。提供 Sony 数码电影院音响(Sony Digital Cinema Sound),杜比*专业逻 辑和杜比数码(AC-3)功能,而供您用于享受电影的音响。

*由杜比实验室授权制造。杜比,DOLBY 双 D 标志 DD, PRO LOGIC 及 Dolby Digital (AC-3) 为杜比实验室之商标。

使用前须注意

安全须知

- •操作系统之前,一定请先确认系统的操作电压是否与当 地的电源电压一致。
- 机器只要是电源线仍接插在墙上电源插座,则即使关掉机 器上的电源开关,机器仍并没有完全断开 AC 主电源的。
- 准备长期不使用系统时,请自电源插座拔下系统的电源 线。要卸下电源线时,必须抓住插头拔下,不可拉着电 源线的导线部分拔。
- 万一有任何液体或杂物掉进系统里面时,即请自电源插 座拔下系统的电源线并找持有资格的人检查过以后才可
- 要更换 AC 电源线时,必须找持资格的维修店为您服务。

- 不要连续地用超过系统的最大输入功率驱动扬声器系统。 • 扬声器接线电极如果没有连接正确, 低音将显得微弱而
- 各种乐器的位置也显得模糊不清。 • 扬声器各端子间的扬声器裸线部分相接触时,可能引起
- 连接系统之前,须关掉放大器电源以免损坏扬声器系
- 扬声器格栅不能拆卸。请勿试图卸下扬声器格栅。若勉 强用力拆卸格栅,可能会损坏扬声器。

如果靠近的电视机荧幕遭遇彩色不均时

本扬声器系统为磁屏蔽型设计,可以装在电视机旁。 但某些型式的电视机仍可能发生彩色不均的问题

如果发生彩色不均…

→ 即请关掉一下电视机电源, 然后在 15 到 30 分钟之后 再打开电源。

如果又发生彩色不均现象…

→ 即把扬声器移离电视机远些放置。

如果发生啸声 请重新配置扬声器,或转小放大器的音量。

安放须知 • 不要把扬声器放置在倾斜位置。

- 不要把扬声器装在如下位置:
- 太热或太冷的地方 — 极多尘垢的地方
- 极潮湿的地方
- 会受振动的地方
- 会直接照射到阳光的地方

请用软布轻蘸湿温和的洗涤剂溶液或清水擦拭机壳。 切勿使用任何型式的沙布, 抛光粉或如酒精, 汽油等溶剂 进行清洁。

请不要把音量电平调到高于失真点。

如果音量电平太高,扬声器保护电路即起作用而突然 地减小声音。这并非故障。此时,请调小音量电平并等候 片刻至机器恢复正常的操作。

关于扬声器系统, 如果尚有疑问时, 请洽询附近的 Sony 销售店。

联结系统

将扬声器系统连接到一个放大器的扬声器输出端子。 开始连接工作前,必须先关掉所有装置(包含副低音 扬声器)的电源。

这个配置是用于放大器连接了 DVD 播放机、LD 播放机、录影机或其它视频装置时的用途。

如下状况时,可试用此配置代替"A 式联结": — 当放大器上没有副低音扬声器用的插孔时。

— 当想获得较强的,来自副低音扬声器低音时。


注(C)


- 须确认扬声器上的(+)和(-)端子是否符合放大器上相当的(+)、(-)端子。
- 一定请系紧扬声器端子的螺钉。因为螺钉松了,可能发
- 确认所有的连接部分是否都连接得稳固。扬声器各端子 间的扬声器裸线部分相接触时,可能引起短路。
- ·不要把副低音扬声器连接到放大器的 CENTER (中央) 输 出端子(杜比专业逻辑或杜比数码(AC-3)用)。如果
- 这样做,副低音扬声器将不能输出低音。 • 放大器一边的连接有关详细,请参照放大器附带的说明


要领


所有具有条纹线皮的电线都是负(一)极,须连接到




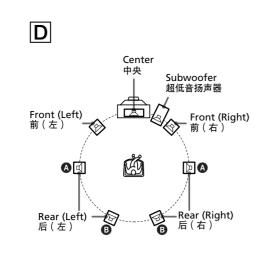


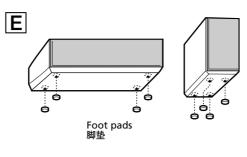

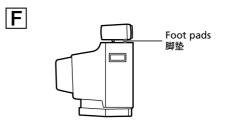

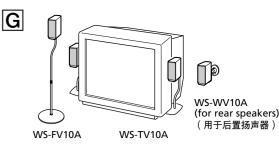

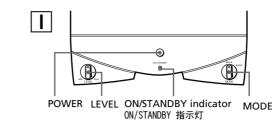

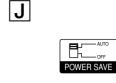

English

Positioning the speakers

Location of each speaker (D)

Each speaker should face the listening position. Better surround effect will result if all speakers are set at the same distance from the listening position. Place the front speakers at a suitable distance to the left and right of the television.

Place the subwoofer on either side of the television. Place the center speaker on the top-center of the TV set. The placement of rear speakers greatly depends on the configuration of the room. The rear speakers may be placed on both sides of the listening position **A** or behind the listening position **B**.

Tips

- Movies are best enjoyed in a room that produces no echoes (as in one with surrounding curtains).
- Music (especially classical music) is best enjoyed in a room that produces some echo

Setting the speakers

To prevent speaker vibration or movement while listening, attach the supplied foot pads to the bottom four corners of the center speaker, front speakers, and rear speakers ($\boxed{\textbf{E}}$).

Setting the center speaker (F) Set the center speaker firmly on top of the TV set, making

sure it is completely level.

Setting other speakers (G)

For greater flexibility in the positioning of the speakers, use the optional WS-FV10A, WS-TV10A, or WS-WV10A speaker stand (available only in certain countries).

The height of the front speakers should be adjusted to about the center of the TV screen (H)

Listening to the sound (II)

First, turn down the volume on the amplifier. The volume should be set to minimum before you begin playing the program source.

- **1** Turn on the amplifier and select the program source.
- **2** Press POWER on the subwoofer. The ON/STANDBY indicator on the subwoofer lights up green.
- **3** Play the program source.

Power turns on and off automatically — Auto power on/off function (J)

When the subwoofer is on (i.e, the ON/STANDBY indicator lights up green) and there is no signal input for a few minutes, the ON/STANDBY indicator changes to red and the subwoofer enters power saving mode. While in this mode a signal is input to the subwoofer, the subwoofer automatically turns on (auto power on off

To turn this feature off, slide the POWER SAVE switch on the rear panel to OFF.

Note

If you turn down the volume level of the amplifier too low, the auto power on/off function may activate, causing the subwoofer to enter power saving mode.

Adjusting the sound

Slight adjustments to the system can enhance your sound

Adjusting the subwoofer (II)

1 Set MODE according to the program source as follows:

Source	MODE
DVD, LD, video cassette or other video source	MOVIE
MD, CD, cassette tape or other audio source	MUSIC

2 Rotate LEVEL to adjust the volume. Set the volume level to best suit your preference according to the program source.

- · Some amplifier functions for enhancing the sound may cause distortion in the subwoofer. If such distortion occurs, turn off those functions.
- To enjoy high-quality sound, do not turn the subwoofer volume too high.
- To increase the bass sound from the subwoofer, connect the system using "Hookup B"
- The bass sound is enhanced in MOVIE mode rather than in MUSIC mode. Therefore, if you change the mode to MOVIE while listening to some sources that do not include the bass sound, you may not be able to get the effect.

Setting amplifier to enjoy

For the Dolby Digital (AC-3)

If your amplifier is connected internally or externally with a Dolby Digital (AC-3) processor, you should use the setup menus for the amplifier to specify the parameters of your speaker system. See the table below for the proper settings. For details on the setting procedure, refer to the manual that was

provided with your amplifier. Select Micro Satellite Position if a Sony amplifier provides it.

When "Hookup A" is used (Speaker setup)

For	Set to	
Front speakers	SMALL	
Center speaker	SMALL	
Rear speakers	SMALL	
Subwoofer	ON (or YES)	

When "Hookup B" is used (Speaker setup)

For	Set to	
Front speakers	LARGE	_
Center speaker	SMALL	_
Rear speakers	SMALL	_
Subwoofer	OFF (or NO)	_

For the Dolby Pro Logic

If your amplifier is connected internally or externally with a Dolby Pro Logic processor, you should set the surround effect mode to "NORMAL" on the amplifier for your particular speaker system

For details on the setting procedure, refer to the manual that was provided with your amplifier.

Troubleshooting

Should you encounter a problem with your speaker system, check the following list and take the indicated measures. If the problem persists, consult your nearest

There is no sound from the speaker system.

- Make sure all the connections have been correctly made.
- Make sure the volume on the amplifier has been turned up properly.
- Make sure the program source selector on the amplifier is set to the proper source.
- Check if headphones are connected. If they are, disconnect them.

There is distortion in the subwoofer sound output.

• Check if any sound-enhancing functions have been activated on the amplifier. If they have, turn them off.

There is hum or noise in the speaker output.

- Make sure all the connections have been correctly made.
- Make sure none of the audio components are positioned too close to the TV set.

The sound has suddenly stopped.

 Make sure all the connections have been correctly made. Contact between bare speaker wires at the speaker terminals may cause a short-circuit

Specifications

SS-V325 (front and rear speakers)

H

Speaker system Speaker units Enclosure type Rated impedance Power handling capacity Maximum input power: Sensitivity level Frequency range Dimensions (w/h/d)

Bass reflex 8 ohms 100 watts 87 dB (1 W, 1 m) 90 Hz - 20,000 Hz Approx. $70 \times 152 \times 126$

mm, including front

magnetically shielded

 5.5×11 cm, cone type

Approx. 830 g each

SS-CN325 (center speaker)

Speaker system Speaker units Enclosure type Rated impedance Power handling capacity Maximum input power: Sensitivity level Frequency range sions (w/h/d)

magnetically shielded 5.5×11 cm, cone type Bass reflex 120 watts 89 dB (1 W, 1 m)

Full range \times 2,

90 Hz - 20,000 Hz Approx. $300 \times 78 \times$ 126 mm, including front grille Approx. 1600 g

Mass

SA-WMS325 (subwoofer)

Speaker system Speaker unit Enclosure type Reproduction frequency range

Active subwoofer, magnetically shielded Woofer: 16 cm, cone type Advanced SAW type

28 Hz - 200 Hz Amplifier section Continuous RMS power output

75 W (8 ohms, 20 Hz -20 kHz, 0.8% THD)

Inputs

LINE IN (input pin jack) SPEAKER IN (input terminals)

LINE OUT (output pin jack)

SPEAKER OUT (output terminals) General 110 - 120 V/220-240 V Power requirements

AC, 50/60 Hz Power consumptions 1 W (standby mode)

Dimensions (w/h/d) Mass

Approx. $205 \times 385 \times 389$ mm, including front grille Approx. 10.3 kg

Supplied accessories

Foot pads (20) Audio connecting cord (1)

Speaker connecting cords, 10 m (2) Speaker connecting cords, 3.5 m (3) Speaker connecting cords, 2.5 m (2)

Design and specifications are subject to change without

各扬声器的配置(🖸)

扬声器的定位

每一个扬声都须向着听者位置。如能把所有扬声器都 设定与听者呈相等距离时,便可获得较佳的环绕声效果。 把前扬声器配置在电视机左右适当距离处。 把超低音扬声器放在电视机的任何一边。

把中央扬声器放在电视机顶上中央 后扬声器的安放位置受房间配置的影响很大。后扬声器 可安放在听者位置的两旁位置 🗗 或听者位置后面的 🖪 位。

• 能在不产生回音的房间里欣赏电影是一大享受(室内周 围屏障所发生的回音)。

• 音乐(特别是古典乐)则最好能在可产生回音的室内欣 赏, 其音响效果最佳。

设定扬声器 为防止在收听时扬声器振动或移动, 将附带的脚垫附 装在中央扬声器、前置扬声器和后置扬声器(E))的四个

设定中央扬声器(F) 将中央扬声器稳固地放在电视机顶部,务必使其完全 水平放置。

设定其它扬声器(🜀)

为了在扬声器定位中获得更大的适应性,请采用选购 件 WS-FV10A,WS-TV10A 或 WS-WV10A 扬声器座架(仅在某 些国家有售)

前置扬声器的高度应调整到电视机荧幕(H))中心左

听声音(Ⅱ)

首先,请转小放大器上的音量控制。在开始播放节目 信号源之前,必须把音量设定到最小。

1 打开放大器电源,选择节目信号源。

2 按副低音扬声器上的 POWER 。 超低音扬声器上的 ON/STANDBY 指示灯 即点亮绿色。

3 播放节目信号源。

自动地打开和关掉电源 - 自动电源开/关功能(🗓)

当副低音扬声器打开着电源(亦即 ON/STANDBY 指示 灯点亮着绿色) 而在几分钟里没输入信号时, ON/STANDBY 指示灯将变亮红色而副低音扬声器即将进入节电模式。在 此模式时,如果有信号输入到副低音扬声器,副低音扬声 器便可自动地打开电源(自动电源开/关功能)

要关掉此功能时,可把后面板上的 POWER SAVE 开关推 到 OFF (关掉) 位置。

注

您如果把放大器的音量电平调得太低, 自动电源开/ 关功能即可能会被激活(打开),而使副低音扬声器进入

调整声音

轻调一下系统便可提高音响享受。

调整副低音扬声器(Ⅱ)

1 根据如下节目信号源设定 MODE (模式): 信号源 MODE

DVD、LD、录音带或 MOVIE 其它视频信号源 MD、CD、录音带或 MUSIC

旋转 LEVEL 以调整音量。 根据节目信号源将音量调整到最适合您 喜好的水平。

- 一部分放大器起强化音响作用时,可能使副低音扬声器 发生声音失真现象。如果发生这样的失真现象时,即请 关掉其功能
- 要获得高音质音响时,不要把副低音扬声器的音量转得
- 要加强副低音扬声器的低音时,请用"B 式联结"连接 •低音在 MOVIE 模式而并非在 MUSIC 模式被强化。因此, 如果您在收听某些不包括低音的声源时将模式变为 MOVIE

设定放大器用于欣赏电影

模式,可能收不到低音效果

杜比数码(AC-3)时

如果放大器内装或外连有杜比数码 (AC-3) 处理器时, 您应使用设定选单为放大器指定扬声器系统的参数。 请按照下表进行适当的设定。有关设定方法的详细内

请参照您的放大器附带的说明书。 如果 Sony 放大器提供此功能请选择 Micro Satellite

使用"A 式联结"时(扬声器调定)

对	请设定为
前扬声器	SMALL
中央扬声器	SMALL
后扬声器	SMALL
副低音扬声器	ON (或 YES)

' 🖸 式联结"时(扬声哭调定

使用 🖸 八联纪	的(物产品响化)
对	请设定为
前扬声器	LARGE
中央扬声器	SMALL
后扬声器	SMALL
副低音扬声器	OFF (gt NO)

杜比专业逻辑时

如果放大器内装或外连接有杜比专业逻辑信息处理机 您便须为您的特殊的扬声器系统在放大器中把环绕声

有关设定方法的详细内容,请参照放大器附带的说明

故障检修

使用扬声器系统如果遭遇问题,即请按照下列各项进 行检查和测定。仍不能解决问题时,请洽询附近 Sony 销

- 扬声器系统没声音。 • 确认所有的接线是否都连接正确。
- 确认放大器的音量控制是否旋调适当。
- 确认放大器的节目信号源选择器是否已设定于 适当的信号源。

• 检查是否接插着耳机。如果是,即将其拆卸下来。 副低音扬声器输出声发生失真。

•检查放大器上的任何声音加强功能是否被打开 了。如果是,即将其关掉。

扬声器输出声带交流哼声或杂音。

•确认所有的接线是否都连接正确。 •确认各声频组成机是否没太靠近电视机配置。

•确认所有接线是否都连接正确。扬声器各端子间

的扬声器裸线部分相接触时,可能引起短路。

规格

SS-V325(前、后扬声器)

全音频范围, 磁屏蔽型 扬声器单元 5.5×11 cm,锥型 低音反射 额定阻抗 8 Ω

功率使用容量 最大输入功率 87 dB (1 W, 1 m) 频率范围 90 Hz~20,000 Hz 大约 70×152×126 mm, 含 尺寸(宽/高/纵深)

前格栅 质量 大约 830 g/每个

SS-CN325(中央扬声器)

全音频范围 ×2, 磁屏蔽型 扬声器系统 扬声器单元 5.5×11 cm, 锥型 低音反射 盒型 额定阻抗 8 Ω 功率使用容量 最大输入功率 灵敏度水平

89 dB (1 W, 1 m)

90 Hz~20,000 Hz

大约 300×78×126 mm, 含

75 W (在 20 Hz~20 kHz 时

为 8 Ω, 0.8 % THD)

质量 大约 1600 g/每个

SA-WMS325(副低音扬声器)

尺寸(宽/高/纵深)

扬声器系统 有源副低音扬声器, 磁屏蔽型 扬声器单元 低音扬声器: 16 cm, 锥型 先进的 SAW 型 盒型 再现频率范围 28 Hz∼200 Hz 放大器部分

输入端子

频率范围

LINE IN (输入管脚插孔) SPEAKER IN (输入端子)

LINE OUT (输出管脚插孔)

连续 RMS 功率输出

SPEAKER OUT(输出端子) 一般规格

电源 110~120/220~240 V AC, 50/60 Hz

大约 10.3 kg

电力消耗 尺寸(宽/高/纵深) 大约 205×385×385 mm, 含 前格栅

质量

附件 脚垫 (20) 声频连接导线(1) 扬声器连接导线, 10 m (2)

扬声器连接导线, 2.5 m (2) 设计和规格有所变更时,恕不另行奉告。

扬声器连接导线, 3.5 m (3)

上海索广电子有限公司 上海市 闵行区 剑川路930号