

## For Your Convenience

Please contact Sony directly if you:

- Have questions on the use of your television after reading your manual
- Experience difficulty operating your television

Contact Sony Customer Support at:

<http://www.sony.com/tvsupport>

or to speak with a support representative:

**Canada**

1-877-899-SONY (7669)

Sony will work to resolve your questions more quickly than your retailer or place of purchase.

**Please Do Not Return the Product to the Store**

# GRAND WEGA™



2694282131

<http://www.sony.net/>

Printed in U.S.A.

## LCD Projection TV Operating Instructions

### KF-42E200A KF-50E200A



### **Owner's Record**

The model and serial numbers are located at the rear of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

## **For Your Convenience**

### **Please contact Sony directly if you:**

- Have questions on the use of your television after reading your manual
- Experience difficulty operating your television

### **Contact Sony Customer Support at:**

<http://www.sony.com/tvsupport>

**or to speak with a support representative:**

#### **Canada**

1-877-899-SONY (7669)

Sony will work to resolve your questions more quickly than your retailer or place of purchase.

**Please Do Not Return the Product to the Store**

## WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.



This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

## CAUTION

To prevent electric shock, do not use this polarized AC plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

### Safety

- Operate the TV only on 120 V AC.
- The plug is designed, for safety purposes, to fit into the wall outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- If any liquid or solid object should fall inside the cabinet, unplug the TV immediately and have it checked by qualified service personnel before operating it further.
- If you will not be using the TV for several days, disconnect the power by pulling the plug itself. Never pull on the cord.
- For details concerning safety precautions, see “Important Safety Instructions” on page 4.

### Installing

- The TV should be installed near an easily accessible power outlet.
- To prevent internal heat buildup, do not block the ventilation openings.
- Do not install the TV in a hot or humid place, or in a place subject to excessive dust or mechanical vibration.
- Avoid operating the TV at temperatures below 41°F (5°C).
- If the TV is transported directly from a cold to a warm location, or if the room temperature changes suddenly, the picture may be blurred or show poor color due to moisture condensation. In this case, please wait a few hours to let the moisture evaporate before turning on the TV.
- To obtain the best picture, do not expose the screen to direct illumination or direct sunlight. It is recommended to use spot lighting directed down from the ceiling or to cover the windows that face the screen with opaque drapery. It is desirable to install the TV in a room where the floor and walls are not of a reflective material.
- See pages 12 and 13 for more information on the installation.

## CAUTION

Use the following Sony appliance(s) only with the following TV STAND.

 
SONY TV STAND MODEL NO.	SONY APPLIANCE MODEL NO.	
	KF-42E200A	KF-50E200A
SU-RG11S		SU-RG12L

Use with other TV STAND may cause instability and possibly result in injury.

### To Customers

Sufficient expertise is required for installing the specified product. Be sure to subcontract the installation to Sony dealers or licensed contractors and pay adequate attention to safety during the installation.

### Trademark Information

TruSurround XT, SRS and the  symbol are trademarks of SRS Labs, Inc. TruSurround XT technology is incorporated under license from SRS Labs, Inc.

Licensed by BBE Sound, Inc. under one or more of the following US patents: 5510752, 5736897. BBE and BBE symbol are registered trademarks of BBE Sound, Inc.

Macintosh is a trademark licensed to Apple Computer, Inc., registered in the U.S.A and other countries.

Blu-ray Disc is a trademark of the Blu-ray Disc Association.

WEGA, Grand WEGA, Steady Sound, Digital Reality Creation and CineMotion are registered trademarks of Sony Corporation.

**HDMI** This TV incorporates High-Definition Multimedia Interface (HDMI™) technology. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.



(Continued)

# Important Safety Instructions

 
- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.



- 6) Clean only with dry cloth.



- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.



- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.



- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.



- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.



- 11) Only use attachments/accessories specified by the manufacturer.



- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.



- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



- Be sure to observe the TV's "For Safety" section on page 5.

## Antennas

### Outdoor Antenna Grounding

If an outdoor antenna is installed, follow the precautions below. An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits.


**WHEN INSTALLING AN OUTDOOR ANTENNA SYSTEM, EXTREME CARE SHOULD BE TAKEN TO KEEP FROM CONTACTING SUCH POWER LINES OR CIRCUITS AS CONTACT WITH THEM IS ALMOST INVARIABLY FATAL.**

Be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges.

Section 810 of the National Electrical Code (NEC) in USA and Section 54 of the Canadian Electrical Code in Canada provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

## Antenna Grounding According to the NEC

Refer to section 54-300 of Canadian Electrical Code for Antenna Grounding.

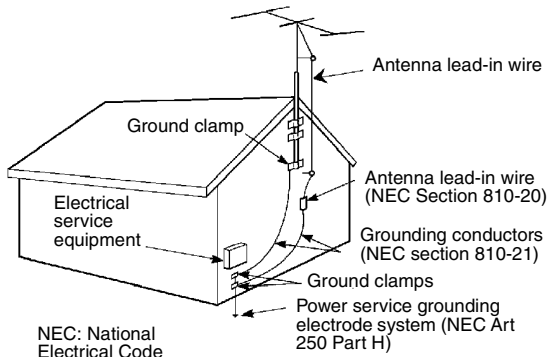

## Cleaning

- Clean the rear cover area of the TV regularly. Dust in the rear cover area may cause a problem with the cooling system of the TV set.
- Clean the cabinet of the TV with a dry soft cloth. To remove dust from the screen, wipe it gently with a soft cloth. Stubborn stains may be removed with a cloth slightly dampened with solution of mild soap and warm water. Never use strong solvents such as thinner or benzine for cleaning. If the picture becomes dark after using the TV for a long period of time, it may be necessary to clean the inside of the TV. Consult qualified service personnel.
- Unplug the AC power cord when cleaning this unit. Cleaning this unit with a plugged AC power cord may result in electric shock.



## On Contamination on the Screen Surface

The screen surface has a special coating to reduce reflections. To prevent screen damage, clean the screen as follows:

- Clean the screen with a soft cloth.
- To remove hard contamination, use a cloth moistened with a solution of mild detergent and water. Do not spray cleaning solution directly onto the TV. It should only be sprayed to moisten the cleaning cloth.
- Do not use any type of abrasive pad, alkaline cleaner, acid cleaner, scouring powder, chemical cloth, or solvent such as alcohol, benzene or thinner, as these may scratch the screen's coating.

## Service

### Damage Requiring Service

Do not attempt to service the set by yourself since opening the cabinet may expose you to dangerous voltage or other hazards.

Unplug the set from the wall outlet and refer servicing to qualified service personnel.



### Replacement Parts

When replacement parts are required, be sure the service technician certifies in writing that he has used replacement parts specified by the manufacturer that have the same characteristics as the original parts.

Unauthorized substitutions may result in fire, electric shock or other hazards.

See "Replacing the Lamp" on page 66.

## For Safety

### Be Careful When Moving the TV

When you place the TV in position, be careful not to drop it on your foot or fingers.


Watch your footing while installing the TV.



### Carry the TV in the Specified Manner

If you carry the TV in a manner other than the specified manner and without the specified number of persons, it may drop and a serious injury may be caused. Be sure to follow the instructions mentioned below.

- Carry the TV with the specified number of persons (see page 12).
- Hold the TV tightly when carrying it.
- Before carrying the TV, disconnect any accessories or cables.

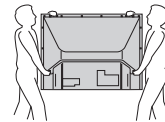

## About the TV

Although the TV is made with high-precision technology, black dots may appear or bright points of light (red, blue, or green) may appear constantly on the screen. This is a structural property of the panel and is not a defect.

## Installation

- If direct sunlight or other strong illumination shines on the screen, part of the screen may appear white due to reflections from behind the screen. This is a structural property of the TV.  
Do not expose the screen to direct illumination or direct sunlight.
- The picture quality may be affected by your viewing position. For the best picture quality, install your TV according to "Recommended Viewing Area" on page 13.
- When installing your TV against a wall, keep it at least 4 inches (10 cm) away from the wall.

## Projection Lamp

- Your TV uses a projection lamp as its light source. It is time to replace the lamp with a new one (not supplied) when:
  - the message, "Projection lamp is nearing end of life. Please replace the lamp." appeared on the screen,
  - the lamp replacement indicator on the front panel blinks in red,
  - screen images become dark,
  - no image appears on the display after prolonged use.
- In rare instances, the bulb may pop inside the lamp unit, but the lamp unit is designed to contain all of broken glass pieces inside the lamp unit. (See "Replacing the Lamp" on page 66.)
- When the lamp eventually burns out, you may hear a noticeable pop sound. This is normal and is inherent in this type of lamp.

## Cooling Fan

This TV uses a cooling fan. You may hear the noise of fan running, depending on the placement of your TV. The noise may be more noticeable during the night or when the background noise level is low.

## Disposal of Used Batteries

To preserve our environment, dispose of used batteries according to your local laws or regulations.



# Contents

## ***Introducing the TV***

<b>Welcome</b> .....	9
Package Contents.....	9
Features.....	9
<b>Enjoying Your TV</b> .....	10
Notes on the TV.....	10
Screen.....	10
Indicators.....	11
Projection Lamp.....	11
<b>Installing the TV</b> .....	12
Carrying Your TV.....	12
Take Precaution during Installation.....	12
Preventing the TV from Toppling Over.....	12
When Installing Your TV against a Wall.....	13
Recommended Viewing Area.....	13
Side and Rear Panel.....	14
<b>TV Controls and Connectors</b> .....	16
Front Panel.....	16

## ***Connecting the TV***

<b>Overview</b> .....	17
Making Video and Audio Connections.....	17
About Using S VIDEO.....	18
About Using HDMI to DVI Adapter.....	18
<b>Basic Connections</b> .....	19
Cable System or VHF/UHF Antenna System.....	20
Cable Box.....	20
Satellite Receiver and Cable/Antenna.....	21
Equipment with HDMI Connection.....	22
Equipment with DVI Connection.....	22
<b>Setting Up the Channel List</b> .....	23
Using Initial Setup.....	23
<b>Connecting Optional Equipment</b> .....	24
VCR and Cable.....	25
VCR and Cable Box.....	26
DVD Player with Component Video Connectors.....	28
DVD Player with S VIDEO and Audio Connectors.....	29
Camcorder or Video Game Equipment.....	30

Personal Computer.....	31
Audio Receiver.....	31

## ***Watching the TV***

<b>Overview</b> .....	32
<b>Inserting Batteries into the Remote Control</b> ..	32
<b>Button Descriptions</b> .....	33
<b>Programming the Remote Control</b> .....	35
<b>Using Other Equipment with Your Remote Control</b> .....	37
<b>Special Buttons on the Remote Control</b> .....	40
Using the TOOLS Button.....	40
Using the JUMP Button.....	40
Using the FREEZE Button.....	40
Using the WIDE Button.....	41
Using the WIDE Button in PC Mode.....	42

## ***Using the Menus***

<b>Overview of MENU</b> .....	43
<b>Navigating and Selecting Items</b> .....	45
<b>Using External Inputs in MENU</b> .....	45
<b>Using Favorites in MENU</b> .....	45
<b>Using TV in MENU</b> .....	46
<b>Using Settings in MENU</b> .....	46

## ***Using the Settings***

<b>Overview</b> .....	47
<b>Accessing the Picture Settings</b> .....	49
Selecting Picture Options.....	49
<b>Accessing the Sound Settings</b> .....	52
Selecting Sound Options.....	52
<b>Accessing the Screen Settings</b> .....	54
Selecting Screen Options.....	54
<b>Accessing the Channel Settings</b> .....	56
Selecting Channel Options.....	56
<b>Accessing the Parental Lock Settings</b> .....	57
Selecting Parental Lock Options.....	57
Viewing Blocked Programs.....	58
Selecting Custom Rating Options.....	58
<b>Accessing the Setup Settings</b> .....	60
Selecting Setup Options.....	60

**Accessing the Clock/Timers Settings.....62**  
    Selecting Clock/Timers Options.....62

***Other Information***

**Overview.....65**  
**Contacting Sony .....65**  
**Replacing the Lamp.....66**  
    How to Replace the Lamp.....66  
**Troubleshooting .....69**  
    Remote Control.....69  
    Picture .....69  
    Sound.....70  
    Channels .....71  
    General .....71  
**PC Input Signal Compatibility Chart.....73**  
**Specifications .....74**

***Index***

**Index .....76**



# Introducing the TV

## Welcome

Thank you for purchasing this Sony's LCD projection TV. This manual is for models KF-42E200A and KF-50E200A (Canada model only).

---

## Package Contents

Along with your new TV, the packing box contains a remote control and two AA (R6) batteries. See page 74 for the complete list of packaging contents.

---

## Features

Some of the features that you will enjoy with your new TV include:

- ❑ **WEGA Engine:** Delivers superb picture quality from any video source by minimizing the signal deterioration caused by digital-to-analog conversion and stabilizing the signal processing. This engine features unique Sony technology, including:
  - **DRC<sup>®</sup> (Digital Reality Creation)-MF V1:** Unlike conventional line doublers, the DRC Multifunction feature replaces the signal's NTSC waveform with the near-HD equivalent by digital mapping processing. The DRC Palette option lets you customize the level of detail (Reality) and smoothness (Clarity).
- ❑ **Advanced Iris:** Automatically detects the brightness of the screen. By adjusting the iris shutter, this feature can provide you with the best contrast and brightness from one scene to the next for your TV viewing.
- ❑ **MENU:** Sony's unique user interface provides easy access to useful TV functions such as external inputs (switch among connected equipments), favorite channels (create a list of your favorite channels), watch TV or to customize your TV settings.
- ❑ **Wide Screen Mode:** Allows you to watch 4:3 normal broadcasts in wide screen mode (16:9 aspect ratio).
- ❑ **CineMotion<sup>®</sup>:** Using the reverse 3-2 pull down technology, the CineMotion feature provides smoother picture movement when playing back movies or other video sources on film.
- ❑ **Parental Control:** V-Chip technology allows parents to block unsuitable programming from younger viewers.
- ❑ **HDMI (High-Definition Multimedia Interface) Inputs:** Provide an uncompressed, all-digital audio/video interface between this TV and any HDMI-equipped audio/video component, such as a set-top box, Blu-ray Disc™ player, DVD player, and A/V receiver. Your personal computer can be connected to this TV with HDMI Input (see page 30). HDMI supports enhanced, or high-definition video.
- ❑ **Component Video Inputs:** Offers a high-quality video for DVD (480p, 480i) and digital set-top box (1080i, 720p, 480p, 480i) connections.
- ❑ **S VIDEO Inputs:** Provides a high-quality image from connected equipment.
- ❑ **Favorite Channels:** Allows you to navigate a list of up to 16 favorite channels without leaving the current channel.
- ❑ **Steady Sound<sup>®</sup>:** Equalizes volume levels so there is consistent output between programs and commercials.

## Enjoying Your TV

To enjoy your TV for years to come and maintain its original picture quality, you should perform periodic maintenance.

---

### Notes on the TV

#### To enjoy clear picture

- Prevent sunlight or other light sources from shining directly onto the screen.
- The screen surface is easily scratched. Do not rub, touch, or tap it with sharp or abrasive objects (see “On Contamination on the Screen Surface” on page 5).

#### When not using the TV for a long period of time

- Unplug the AC power cord from the outlet if you anticipate not using the TV for more than a week.

#### When turning off the power

- The cooling fan will continue to operate for about two minutes. Allow several minutes before unplugging from the outlet or switching the breaker off.

#### On moisture condensation

- If your TV is moved directly from a cold to a warm location or is placed in a humid room, or if the room temperature changes suddenly, the picture may blur or show poor color. This is caused by moisture condensation on the lenses inside. Wait a few hours to let the moisture evaporate before turning on the TV. When the condensation has evaporated, the picture will return to normal.

---

### Screen

To minimize reflection, the screen surface has a special coating. Inappropriate cleaning methods could damage the screen surface. Special care is required.


#### Cleaning the Screen Surface

Dust and dirt on the screen can affect the picture quality. To dust off the screen use a soft cloth. Be sure to follow the cleaning instruction on page 5 for stubborn stains and dirt.

#### Temporary Image Retention

When high contrast non-moving images such as station logos and channel numbers are displayed for a long period of time, there may be some image retention on the screen. This is only a temporary condition. Turning off the power for a while or letting the TV run on another channel will eliminate the image retention.

## Indicators

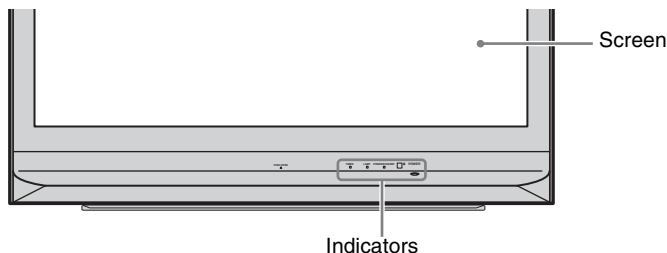

The indicators show the current status of your TV. If there is a change in the condition or a problem with the TV, the indicators will flash or light up in the manner described below to let you know that it requires your attention.


<i>Indicator</i>	<i>Flashing because...</i>
POWER flashing	<p>green : The lamp for the light source is preparing to turn on. When it is ready, the green indicator stays on.</p> <p>red : The lamp door or the lamp is not securely attached. The red indicator will continue to flash in intervals of three blinks at a time until the lamp door or the lamp is placed correctly. When the lamp door or the lamp is securely attached, the TV will turn on with green indicator.</p>
LAMP indicator flashes	The projection lamp has burned out. Replace it with new one (see page 66).
TIMER indicator is lit	When one of the timers is set, the orange indicator will remain lit (will not flash) even when the TV is turned off.

## Projection Lamp

How to replace the lamp, see page 66.

Your TV uses a projection lamp as its light source. As with any lamp, it has a lifespan and needs to be replaced when the Lamp indicator flashes or the screen becomes darker. Your TV also has a function to display a message, “Projection lamp is nearing end of life. Please replace the lamp.” to let you know that the lamp has reached its expected lifespan. Note the following:


- After turning on your TV, it may take a while (1 minute or less) before the picture appears.
- When the projection lamp wears out, the screen goes dark. Replace the lamp with a new Sony XL-2400 replacement lamp (not supplied).
- After lamp is replaced, please set the “Lamp Replacement” option in the Setup Settings (see page 61 and 66).

 **The light emitted from the lamp is quite bright when your TV is in use. To avoid eye discomfort or injury, do not look into the light housing when the power is on.**

# Installing the TV


## Carrying Your TV

Carrying the TV requires at least two people. Do not hold by the pedestal or the front panel of the TV. Doing so may cause these parts to break off. When moving the TV, place one hand in the hole on the lower portion of the TV while grasping the top with the other hand, as shown in the illustration below.

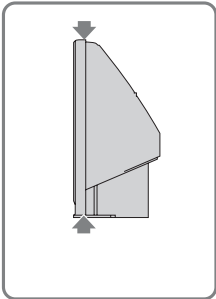


Do not grasp the pedestal or the front panel of the TV.

KF-42E200A

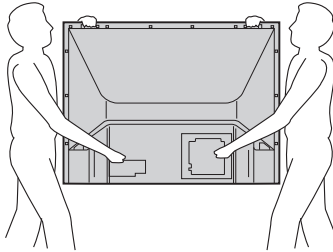

KF-50E200A

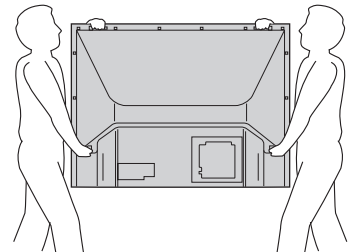

If you have connected cables and cords, be sure to unplug them before moving the TV.

## Take Precaution during Installation


To ensure the safety of children and the TV, keep children away from the TV during installation. Climbing on or pushing the TV or its stand may cause it to fall and damage the TV.

## Preventing the TV from Toppling Over

As a protective measure, secure the TV as follows.

### Using the TV stand with support belts


- ❑ Sony strongly recommends using the TV stand SU-RG11S (for KF-42E200A)/SU-RG12L (for KF-50E200A) with a support belt designed for your TV.

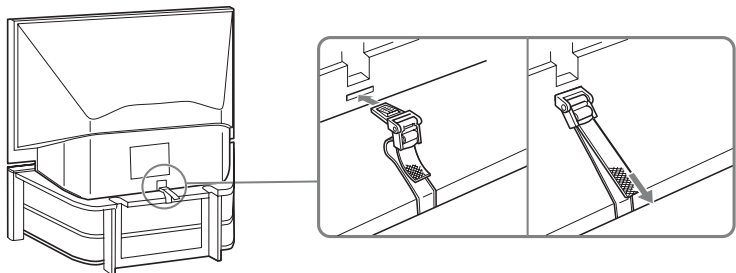

🔧 **When using the SU-RG11S (for KF-42E200A)/SU-RG12L (for KF-50E200A) stand for your TV, you must use the support belt.**

## When Installing Your TV against a Wall



Keep your TV at least 4 inches (10 cm) away from the wall to provide proper ventilation. Blocking the ventilation opening of the cooling fan may damage the TV.

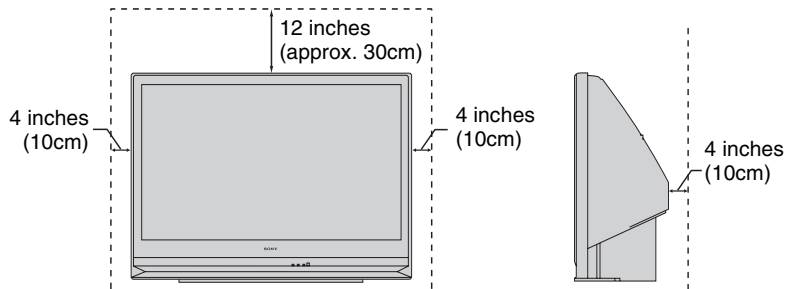

Never install the TV as follows:

Air circulation is blocked.

Air blown into cooling fan.

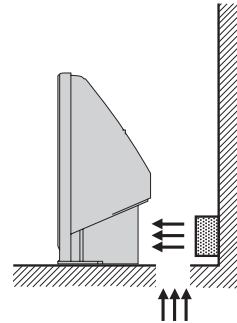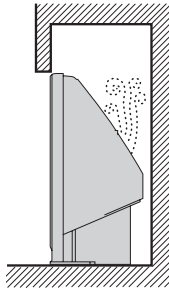


**Do not install the TV near any ventilation, as it may affect the normal TV operating temperature.**

## Recommended Viewing Area


Your viewing position may affect the picture quality. For the best picture quality, install your TV within the areas shown below.

Model	Viewing distance
KF-42E200A	min. 5.9 ft. (approx. 1.8 m)
KF-50E200A	min. 6.6 ft. (approx. 2.0 m)




Horizontal Viewing Area

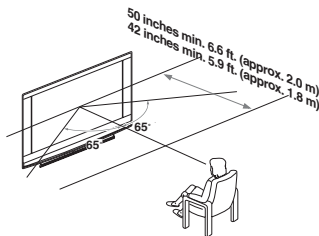


Vertical Viewing Area

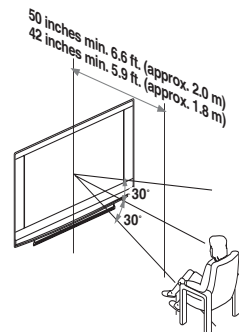


## Side and Rear Panel

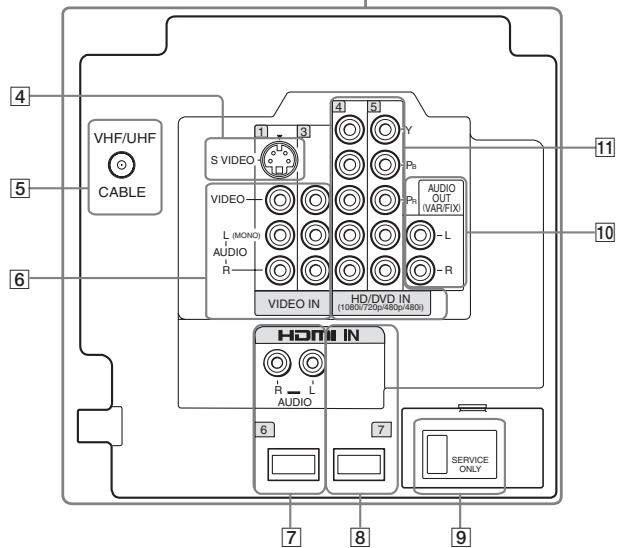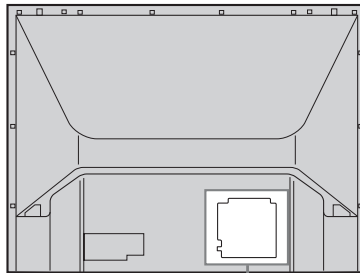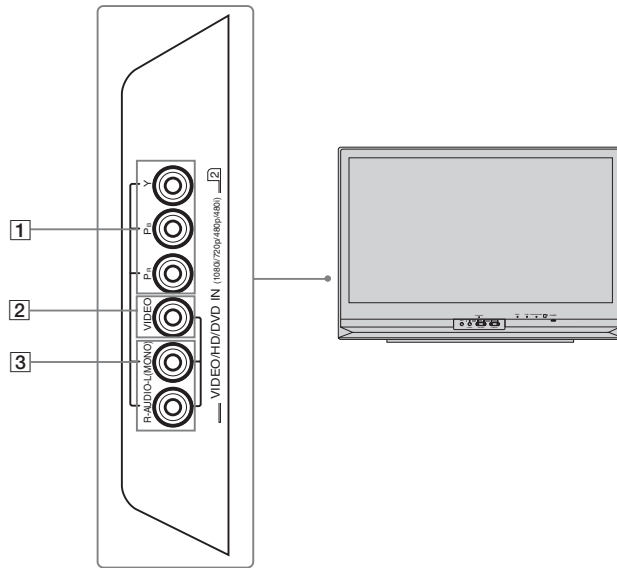

 Jack	Description
<b>1</b> HD/DVD IN 2 (1080i/720p/ 480p/480i)	Connects to your equipment's component video (YPbPr) output jacks. Component video provides better picture quality than the S VIDEO ( <b>4</b> ) of rear panel) or the composite video ( <b>6</b> ) of rear panel) connections. When Auto is selected for the Video 2 (Component) option in the Setup settings, the component video function will be the default stream when present (see page 61).
<b>2</b> VIDEO IN 2	Connects to the composite video output jack on your camcorder or other video equipment.  <b>When connecting composite video to VIDEO IN 2, be sure to select Video 2 (Component) to Off in the Setup settings to activate both audio and video function for composite connection (see page 61).</b>
<b>3</b> AUDIO IN 2 L (MONO)/R	Connects to the audio (L/R) output jacks of your equipment such as camcorder or other video equipment which you want an easy access.
<b>4</b> VIDEO IN 1 S VIDEO	Connects to the S VIDEO output jack of your VCR or other video equipment that has S VIDEO. S VIDEO provides better picture quality than the composite video ( <b>6</b> ).
<b>5</b> VHF/UHF/ CABLE	RF input that connects to your cable or VHF/UHF antenna signal.
<b>6</b> VIDEO IN 1/3 VIDEO/ L (MONO)- AUDIO-R	Connects to the composite video and audio output jacks on your VCR or other video equipment. A third composite video and audio (VIDEO 2) is located on the left side panel of the TV.
<b>7</b> HDMI IN 6 HDMI/ R-AUDIO-L	HDMI (High-Definition Multimedia Interface) provides an uncompressed, all-digital audio/video interface between this TV and any HDMI-equipped audio/video equipment, such as a set-top box, Blu-ray Disc player, DVD player, A/V receiver as well as PC. HDMI supports enhanced, or high-definition video, plus two-channel digital audio. You can also connect a DVI-equipped device to your TV by using an HDMI-to-DVI cable.
<b>8</b> HDMI IN 7	When HDMI to DVI cable is used to connect your equipment for video, be sure to use audio cable for the sound. See page 30 for connecting to your personal computer.
<b>9</b> Service Port	For service use only.
<b>10</b> AUDIO OUT (VAR/FIX) L/R	Connects to the left and right audio input jacks of your audio or video equipment. You can use these outputs to listen to your TV's audio through your stereo system.
<b>11</b> HD/DVD IN 4/5 (1080i/720p/ 480p/480i)/ L-AUDIO-R	Connects to your equipment's component video (YPbPr) and audio (L/R) jacks. Component video provides better picture quality than the S VIDEO ( <b>4</b> ) or the composite video ( <b>6</b> ) connections.

# TV Controls and Connectors

## Front Panel

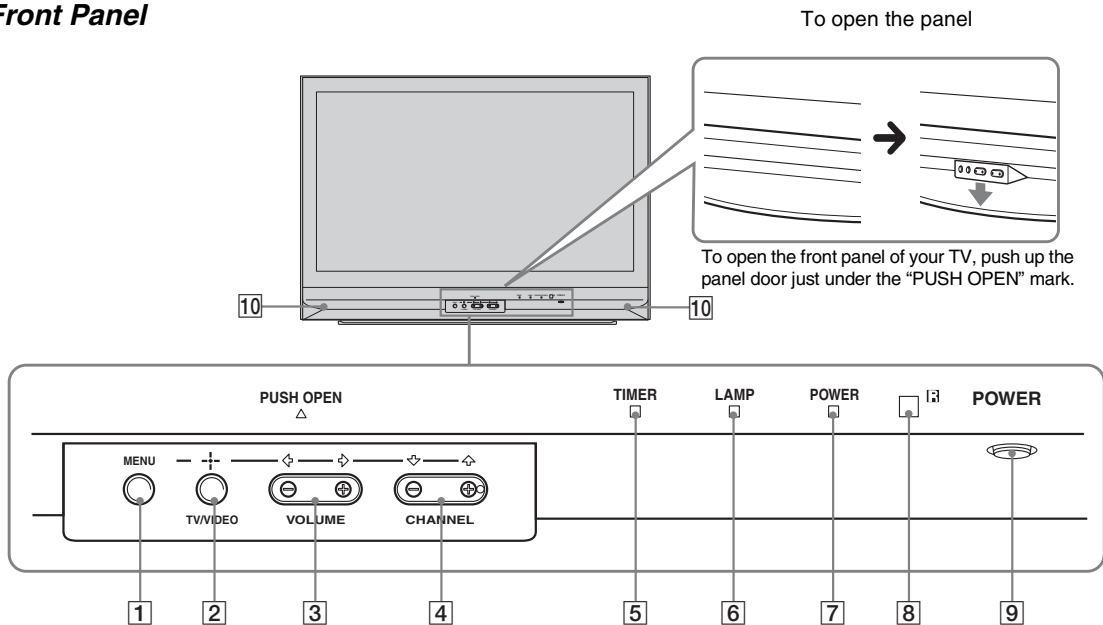

Item	Description
1	<b>MENU</b> Press to display MENU to activate the $\leftarrow$ , $\rightarrow$ , $\downarrow$ , and $\uparrow$ buttons. Press again to exit MENU to activate the TV/VIDEO, - VOLUME + and - CHANNEL+ buttons.
2	$\leftarrow$ $\rightarrow$ <b>TV/VIDEO</b> Press to confirm the selection or setting. Press repeatedly to cycle through the video equipment connected to the TV's video inputs.
3	$\leftarrow$ $\rightarrow$ <b>- VOLUME +</b> Press to adjust the volume.
4	$\downarrow$ $\uparrow$ <b>- CHANNEL +</b> Press to scan through channels. To scan quickly through channels, press and hold either - or +.
5	<b>TIMER LED</b> When lit in orange, indicates one of the timers is set. When it is set, this LED will remain lit even if the TV is turned off. For details, see page 62.
6	<b>LAMP LED</b> Flashes in red when the lamp for the light source has burned out. For details, see "Replacing the Lamp" on page 66.
7	<b>POWER</b> Lights up in green when the TV is turned on. If the LED blinks in red continuously, this may indicate the display unit needs servicing (see contacting Sony information on page 2). When the red LED blinks only three times, the lamp door of the lamp unit or the lamp itself is not securely attached (see page 67).
8	<b>Infrared Receiver</b> Receives IR signals from the remote control. Do not put anything near the sensor, as its function may be affected.
9	<b>POWER</b> Press to turn on and off the TV.
10	<b>Speaker</b> Outputs the audio signal.

**The CHANNEL + button has a tactile dot. Use the tactile dot as a reference when operating the TV.**



# Connecting the TV

 
## Overview








To display clear crisp pictures, you must connect your TV correctly and select the correct Wide Mode to display the picture in the correct aspect ratio (see “Using the WIDE Button” on page 41). It is strongly recommended to connect the antenna using a 75-ohm coaxial cable to receive optimum picture quality signal. A 300-ohm twin lead cable can be easily affected by radio noise and the like, resulting in signal deterioration. If you use a 300-ohm twin lead cable, keep it as far away as possible from the TV.

## Making Video and Audio Connections

The signals that enter your TV and connected devices will need to output in the correct format using the suitable connections. Below are different types of video connectors available these days. Your TV comes with all types of connectors with the exception of the DVI connector but your cable box or satellite receiver may be equipped with this type. When connecting your TV, use the inputs that are available on your devices that provide the best video performance, as described below.

**Best Video Performance**



	Connector type	Separate audio connection required
	HDMI (High-Definition Multimedia Interface)	No
	DVI (Digital Visual Interface) *	Yes 
	Component video (480i/480p/720p/1080i)	
	S VIDEO	
	Composite video	
	RF/Coaxial	No

\* An adapter is necessary when you are connecting a DVI-equipped device to this TV (see page 18).


---

## About Using S VIDEO



If the optional equipment you are connecting has an S VIDEO jack (shown at left), you can use an S VIDEO cable for improved picture quality (compared to an A/V cable). Because S VIDEO carries only the video signal, you also need to connect audio cables for sound, as shown below.

### Example of an S VIDEO Connection

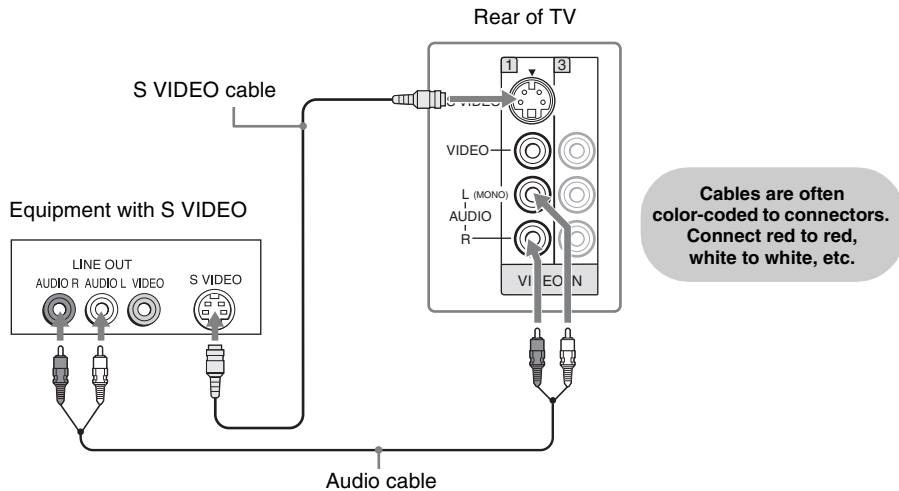

---

## About Using HDMI to DVI Adapter

 
If you are connecting equipment with DVI connector with this TV, you will need to use an adapter. You can use an HDMI-to-DVI cable or an HDMI adapter (not supplied). Both are available from your local electronics store. When you use the adapter, you will also need to use separate audio cables for sound as DVI connector is for video signals only.



HDMI-to-DVI cable



HDMI adapter



Audio cable

## Basic Connections

The way in which you connect your TV will vary, depending on how your home receives a signal (antenna and satellite; cable and cable box) and whether or not you plan to connect a VCR.

<i><b>If You Are Connecting</b></i>	<i><b>See Page</b></i>
<i><b>Cable System or VHF/UHF Antenna System</b></i>	<b>20</b>
<input type="checkbox"/> No cable box or VCR	
<i><b>Cable Box</b></i>	<b>20</b>
<input type="checkbox"/> Cable box unscrambles only some channels (usually premium channels)	
<input type="checkbox"/> No VCR	
<i><b>Satellite Receiver and Cable/Antenna</b></i>	<b>21</b>
<i><b>Equipment with HDMI Connection</b></i>	<b>22</b>
<i><b>Equipment with DVI Connection</b></i>	<b>22</b>
<i><b>Setting Up the Channel List</b></i>	<b>23</b>

 
### ***If you are connecting a VCR***

See the connections described on pages 25 and 26.

## Cable System or VHF/UHF Antenna System

For best results, use this connection if you:

- Have a cable or an antenna.
- Do not have a cable box or VCR. (If you have a cable box, see below. If you have a VCR, see pages 25 and 26.)



**Do not use an indoor antenna, which is especially susceptible to radio noise.**


## Cable Box

For best results, use this connection if:

- Your cable company scrambles all channels, which requires you to use a cable box.
- You do not have a VCR. (If you have a VCR, see pages 25 and 26.)

To connect the cable box

- 1** Connect the CATV cable to the cable box's input jack.
- 2** Use a coaxial cable to connect the cable box's output jack to the TV's CABLE input.
- 3** Turn on the cable box first, then run Auto Program as described in "Setting Up the Channel List" on pages 23.

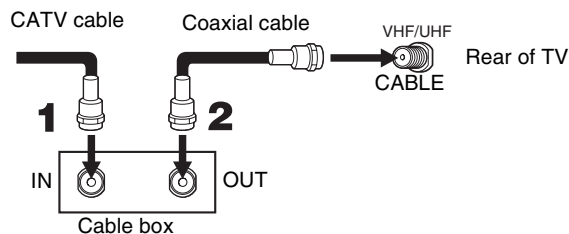

## Notes on Using This Connection

<i>To do this...</i>	<i>Do This ...</i>
Use the cable box	Tune the TV to the channel the cable box is set to (usually channel 3 or 4) and then use the cable box to switch channels.
Set up the TV remote control to operate the cable box	Program the remote control. See "Programming the Remote Control" on page 35.
Activate the remote control to operate the cable box	Press SAT/CABLE (FUNCTION) once, and the SAT/CABLE indicator lights up.
Prevent the accidental switching of TV channels	When using the cable box, ensure that the TV remains tuned to the channel that the cable box is set to (usually channel 3 or 4).


## Satellite Receiver and Cable/Antenna

- SAT signals are selected by the SAT Box connected to the VIDEO INPUT. TV signals are selected from the signal connected to the CABLE input.

**Disconnect all power sources before making any connections.**

- 1** Connect the satellite antenna cable to the satellite receiver's SATELLITE IN jack.
- 2** Use A/V and S VIDEO cables to connect the satellite receiver's AUDIO and S VIDEO OUT jacks to the TV's AUDIO and S VIDEO IN jacks.
- 3** Use a coaxial cable to connect your cable or your antenna to the TV's VHF/UHF/CABLE jacks.

 **If your satellite receiver is not equipped with S VIDEO, use a VIDEO cable (yellow) instead of the S VIDEO cable.**

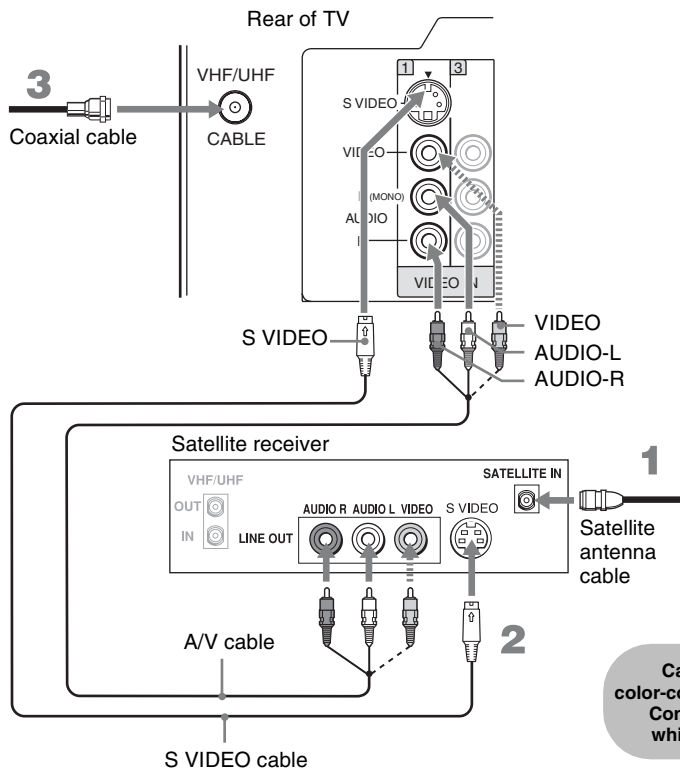

## Equipment with HDMI Connection


💡 The HDMI jack provides both video and audio signals, so it is not necessary to connect an audio cable.

Use this hookup if:

- Your equipment has a High-Definition Multimedia Interface (HDMI).

**Disconnect all power sources before making any connections.**

Using an HDMI cable, connect the equipment's HDMI OUT jack to the TV's HDMI IN (HDMI 6 or HDMI 7) jack.

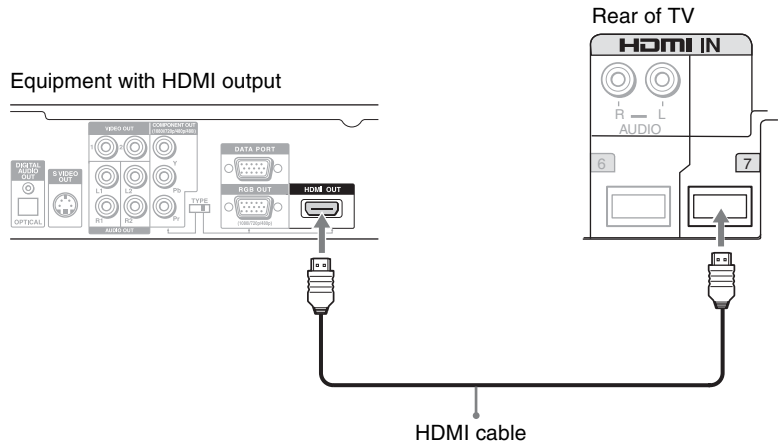


## Equipment with DVI Connection

Cables are often color-coded to connectors. Connect red to red, white to white, etc.

💡 When connecting to a DVI output, audio cable must be used simultaneously for the audio signal. DVI carries video signal only.

**Disconnect all power sources before making any connections.**


If you are connecting with DVI-HDTV output, you can connect to the TV's HDMI IN (HDMI 6) jack by using an HDMI-to-DVI cable or an adapter (both not supplied).

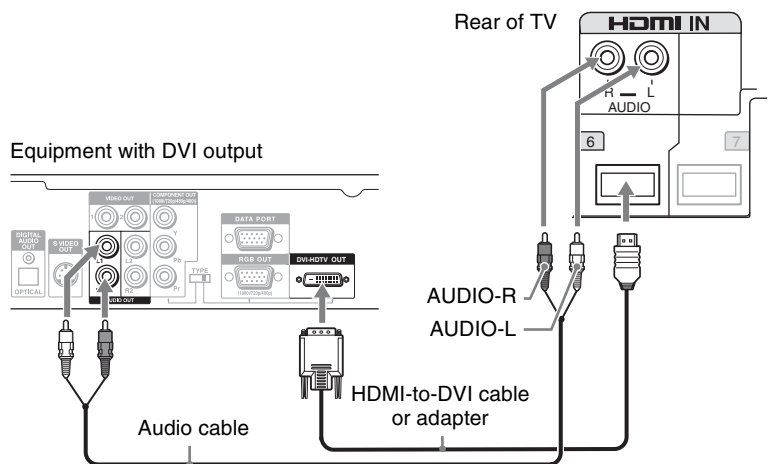

📌 When using a HDMI-to-DVI cable or an adapter, be sure to connect the DVI output connector first; then connect to the HDMI input on your TV.






## Setting Up the Channel List

 
After you finish connecting the TV, you can run the Initial Setup to create a list of available channels. The Initial Setup screen appears when you turn on the TV for the first time after hooking it up. If you choose to set up the channels at a later time, select the Auto Program option in the Channel setting to scan available channels (see below).

 **The Initial Setup feature does not apply for installations that use a cable box for all channel selection.**


### Using Initial Setup


#### To run Initial Setup the first time you turn on your TV

- 1** Press  to turn on the TV.  
The Initial Setup screen appears.
- 2** Press  or  to highlight the on-screen display language. Then press . The message “First please connect cable or antenna” and “Start auto program now?” will appear.
- 3** Highlight “Yes” then press .

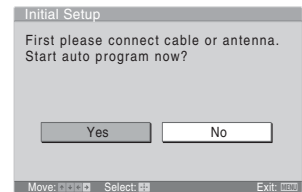

Auto Program performed through Initial Setup will automatically create a list of receivable channels.

 **Auto Program may take a few minutes to complete. If you cancel the Auto Program before all receivable channels are scanned, you may want to perform the task later (see “To run Auto Program at a later time” below).**

 **If you selected “No” during the Initial Setup, the Initial Setup message will appear each time you turn on the TV until you complete the Auto Program as a reminder.**

#### To run Auto Program at a later time

Before running the Auto Program, make sure that you have selected the correct signal input for your TV. See “Cable” under Selecting Channel Options on page 56.

- 1** Select Settings in MENU, and then go to Channel settings.
- 2** Select Auto Program then select “Yes”.

 **Auto Program will create a list of receivable channels for the current input (VHF/UHF antenna or CABLE).**

## ***Connecting Optional Equipment***

You can connect a variety of optional equipment to your TV. This section provides some of the individual connections you can make. For multiple connections, please refer to the Quick Setup Guide.

<b><i>If You Are Connecting</i></b>	<b><i>See Page</i></b>
VCR and Cable	<b>25</b>
VCR and Cable Box	<b>26</b>
DVD Player with Component Video Connectors	<b>28</b>
DVD Player with S VIDEO and Audio Connectors	<b>29</b>
Camcorder or Video Game Equipment	<b>30</b>
Camcorder or Video Game Equipment	<b>30</b>
Audio Receiver	<b>31</b>



## VCR and Cable


Use this hookup if:

- You have cable TV that does not require a cable box.

**Disconnect all power sources before making any connections.**

- 1** Connect the CATV cable to the single (input) jack of the splitter.
- 2** Use a coaxial cable to connect one of the output jack of the splitter to the TV's VHF/UHF/CABLE jack.
- 3** Use a coaxial cable to connect the splitter's other output jack to the VCR's input jack.
- 4** Use A/V and S VIDEO cables to connect the VCR's AUDIO and S VIDEO OUT jacks to the TV's AUDIO and S VIDEO IN jacks.

 **If your VCR is not equipped with S VIDEO, use a VIDEO cable (yellow) instead of the S VIDEO cable.**

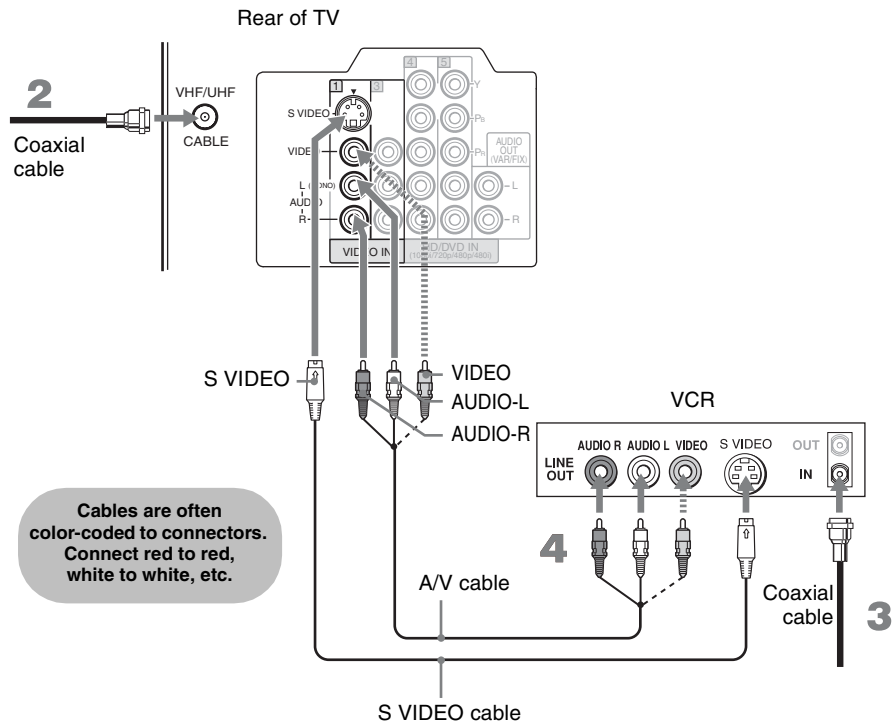

---

## VCR and Cable Box

Use this hookup if:

- ❑ Your cable TV company scrambles some channels, but not all of them (pay channels vs. regular cable channels) and you need to use a cable box.

With this connection you can:


- ❑ Use the TV's remote control to change channels on your cable box when the signal is scrambled. To program your Sony remote control to operate your cable box, see "Programming the Remote Control" on page 35.
- ❑ Use the TV's remote control to change channels on your TV when the signal is not scrambled. Your TV's tuner provides a better picture quality than the output of your cable box.


**Disconnect all power sources before making any connections.**

- 1** Connect the CATV cable to the single (input) jack of the splitter.
- 2** Use a coaxial cable to connect one of the output jack of the splitter to the TV's VHF/UHF/CABLE jack.
- 3** Use a coaxial cable to connect the splitter's other output jack to the cable box's input jack.
- 4** Use a coaxial cable to connect the cable box's output jack to the VCR's RF input jack.
- 5** Use an A/V cable to connect the cable box's A/V output jacks to the TV's A/V input jacks.
- 6** Use an A/V and S VIDEO cables to connect the VCR's AUDIO and S VIDEO OUT jacks to the TV's AUDIO and S VIDEO IN jacks.

 **If your VCR is not equipped with S VIDEO, use a VIDEO cable (yellow) instead of the S VIDEO cable.**

- 7** Run Initial Setup, as described in "Setting Up the Channel List" on page 23.

 **To view scrambled channels, tune the TV to the channel the cable box is set to (usually channel 3 or 4) and then use the cable box to switch channels.**

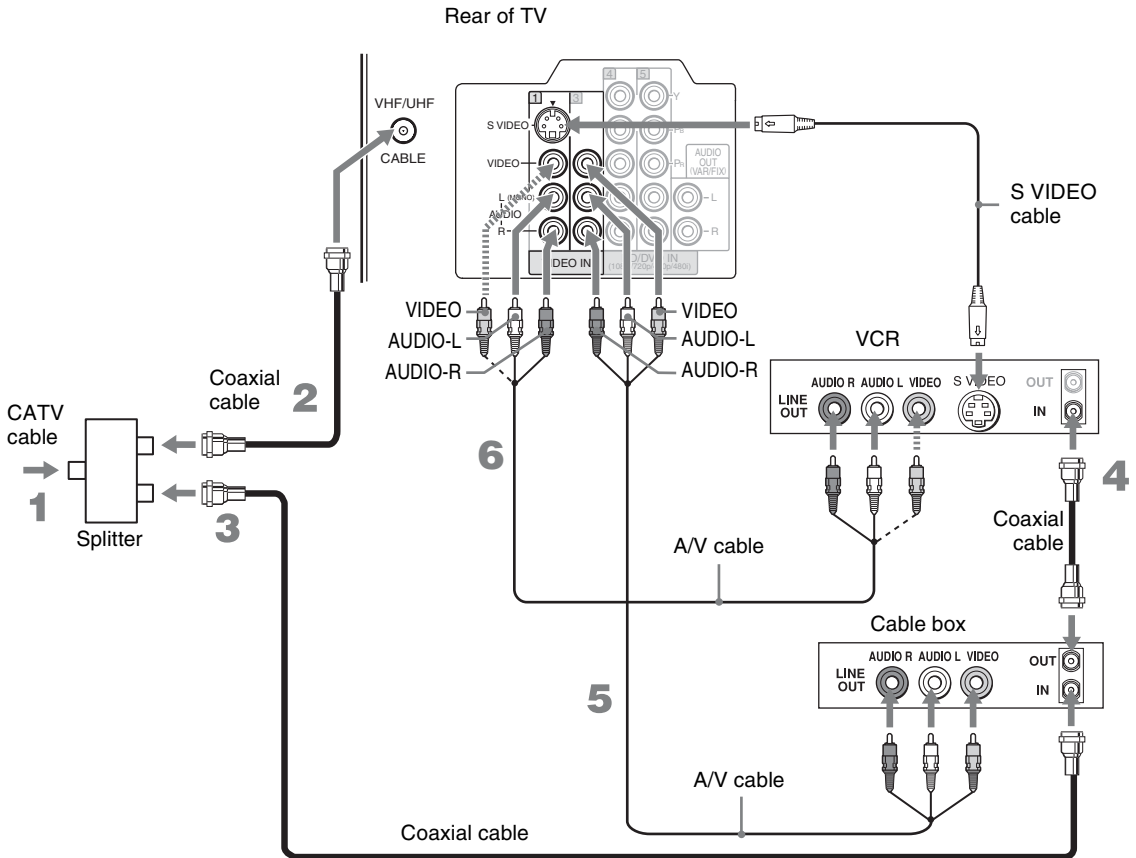

Cables are often color-coded to connectors. Connect red to red, white to white, etc.

If you are connecting a digital cable box, you will need a special bi-directional splitter designed to work with your cable box.

## DVD Player with Component Video Connectors

Use this hookup if:


- Your DVD player has component (YP<sub>B</sub>Pr) jacks.


**Disconnect all power sources before making any connections.**

- 1** Use a component video cable to connect the DVD player's YP<sub>B</sub>Pr jacks to the TV's YP<sub>B</sub>Pr jacks. Use the HD/DVD IN 4 or 5 input.

 **The YP<sub>B</sub>Pr jacks on your DVD player are sometimes labeled YC<sub>B</sub>Cr, or Y, B-Y and R-Y. If so, connect the cables to like colors.**

- 2** Use an audio cable to connect the DVD player's AUDIO OUT jacks to the TV's AUDIO IN jacks. Be sure to use the same row of inputs that you used for the video connection (HD/DVD IN 4 or 5).

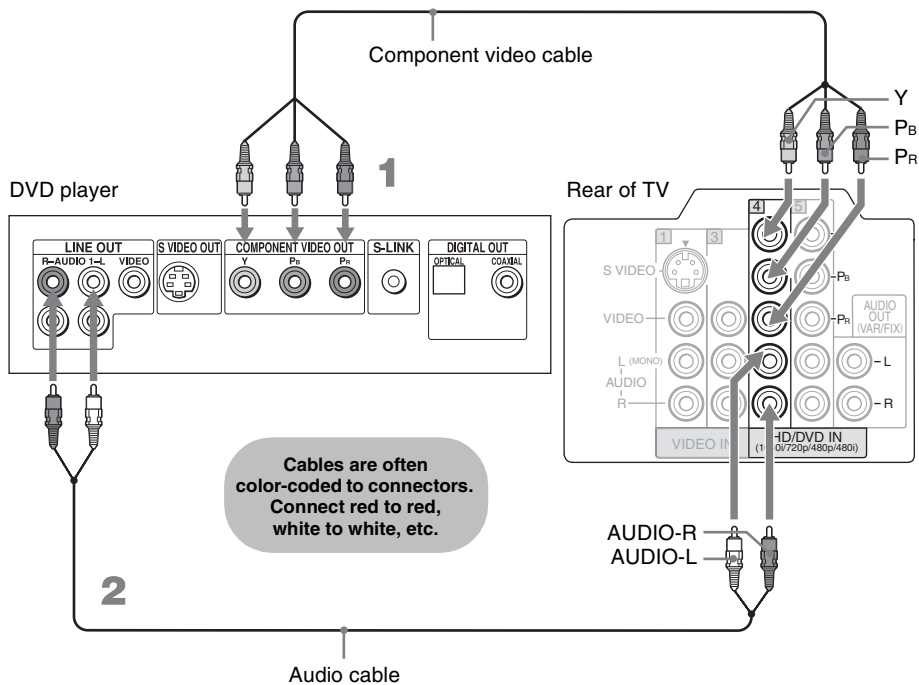

 **To take advantage of the Wide Mode feature, set the DVD player's aspect ratio to 16:9. For details, refer to the operating instructions supplied with your DVD player.**


## DVD Player with S VIDEO and Audio Connectors

Use this hookup if:





- Your DVD player does not have component (YPbPr) jacks.

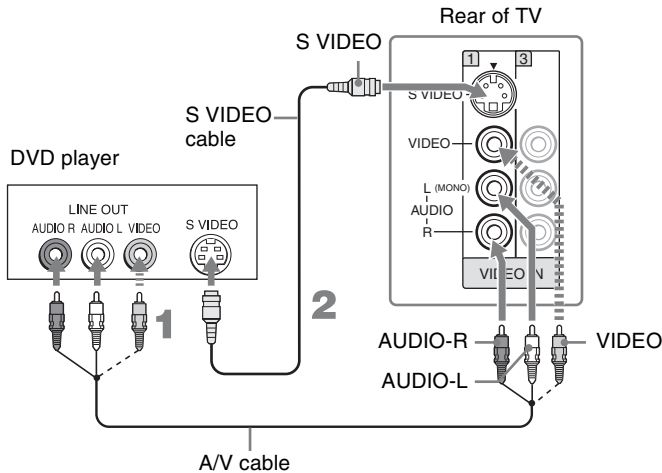**Disconnect all power sources before making any connections.**

- 1** Use an A/V cable to connect the DVD player's AUDIO OUT jacks to the TV's AUDIO IN jacks.
- 2** Use an S VIDEO cable to connect the DVD player's S VIDEO jack to the TV's S VIDEO jack.



Cables are often color-coded to connectors. Connect red to red, white to white, etc.

-  **If your DVD player is not equipped with S VIDEO, use a VIDEO cable (yellow) instead of the S VIDEO cable.**
-  **To watch a DVD, press TV/VIDEO repeatedly to select the DVD input (VIDEO 1 in the illustration). If you have a non-Sony DVD player and want to set up the TV remote control to operate it, you must program the remote control. See “Programming the Remote Control” on page 35.**
-  **To control DVD functions with the TV remote control, see “Operating a DVD Player or DVD Changer” on page 37.**
-  **To easily identify equipment connected to the TV, see the instructions for setting up Label Video Inputs on page 60.**

## Camcorder or Video Game Equipment



You can connect a camcorder or Video Game Equipment to your TV. For easy connection, use VIDEO IN 2 on the left side of the TV. To use the S VIDEO jack instead of the VIDEO jack (yellow), use VIDEO IN 1 on the rear panel of the TV.


### To connect a camcorder or Video Game Equipment to VIDEO IN 1

Use A/V and S VIDEO cables to connect the AUDIO and S VIDEO OUT jacks on the camcorder or Video Game Equipment to the AUDIO and S VIDEO IN jacks on the rear panel of the TV, as shown below.

### To connect a camcorder or Video Game Equipment to VIDEO IN 2

Select Off in the Video 2 (Component) option in the Setup settings (see page 61). Use an A/V cable to connect the A/V output jacks on the camcorder or Video Game Equipment to the A/V input jacks on the left side of the TV.

-  **If your camcorder is not equipped with S VIDEO, use a VIDEO cable (yellow) instead of the S VIDEO cable.**
-  **If you have a mono camcorder, connect its audio output jack to the TV's L MONO audio input jack.**

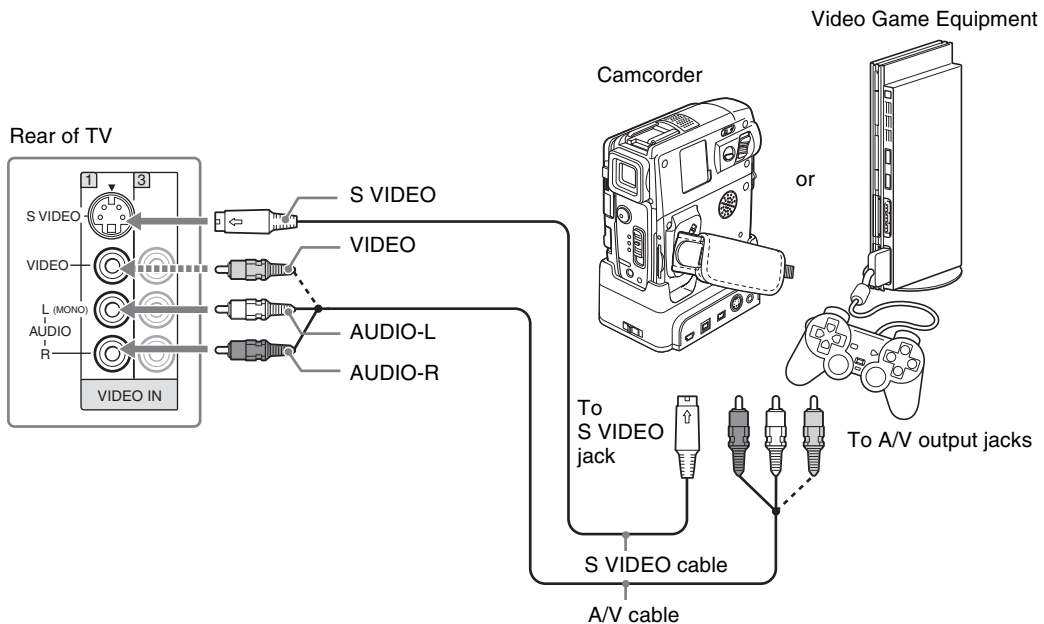


## Personal Computer

If you want to use your TV as your computer monitor, you can connect your PC to the TV.

### To connect a PC (personal computer)

You have a choice of connecting PC to the TV's HDMI 6 Input or HDMI 7 Input (only with HDMI connection). HDMI-to-DVI cable will carry digital video from your PC to TV. To listen to audio from your PC, you will need to connect audio cable (see "PC Input Signal Compatibility Chart" on page 73).

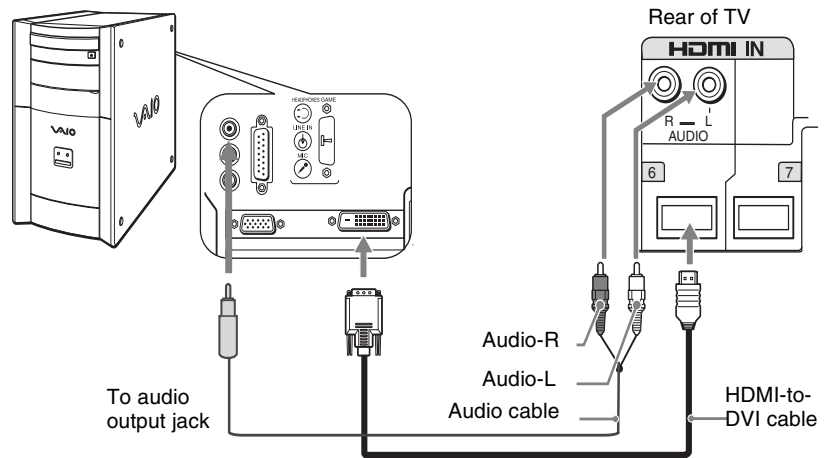


## Audio Receiver

For improved sound quality, you may want to play the TV's audio through your stereo system (see page 53).

### Disconnect all power sources before making any connections.

Using an audio cable, connect the TV's AUDIO OUT (VAR/FIX) jacks to the audio receiver's audio LINE IN jacks.

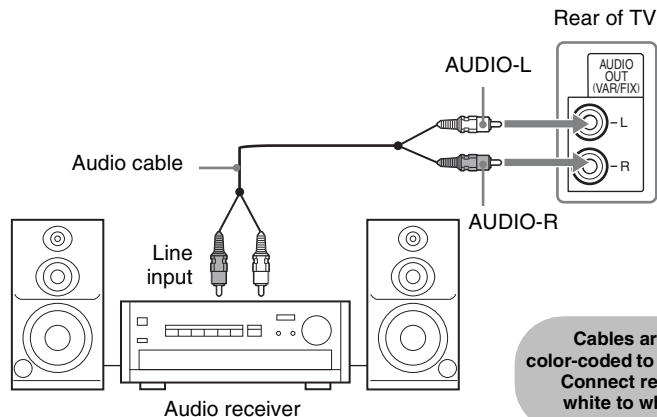

# Watching the TV


## Overview




The table on the next page describes the buttons on the remote control.

Topic	Page
Inserting Batteries into the Remote Control	32
Button Descriptions	33
Programming the Remote Control	35
Manufacturer's Codes	36
Using Other Equipment with Your Remote Control	37
Special Buttons on the Remote Control	40

## Inserting Batteries into the Remote Control

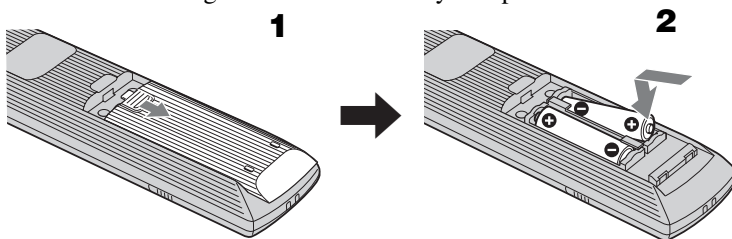
Insert two size AA (R6) batteries (supplied) by matching the **+** and **-** on the batteries to the diagram inside the battery compartment.



-  To avoid possible damage from battery leakage, remove the batteries if you anticipate the remote control will not be used for an extended period.
-  Handle the remote control with care. Avoid dropping it, getting it wet, or placing it in direct sunlight, near a heater, or in high humidity.
-  Your remote control can be programmed to operate most video equipment. (See “Programming the Remote Control” on page 35.)




# Button Descriptions

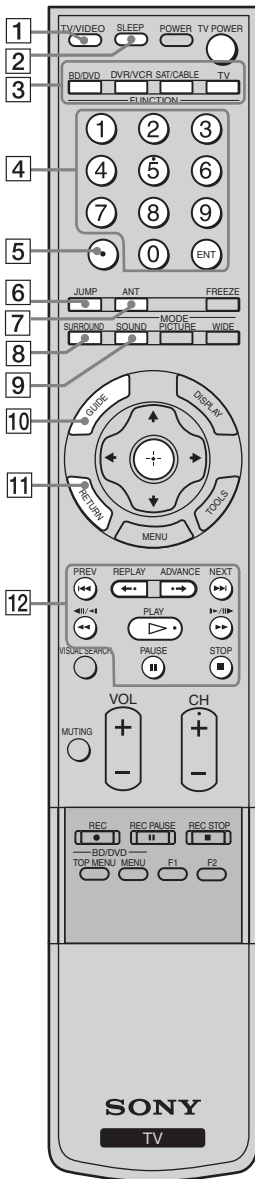

Button	Description
1 TV/VIDEO	Press to cycle through the video equipment connected to your TV's video inputs.
2 SLEEP	Press repeatedly to select the desired amount of time (Off, 15 minutes, 30 minutes, 45 minutes, 60 minutes, 90 minutes or 120 minutes) before TV turns off automatically.
3 FUNCTION Buttons	The FUNCTION button indicator lights up momentarily when pressed to show which external equipment the remote control is operating. When the remote control is set to operate the external equipment, these buttons will operate the equipment you choose. You must first press one of these FUNCTION buttons to operate the corresponding equipment. See page 35 for Programming the Remote Control.
4 0-9, ENT	Press 0-9 to select a channel: the channel changes after 2 seconds. Press ENT to change channels immediately.
5	Press to select digital channels on your cable box or satellite receiver; non-operable button for this TV.
6 JUMP	Press to jump back and forth between two channels. The TV alternates between the current channel and the last channel that was selected with buttons described above in 4 and 5.
7 ANT	Displays a message and jumps to the TV mode. Non-operable button.
8 SURROUND	Press to select TruSurround XT audio effect or Off to turn this feature off.
9 SOUND	Press to cycle through different sound settings: Dynamic for enhanced treble and bass, Standard for spoken dialog and Custom for flat setting.
10 GUIDE	To be used with your connected satellite receiver that supports program guide. (Non-operable button for this TV.)
11 RETURN	Press RETURN to either close the menu screen or move back to previous layer if you are in the multilayer menu item.
12 BD/DVD, DVD/VCR Operating Buttons	When FUNCTION is switched on BD (Blu-ray Disc)/DVD or DVR/VCR, these buttons operate the video equipment you have programmed into the remote control. For details, see "Using Other Equipment with Your Remote Control" on page 37. <b>◀◀ PREV:</b> Press to replay the current program from the previous Chapter Mark (if any) or from the beginning of the live TV cache. <b>◀• REPLAY:</b> Press to replay the current program for a set period of time. <b>•→ ADVANCE:</b> Press to advance forward a set period of time when playing back a recorded program. <b>▶▶ NEXT:</b> Press to advance forward to the next Chapter Mark (if any) or to live TV when playing back a recorded program. <b>◀◀ (fast reverse):</b> Press to play a program in fast rewind mode. <b>▷ PLAY:</b> Press to play a program at a normal speed. <b>▶▶ (fast forward):</b> Press to play a program in fast forward mode. <b>   PAUSE:</b> Press to pause playback. <b>■ STOP:</b> Press to stop the playback of a recorded program.

💡 The 5 button, CH + button and PLAY button have a tactile dot. Use the tactile dot as a reference when operating the TV.

(Continued)

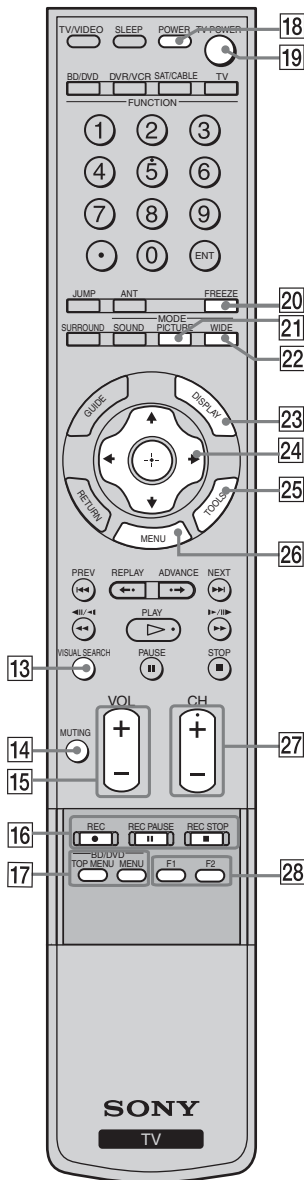

Button	Description
13 VISUAL SEARCH	To be used only with your connected external equipment with visual search function. (Non-operable button for TV)
14 MUTE	Press to mute the sound. Press again or press VOL + to unmute.
15 VOL +/-	Press to adjust the volume.
16 DVD/VCR Record Buttons	<ul style="list-style-type: none"> <li>● REC: Press to record. Pressing this button alone starts the recording process.</li> <li>■ REC PAUSE: Press to pause the recording.</li> <li>■ REC STOP: Press to stop the recording.</li> </ul>
17 BD/DVD TOP MENU/MENU	Press to display the top menu or menu. <b>For more information, refer to the operating manual of the connected equipment.</b>
18 POWER	Press to turn on/off the external equipment selected from the FUNCTION buttons [3].
19 TV POWER	Press to turn on/off the TV.
20 FREEZE	Press to freeze the current picture. Press again to restore the picture. For details, see “Using the FREEZE Button” on page 40.
21 PICTURE	Press repeatedly to cycle through the available video picture modes: Vivid, Standard, Custom. The video picture modes can be also accessed in the Video menu. For details, see “Selecting Picture Options” on page 49.
22 WIDE	Press repeatedly to step through the Wide Screen Mode setting. The Wide Screen Mode setting can be also accessed in the Screen setting. For details, see “Using the WIDE Button” on page 41 and Wide Screen Mode for PC input on page 42.
23 DISPLAY	Press once to display channel number, label, current time and other information. Press again to turn Display off. See page 62 for details on setting the time.
24 $\uparrow/\downarrow/\leftarrow/\rightarrow$ (+)	Press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to move the on-screen cursor. To select an item, press (+).
25 TOOLS	Press to access Tools menu with commonly used options such as: Picture Mode, Sound Mode, Wide Mode, Add to Favorites and Caption Vision.
26 MENU	Press to access the following with the MENU: <ul style="list-style-type: none"> <li>• Watch TV (see page 46).</li> <li>• Select channels from the Favorite Channels you stored (see page 45).</li> <li>• View signals from external equipment such as DVD, VCR and others (see page 45).</li> <li>• Adjust or customize TV settings (see Using the Settings on page 47).</li> </ul>
27 CH +/-	Press to scan through channels. To scan quickly through channels, press and hold down either +/- button.
28 F1/F2	Press to select the function of connected components. For details, see “Using Other Equipment with Your Remote Control” on page 37.

## Programming the Remote Control

The remote control is preset to operate Sony brand video equipment.

Sony Equipment	Programmable Code Number
BD (Blu-ray Disc)/DVD	101
DVR/VCR	901 (Sony Dream System)
SAT/CABLE	801 (Sony Satellite Receiver)

Follow the steps below to program your TV's remote control to operate non-Sony video equipment.

Find the three-digit code for your equipment from the "Manufacturer's Codes" listed on page 36. If more than one code number is listed, try entering from the code listed first.

- Press and hold the , or FUNCTION button you want to program on the remote control and press the button simultaneously. The selected FUNCTION button (BD/DVR, VCR/DVD or SAT/CABLE) will flash.
  - Enter the three-digit manufacturer's code number using the buttons while FUNCTION button is lit. If the code is not entered within 10 seconds, you must start from step 1 again.
  - Press the button.
- When the programming is correct, the selected FUNCTION button flashes twice. When not correct, the button flashes five times.


While , and buttons are labeled as such, you can still program any of your connected equipment using any one of the buttons regardless of the label. For example, button can be programmed to operate your VCR. If you have a DVD/VCR combo that you want to operate with your TV remote control, you can program with the or or even the , but remember which button you have programmed for your particular use.

### To check if the code works

Aim your TV's remote control at the equipment, and press the green button. If the equipment turns on and off, the programming is completed. If not, try the next code listed.

If no code is input within the above specified time, or an invalid or incorrect code number is input, the remote control automatically goes back to the previous setting.

In some cases, you may not be able to program your remote control to operate other equipment. In such cases, use the equipment's own remote control.

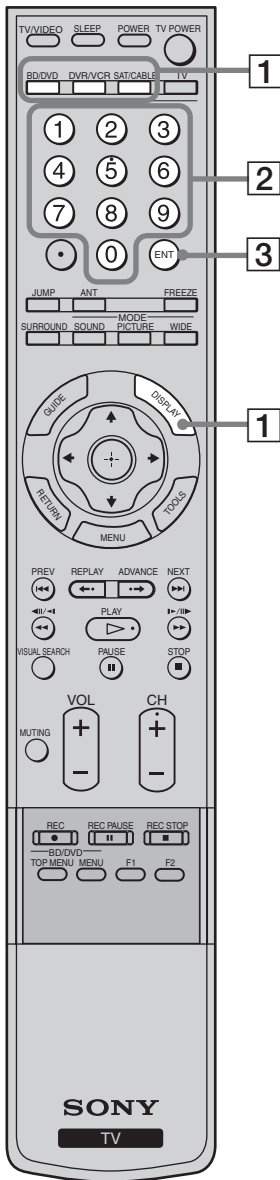

## Manufacturer's Codes

### DVD Players

<i>Manufacturer</i>	<i>Code</i>
Sony	751, 763
General Electric/RCA	755
Hitachi	758
JVC	756
Magnavox	757
Mitsubishi	761
Oritron	759
Panasonic	753
Philips	757
Pioneer	752, 778
RCA/PROSCAN	755
Samsung	758
Toshiba	754
Zenith	760, 762

### DVD/VCR Combo Units

<i>Manufacturer</i>	<i>Code</i>
Sony	767
Broksonic	776
JVC	775
Panasonic	777
Samsung	774
Toshiba	773
Zenith	768

### HDD/DVD Combo Units

<i>Manufacturer</i>	<i>Code</i>
Sony	772, 771, 770

### DVD Changers

<i>Manufacturer</i>	<i>Code</i>
Sony	765
Panasonic	766

### DVR

<i>Manufacturer</i>	<i>Code</i>
Sony	901

### Blu-ray Disc Player (BD)

<i>Manufacturer</i>	<i>Code</i>
Sony	101, 102, 103

### 5.1ch DVD AV System

<i>Manufacturer</i>	<i>Code</i>
Sony (DAV)	601, 602, 603, 604

### AV Receivers

<i>Manufacturer</i>	<i>Code</i>
Sony	764

### VCRs

<i>Manufacturer</i>	<i>Code</i>
Sony	301, 302, 303 (VHS, 8mm, Beta)

<i>Manufacturer</i>	<i>Code</i>
Sony DV	348
Admiral (M. Ward)	327
Aiwa*	338, 344
Audio Dynamic	314, 337
Broksonic	319, 317
Canon	309, 308
Citizen	332
Craig	302, 332
Curtis Mathes	304, 338, 309
Daewoo	341, 312, 309
DBX	314, 336, 337
Dimensia	304
Emerson	319, 320, 316, 317, 318, 341
Fisher	330, 335
Funai	338
General Electric	329, 304, 309
Go Video	322, 339, 340
Goldstar	332
Hitachi	306, 304, 305, 338
Instant Replay	309, 308
JC Penney	309, 305, 304, 330, 314, 336, 337
JVC	314, 336, 337, 345, 346, 347
Kenwood	314, 336, 332, 337
LG	332
LXI (SEARS)	332, 305, 330, 335, 338
Magnavox	308, 309, 310
Marantz	314, 336, 337
Marta	332
Memorex	309, 335
Minolta	305, 304
Mitsubishi/MGA	323, 324, 325, 326
Multitech	325, 338, 321
NEC	314, 336, 337
Olympic	309, 308
Optimus	327
Orion	317
Panasonic	308, 309, 306, 307
Pentax	305, 304
Philco	308, 309
Philips	308, 309, 310
Pioneer	308
Quasar	308, 309, 306
RCA/PROSCAN	304, 305, 308, 309, 311, 312, 313, 310, 329
Realistic	309, 330, 328, 335, 324, 338
Sansui	314

<i>Manufacturer</i>	<i>Code</i>
Samsung	322, 313, 321
Sanyo	330, 335
Scott	312, 313, 321, 335, 323, 324, 325, 326
Sharp	327, 328
Signature 2000 (M. Ward)	338, 327
SV2000	338
Sylvania	308, 309, 338, 310
Symphonic	338
Tashiro	332
Tatung	314, 336, 337
Teac	314, 336, 338, 337
Technics	309, 308
Toshiba	312, 311
Wards	327, 328, 335, 331, 332
Yamaha	314, 330, 336, 337
Zenith	331

### Cable Boxes

<i>Manufacturer</i>	<i>Code</i>
Sony	230
Hamlin/Regal	222, 223, 224, 225, 226
Jerrold/ General Inst./ Motorola	201, 202, 203, 204, 205, 206, 207, 208, 218, 222
Oak	227, 228, 229
Panasonic	219, 220, 221
Pioneer	211, 214, 215
Scientific Atlanta	209, 210, 211
Tocom	216, 217
Zenith	212, 213


### Satellite Receivers

<i>Manufacturer</i>	<i>Code</i>
Sony	801
Dish Network	810
Echostar	810
General Electric	802
Hitachi	805
Hughes	804
JVC	810
Mitsubishi	809
Panasonic	803
Philips	811
RCA/PROSCAN	802, 808
Toshiba	806, 807
Samsung	812

\* If an Aiwa VCR does not work even though you enter the code for Aiwa, enter the code for Sony instead.

## Using Other Equipment with Your Remote Control

To operate other equipment connected to your TV, first turn to page 36 and program the necessary code. For operating video equipment, press TV/VIDEO repeatedly until you see the video input on the screen for your connected equipment. Remote control tips are provided below.

 **Some functions cannot be operated depending on the equipment. In that case, operate by the remote control supplied with the equipment.**

### Operating a Cable Box

To Do This ...	Press ...
Activate the remote control to operate the cable box	SAT/CABLE (FUNCTION)
Turn on/off	POWER

### Operating a Satellite Receiver

To Do This ...	Press ...
Activate the remote control to operate the satellite receiver	SAT/CABLE (FUNCTION)
Turn on/off	POWER
Select a channel	0-9, ENT
Change channels	CH +/-
Back to previous channel	JUMP

### Operating a VCR

To Do This ...	Press ...
Activate the remote control to operate the VCR	DVR/VCR (FUNCTION)
Turn on/off	POWER
Change channels	CH +/-
Record	●
Play	▷
Stop	■

### Operating a DVD Player or DVD Changer

To Do This ...	Press ...
Activate the remote control to operate the DVD	DVD/VCR (FUNCTION)
Turn on/off	POWER
If you have a DVD changer, to skip disc	F1
Play	▷
Stop	■
Pause	(press again to resume normal playback)

To Do This ...	Press ...
Select a channel	0-9, ENT
Change channels	CH +/-
Back to previous channel	JUMP

To Do This ...	Press ...
Display channel number	DISPLAY
Display SAT Guide	GUIDE
Display SAT Menu	MENU
Move highlight (cursor)	↑ ↓ ← →
Select item	⊕

To Do This ...	Press ...
Fast forward	▶▶
Rewind the tape	◀◀
Pause	(press again to resume normal playback)
Select a channel	0-9, ENT
INPUT SELECT	TV/VIDEO

To Do This ...	Press ...
Step through different tracks of the disc	◀◀ to fast reverse or ▶▶ to fast forward the disc when pressed during playback
Step through different chapters of the disc	▶▶  to step forward or  ◀◀ to step backward
Select a track directly	0-9, ENT
Display the disc menu or top menu	BD/DVD MENU or TOP MENU
Display the system MENU	MENU
Operate the DVD menu	↑ ↓ ← →, ⊕

(Continued)

## Operating a Blu-ray Disc Player (BD)

To Do This ...	Press ...
Activate the remote control to operate the Blu-ray Disc player	BD/DVD (FUNCTION)
Turn on/off	POWER
Play	▷
Stop	■
Pause	⏸ (press again to resume normal playback)

## Operating a 5.1ch DVD AV System (Sony DAV)

To Do This ...	Press ...
Activate the remote control to operate the DVD	BD/DVD (FUNCTION)
Turn on/off	POWER
Select other equipment connected to the DAV	F1
Disk skip	F2
Display the disc menu or top menu	BD/DVD MENU or TOP MENU
Select a track directly	0-9, ENT

## Operating a DVD/VCR Combo Unit

To Do This ...	Press ...
Activate the remote control to operate the DVD/VCR	DVR/VCR (FUNCTION)
Turn on/off	POWER
Select the DVD Select the VCR	F 1 F 2
Display the disc menu or top menu	BD/DVD MENU or TOP MENU
Play	▷
Stop	■
Pause	⏸

## Operating a HDD/DVD Combo Unit

To Do This ...	Press ...
Activate the remote control to operate the DVD/HDD	DVR/VCR (FUNCTION)
Turn on/off	POWER
Select the HDD Select the DVD	F 1 F 2
Play	▷
Stop	■

To Do This ...	Press ...
Step through different tracks of the disc	◀◀ to fast reverse or ▶▶ to fast forward the disc when pressed during playback
Display the POP UP menu (BD)	BD/DVD MENU
Display the disc menu (DVD)	BD/DVD MENU
Display the top menu (BD)	BD/DVD TOP MENU
Display the top menu (DVD)	BD/DVD TOP MENU
Operate the menu	⬆ ⬇ ⬇ ⬆, ⊕

To Do This ...	Press ...
Play	▷
Stop	■
Pause	⏸
Search the picture forward or backward	▶▶ or ◀◀ during playback
Specify the previous chapter/track Specify the next chapter/track	◀◀ ▶▶
Move highlight (cursor)	⬆ ⬇ ⬇ ⬆
Select item	⊕
Master volume	VOL +/-, MUTING

To Do This ...	Press ...
Search the picture forward or backward	▶▶ or ◀◀ during playback
Move highlight (cursor) and select (DVD)	⬆ ⬇ ⬇ ⬆ ⊕
Record (VCR)	●
Change channels (VCR)	CH +/- or 0-9, ENT (using tuner)
Adjust tracking (VCR)	CH +/- (during tape playback)
Index search	◀◀ ▶▶
INPUT SELECT	TV/VIDEO

To Do This ...	Press ...
Record	●
REC PAUSE	⏸
REC STOP	■
Specify the previous chapter/track Specify the next chapter/track	◀◀ ▶▶
Replay	⬅
Advance	➡

To Do This ...	Press ...
Pause	⏸
Search the picture forward or backward	▶▶ or ◀◀ during playback
Move highlight (cursor) and select	⬆ ⬇ ⬇ ⬆ ⊕

### Operating a DVR

To Do This ...	Press ...
Activate the remote control to operate the DVR	DVR/VCR (FUNCTION)
Turn on/off	POWER
Play	▶
Jump back while viewing live or record programs	REPLAY
Slow mode	◀◀/◀◀ (press lightly)
Jump forward while viewing recorded programs	•➡

### Operating an AV Receiver

To Do This ...	Press ...
Activate the remote control to operate the AV Receiver	DVR (FUNCTION)
Turn on/off	POWER

To Do This ...	Press ...
Display the disc menu or top menu	BD/DVD MENU or TOP MENU
INPUT SELECT	TV/VIDEO

To Do This ...	Press ...
Jump forward to the next available chapter	▶▶
Stop	■
Pause	⏸
Record	●
Record Stop	■
Record Pause	⏸

To Do This ...	Press ...
Master volume	VOL +/-, MUTING
Select other input connected to AV receiver	F1

## Special Buttons on the Remote Control

This TV comes with convenient features that can be either accessed directly by pressing their buttons on your remote control or pressing the **TOOLS** button to display most commonly used functions.

---

### Using the **TOOLS** Button

The **TOOLS** button allows you to access the following functions. The **TOOLS** menu items vary by the selected input modes. (TV, PC and external input.)




 
<b>Menu Item</b>	<b>Reference pages</b>
Close	
Picture Mode	see page 49
Sound Mode	see page 52
Wide Mode	see page 54
Add to Favorites	see page 45
Caption Vision	see page 60

 **Add to Favorites is available for TV mode only.**

---

### Using the **JUMP** Button

The **JUMP** button allows you to jump back and forth between the current channel and the last channel that was selected.

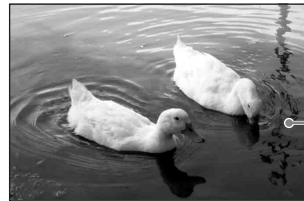

Previous channel

---

### Using the **FREEZE** Button

The **FREEZE** button allows you to temporarily capture a program's picture. You can use this feature to write down information such as phone numbers, recipes, etc.

To cancel **FREEZE** and return to normal viewing, press the **FREEZE** button again.




Frozen picture





## Using the WIDE Button

Wide screen mode lets you watch 4:3 normal broadcasts in several wide screen modes (16:9 aspect ratio).

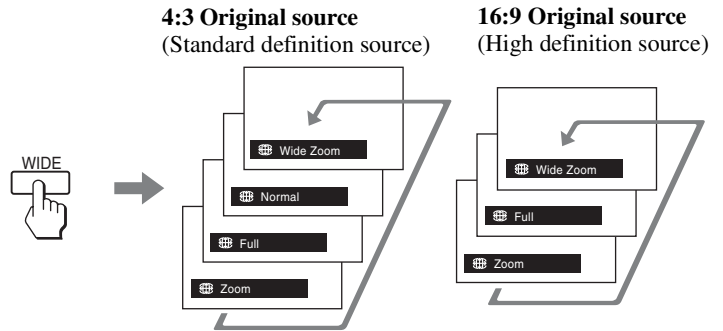


When the TV receives a 720p or 1080i signal, Normal cannot be selected.

When the TV receives a 720p or 1080i signal that is 4:3 aspect ratio picture with a black bar at each side, Full returns the picture to its original size.

You can also access the Wide Mode settings in the Screen settings. For details, see page 54.

### Changing the wide screen mode


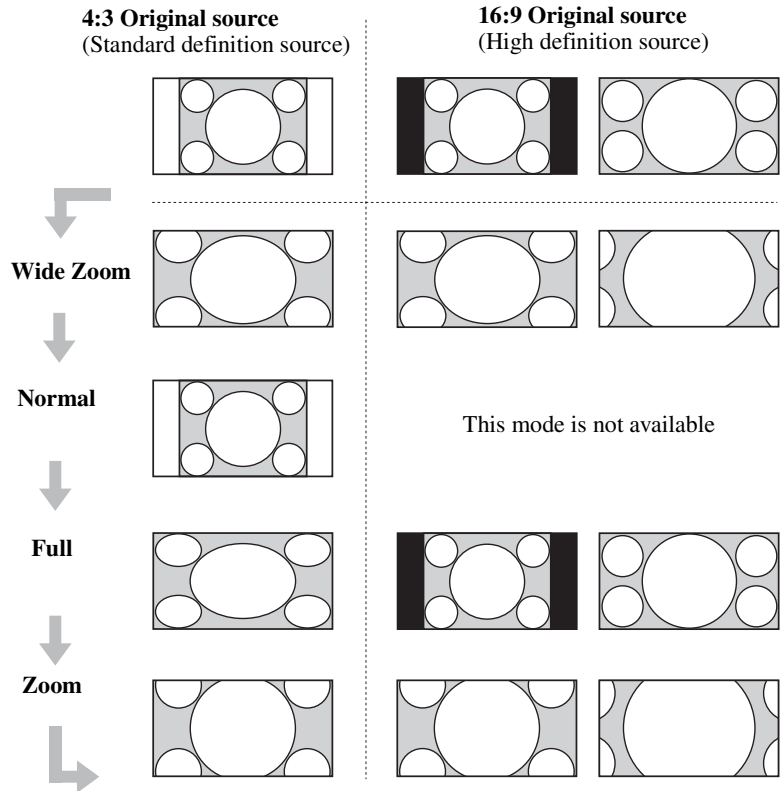


## Using the WIDE Button in PC Mode

While in the PC Mode, press the WIDE button to toggle through different wide screen modes to view the signal from your computer.

💡 You can also access the PC Wide Mode settings in the Screen settings. For details, see page 54.


💡 Depending on the signal from your PC, your TV will display black frame around the picture in various width.

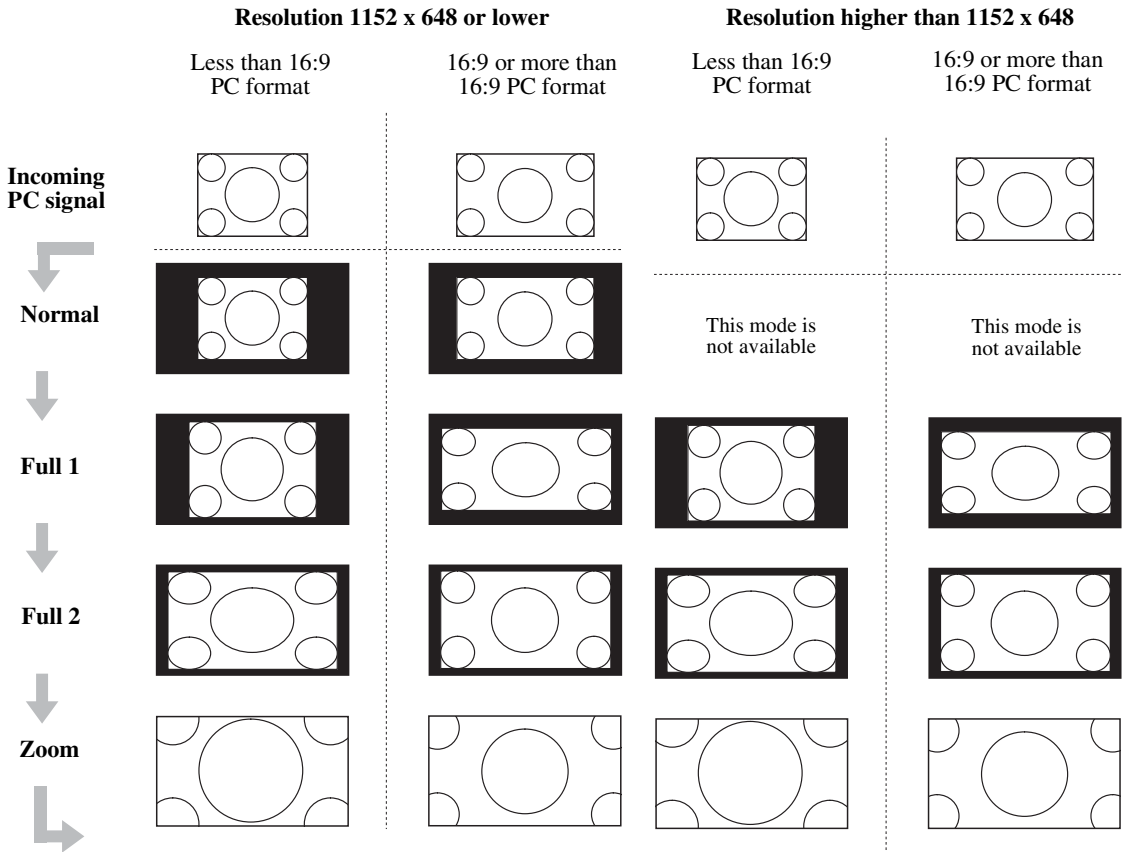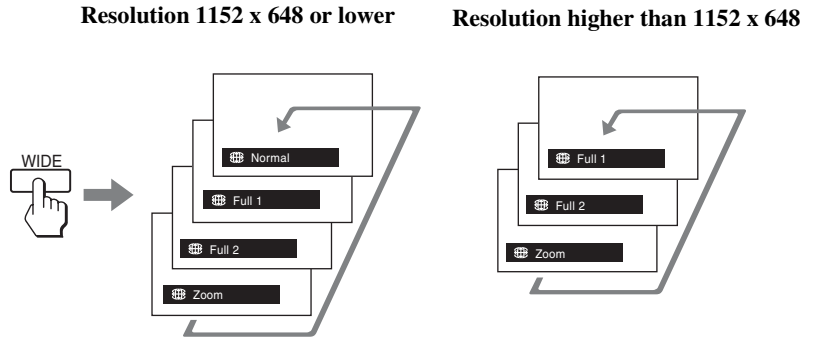


# Using the Menu

## Overview of MENU


MENU provides one button access for controlling your TV. It enables you to perform a variety of tasks intuitively with a control panel on the screen rather than a variety of remote control button presses.


When you press the  button, you can easily perform basic TV functions such as:

Switching between external inputs, viewing your favorite stations and changing or customizing your TV settings.

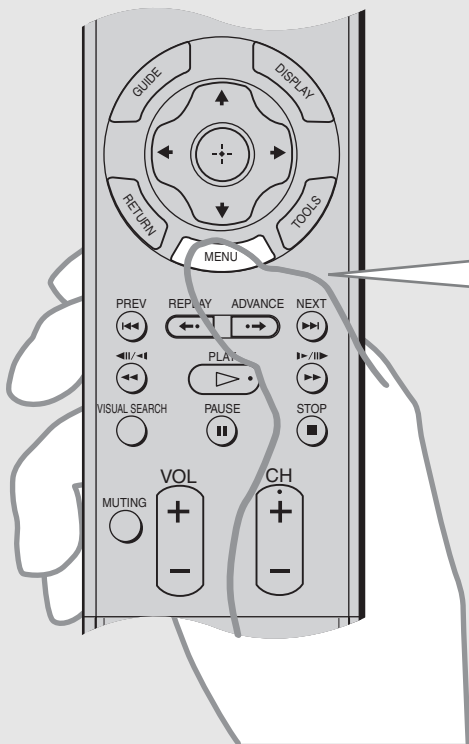

- 1 Press MENU on the remote. MENU control panel appears.

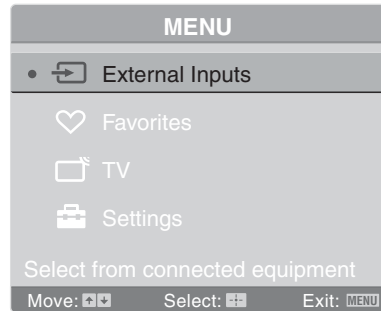






- 2 Press  to highlight the item.

- 3 Press  to select.

 - 4 Press  to exit.

The MENU screen gives you access to the following items:

<i>Icon</i>	<i>Description</i>
	The <b>External Inputs</b> feature lets you select equipment that is connected to your TV, such as a DVD player. You can assign a label to your equipment or skip unused inputs conveniently. For details, see page 45.
External Inputs	
	The <b>Favorites</b> feature lets you select programs from a list of up to 16 favorite channels that you specify. For details, see page 45.
Favorites	
	The <b>TV</b> feature takes you to the most recently viewed channel on the cable/antenna input. When tuned to the channel, the Channel number will be displayed.
TV	
	The <b>Settings</b> feature lets you adjust the Picture, Sound, Screen, Channel, Parental Lock, Setup or Clock/Timers settings. For details, see page 46.
Settings	


 **A dot appears next to the currently active TV mode (external input, cable TV or antenna TV).**

## Navigating and Selecting Items


Use your remote control to navigate through MENU and the settings.


### Using External Inputs in MENU

The External Inputs feature lets you view from a selected external input connected to your TV. You can assign a label or skip over unused inputs by selecting **Edit Video Labels**. Input label assignment can also be done by going to Setup settings and select **Label Video Inputs** (see page 60).

- 1 Highlight External Inputs from the MENU control panel and press .


The External Inputs list appears.

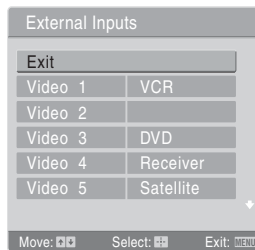




- 2 Make your selection by pressing **↑/↓** to highlight the desired external input then press .

### Using Favorites in MENU

The Favorites feature lets you select programs from a list of up to 16 favorite channels that you specify. You can create a list using the **Add to Favorites** option.

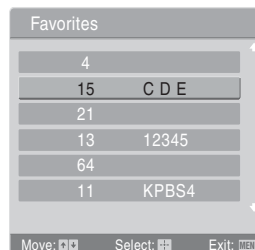- 1 Highlight Favorites from the MENU control panel and press . The Favorite Channels list appears.




- 2 Make your selection by pressing **↑/↓** to highlight the desired channel then press .
  - To add the current channel to the list of Favorite Channels, highlight **Add to Favorites** and press .
  - When the Favorite Channels list is full, select **Edit Favorites** to remove a channel from the list or go to the **Channel** settings and select **Favorite Channels** to edit the channel.



## Using TV in MENU

The TV feature displays the most recently viewed channel. Highlight TV from the MENU control panel and press (+).



 **If you have not completed the initial channel setup (see page 23) it will tune to the lowest channel number. To run Auto Program see page 56.**


 



## Using Settings in MENU


The Settings feature lets you enter to the settings screen where most of advanced settings and adjustments are performed. See “Overview ” on page 47.

### Navigating Through Settings

The Settings screen provides access to the features:

- 1 Press  .
- 2 Select  .
- 3 Highlight the item: Picture, Sound, Screen, Channel, Parental Lock, Setup, Clock/Timers.
- 4 Press (+) to select an option.

To exit Settings, press  .


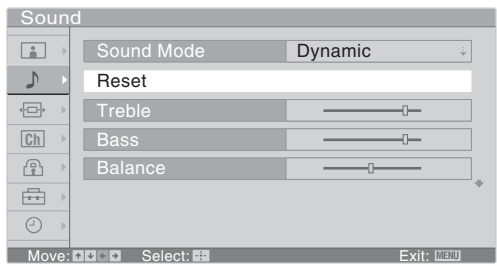
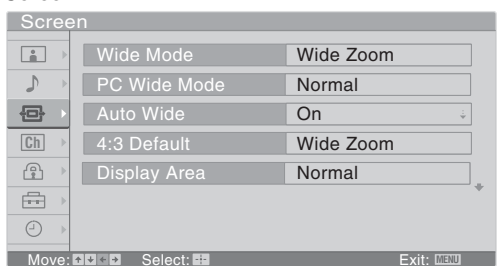
 **The options you can adjust vary depending on the situation. Unavailable options are grayed out.**

# Using the Settings

## Overview

### The Settings give you access to the following features:

(Depending on the signal tuned, you may see a different Setting options on your screen. Settings displayed here are with the 720p signal.)


Settings	Allows you to set/change	
<b>Picture</b> 	Picture Mode (page 49) Reset (page 49) Advanced Iris (page 49) Picture (page 50) Brightness (page 50) Color (page 50) Hue (page 50) Color Temp. (page 50) Sharpness (page 50) Noise Reduction (page 50)	DRC Mode (page 50) DRC Palette (page 51) Advanced Settings (page 51)
<b>Sound</b> 	Sound Mode (page 52) Reset (page 52) Treble (page 52) Bass (page 52) Balance (page 52) Steady Sound (page 52) Volume Offset (page 52) Surround (page 52) BBE (page 52)	MTS (page 53) Speaker (page 53) Audio Out (page 53)
<b>Screen</b> 	Wide Mode (page 54) PC Wide Mode (page 54) Auto Wide (page 55) 4:3 Default (page 55) Display Area (page 55) Horizontal Center (page 55) Vertical Center (page 55) Vertical Size (page 55)	

(Continued)

## Settings


*Allows you to set/change*

### Channel

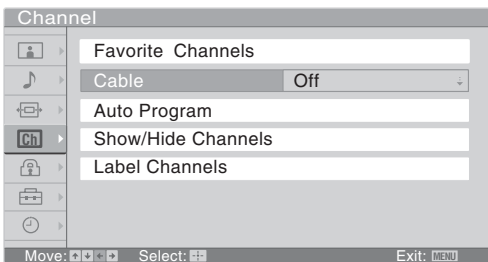


Favorite Channels (page 56)  
Cable (page 56)  
Auto Program (page 56)  
Show/Hide Channels (page 56)  
Label Channels (page 56)

### Parental Lock

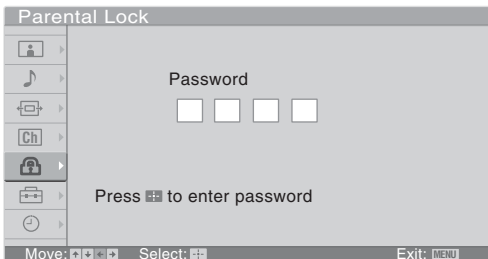


Rating (page 57)  
Change Password (page 57)  
Select Country (page 57)  
Unrated (page 59)

### Setup

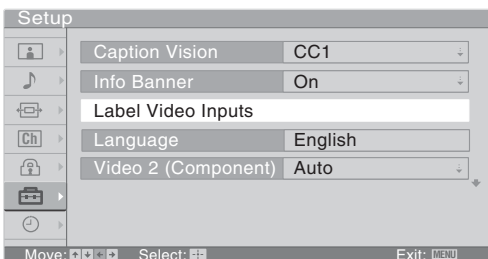

Caption Vision (page 60)  
Info Banner (page 60)  
Label Video Inputs (page 60)  
Language (page 61)  
Video 2 (Component) (page 61)  
CineMotion (page 61)  
Cooling Mode (page 61)  
Lamp Replacement (page 61)  
Product Information (page 61)

### Clock/Timers

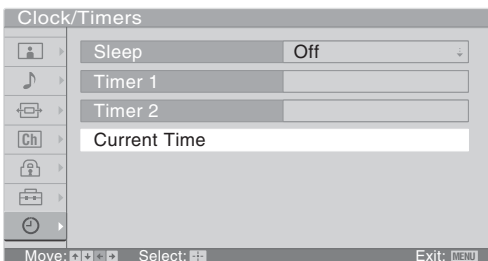

Sleep (page 62)  
Timer 1/Timer 2 (page 62)  
Current Time (page 63)





## Accessing the Picture Settings

1. Press MENU.....



2. Select Settings.....



3. Highlight.....



4. Press to select.....



To highlight an option and to change settings, press **↑ ↓ ← →**.

Press **+** to confirm the selection.

To exit the Picture, press **MENU**.

 

 
### Selecting Picture Options





To quickly and easily change from one Picture Mode to another, use PICTURE on the remote control.

The Picture settings include the following options:

Option	Description
Picture Mode <i>Customized picture viewing</i>	<b>Vivid</b> Select for enhanced picture contrast and sharpness.
	<b>Standard</b> Select for standard picture settings. Recommended for home entertainment.
	<b>Custom</b> Select to display a picture with minimum enhancements.
<p> <b>You can alter the Picture settings (Picture, Brightness, Color, etc.) for each Picture Mode and each video input.</b></p> <p> <b>You may set up a Picture Mode (Vivid, Standard, Custom) independently for each Video input (Video 1 to Video 7, including the Antenna input). Your Picture Mode settings are automatically saved after each selection. This allows you to customize the Picture Mode setting for each type of signal source.</b></p>	
Reset	Select OK to reset all settings and adjustments to the default setting (except for Advanced Settings).
Advanced Iris	By selecting the iris option, you can obtain the best brightness and contrast suited for your TV viewing.
	<b>Auto 1/2</b> Automatically detects the brightness of the screen. These options are best suited for programs such as movies that often change between bright scenes and low light setting scenes.
	<b>Auto 1</b> Recommended option for viewing programs that have larger variation in brightness from scene to scene.

(Continued)

<b>Option</b>	<b>Description</b>
	Auto 2 Recommended option for viewing programs that have less variation in brightness from scene to scene.
High	With this option, the screen has maximum level of brightness. It is suitable for TV viewing in a brightly lit room.
Medium	With this option, the brightness is about the standard level.
Low	With this option, the screen is dimmed but contrast is at a maximum. It is suitable for TV viewing in a room with low lighting.
 <b>When Picture Mode is set to Vivid, Advanced Iris option is automatically set to Auto 1.</b>	
Picture	Adjust to increase picture contrast and deepen the color or decrease picture contrast and soften the color.
Brightness	Adjust to brighten or darken the picture.
Color	Adjust to increase or decrease color intensity.
Hue	Adjust to increase or decrease the green tones.
Color Temp.	Choose from four color temperatures:
<i>White intensity adjustment</i>	Cool Select to give the white colors a blue tint.
	Neutral Select to give the white colors a neutral tint.
	Warm 1, 2 Select to give the white colors a red tint. Available only when Picture Mode is set to Custom.
Sharpness	Adjust to sharpen or soften the picture.
Noise Reduction	Select Auto to reduce the noise level of connected equipment. This also reduces the noise level to the signal from the VHF/UHF/CABLE jack.
 <b>When Component Input, HDMI Input or Freeze mode is in use, Auto is not available.</b>	
DRC Mode	High Density Creates a high-resolution picture with 4 x density, for high quality sources (i.e., DVD player, satellite receiver).
	Progressive Recommended for still pictures.
 <b>DRC Mode is most effective when watching 480i source. DRC Mode is not available when using the Freeze feature; also not available when watching 480p, 720p or 1080i sources.</b>	

Option	Description
DRC Palette	<p>Allows you to customize the level of detail (Reality) and smoothness (Clarity). For example, you can create one Custom setting to optimize your cable input's picture, and create another to optimize your DVD player's picture.</p> <ol style="list-style-type: none"> <li data-bbox="575 291 1241 319">1 Press  to select DRC Palette.</li> </ol>
	
	<ol style="list-style-type: none"> <li data-bbox="575 545 1241 659">2 Press the arrow buttons to adjust the position of the marker (●). As you move the ● higher along the Reality axis, the picture becomes more detailed. As you move the ● to the right along the Clarity axis, the picture becomes smoother.</li> </ol>
	<ol style="list-style-type: none"> <li data-bbox="575 670 1241 697">3 To save the setting, press .</li> </ol>
	<p> <b>DRC Palette is most effective when watching 480i source. DRC Palette is not available when Noise Reduction is set to Auto or using the Freeze feature; also not available when watching 480p, 720p or 1080i sources.</b></p>
<p>Advanced Settings Available in “Custom Picture Mode”</p>	<p>Advanced Settings can be adjusted with the following options: <b>Reset</b> (Cancel/OK), <b>Black Corrector</b> (High/Medium/Low/Off), <b>Gamma</b> (Max/High/Medium/Low/Off), <b>Clear White</b> (High/Low/Off), <b>Color Corrector</b> (High/Low/Off).</p>



## Accessing the Sound Settings

 
1. Press MENU.....




2. Select Settings.....



3. Highlight.....




4. Press to select.....

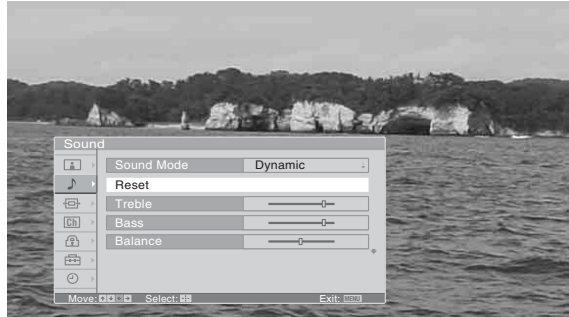



To highlight an option and to change settings, press  $\uparrow$   $\downarrow$   $\leftarrow$   $\rightarrow$ .

Press  $\oplus$  to confirm the selection.

To exit the Sound, press .


### Selecting Sound Options

 Sound Mode settings are independent of settings in the Treble/Bass options.


 TruSurround XT attempts to create the same surround effect produced by a multichannel system using the left and right speakers.

The Sound settings include the following options:

Option	Description
Sound Mode	Dynamic Select to enhance treble and bass.
	Standard Suitable for spoken dialog.
	Custom Flat setting.
Reset	Resets the current Sound Mode setting to the default values, except MTS, Speaker and Audio Out options.
Treble	Adjust to increase or decrease higher-pitched sounds.
Bass	Adjust to increase or decrease lower-pitched sounds.
Balance	Adjust to emphasize left or right speaker balance.
Steady Sound	On Select to stabilize the volume across all programs and commercials.
	Off Select to turn off Steady Sound.
Volume Offset	Adjust to increase or decrease the sound level of the current input (TV or video input) relative to other inputs.
Surround	TruSurround XT Select for surround sound (for stereo programs only).
	Off Normal stereo or mono reception.
BBE	Select to give sound more impact by compensating for phase effects in speakers. Select from High, Low, and Off.

 **The BBE option is not adjustable (it is grayed out) if the Sound Mode option is set to Dynamic (BBE is High), or Standard (BBE is Low). All three options are available only in Custom mode.**

<b>Option</b>	<b>Description</b>
<b>MTS</b> <i>Enjoy stereo, bilingual and mono programs</i>	<b>Stereo</b> Select for stereo reception when viewing a program broadcast in stereo.
	<b>Auto SAP</b> Select to automatically switch to second audio programs when a signal is received. (If no SAP signal is present, the TV remains in Stereo mode.)
	<b>Mono</b> Select for mono reception. (Use to reduce noise during weak stereo broadcasts.)
<b>Speaker</b>	<b>On</b> Select to turn on the TV speakers.
	<b>Off</b> Select to turn off the TV speakers and listen to the TV's sound only through your external audio system speakers.
<b>Audio Out</b> <i>Easy control of volume adjustments</i>	<b>This option can be set only when the Speaker option is set to Off.</b>
	<b>Variable</b> The TV's speakers are turned off and the audio output from your audio system can still be controlled by the TV's remote control.
	<b>Fixed</b> The TV's speakers are turned off, and the audio output of the TV is fixed. Use your audio receiver's volume control to adjust the volume (and other settings) through your audio system.

 **The MUTING button on your remote control is available when Audio Out is set to Variable, and does not function when set to Fixed.**



## Accessing the Screen Settings

1. Press MENU.....




2. Select Settings.....



3. Highlight.....



4. Press to select.....

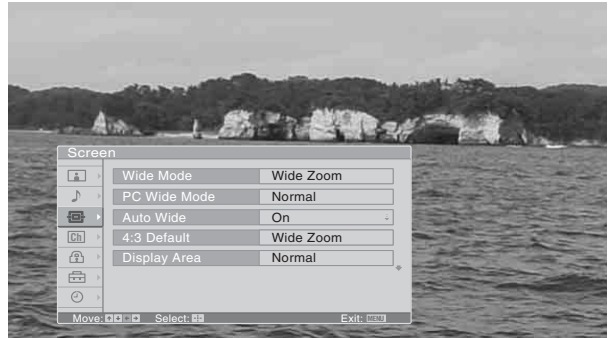

To highlight an option and to change settings, press  $\uparrow$   $\downarrow$   $\leftarrow$   $\rightarrow$ .

Press  $\oplus$  to confirm the selection.

To exit the Screen, press .

### Selecting Screen Options

Wide Mode is unavailable while in Freeze (page 40).

The Screen settings include the following options:

Option	Description
Wide Mode	Wide Zoom
<i>Select a screen mode to use for 4:3 sources.</i>	Select to enlarge the 4:3 picture, to fill the 16:9 screen, keeping the original image as much as possible.
Normal	Select to return the 4:3 picture to its original size and aspect ratio.
<b>Normal is not available when you are watching 720p or 1080i sources.</b>	
Full	Select to enlarge the 4:3 picture horizontally only, to fill the display area.
Zoom	Select to proportionally enlarge 1080i and 720p sources. For 480p and 480i sources, Zoom will vertically stretch the image to fill the screen.

**To change from one Wide Mode setting to another, use the WIDE button on the remote control (see page 41).**

**This “Wide Mode” option is not available (grayed out) while your TV is in PC input mode. For adjusting screen size while in PC input mode, see “PC Wide Mode”.**








PC Wide Mode feature available only with PC mode connected through HDMI inputs (see page 30 and page 73).


PC Wide Mode Normal Select to display the picture in its original size.

**Normal is not available if the PC input resolution is greater than 1152 x 648.**

Full 1 Select to enlarge the picture to fill the display area, keeping its original aspect ratio.

**A black frame will appear on the surrounding of the picture.**

Option	Description
	<p>Full 2 Select to enlarge the picture to fill the display area.</p> <p> <b>A black frame will appear on the surrounding of the picture.</b></p>
	<p>Zoom Select to enlarge the picture horizontally and vertically to an equal aspect ratio that fills the wide screen.</p>
Auto Wide	<p>On Select to automatically switch the wide mode based on the input signal.</p> <p>Off Select to keep the Wide Mode in its original size and aspect ratio.</p> <p> <b>This option is not available for HDMI PC input.</b></p>
4:3 Default <i>Select the default screen mode to use for 4:3 sources.</i>	<p>Wide Zoom Select to enlarge the 4:3 picture, to fill the 16:9 screen, keeping the original image as much as possible.</p> <p>Normal Select to return the 4:3 picture to its original size and aspect ratio.</p> <p>Full Select to enlarge the 4:3 picture horizontally only, to fill the display area.</p> <p>Zoom Select to enlarge the picture horizontally and vertically to an equal aspect ratio that fills the wide screen.</p> <p>Off Select to continue using the current screen mode setting when the channel or input is changed.</p> <p> <b>This option is not available for HDMI PC input.</b>   <b>This option is not available if Auto Wide is set to Off.</b></p>
Display Area	<p>Select Normal to return to the default display area. Select -1 or -2 to enlarge the picture vertically and horizontally.</p> <p> <b>Display Area option is not available when PC Wide Mode is set to Normal.</b></p>
Horizontal Center	<p>Allows you to move the position of the picture left and right in the window. Press ◀ or ▶ and to choose a correction between +5 and -5.</p>
Vertical Center	<p>Allows you to move the position of the picture up and down in the window. (Available only in Wide Zoom, Zoom and PC Wide modes.) Press ▲ or ▼ and press  to choose a correction between +5 and -5.</p>
Vertical Size	<p>Allows you to adjust the vertical size of the picture. (Available only in Wide Zoom, Zoom and PC Zoom modes.) Press ▲ or ▼ and press  to choose a correction between +5 and -5.</p>

 If 4:3 Default is set to anything but Off, the Wide Mode setting changes only for the current channel. When you change channels (or inputs), Wide Mode is automatically replaced with the 4:3 Default setting. To retain the current Wide Mode setting as channels and inputs are changed, set 4:3 Default to Off.



## Accessing the Channel Settings

1. Press MENU.....



2. Select Settings.....



3. Highlight.....



4. Press to select.....



To highlight an option and to change settings, press **↑ ↓ ← →**.

Press **⊕** to confirm the selection.

To exit the Channel, press **MENU**.

### Selecting Channel Options

Channels that you set to Hidden can only be accessed with the 0-9 buttons.

The Channel settings include the following options:

Option	Description
Favorite Channels	Lets you set up a list of your favorite channels. For details, see “Using Favorites in MENU” on page 45.
Cable	Select <b>On</b> if you are using cable. Select <b>Off</b> if you are using an antenna to receive channels.
Auto Program	Automatically sets up the channel list on the TV for all receivable channels for the current input (VHF/UHF or CABLE). Select to start the Auto Program.
Show/Hide Channels	Allows you to show or hide channels that appear in the Program Guide and when you use the CH+/- buttons to channel surf. Channels that are set to <b>Hidden</b> do not appear in the Program Guide or when you use the CH+/- buttons. <ol style="list-style-type: none"> <li>Press <b>↑</b> or <b>↓</b> to highlight the channel that you want to show or hide.</li> <li>To change a channel’s setting to <b>Shown</b> or <b>Hidden</b>, press <b>⊕</b>.</li> <li>To show or hide more channels, repeat steps 1 and 2.</li> </ol>
Label Channels	Allows you to assign labels (such as station call letters) to channel numbers. <ol style="list-style-type: none"> <li>Press <b>↑</b> or <b>↓</b> to scroll through the channel numbers. Then press <b>⊕</b> to select the channel number that you want to assign a label.</li> <li>Press <b>↑</b> or <b>↓</b> to scroll through the label characters (A-Z, 0-9, etc.). Then press <b>⊕</b> to select the highlighted character. Repeat to add characters to the label.</li> <li>Press <b>←</b> to return to the Channel setting, or press <b>MENU</b> to exit the settings.</li> </ol>





## Accessing the Parental Lock Settings

1. Press MENU.....



2. Select Settings.....



3. Highlight.....



4. Press to select.....



To highlight an option and to change settings, press  $\uparrow$   $\downarrow$   $\leftarrow$   $\rightarrow$ .

Press  $\oplus$  to confirm the selection.

To exit the Parental Lock, press .

The Parental Lock setting allows you to set up the TV to block programs according to their content and rating levels.



**A password needs to be setup before Parental Lock settings can be accessed for the first time. This password is required for any future access to the Parental Lock settings. If you have lost your password, see “Lost password” on page 71.**

### Selecting Parental Lock Options

If you are not familiar with the Parental Guideline rating system, you should select Child, Youth, or Young Adult to help simplify the rating selection. To set more restrictive ratings, select Custom.

The Parental Lock settings include the following options:

Option	Description
Rating	Off Turn Parental Lock off. No programs are blocked from viewing.
<i>Turn ratings on/off and select a rating system</i>	Child Maximum ratings permitted are: Canada: C, G, TV-Y
	Youth Maximum ratings permitted are: Canada: C8+, PG, 8 ans+, TV-PG
	Young Adult Maximum ratings permitted are: Canada: 14+, 13 ans+, TV-14
	Custom... Select to set ratings manually. Canada: See page 58 for details.
Change Password	Select to change your password.
Select Country	U.S.A. Select U.S.A. rating for reference only. (This model is for Canada and Mexico only.)
	Canada Select to use Canadian ratings (see page 58).

(Continued)

### To deactivate the parental control feature

- ❑ Set Parental Lock to Off when in the Parental Lock setting.

### To change the password

- 1** In the Parental Lock setting, use the arrow buttons to highlight Change Password, and press (+) to select it.
- 2** Enter a new four-digit password using the 0-9 buttons.
- 3** Confirm the new password by entering it again.
- 4** Press MENU to exit the setting screen.

---

## Viewing Blocked Programs

You can view a blocked program by entering the password.

- 1** Press ENT when tuned to a blocked program.
- 2** Enter your password using the 0-9 buttons.  
Parental Lock will be canceled temporarily until you turn your TV off.

---

## Selecting Custom Rating Options

💡 To ensure maximum blocking capability, the age-based ratings should be used.

💡 If you select Block, be aware that the following programs may be blocked: news, sports, weather, emergency broadcasts, political programs, public service announcements, and religious programs.


### Canadian custom rating options

The Custom Rating setting includes the following options.

Option	Description	
English Rating	C	All children.
	C8+	Children 8 years and older.
	G	General programming.
	PG	Parental guidance.
	14+	Viewers 14 and older.
French Rating	18+	Adult programming.
	G	General programming.
	8 ans+	Not recommended for ages under 8.
	13 ans+	Not recommended for ages under 13.
U.S.A. Rating	16 ans+	Not recommended for ages under 16.
	18 ans+	Programming restricted to adults.
		See “TV Rating” on page 59 for details.

**This model is for Canada only, the following US custom rating options are provided for reference.**

<b>Option</b>	<b>Description</b>	
Movie Rating	G	All children and general audiences.
	PG	Parental guidance suggested.
	PG-13	Parental guidance for children under 13.
	R	Restricted viewing, parental guidance is suggested for children under 17.
	NC-17 and X	No one 17 and under.
TV Rating	Age-Based Options	
<i>Block programs by their rating, content or both</i>	TV-Y	All children.
	TV-Y7	Directed to children age 7 and older.
	TV-G	General audience.
	TV-PG	Parental guidance suggested.
	TV-14	Parents strongly cautioned.
	TV-MA	Mature audience only.
	Content-Based Options	
	FV	Fantasy violence.
	D	Suggestive dialog.
	L	Strong language.
S	Sexual situations.	
V	Violence.	
Unrated <i>(Block programs or movies that are broadcast without a rating)</i>	Allow	Allows programs and movies that are broadcast without a rating.
	Block	Blocks all programs and movies that are broadcast without a rating.

 **The content ratings will increase depending on the level of the age-based rating. For example, a program with a TV-PG V (Violence) rating may contain moderate violence, while a TV-14 V (Violence) rating may contain more intense violence.**



## Accessing the Setup Settings

1. Press MENU.....




2. Select Settings.....



3. Highlight.....



4. Press to select.....

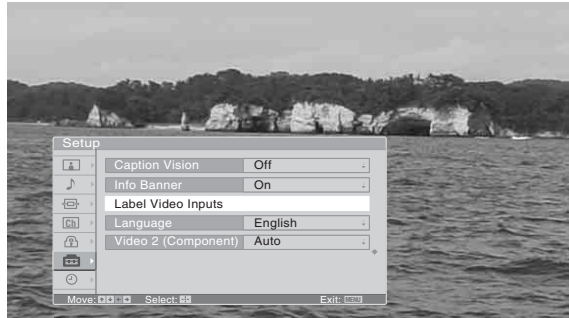

To highlight an option and to change settings, press  $\uparrow$   $\downarrow$   $\leftarrow$   $\rightarrow$ .



Press  $\oplus$  to confirm the selection.


To exit the Setup, press .

### Selecting Setup Options

The Setup settings include the following options:

Option	Description
Caption Vision	Allows you to select the closed caption options.
CC1, CC2, CC3, CC4	Displays a printed version of the dialog or sound effects of a program. (Should be set to CC1 for most programs.)
Text1, Text2, Text3, Text4	Displays network/station information presented using either half or the whole screen (if available).
Off	Caption Vision is turned off.
Info Banner	Set to On or Off. Select On to display the program name, time remaining and other information (if the broadcaster offers this service). Also displays when the channel is changed or the DISPLAY button is pressed.
Label Video Inputs	Allows you to label the audio/video equipment you have connected to the TV so you can identify them when using TV/VIDEO. When in this setting: <ol style="list-style-type: none"> <li>Press <math>\uparrow</math> or <math>\downarrow</math> to highlight an input to label, then press <math>\oplus</math> to select it.</li> <li>Use the arrow buttons to scroll through the labels.</li> <li>Press <math>\oplus</math> to select the equipment you connected to each of the input jacks on the back of your TV.</li> </ol> Select Skip if you do not have any equipment connected to a particular input.

<b>Option</b>	<b>Description</b>
Video 1-7	DVD, Cable Box, Satellite, BD, VCR, Receiver, DVR, Game, Camcorder, PC, 8mm, Skip.
	 <b>PC label is available for Video 6 and Video 7 only.</b>  <b>If you select Skip, your TV skips the selected connection when you press TV/VIDEO.</b>
Language	Select to display all on-screen settings in your language of choice: English, Español, Français.
Video 2 (Component)	<p><b>Auto</b> Select to switch automatically between the component video jacks (YPbPr, AUDIO L (MONO)/AUDIO R) and the composite video jacks (VIDEO, AUDIO L (MONO)/AUDIO R) on the left side of the TV (VIDEO/HD/DVD 2 IN) depending on the cable connection.</p> <p><b>Off</b> Select to activate the composite video jacks (VIDEO/AUDIO L(MONO)/AUDIO R) on the left side of the TV.</p>
CineMotion	Select <b>Auto</b> to optimize the screen display automatically detecting film content and applying a reverse 3-2 pulldown process. Moving pictures will appear clearer and more natural looking. Select <b>Off</b> to disable the detection.
Cooling Mode	Select <b>High</b> to use the TV at an altitude of 5,000 feet (1,500m) or higher. Select <b>Normal</b> to use the TV at normal altitude.
Lamp Replacement	When the lamp nears the end of its life, a message will appear every time the TV is turned on. After the lamp is replaced, select this option then follow the steps on screen.
Product Information	Select to display information about your TV model.

 If you choose to use the composite connection for Video 2 (Component), be sure to select **Off** to activate for composite use.



## Accessing the Clock/Timers Settings

1. Press MENU.....




2. Select Settings.....



3. Highlight.....



4. Press to select.....

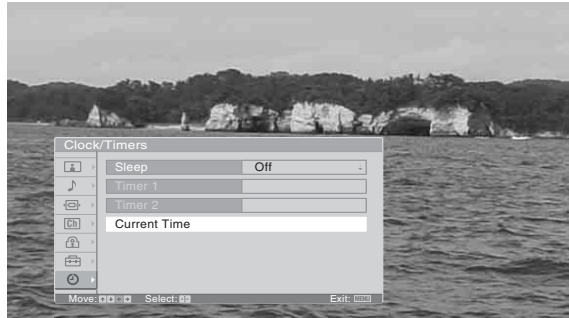

To highlight an option and to change settings, press  $\uparrow$   $\downarrow$   $\leftarrow$   $\rightarrow$ .

Press  $\oplus$  to confirm the selection.






 
To exit the Clock/Timers, press  $\text{MENU}$ .

### Selecting Clock/Timers Options

Select to set the clock and to program your TV to turn on and off at two scheduled viewing times. Once the options are set, **TIMER LED** lights up in orange.

The Clock/Timers settings include the following options:

Option	Description				
Sleep	Allows you to select the amount of time (Off, 15 minutes, 30 minutes, 45 minutes, 60 minutes, 90 minutes or 120 minutes) that you want the TV to remain on before shutting off automatically.				
Timer 1	You can use the Timers to program the TV to turn on and off and tune to a specific channel at two scheduled viewing times.  Timer 1 and Timer 2 cannot be set until you set the Current Time.				
Timer 2					
<p><b>1</b> Press <math>\uparrow</math> or <math>\downarrow</math> to highlight Timer 1 or Timer 2. To set the timer, press <math>\rightarrow</math>.</p> <p> <b>To go directly to programming Timer 1 or 2, press <math>\oplus</math> instead of pressing <math>\rightarrow</math>.</b></p> <p><b>2</b> Press <math>\uparrow</math> or <math>\downarrow</math> to highlight one of the following options, then press <math>\oplus</math>.</p> <table border="0"> <tr> <td>Program</td> <td>Select to set the Timer by day, time, duration, and channel.</td> </tr> <tr> <td>Off</td> <td>Select to turn off the Timer. (Your previous settings are saved.)</td> </tr> </table> <p><b>3</b> If you selected Program in step 2, press <math>\uparrow</math> and <math>\downarrow</math> to set the day(s), hour, minute, AM/PM, duration, and channel number. Press <math>\oplus</math> or press <math>\rightarrow</math> to confirm each setting and move to the next setting. Press <math>\leftarrow</math> to go back to the previous setting.</p> <p><b>4</b> Press MENU to exit the setting screen. An LED on the front panel will light, indicating the Timer has been set.</p>		Program	Select to set the Timer by day, time, duration, and channel.	Off	Select to turn off the Timer. (Your previous settings are saved.)
Program	Select to set the Timer by day, time, duration, and channel.				
Off	Select to turn off the Timer. (Your previous settings are saved.)				

<i>Option</i>	<i>Description</i>
Current Time	<p>You can set the current time.</p> <ol style="list-style-type: none"><li>1 Press  to select Current Time.</li><li>2 Press  and  to set the current time (day, hour, minute, and AM/PM). Press  (or press ) to confirm each setting and move to the next setting. Press  to go back the previous setting.</li><li>3 Press MENU to exit the setting screen.</li></ol>

---





# Other Information

## Overview

This chapter includes the following topics:

<i>Topic</i>	<i>Page</i>
Contacting Sony	65
Replacing the Lamp	66
Troubleshooting	69
PC Input Signal Compatibility Chart	73
Specifications	74
Optional accessories	75
Index	76

## Contacting Sony

If, after reading these operating instructions, you have additional questions related to the use of your Sony television, please contact our Customer Information Services Center.

Visit	<a href="http://www.sony.com/TVsupport">http://www.sony.com/TVsupport</a>
Canada	1-877-899-SONY (7669)

Before calling Sony customer support, please write down the model and serial numbers of your TV.

## Replacing the Lamp


The Projection lamp, like all lamps, will eventually lose brightness and functionality, which affects the overall performance of your Television. How long the Lamp maintains its brightness will vary depending upon your usage and environmental conditions. To maintain the quality of your viewing experience, Sony recommends that you replace the Lamp (1) after approximately 8,000 hours of use (the TV will display a message reminding you to replace the lamp); (2) when the screen becomes dark or the color looks unusual; or (3) when the LAMP indicator on the front of the TV flashes.

### **WARNING**


**Electric appliances can cause fire or high temperature, resulting in injury or death. Be sure to follow the instructions below.**


- Use a Sony XL-2400 replacement lamp (not supplied) for replacement. Use of any other lamp may damage the TV.
- Do not remove the lamp for any purpose other than replacement. Doing so may cause injury or fire.
- Do not put flammable materials and metal objects inside the lamp receptacle of the TV after removing the lamp. Doing so may cause fire or electrical shock. Do not touch the lamp receptacle once the lamp has been removed.
- When the lamp eventually burns out, you may hear a noticeable pop sound. This is normal and it is inherent to this type of lamp.
- In rare instances, the bulb may pop inside the lamp unit, but the lamp unit is designed to contain all of the broken glass pieces inside the lamp unit.
- This television's lamp contains mercury and should be disposed of properly. Consult your local authorities regarding safe disposal. "The material contained in this lamp are similar to those of a fluorescent lamp, so you should dispose of it in the same way.

### **How to Replace the Lamp**



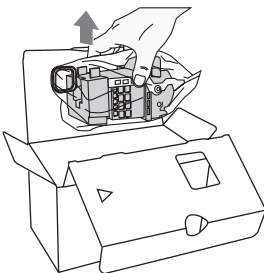


- 1** Turn off the power on the main unit. Wait several minutes, then unplug the power cord.  
(The cooling fan will continue to operate for about two minutes after turning the power off.)
- 2** Wait at least 30 minutes after unplugging the power cord to allow the lamp to cool down before replacing it. To avoid being burned, do not touch the lamp receptacle once the lamp has been removed.
- 3** Take the new lamp out of the box.  
Do not touch the glass portion of the new lamp.


 **Do not shake the lamp. Vibration can damage the lamp or shorten its life.**

 **Avoid touching the front glass of a new lamp or the glass of the lamp receptacle. This may reduce picture quality or lamp life.**

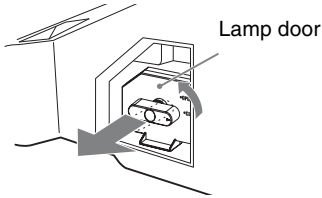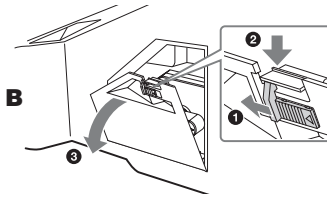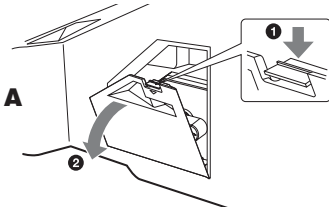

- 4** Remove the outside lamp cover. (Choose your model type A or B.)

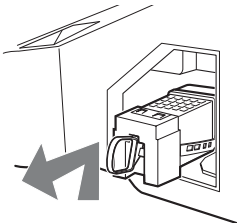


- 5** Remove the lamp door.  
Turn the knob counterclockwise to OPEN and pull out the cover.




- 6** Pull out the lamp.  
Hook a finger through the loop of the lamp handle and pull the handle upwards. Then pull the lamp straight out.


-  **The lamp is very hot immediately after use. Never touch the glass portion of the lamp or the surrounding parts.**
-  **After the used lamp has cooled, place it into the empty box of the replacement lamp. Never put the used lamp into a plastic bag.**

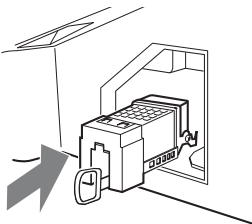


- 7** Put the new lamp into its place.  
Mount the new lamp securely. Failure to do so may cause a fire or the screen to go dark.

-  **If the lamp is not securely reattached, the self-diagnostic function may be triggered and the POWER indicator flashes three times (see page 11).**


(Continued)

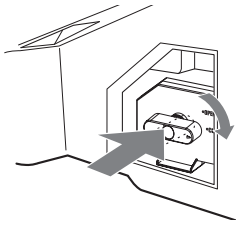

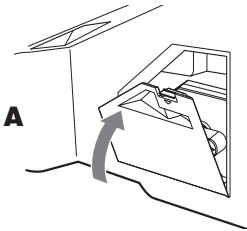

- 8** Reattach the lamp door.  
Turn the knob back to CLOSE and secure the cover.

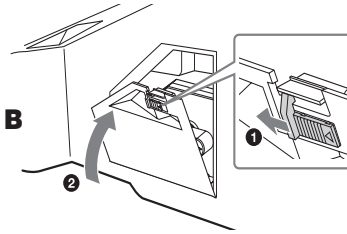

- 9** Put the outside lamp cover back in its place.



- 10** Select the Lamp Replacement option (MENU > Settings > Setup menu) and follow the on-screen procedure.

-  **Consult your Sony dealer for a Sony XL-2400 replacement lamp.**
-  **Take great care when replacing the lamp or plugging in/unplugging the connecting cords. Rough handling may cause the TV to fall, damaging the TV, the TV stand and the floor.**

#### The used lamp

Lamp in this product contains mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance ([www.eiae.org](http://www.eiae.org)).

- Do not leave the used lamp near flammable materials or within the reach of children.
- Do not pour water onto the used lamp or put any object inside the lamp. Doing so may cause the lamp to burst.

**For replacement lamp information visit:  
Canada: <http://www.sonystyle.ca/tv/>**

## Troubleshooting

If you have additional questions, service needs, or technical assistance related to the use of your Sony TV, please visit our website or call one of the following numbers:

<http://www.sony.com/TVsupport>

1-877-899-SONY(7669) in Canada

### Remote Control

<b>Problem</b>	<b>Possible Remedies</b>
Remote control does not operate	<ul style="list-style-type: none"> <li><input type="checkbox"/> The batteries could be weak. Replace the batteries.</li> <li><input type="checkbox"/> Check the orientation of the batteries.</li> <li><input type="checkbox"/> Press TV (FUNCTION) once, and the TV indicator lights up. You may have inadvertently pressed SAT/CABLE (FUNCTION), which changes the remote control to SAT or CABLE mode.</li> <li><input type="checkbox"/> Make sure this unit's power cord is connected securely to the wall outlet.</li> <li><input type="checkbox"/> Florescent lamps can interfere with your remote control operation; try turning off the florescent lamps.</li> <li><input type="checkbox"/> Keep the remote control sensor area clear from obstacles.</li> <li><input type="checkbox"/> If the "High Temperature Warning" message appears, turn off the TV and wait until the TV's projection lamp cools down (approximately 5 minutes). If the remote control still does not work, make sure to dust the ventilation slots on the rear of the TV and the cooling fan to provide adequate ventilation around the TV.</li> </ul>
Cannot change channels with the remote control	<ul style="list-style-type: none"> <li><input type="checkbox"/> If you are using the TV to change channels, first press TV (FUNCTION) once, and the TV indicator lights up.</li> <li><input type="checkbox"/> If you are using another device to change channels, be sure you have not inadvertently switched your TV from the channel 3 or 4 setting.</li> <li><input type="checkbox"/> If you are using another device to change channels, be sure to press FUNCTION for that device. For example, if you are using your cable box to change channels, be sure to press SAT/CABLE (FUNCTION) once, and the SAT/CABLE indicator lights up.</li> </ul>
Remote control does not operate non-Sony video equipment	<ul style="list-style-type: none"> <li><input type="checkbox"/> If you replaced the batteries to the remote recently, the code numbers for the video equipment may need to be reset.</li> <li><input type="checkbox"/> There may be more than one code for the equipment that you are attempting to operate.</li> <li><input type="checkbox"/> There is a possibility that some non-Sony equipment cannot be operated by your Sony TV remote. You may need to use the equipment's original remote control.</li> </ul>

### Picture

<b>Problem</b>	<b>Possible Remedies</b>
No picture (screen not lit), no sound	<ul style="list-style-type: none"> <li><input type="checkbox"/> If your TV does not turn on and a red light keeps flashing, your TV may need service. Call your local Sony Service Center.</li> <li><input type="checkbox"/> Make sure the power cord is plugged in.</li> <li><input type="checkbox"/> Press POWER on the front of the TV.</li> <li><input type="checkbox"/> Press TV/VIDEO to cycle through the connected video sources.</li> <li><input type="checkbox"/> Try another channel; it could be station trouble.</li> </ul>

(Continued)

<b>Problem</b>	<b>Possible Remedies</b>
Dark, poor or no picture (screen lit), good sound	<ul style="list-style-type: none"> <li><input type="checkbox"/> Adjust the <b>Picture Mode</b> option in the Picture setting (see page 49).</li> <li><input type="checkbox"/> Adjust the <b>Brightness</b> option in the Picture setting (see page 50).</li> <li><input type="checkbox"/> Check the antenna/cable connections.</li> </ul>
No color/dark picture/color is not correct	<ul style="list-style-type: none"> <li><input type="checkbox"/> Adjust the <b>Color</b> option in the Picture setting (see page 50).</li> </ul>
Only snow and noise appear on the screen	<ul style="list-style-type: none"> <li><input type="checkbox"/> Check the antenna/cable connections.</li> <li><input type="checkbox"/> Try another channel; it could be station trouble.</li> <li><input type="checkbox"/> Press <b>ANT</b> to change the input mode (see page 33).</li> </ul>
Dotted lines or stripes	<ul style="list-style-type: none"> <li><input type="checkbox"/> Adjust the antenna.</li> <li><input type="checkbox"/> Move the TV away from noise sources such as cars, neon signs, or hair dryers.</li> </ul>
Double images	<ul style="list-style-type: none"> <li><input type="checkbox"/> Using a highly directional outdoor antenna or a cable may solve the problem.</li> </ul>
“Black box” on screen	<ul style="list-style-type: none"> <li><input type="checkbox"/> You have selected a text option in the Setup setting and no text is available. (See page 60 to reset Setup selections.) To turn off this feature, set the <b>Caption Vision</b> option to <b>Off</b>. If you were trying to select closed captioning, select <b>CC1</b> instead of <b>Text 1-4</b>.</li> </ul>
Black bands appear at the top and bottom of the screen	<ul style="list-style-type: none"> <li><input type="checkbox"/> Some wide-screen programs are filmed in aspect ratios that are greater than 16:9 (this is especially common with theatrical releases). Your TV will show these programs with black bands at the top and bottom of the screen. For more details, check the documentation that came with your DVD (or contact your program provider).</li> </ul>
Certain programs on DVD or other digital sources display a loss of detail, especially during fast-motion or dark scenes	<ul style="list-style-type: none"> <li><input type="checkbox"/> The compression used by certain digital broadcasts and DVDs may cause your TV’s screen to display less detail than usual, or cause artifacts (small blocks or dots, pixelations) to appear on your screen. This is due to your TV’s large screen and ability to show very fine detail, and is normal for certain digitally recorded programs. Adjust the reality/clarity in the <b>DRC Palette</b> setting (see page 51) to optimize the picture while viewing these sources.</li> </ul>

## Sound

<b>Problem</b>	<b>Possible Remedies</b>
Good picture, no sound	<ul style="list-style-type: none"> <li><input type="checkbox"/> Press <b>MUTING</b> so that <b>Muting</b> disappears from the screen (see page 34).</li> <li><input type="checkbox"/> Make sure the <b>Speaker</b> option is set to <b>On</b> in the Sound setting (see page 53).</li> <li><input type="checkbox"/> Make sure the <b>MTS</b> option is set to <b>Stereo</b> or <b>Mono</b> (see page 53).</li> <li><input type="checkbox"/> When the <b>HDMI IN</b> input is in use, surround sound, such as <b>AC-3</b> and <b>DTS</b>, cannot be input. Change the sound setting for the external input device to <b>Linear PCM</b>.</li> </ul>
Audio noise	<ul style="list-style-type: none"> <li><input type="checkbox"/> Make sure that the antenna is connected with 75-ohm coaxial cable.</li> <li><input type="checkbox"/> Keep the antenna cable away from other connecting cords.</li> <li><input type="checkbox"/> To avoid TV interference, make sure to use an undamaged antenna cable.</li> </ul>
Cannot gain enough volume when using a cable box	<ul style="list-style-type: none"> <li><input type="checkbox"/> Increase the volume of the cable box using the cable box’s remote control. Then press <b>TV(FUNCTION)</b> once (the TV indicator lights up) and adjust the TV’s volume.</li> </ul>
Sound seems weak or insufficient	<ul style="list-style-type: none"> <li><input type="checkbox"/> The TV’s audio might be set to <b>Auto SAP</b> or <b>Mono</b>, when it might be better set to <b>Stereo</b>. In the Sound setting (see page 53), set the <b>MTS</b> setting to <b>Stereo</b>. If already set to <b>Stereo</b>, switch to <b>Mono</b> (which may reduce background noise during weak stereo broadcasts).</li> </ul>

<b>Problem</b>	<b>Possible Remedies</b>
Cannot raise the volume on external speakers	<input type="checkbox"/> If the <b>Speaker</b> option is set to <b>Off</b> and the <b>Audio Out</b> option is set to <b>Fixed</b> (in order to output the sound to your audio system), use your audio receiver to adjust the sound (see page 53). Or, to use the TV remote control, set the <b>Audio Out</b> option to <b>Variable</b> . <input type="checkbox"/> To turn on the TV speakers, set the <b>Speaker</b> option to <b>On</b> (see page 53).
No audio for HDMI	<input type="checkbox"/> Confirm DVD player, set-top-box audio settings. Select 2 channel LPCM audio.

## Channels

<b>Problem</b>	<b>Possible Remedies</b>
Cannot receive upper channels (UHF) when using an antenna	<input type="checkbox"/> Press <b>ANT</b> to select the VHF/UHF/CABLE input (see page 33). <input type="checkbox"/> Use <b>Auto Program</b> in the Channel setting to add receivable channels that are not presently in the TV's memory (see page 56).
Cannot receive any channels when using cable TV	<input type="checkbox"/> Use <b>Auto Program</b> in the Channel setting to add receivable channels that are not presently in the TV's memory (see page 56). <input type="checkbox"/> Press <b>ANT</b> to select the CABLE input (see page 33).
Cannot receive or select channels	<input type="checkbox"/> Use <b>Auto Program</b> in the Channel setting to add receivable channels that are not presently in TV memory (see page 56).

## General

<b>Problem</b>	<b>Possible Remedies</b>
How to reset TV to factory settings	<input type="checkbox"/> Turn on the TV. While holding down the <b>↑</b> button on the remote control, press the <b>POWER</b> button on the TV. Release the <b>POWER</b> button then release the <b>↑</b> button. The TV will turn itself off, then back on again with Initial Setup. WARNING: This operation will clear all of your customized settings including <b>Parental Lock</b> setting.
How to restore Picture settings to factory settings	<input type="checkbox"/> Select <b>Reset</b> setting option while in the Picture setting (see page 49).
How to restore Sound settings to factory settings	<input type="checkbox"/> Select <b>Reset</b> setting option while in the Sound setting (see page 52).
Cannot cycle through the other video equipment connected to the TV	<input type="checkbox"/> Be sure that the <b>Label Video Inputs</b> option is not set to <b>Skip</b> (see page 60).
Cannot operate the setting	<input type="checkbox"/> If a setting option appears in gray, this indicates that the setting option is not available.
Lost password	<input type="checkbox"/> On the password screen (see page 57), enter the following master password: <b>4357</b> . The master password clears your previous password; it cannot be used to temporarily unblock channels.
TIMER LED on front panel is lit	<input type="checkbox"/> When lit, indicates that the timer is set (see page 62). When the timer is set, this LED will remain lit even when the TV is turned off.
LAMP LED blinks in red	<input type="checkbox"/> Replace the lamp (see page 66).
Digital cable box does not work	<input type="checkbox"/> If you are connecting a VCR and digital cable box using a splitter, as described on page 26, you must use a special bi-directional splitter that is designed to work with your digital cable box. Contact your cable provider for details.

(Continued)

<b>Problem</b>	<b>Possible Remedies</b>
TV cabinet creaks	<ul style="list-style-type: none"> <li><input type="checkbox"/> When the TV is in use, there is a natural rise in temperature, causing the cabinet to expand or contract and may be accompanied by a slight creaking noise. This is not a malfunction.</li> </ul>
A slight creaking noise occurs from the bottom part of the TV	<ul style="list-style-type: none"> <li><input type="checkbox"/> <b>Advanced Iris</b> applies a mechanical iris system. When <b>Advanced Iris</b> is set, a natural creaking noise occurs due to the basic structure of the optical unit. The creaking sound is an inherent nature of this system and is not a defect.</li> </ul>
The cooling fan seems to be louder	<ul style="list-style-type: none"> <li><input type="checkbox"/> Dust may be collected around the ventilation fan area blocking the ventilation holes. Be sure to keep the fan area free from dust.</li> <li><input type="checkbox"/> If the TV is used at high altitudes and set to <b>High</b>, the cooling fan runs faster and its sound becomes louder. If the TV is not used at high altitudes, set <b>Cooling Mode</b> to <b>Normal</b> (see page 61).</li> </ul>
"High Temperature Warning!" message appears	<ul style="list-style-type: none"> <li><input type="checkbox"/> Make sure to remove dust from the ventilation slots on the rear and both sides of the TV. In addition, make sure that there are no obstacles in front of the ventilation slots. If the message still appears after the dust or obstacles are removed, the TV may need servicing. Call your local Sony Service Center.</li> </ul>
The TV does not turn on	<ul style="list-style-type: none"> <li><input type="checkbox"/> The TV cools down its projection lamp when the power is turned off. It takes up to two minutes for the picture to come back after the TV is turned on again. Wait for a while until the picture comes back.</li> </ul>
Image left on the screen (image retention)	<ul style="list-style-type: none"> <li><input type="checkbox"/> Turn off the TV for a while or let the TV run on another channel. Unlike plasma TV and CRT TV, image retention on this TV is not permanent. It is only a temporary condition, (see page 10).</li> </ul>
White spot on the screen when powered off	<p>If screen is exposed to direct sunlight or strong ambient light, part of the screen may appear white even when TV is power off. This is due to the strong light reflecting off the TV screen and reflections coming behind the screen. This is a structural property of the projection TV and is not a defect.</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Position your TV away from such light sources.</li> </ul>
"Lamp Replacement message" appears.	<p>It is time for you to replace the projection lamp used in you TV.</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Turn to page 66 on "How to Replace the Lamp" and follow the direction on replacing the lamp.</li> <li><input type="checkbox"/> Use only the lamp designated for your TV model.</li> <li><input type="checkbox"/> After the lamp is replaced, select the "Lamp Replacement" option then select "Start" in the Setup menu.</li> </ul>
The replacement lamp does not light up	<ul style="list-style-type: none"> <li><input type="checkbox"/> The lamp door or lamp might not be securely attached. Repeat the steps on page 66 to ensure that they are both installed securely.</li> </ul>







## PC Input Signal Compatibility Chart

Resolution				Horizontal frequency (kHz)	Vertical frequency (Hz)	VESA standard
Signals	Horizontal (Dot)	x	Vertical (Line)	(Refresh rate)		
VGA	<b>640</b>	<b>x</b>	<b>480</b>	<b>31.5</b>	<b>60</b>	—*
	640	x	480	37.5	75	✓
	640	x	480	43.3	85	✓
	720	x	400	31.5	70	—*
SVGA	800	x	600	35.2	56	✓
	<b>800</b>	<b>x</b>	<b>600</b>	<b>37.9</b>	<b>60</b>	✓
	800	x	600	46.9	75	✓
	800	x	600	48.1	72	✓
XGA**	<b>1024</b>	<b>x</b>	<b>768</b>	<b>48.4</b>	<b>60</b>	✓
	1024	x	768	56.5	70	✓
	1024	x	768	60	75	✓
WXGA**	<b>1280</b>	<b>x</b>	<b>768</b>	<b>47.4</b>	<b>60</b>	✓
	<b>1280</b>	<b>x</b>	<b>768</b>	<b>47.8</b>	<b>60</b>	✓
	<b>1152</b>	<b>x</b>	<b>648</b>	<b>40.3</b>	<b>60</b>	CVT***

\*: Corresponding to the VGA signal

\*\* : These signals do not support Normal display mode.

\*\*\* : Coordinated Video Timing.

-  **This TV does not support Sync on Green or Composite Sync.**
-  **If a signal other than in the above chart is input, it may not be displayed properly or may not be displayed as you set.**
-  **For the best picture quality, it is recommended to use signals with a 60Hz vertical frequency from a personal computer. In plug and play, signals with 60Hz vertical frequency will be selected automatically.**
-  **Noise may be detected under certain conditions. If unsupported signals are used, you will see the message, “Unsupported Signal”.**

## Specifications


Projection System	3 LCD Panels, 1 lens projection system	
LCD Panel	0.73 inch TFT LCD panel (1,280 × 720 pixels)	
Projection Lens	High Performance, large diameter hybrid lens F2.4	
Antenna	75-ohm external terminal for VHF/UHF	
Lamp	100W, XL-2400 Ultra High Pressure Lamp	
Television System	NTSC	American TV Standard
Visible Screen Size (Picture measured diagonally)	KF-42E200A: 42 inches KF-50E200A: 50 inches	
Channel Coverage	Terrestrial (analog)	2-69
	Cable TV (analog)	1-125
Number of Inputs/Outputs		
HDMI IN	2 Video	1080i, 720p, 480p, 480i, PC
	1 Audio	Two channel linear PCM 32, 44.1 and 48 kHz, 16, 20 and 24 bit
Video (IN)	3 total (1 on side panel)	1 Vp-p, 75 ohms unbalanced, sync negative
S Video (IN)	1	Y: 1 Vp-p, 75 ohms unbalanced, sync negative
		C: 0.286 Vp-p (Burst signal), 75 ohms
Audio (IN)	5 total (1 on side panel)	500 mVrms (100% modulation)
		Impedance: 47 kilohms
Component Video Input	3 (YPbPr) (1 on side panel)	Y: 1 Vp-p, 75 ohms unbalanced, sync negative
		Pb: 0.7 Vp-p, 75 ohms
		Pr: 0.7 Vp-p, 75 ohms
AUDIO (VAR/FIX) OUT	1	500 mVrms at the maximum volume setting (Variable) 500 mVrms (Fixed) Impedance (output): 2 kilohms
RF Inputs	1	
Speaker output	12 W + 12 W	
Power requirement	120 V, 60 Hz	
Power consumption	In use: 200 W	
	In standby: 0.8 W	
Dimensions (W/H/D)	KF-42E200A: 999 × 722 × 357 mm (39 <sup>3</sup> / <sub>8</sub> × 28 <sup>1</sup> / <sub>2</sub> × 14 <sup>1</sup> / <sub>8</sub> inches)	
	KF-50E200A: 1184 × 827 × 408 mm (46 <sup>5</sup> / <sub>8</sub> × 32 <sup>5</sup> / <sub>8</sub> × 16 <sup>1</sup> / <sub>8</sub> inches)	
Mass	KF-42E200A: 25.3 kg (55.8 lb.)	
	KF-50E200A: 29.3 kg (64.7 lb.)	
Supplied Accessories		
Remote Control	RM-YD010	
AA (R6) Batteries	2 supplied for remote control	
Operating Instructions	1	

Quick Setup Guide	1
Warranty Card	1
Product Registration Card	1

Design and specifications are subject to change without notice.  
Non-metric weights and measures are approximate.

**Optional accessories:**

- HDMI cable
- HDMI-to-DVI cable
- Component video cable
- S VIDEO cable
- A/V cable
- Audio cable
- TV Stand : SU-RG11S for KF-42E200A, SU-RG12L for KF-50E200A
- Lamp : XL-2400 Ultra High Pressure Lamp

 **The availability of optional accessories depends on stock.**

# Index

0-9 buttons 33

4:3 Default 55

5.1 Channel DVD using with remote control 38

## A

Adding channels to the channel list 56

Adjusting audio, Steady Sound 52

Advanced Iris 49

Advanced Settings 51

ANT button 33

AUDIO (L/R) jacks, described 15

Audio Out 53

AUDIO OUT jack, described 15

Audio receiver, connecting 31

Auto Program 56

Auto Wide 55

## B

Balance, adjusting 52

Bass, adjusting 52

Batteries, inserting in remote 32

BBE 52

Blu-ray Disc player

using with remote control 38

Brightness, adjusting 50

## C

Cable 56

connecting with VCR 25

using with remote control 37

Cable Box

connecting with VCR 26

Camcorder connection 30

Canadian Ratings 58

Caption Vision 60

Change Password 57

CHANNEL +/- button 16

Channel settings 48, 56

Channel Show/Hide 56

Channels

Auto Program 56

creating labels 56

CineMotion 9, 61

Clear White 51

Clock/Timers settings 48, 62

Closed caption modes 60

Color Temp., adjusting 50

Color, adjusting 50

Connecting

Audio receiver 31

Cable box 20

Camcorder 30

DVD player 28–29

Personal Computer 30, 31

VCR 25–27

Cooling Mode 61

## D

Display Area 55

DISPLAY button 34

Display, turning off 34

DRC Mode 50

DRC Palette 51

DVD player

using with remote control 37

with A/V connectors,

connecting 29

with component video

connectors, connecting 28

## E

English Rating 58

ENT button 33

External Inputs, MENU 44, 45

## F

Favorite Channels

setting up 56

Favorites, MENU 44, 45

FREEZE button 34, 40

French Rating 58

FUNCTION button 33

## G

Gamma 51

## H

HD/DVD IN jack (1080i/720p/480p/480i), described 15

HDMI 15

HDMI IN jack, described 15

High-Definition Multimedia Interface (HDMI) 9

Horizontal Center 55

Hue, adjusting 50

## I

Infrared Receiver (IR) 16

Inputs, labeling 60

## J

JUMP 40

JUMP button 33

## L

Label

Channels 56

Label Video Inputs 60

LAMP LED 16

Lamp Replacement 61

Lamp, replacing 66–68

Language 61

## M

MENU 43

MENU button 16, 37

Movie Rating 59

MTS 53

MUTING button 34

## N

Noise Reduction 50

- O**
- Off, turning off the TV 16
- On, turning on the TV 16
- P**
- Parental Control, described 9
- Parental Lock settings 48, 57
- Password, changing 57
- PC Wide Mode 54
- Personal Computer
  - connecting 31
- Picture 50
- PICTURE button 34
- Picture Mode
  - Custom 49
  - Standard 49
  - Vivid 49
- Picture settings 47, 49
- POWER button 16
- POWER/STANDBY LED 16
- Problems, Troubleshooting 69–72
- Product Information 61
- R**
- Rating 57
- Ratings
  - setting 58
  - viewing blocked programs 58
- Remote control
  - inserting batteries 32
  - programming 35–36
- Removing channels from the channel list 56
- Reset 49, 52
- S**
- S VIDEO jack, described 15
- Satellite receiver, using with remote control 37
- Screen settings 47, 54
- Select Country 57
- Settings
  - Channel 48, 56
  - Clock/Timers 48, 62
  - Parental Lock 48, 57
  - Picture 47, 49
  - Screen 47, 54
  - Setup 48, 60
  - Sound 47, 52
  - Settings, MENU 44, 46
  - Setup settings 48, 60
  - Sharpness, adjusting 50
  - Show/Hide Channels 56
  - Sound Mode 52
  - Sound settings 47, 52
  - Speaker 16, 53
  - Specifications 74–75
  - Steady Sound
    - adjusting 52
    - described 9
  - Support Belt 12
  - Surround 52
- T**
- Timer
  - set current 63
- TIMER indicator 11
- TIMER LED 16
- TOOLS button 34
- Treble, adjusting 52
- Troubleshooting 69–72
- Turning on/off the TV 16
- TV FUNCTION button 33
- TV POWER button 34
- TV Rating 59
- TV, MENU 44
- TV/VIDEO button 16, 33
- U**
- Unrated 59
- V**
- VCR
  - using with remote control 37
  - with cable box, connecting 26
  - with cable, connecting 25
- Vertical Center 55
- Vertical Size 55
- VHF/UHF jack, described 15
- Video 2 (Component) 61
- VIDEO IN jacks, described 15
- Video inputs, labeling 60
- VIDEO/AUDIO (L/R) jacks, described 15
- VISUAL SEARCH 34
- VOL +/- button 34
- VOLUME +/- button 16
- Volume Offset 52
- W**
- WEGA Engine 9
- Wide Mode 54
- Wide Screen Mode, described 9













