

## Welcome to the World of PlayStation

 **PSVITA**  
PlayStation Vita




### Quick Start Guide

English

PCH-1008 / PCH-1108

## Using your PlayStation®Vita system for the first time


To use your PS Vita system, you need the following types of card media:

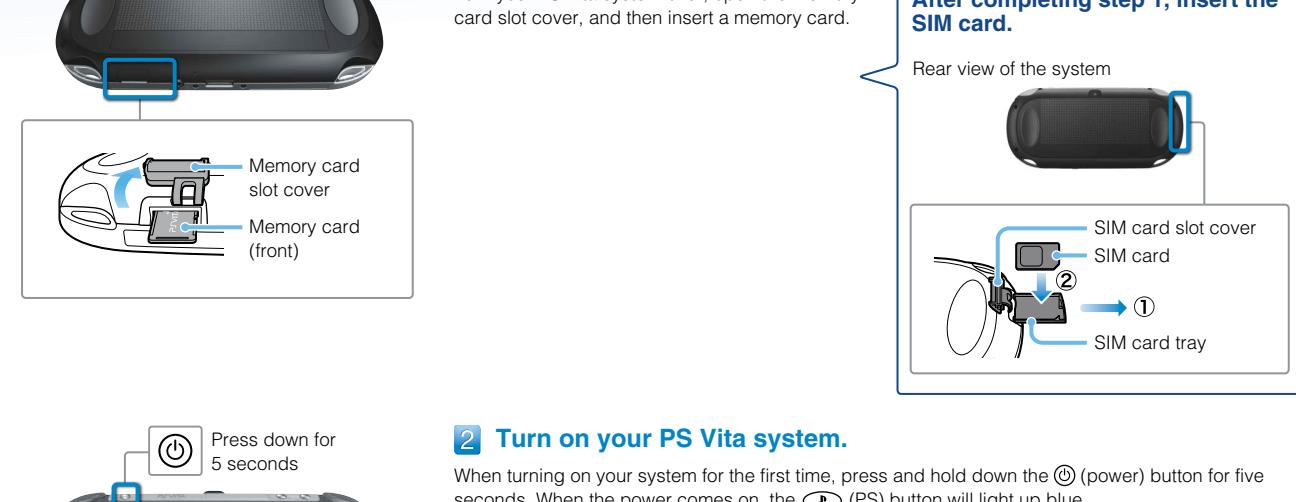

### Notices

- Some models of the PS Vita system come with card media included. Refer to the package for content details.
- Some games may require a PS Vita memory card. Refer to the game package or online compatibility notices for details.
- Before you insert or remove a memory card or SIM card, check that the power is off. This helps prevent data corruption or loss.

 Rear view of the system




### 1 Insert the memory card.

Turn your PS Vita system over, open the memory card slot cover, and then insert a memory card.

### 3G PCH-1108 Series

#### After completing step 1, insert the SIM card.

Rear view of the system

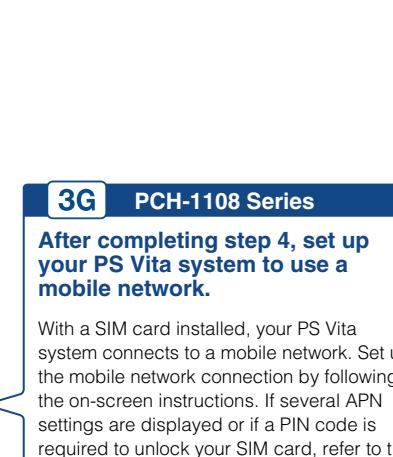

### 2 Turn on your PS Vita system.

When turning on your system for the first time, press and hold down the (power) button for five seconds. When the power comes on, the (PS) button will light up blue.

If you need to charge the system, see "Charging" on the back of this guide.

### 3 Begin to set up your PS Vita system.

To start making initial settings, drag your finger from the top right to the bottom left of the touchscreen (peel the screen) as shown in the figure on the left.

#### Touchscreen gestures



##### Drag

Slide while touching



##### Tap

Touch lightly and then raise your finger



##### Flick

Flick lightly

### 4 Select your language, time zone, and the date and time.

Drag lists of items to scroll and find your choice. Tap an item to select it, and then tap [Next]. To scroll quickly, flick the list of items.

### 3G PCH-1108 Series

#### After completing step 4, set up your PS Vita system to use a mobile network.

With a SIM card installed, your PS Vita system connects to a mobile network. Set up the mobile network connection by following the on-screen instructions. If several APN settings are displayed or if a PIN code is required to unlock your SIM card, refer to the SIM card's manual.

To make these settings at a later time, after completing initial setup, tap (Network Operator) on the home screen.

### 5 Link your Sony Entertainment Network account to your PS Vita system.

#### If you already have an account

You need an Internet connection to link your Sony Entertainment Network account to your PS Vita system and access PlayStation Network services. If you cannot connect to the Internet, you must set up your system as explained in "If you do not have an account".

① Tap [Yes, I do], [Use], and then tap [Next].

② Connect to the Internet by selecting an access point on the Wi-Fi settings screen.

③ Enter your Sony Entertainment Network account information. Tap the text entry field, and then enter text using the keyboard that appears.

If a system software update is required after step ②, select [Set Later] and tap [Next].

#### Connecting to the Internet

When an Internet connection is required, the system automatically searches for Wi-Fi access points, and then the Wi-Fi settings screen appears. Find a system where you can connect to a Wi-Fi access point. For details about connecting to a Wi-Fi access point, refer to the access point documentation or contact the service provider or person who set it up.

#### If you do not have an account

Set up your PS Vita system for trial use of PlayStation Network services. To make full use of PlayStation Network features, you must sign up for a Sony Entertainment Network account.

① Tap [No, I don't], and then tap [Next]. Follow the on-screen instructions.

PlayStation Network and PlayStation Store are subject to terms of use and are not available in all countries and languages. See [www.playstation.com/legal](http://www.playstation.com/legal) for details. A wireless or mobile Internet connection is required. Under 18s are responsible for broadband charges and connection fees. Content and/or services may be 7 years or older and users under 18s require a parent or guardian to set up a sub-account. If you are setting up the PS Vita system for a child, please use a sub-account and the parental control features.

\*PlayStation and the PlayStation logo are registered trademarks of Sony Computer Entertainment Inc.

PS VITA and LIVE AREA are trademarks of Sony Computer Entertainment Inc.

“Sony” and “Entertainment Network” are trademarks of Sony Corporation.

Sony Entertainment Network is a trademark of the same company.

Design and specifications are subject to change without notice.

Information and software published in this document may vary from those for your PS Vita system, depending on the country and software version in use.

Also, the illustrations and screen images used in this guide may vary from the actual product.

©2012 Sony Computer Entertainment Inc. All rights reserved. Printed in China

### Playing games and learning in Welcome Park

In Welcome Park, have fun playing games while learning the basic features of your PS Vita system.

#### Digit Chase

Test your touchscreen number game.

#### Snap + Slide

Create puzzles from your photos and solve them.

SONY

### 3G PCH-1108 Series

#### Connecting to the Internet using a mobile network

If you cannot connect to a Wi-Fi access point, close the Wi-Fi Settings screen. If the SIM card allows Internet access without additional steps, your system automatically connects to the Internet via the mobile network. Refer to the manual in the SIM package for details.

To make these settings at a later time, after completing initial setup, tap (Network Operator) on the home screen.

### 6 Complete initial setup.

Tap [OK] to complete initial setup of your PS Vita system. An introductory video will play. If you entered your Sony Entertainment Network information in step 5, a Sony Entertainment Network sign-in screen appears after the introductory video. Follow the on-screen instructions to sign in.

#### You can access applications for the PS Vita system from the home screen.

Barcode: 4-408-599-821

SONY

ENTERTAINMENT

