



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY PMW-EX3. You'll find the answers to all your questions on the SONY PMW-EX3 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.


User manual SONY PMW-EX3
User guide SONY PMW-EX3
Operating instructions SONY PMW-EX3
Instructions for use SONY PMW-EX3
Instruction manual SONY PMW-EX3

SONY

3-878-039-11(1)

Solid-State Memory Camcorder

PMW-EX3

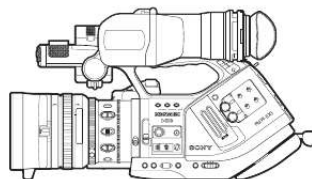

Operating Instructions

XDCM EX

SXS



CINEALTA

Exmor

CMOS Sensor

© 2008 Sony Corporation



[Your user manual](#)
[SONY PMW-EX3](#)

Manual abstract:

27 Turning Power On 28 Turning Power Off . 28 Setting the Clock . 29 Adjusting the Viewfinder . 30 Adjusting the Lens 33 Adjusting the Flange Focal Length 33 Replacing the Lens . 34 Retrieving the Lens File . 35 Adjusting the Grip 36 Using the Cheek Pad . 37 Using the IR Remote Commander 39 Handling SxS Memory Cards 40 About SxS Memory Cards . 40 Inserting/Removing an SxS Memory Card 41 Switching Between SxS Memory Cards 43 Formatting an SxS Memory Card 43 4 Checking the Remaining Time Available for Recording . 43 Restoring an SxS Memory Card 44 Using the PHU-60K 45 Connecting/Removing the PHU Connection Cable . 45 Formatting the PHU-60K .

45 Checking the Remaining Time Available for Recording . 46 Restoring the PHU-60K . 46 Recording Basic Operation Procedure 47 Selecting the Video Format 49 Selectable Formats . 49 Changing the Format 50 Switching the ND Filters 50 Adjusting the White Balance . 51 Selecting the Adjustment Mode . 51 Executing Auto White Balance 52 Adjusting the Black Balance 53 Displaying the Markers and Zebra Patterns 53 Displaying the Markers 53 Displaying the Zebra Patterns 54 Setting the Gain . 55 Recording With Fixed Gain . 55 Recording in AGC Mode . 56 Setting the Electronic Shutter 56 Shooting in a Fixed Shutter Mode . 56 Shooting in EX Slow Shutter Mode .

58 Shooting in Auto Shutter Mode . 58 Adjusting the Iris 58 Recording in Auto Iris Mode . 58 Adjusting the Iris Manually . 59 Adjusting the Zoom 59 Switching the Zoom Mode . 59 Operating the Zoom Manually . 60 Using the Power Zoom . 60 Adjusting the Focus 61 Adjusting in Full MF Mode . 61 Adjusting in MF Mode . 62 5 Adjusting in AF Mode . 63 Using Macro Mode 64 Eliminating Picture Blurring (Steady Shot) .

64 Reducing Flickers . 65 Setting the Time Data . 65 Running Modes of the Timecode . 65 Setting the Timecode 66 Setting the User Bits . 66 Displaying the Time Data 67 Recording Audio Signals 67 Using the Built-in Stereo Microphones 67 Using External Inputs . 68 Using an External Microphone 68 Adjusting the Audio Recording Levels 68 Monitoring the Audio . 69 Outputting the Color Bars and Reference Tone 69 Recording Shot Marks 70 Rec Review . 71 Changing Functions of the Assignable Buttons . 72 Interval Recording 73 Preparatory Settings . 73 Performing Interval Recording 73 Frame Recording 74 Preparatory Settings .

74 Performing Frame Recording . 75 Slow & Quick Motion Recording 76 Preparatory Settings . 76 Recording in Slow & Quick Motion Mode 77 Freeze Mix: Image Alignment . 77 Shot Transition 78 Preparatory Settings . 79 Recording with a Shot Transition 81 Fader Function 82 Preparatory Settings .

82 Starting Recording with a Fade In . 83 Ending Recording with a Fade Out 83 Picture Profiles 84 Registering the Customized Settings as a Picture Profile . 84 Selecting a Picture Profile 85 Copying the Settings of a Picture Profile . 85 6 Resetting a Picture Profile 86 Picture Profile Items . 87 Deleting Clips 91 Deleting the Last Recorded Clip 91 Deleting All Clips 91 Storing/Retrieving the Setting Data 92 Storing the Setup File .

92 Retrieving the Setup File 92 Resetting to the Standard Values . 92 Playback Playing Back Clips 93 Thumbnail Screen 93 Playback . 94 Clip Operations . 98 Clip Operation Menus 98 Basic Operations of the Clip Operation Menus . 99 Displaying the Detailed Information of a Clip . 100 Adding the OK Mark to a Clip . 100 Copying a Clip . 101 Deleting a Clip . 101 Displaying the EXPAND CLIP Screen 101 Displaying the SHOT MARK Screen 102 Adding/Deleting Shot Marks . 103 Changing the Index Frame .

104 Dividing a Clip . 104 Status Displays Showing the Status Screens 105 CAMERA Status Screen 106 AUDIO Status Screen . 107 In Camera Mode . 107 In Media Mode . 107 VIDEO Status Screen . 108 BUTTON/REMOTE Status Screen 108 BATTERY/MEDIA Status Screen 109 Menu Configuration and Detailed Settings Overview of the Setup Menus 110 7 Setup Menu Configuration . 110 Setup Menu Layers 110 Basic Menu Operations 111 Setup Menu List 114 CAMERA SET Menu 114 AUDIO SET Menu 118 VIDEO SET Menu . 119 VF SET Menu 120 TC/UB SET Menu 122 LENS Menu ..



[Your user manual](#)
[SONY PMW-EX3](#)