

Welcome



Important Information

Before you use your device, please read the *Important Information* provided in your device regarding warranty, safety and handling information.

Protecting your device from water and dust

Your device has IP (Ingress Protection) ratings of IP65 and IP68. These ratings mean that your device is dust tight and is protected against low pressure water stream as well as against the effects of submersion for 30 minutes in fresh (non-saline) water up to 1.5 metres deep. Always firmly attach all covers to ensure the water and dust resistance of the device. If liquid is detected inside the device, for example, underneath one of the covers, your warranty will be void. Before using your device in water and in dusty conditions, refer to the relevant section of the User guide for your device for more detailed information. An online User guide as well as a downloadable version is available at www.sonymobile.com/support.

Overview

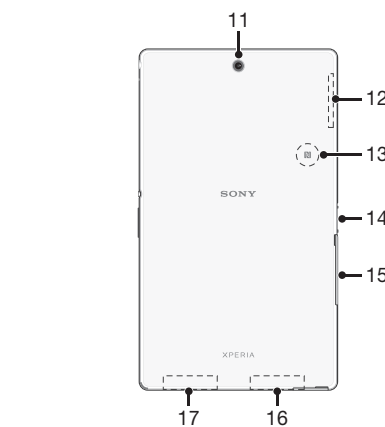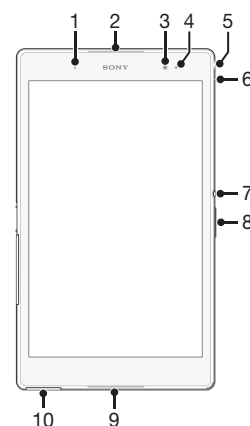


- | | |
|--------------------------------|---|
| 1. Charging/Notification light | 10. Cover for charger/USB cable port |
| 2. Speaker | 11. Main camera lens |
| 3. Front camera lens | 12. GPS antenna area |
| 4. Light sensor | 13. NFC™ detection area |
| 5. Headset jack | 14. Charging dock connector |
| 6. Microphone | 15. Cover for nano SIM and memory card slot |
| 7. Power key | 16. Main Wi-Fi/Bluetooth antenna area |
| 8. Volume/Zoom key | 17. Second Wi-Fi antenna area |
| 9. Speaker | |


Assembly

To insert the nano SIM card

⚠ If you insert a nano SIM card while the device is powered on, the device restarts automatically.

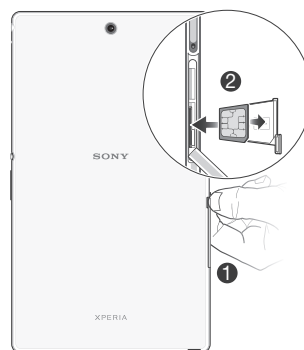


To insert a memory card

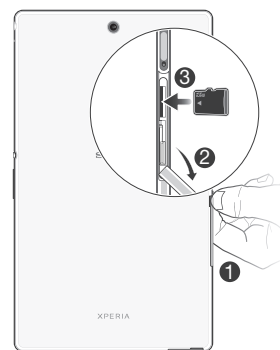

Turning on the device

Make sure that the battery is charged for at least 30 minutes before you turn on the device for the first time.

To turn on the device

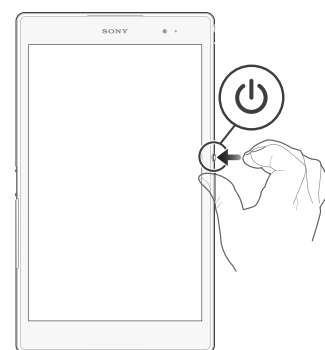

- 1 Press and hold down the power key (⏻) until the device vibrates.
- 2 Wait a while for the device to start.

Waking up the screen

To activate the screen

- Briefly press the power key (⏻).
- If Tap to wake up mode is enabled, double-tap the screen.
- To enable Tap to wake up mode, go to the Home screen, then tap (⋮) > Settings > Display > Tap to wake up.

To unlock the screen

- Place a finger on the middle of the screen and swipe in any direction.

Finding your way



Using the keys




- Back navigation key
 - Go back to the previous screen within an application or close the application.
- Home navigation key
 - Exit an application and go back to the Home screen.
- Task navigation key
 - Open the recently used applications window and the small apps bar.
- Application screen
 - Open the Application screen.

Basic applications and settings

- Make phone calls by dialling the number manually or by using the smart dial function.
- Use the Messaging application to send and receive text and multimedia messages.
- Go to Google Play™ to download free and paid applications for your device.
- Optimise the device settings to suit your own requirements.


Notifications and quick settings

To open or close the Notification panel

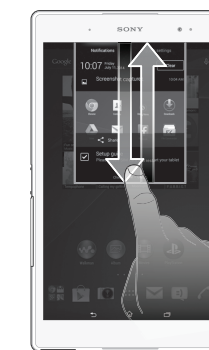

☰ To open the Notification panel, drag the status bar downwards.

To open or close the Quick settings panel

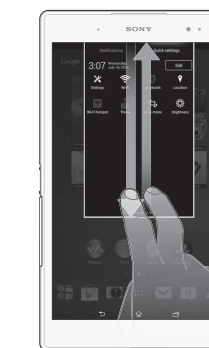

☰ To open the Quick settings panel, drag the status bar downwards by using two fingers.

More basics

Calling

To make a call by dialling

- 1 From your Home screen, tap (⋮).
- 2 Find and tap **Phone**.
- 3 Enter the number of the recipient and tap (📞).

To end a call

- Tap (📞).

To answer a call



• Drag (📞) to the right across the screen.

Multimedia and text messaging

To create and send a message

- 1 From your Home screen, tap (⋮), then find and tap (✉).
- 2 Tap (👤).
- 3 Enter the recipient's name or phone number, or other contact information that you have saved about the recipient, then select from the list that appears. If the recipient is not listed as a contact, enter the recipient's number manually.
- 4 Tap **Write message** and enter your message text.
- 5 If you want to add an attachment, tap (+) and select an option.
- 6 To send the message, tap **Send**.

About Email

You can handle several email accounts at the same time using the Email application, including corporate Microsoft Exchange Active Sync accounts. Emails you receive to your Gmail™ account can be accessed on your device from both the Email and the Gmail™ applications.



To set up an email account

- 1 From your Home screen, tap (⋮).
- 2 Find and tap Email.
- 3 Follow the instructions that appear on the screen to complete the setup.
- For some email services, you may need to contact your email service provider for information on detailed settings for the email account.

Accessing settings

View and change settings for your device from the Settings menu. The Settings menu is accessible from both the Application screen and the Quick settings panel.

To access your device settings

- 1 From your Home screen, tap .
- 2 Find and tap .

Transferring your contacts

Xperia™ Transfer is an application within the PC Companion and the Sony Bridge for Mac computer programs that helps you to collect contacts from your old device and transfer them to your new device. Xperia™ Transfer supports several device brands, including iPhone, Samsung, HTC, BlackBerry, LG, and Nokia.

You need:

- An Internet-connected computer.
- A USB cable for your old device.
- A USB cable for your new Android™ device.
- Your old device.
- Your new Android™ device.

To transfer contacts to your new device


- 1 Search and download PC Companion (on a PC) or Bridge for Mac (on a Mac computer) from www.sonymobile.com if the application is not already installed.
- 2 After successful installation, open the PC Companion application or the Sony Bridge for Mac application, then click *Xperia™ Transfer* and follow the relevant instructions to transfer your contacts.


Setting up your device

Google™ account

With a Google™ account, you can use Gmail™ to send emails, Hangouts™ to chat with friends, and Google Play™ to download applications and games, music, movies and books.

To set up a Google™ account on your device



- 1 From your Home screen, tap .
- 2 Find and tap **Settings** > **Add account** > **Google**.
- 3 Follow the registration wizard to create a Google™ account, or sign in if you already have an account.

 You can also sign in to or create a Google™ account from the setup guide the first time you start your device. Or you can go online and create an account at www.google.com/accounts.

Basic settings

The first time you start your device, a setup guide explains basic device functions and helps you enter essential settings. You can also access the setup guide later.

To access the setup guide manually

- 1 From the Home screen, tap .
- 2 Tap  > **Setup guide**.

Support on the web



Visit www.sonymobile.com/support to access a range of support options for your device, including downloads, troubleshooting tips and a User guide.

Legal information

Sony SGP621/SGP641

Publication number: xxxx-xxxx.1

This Startup guide is published by Sony Mobile Communications Inc. or its local affiliated company, without any warranty. Improvements and changes to this Startup guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Mobile Communications Inc. at any time and without notice. Such changes will, however, be incorporated into new editions of this Startup guide. All illustrations are for illustration only and may not accurately depict the actual device.


See regulatory information such as the CE mark in the relevant label tray in the device.

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. Any rights not expressly granted herein are reserved. Visit www.sonymobile.com/us/legal/ for more information.

Product compliance: This product has been manufactured by or on behalf of Sony Mobile Communications Inc., 1-8-15 Konan, Minato-ku, Tokyo 108-0075, Japan. Inquiries related to product compliance based on national legislation shall be addressed to Sony Mobile Quality Office, Sony Mobile Communications Inc., 1-8-15 Konan, Minato-ku, Tokyo 108-0075, Japan. For any service or guarantee matters, please refer to the contact details provided in the separate service or guarantee documents.

© 2014 Sony Mobile Communications Inc. All rights reserved.

To view the CE mark and the FCC ID

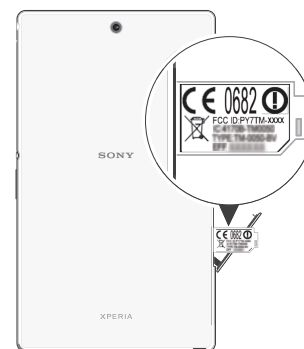

- 1 Detach the nano SIM card slot cover.
- 2 Insert the tip of an unfolded paper clip (or a similar object with a long, fine tip) into the hole in the label tray, then drag the tray outwards. The information is displayed on the tray.