



P/N 7819901876
VRD-MC5

DVDirect™ Quick Start Guide

© 2007 Sony Corporation Printed in China



Dubbing From Your Handycam® With the DISC BURN Button

HDD Handycam Memory Stick Handycam

Simply press the DISC BURN button on your Handycam to start copying the videos recorded since the last DISC BURN recording.

1

Connect the AC adapter and AC power cord, and press to turn on the DVDirect.

2

Press and insert a disc.

3

Turn on the camcorder.

4

Connect the camcorder and DVDirect with a USB cable (not supplied).

5

Press the DISC BURN button to start recording.

6

Wait for a while until dubbing is complete.

Dubbing From Your Handycam®

HDD Handycam DVD Handycam Memory Stick Handycam

Copy the entire video contents of your Handycam onto DVDs.

1

Connect the AC adapter and AC power cord, and press to turn on the DVDirect.

2

Press and insert a disc.

3

Turn on the camcorder.

4

Connect the camcorder and DVDirect with a USB cable (not supplied).
Preparation for USB connection may differ depending on your camcorder. Refer to the operating instructions for your camcorder.

5

On the camcorder's LCD screen, touch the button of the media you are dubbing from.

6

Press to start recording.

7

When complete, the disc is ejected automatically.

Dubbing From Your Handycam®

DV Handycam

Copy the entire DV tape contents to a DVD.

1

Connect the AC adapter and AC power cord, and press to turn on the DVDRecorder.

2

Press and insert a disc.

3

Turn on the camcorder, and switch to PLAY/EDIT mode.

4

Connect the camcorder and DVDRecorder with a DV cable (not supplied).

5

Press to start recording.

6

When complete, the disc is ejected automatically.

Dubbing From a Camcorder or Other Video Device

Video Device

Record selected portions of a video tape onto a DVD disc.

1

Connect the AC adapter and AC power cord, and press to turn on the DVDRecorder.

2

Press and insert a disc.

3

Turn on and setup your video device for video playback.

4

Connect the device and DVDRecorder with appropriate cables (not supplied).

5

Operate the video device to start playback.

6

- Start/pause/resume recording.
- Stop recording.
- Remove the disc.

Photo Recording

Memory Card

Copy all photos from a memory card to a DVD.

1

Connect the AC adapter and AC power cord, and press to turn on the DVDRecorder.

2

Press and insert a disc.

3

Insert a memory card into the corresponding slot.

4

Press to start recording.

5

When complete, press and remove the disc.