

238mm 228mm

BUTTON FUNCTION CHART (BLUETOOTH SOURCE)

FUNCTION	BUTTON	OPERATION
Turn On	On/Off Switch	Slide to "On"
Pair	On/Off Switch	Slide to "On" and the device will be in pairing mode.
Turn Off	On/Off Switch	Slide to "Off"
Answer Call	Play/Pause	Single Press
End Call	Play/Pause	Single Press
Reject Call	Play/Pause	Press and Hold (Warning: 1s)
Last Call Redial	Play/Pause	Double Press (quickly)
Play (Music Mode)	Play/Pause	Single Press
Pause (Music Mode)	Play/Pause	Single Press
Volume Up	Volume up button	Press and Flick
Forward track	Volume up button	Single Press
Volume Down	Volume down button	Press and Flick
Backward track	Volume down button	Single Press

SPECIFICATIONS

Bluetooth Version: V3.0
 Bluetooth Profiles: A2DP, AVRCP and HFP
 Battery Life: Wireless Playback (Up To 6 Hours)
 Line Input Playback (Up To 12 Hours)
 Bluetooth Range: 33 Ft (10m)
 Charging Time: Approx. 4 hours from empty to full charge
 Battery Type: Lithium ion polymer

Compliance with FCC rules (U.S.A., only)

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING

- Changes or modifications not expressly approved by the responsible for compliance could void the user's authority to use this equipment.
- Proper connections must be used for connection to a host computer and/or peripherals in order to meet FCC emission limits.

TROUBLESHOOTING

See below for solutions to common problems.

SYMPTOM	SOLUTION
Hearing Distortion	Lower Volume on your phone/music player/device. Charge your device.
Not Loud Enough	Turn up Volume on your phone/music player/device. Charge your device.
Unable to Pair with Bluetooth devices	Confirm that your phone/music player is Bluetooth compatible. Repeat CONNECTING YOUR DEVICE procedure. Make sure the input password is correct if required. Clear the pairing list of mobile phone or PC and try again.

SAFETY INFORMATION

WARNING

Please read these safety warnings and instructions.

- Do not expose your speaker to liquid, moisture, humidity or rain. Do not use near water.
- Clean ONLY with dry cloth.
- Do not expose your speaker to extremely high or low temperatures.
- Do not leave your speaker in direct Sunlight for long periods of time.
- Do not leave your speaker near candles, cooking burners and open flames.
- Do not disassemble your speaker in any way to avoid electric shock.
- Do not dispose your speaker into a fire. The battery could explode and cause injury or death.
- Only charge the battery in accordance to the instructions provided by the company.



238mm 228mm

5mm

5mm

180mm

190mm

CONTENTS

- Bluetooth Speaker
- Micro USB to USB Cable
- 3.5mm to 3.5mm Stereo Jack Cable
- Carrying Pouch



BLUETOOTH (WIRELESS)

Slide the On/Off Switch to On. The blue LED will flash. (A beeping sound means the device is paired.)

Prepare your phone or device

Go to phone/device settings and turn on Bluetooth.
 Once the device is discovered, make the connection by selecting "SM1 SW1".
 Enter "0000" if a passcode is asked. Once paired, the blue LED ring will light up.

STEREO CABLE (WIRED)

Connect the 3.5mm to 3.5mm plug to the device and a phone or music player. The device will automatically switch to Aux in mode. Then you can playback the music from the phone and music player. Unplug the 3.5mm plug from the device will switch back to Bluetooth mode.

LISTEN TO MUSIC

- 1 Pair and connect the speaker to a Bluetooth device such as a mobile phone and music player. The music player must support the A2DP Bluetooth profile. The music functions available depend on your mobile phone or music player.
- 2 To adjust volume, **Press and Hold** the volume up or down button to adjust volume during a call or while listening to music.
- 3 To control Forward track, backward track, **Single press** the volume up or down button to have "Forward or backward track" function.
- 4 To listen to music from wired audio source, connect 3.5mm stereo cable from AUX jack to music player such as MP3, PC, CD player, etc. You will be able to adjust the track on player only.

Note: Audio content via 3.5mm stereo cable will override wireless audio via Bluetooth.

 
CALL HANDLING

- 1 To make a call, while connected to the speaker, use your mobile phone and dial as you normally do. And double press the "Play/Pause" button of speaker can redial last call directly.
- 2 To answer a call, press the "Play/Pause" button or use the keys on the phone.
- 3 To reject the call, press and hold the "Play/Pause" button for about **1 second**.
- 4 To end a call, press the "Play/Pause" button or use the keys on the phone.

Note: If you receive or make a call while listening to music, the music will stop automatically until the call is ending. To pause or resume playing, press the "Play/Pause" button. To stop playing music, press the "Play/Pause" button again.

KEYS AND CONTROLS

- On/Off Switch (Auto Pairing)
- Play/Pause
- Aux In
- Vol+ /Next Song (Press and Hold for Volume Up, Single Press for Next Song)
- Vol- /Previous Song (Press and Hold for volume down, Single Press for Previous Song)
- Micro USB (Charging)

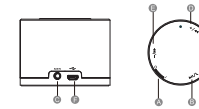

BASIC OPERATIONS

CHARGING

Plug your device into computer or laptop via USB cable.

WHEN CHARGING

A red indicator will be on. (Full charge takes approx. 4 hours.)

WHEN FULLY CHARGED

The red indicator will be turned off.

WHEN BATTERY IS LOW

A warning beep will sound periodically.

Note: Please charge your device.

CONNECTING YOUR DEVICE



5mm

5mm

180mm

190mm