


HR-704 Bluetooth Speaker Owner's guide

- **Controls**

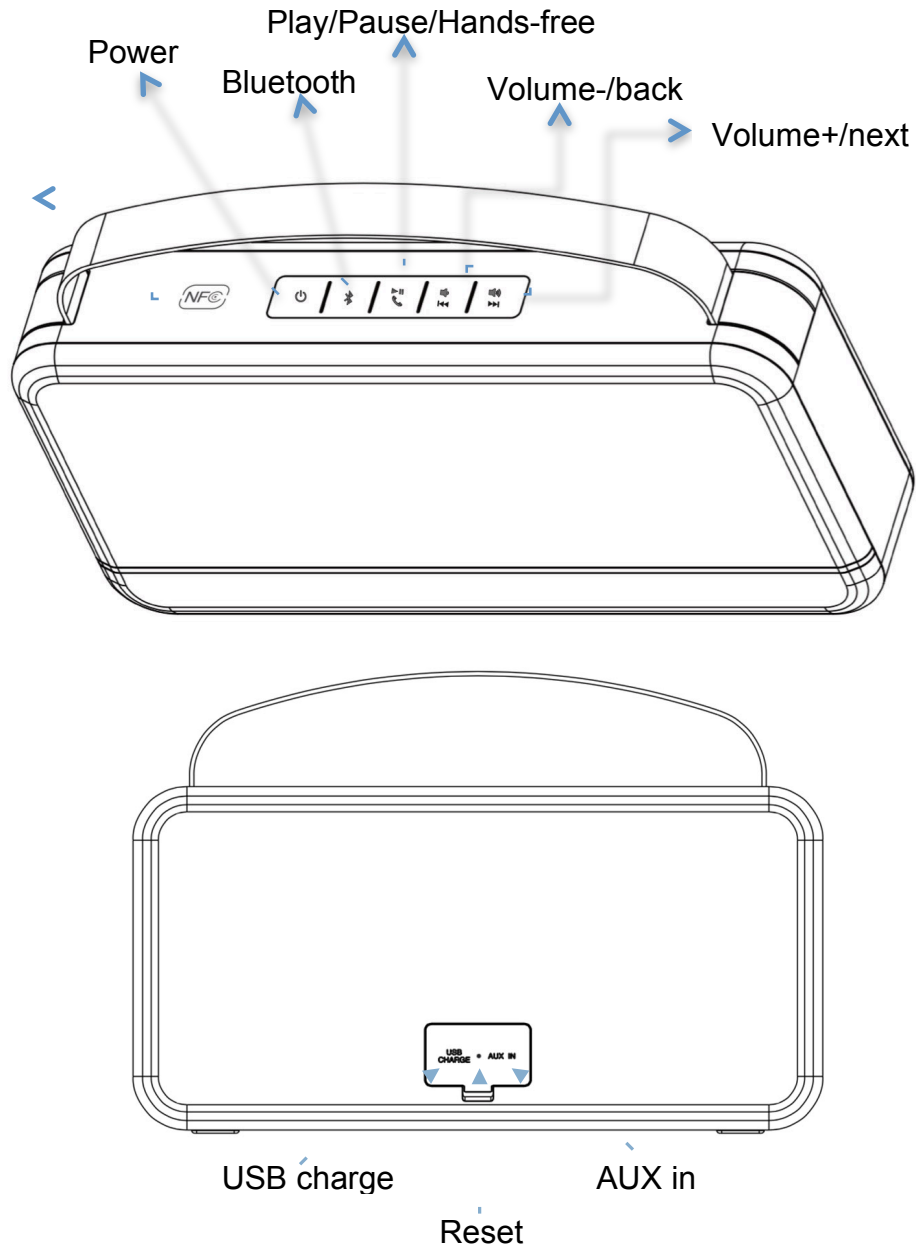

- **In the box**

- | | |
|------------------------------|----------------------------|
| 1 x HR-704 Bluetooth speaker | 1 x Micro USB charge cable |
| 1 x Users manual | 1 x AUX cable |

- ***Waterproof features***

The HR-704 is IPX5 waterproof. Water projected by a nozzle (6.3 mm) against enclosure from any direction shall have no harmful effects.

- ***Charging the HR-704 (3.7V rechargeable battery built-in)***

- 1- Connect HR-704 to PC/Laptop/Mac or any 5V USB adapter (not included) via the USB cable included.
- 2- Red LED turns ON during charging, turns OFF after fully charged.
- 3- Unplug USB cable after fully charged.
- 4- Red LED twinkles when low power (<21%), with voice talk “Battery Level Low” every 30 seconds.
- 5- Speaker turns off automatically in 5 minutes if no pairing action.

- ***Pairing with Bluetooth enabled devices (Mobile phones/Tablets etc.)***

1. Keep the speaker and device within 1 meter of each other.
2. Hold the power button for 2 seconds to turn the speaker on, the LED of all buttons turns on in solid blue.
3. LED of Bluetooth/Hand-free will blink quickly in blue with voice talk “Bluetooth Mode”, while the speaker enters search mode.
4. Start the Bluetooth function on your mobile device and look for “HR-704” in the Bluetooth device list (depending on the Bluetooth version of your device you may have to enter pass code ‘0000’).
5. After successfully connecting, the LED will change to solid blue, with voice talk “Bluetooth paired”.

Note:

- If the pairing was not successful, turn off the speaker and re-pair again.
- After successful pairing, paired devices will remember each other so there is no need to pair again unless pairing information is deleted.
- To pair with a new device, just follow steps 1-5 above after disconnect with existing device.
- In case the buttons not operate properly, press the Reset button located beside USB port by needle or other sharp stuff.

- ***Re-connecting to a paired device***

If the speaker does not connect to the last used device automatically, then you will need to select it manually from the list of devices on your mobile device.

- ***Break existing Bluetooth connection***

1. When speaker is paired with any device already, hold the Bluetooth button for 3 seconds to break existing connection with voice talk “Bluetooth Disconnected”, then you can connect to other devices.
2. If paired device is disconnected by out of range, then it will reconnect when back to the range. It will turn off automatically if out of range more for than 5 minutes.

- ***Answer phone calls by PLAY/PAUSE/HANDS-FREE button***

1. Short Press the PLAY/PAUSE/TEL button to answer an incoming phone call.
2. Long Press to reject phone call.
3. Press again to end a call.

- ***Volume-/back & Volume+/next***

1. Long Press volume+/next or volume-/back button to turn up/down volume.
2. Short Press volume+/next or volume-/back button to skip to next track or go back to previous one.
3. Either control volume by Bluetooth device.

- ***Connecting external devices (AUX port)***

1. You can connect any music device to the HR-704 speaker via the AUX port using the cable included.
2. Bluetooth LED indicator blink slowly with voice talk “Aux in Mode”.
3. When disconnect Aux-in, it will go back to Bluetooth mode with voice talk “Bluetooth Mode”.
4. The speaker will not use the Bluetooth function while connected via this cable.

- ***Removable handle***

Handle can be removed from the speaker. However, taking off handle and putting back on for duplicate times may cause the nuts inside the speaker fall off and cause further problems.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.