


SFM6001 USB FM Transmitter Instruction Manual

ios

i Cyber Station

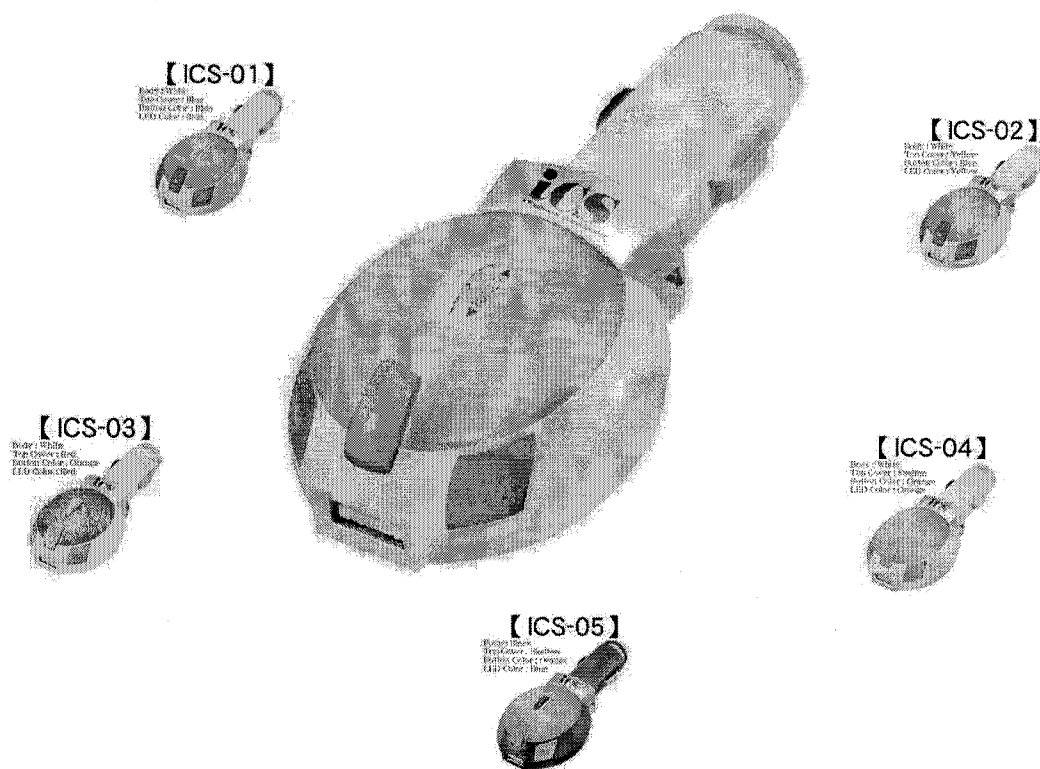

1. Insert the USB FM transmitter to the car cigarette power socket (+12V).
2. Select the power switch to "ON" position.
3. Rotary the frequency knob to select your want freq. Station (clear freq. Station).
4. Insert a USB device (USB memory / Mp3 player) to the OTG FM transmitter(Back side).
 Notes: The USB device must include a Mp3 format song.
5. Press the play button until the USB device was lighting.
6. Press the "REV" button to select the last song (or press and hold the "REV" button to decrease the volume output).
7. Press the "FWR" button to select the next song (or press and hold the "FWR" button to increase the volume output).
8. If USB FM Transmitter is not used, select the power switch to "off" position or plug out from the car cigarette power outlet.

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications, could void the User's authority to operate the equipment.

Label

FCC ID: OPD6001

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.