

EBT2001 User Guide

料号: 025205848

规格: 全尺寸W340*H330mm

128g铜版纸正反面单色印刷

7-9-2012

EMERSON™
STEREO SPEAKER
EBT2001

Bluetooth™

User Guide

In the box

- Stereo Bluetooth Speaker
- AC Charger
- 3.5 mm Auxiliary Cord
- User Guide

Location of controls

TOP VIEW

1. [P] button
2. [VOL+] button
3. [VOL-] button
4. [MUTE] button

BACK VIEW

5. [POWER ON/OFF] switch
6. DC IN jack
7. 3.5 mm Auxiliary Card jack

3. Press and HOLD the **[BLUETOOTH CONNECT]** button until you hear a beep and the blue LED indicator light starts flashing quickly. The **Bluetooth Speaker** is now in pairing mode.

4. Set your mobile phone or other Bluetooth enabled device to search for Bluetooth devices.

5. When the device finds the **Bluetooth Speaker**, confirm by selecting **EBT2001** from the list.

6. Select **Pair** to connect the **Bluetooth Speaker** to your Bluetooth enabled device.

9. When attempting to reconnect the **Bluetooth Speaker** to your Bluetooth enabled device, you may see the message below, and your phone will prompt you to accept the connection request. Select **Yes** to accept the connection, and if you do not see this message, select **Don't ask this again**, your phone will automatically accept future connection requests from your **Bluetooth Speaker**.

NOTE: The screen above is a typical of many Bluetooth enabled devices. For more information on the pairing process, see the **Bluetooth Speaker** may slightly differ from the illustrations above.

Pairing with multiple devices

The **Bluetooth Speaker** can be paired with up to 8 devices. Once the number of paired devices exceeds 8, the first one will be replaced.

NOTE: It is only possible to use one paired device at a time.

Product Maintenance

Power off this product when not in use. **DO NOT** expose this product to water or other liquids. **DO NOT** use abrasive cleaning solvents to clean the bluetooth speaker. If you will not use the bluetooth speaker for long periods of time be sure to unplug it and store it in a dry place, free from extreme temperature, humidity, and dust.

Using Batteries

Bluetooth speaker also works with 4 AA batteries. (batteries not included)

Powering ON / OFF

To turn ON:

- Connect the pin of the included AC adaptor to the **DC IN** jack on the back of the **Bluetooth Speaker**.
- Press the **[POWER ON/OFF]** switch.
- Move the **[POWER ON/OFF]** switch to the **ON** position, the blue LED indicator light will remain lit indicating the speaker is turned on.

To turn OFF:

- Move the **[POWER ON/OFF]** switch to the **OFF** position, the blue LED indicator light will turn off indicating the speaker is turned off.

NOTE: When using the speaker for a period of time it is recommended to unplug the AC adaptor from the wall outlet.

Stereo Bluetooth

The **Bluetooth Speaker** allows you to listen in full stereo and control the music on your Bluetooth enabled mobile phone, computer or mp3 player and supports the following Bluetooth profiles:

- A2DP - Advanced Audio Distribution Profile
- AVRCP - Audio Video Remote Control Profile

To use the **Bluetooth Speaker** to listen to and/or control music, your Bluetooth enabled device must support the A2DP and AVRCP profiles. Please refer to the user guide of your Bluetooth enabled device for more information.

***The Emerson Bluetooth Speaker is compatible with any brand of Bluetooth-enabled phone or music device that supports Advanced Audio Distribution Profile (A2DP) and Audio Video Remote Control Profile (AVRCP).**

In order for Bluetooth devices to communicate with one another properly, they must utilize the same Bluetooth profile. To determine the profiles supported by your device (mobile phone, gaming console, computer or mp3 player), please refer to the device's user guide.

NOTE: Bluetooth features including those listed may not be supported by all compatible Bluetooth-enabled devices, and/or the functionality of such features may be limited in certain devices.

Using as a wired speaker

The EBT2001 can be used as a wired speaker by using the included 3.5mm Auxiliary Cord.

- Make sure the Bluetooth Speaker is plugged in and turned on.
- Plug one end of the Auxiliary Cord into the **DC IN** jack located on the back of the Speaker.
- Plug the other end of the Auxiliary Cord into the headphones jack (this is a standard headphone 3.5mm jack) on any media device which has a 3.5mm headphones jack (this is a standard headphone 3.5mm jack).
- Use your media device's music controls to control the music and volume (the controls on the speaker will not function when using it as wired speaker).

Playing music

To enjoy wireless music on your **Bluetooth Speaker**, press the **[PLAY/PAUSE]** button of your Bluetooth enabled device to begin music playback. Once playback has begun, you can control the music from the control buttons of the **Bluetooth Speaker**. (Not all Bluetooth enabled devices support the control of music using Bluetooth).

NOTE: Some phones, Bluetooth enabled media players, and/or applications require that you first press the **[PLAY/PAUSE]** button before you can control the music with the **Bluetooth Speaker**.

Play/Pause*

Press the **[P] button** to pause the music. To resume music playback, press the **[P] button** again.

Adjusting the volume

Press and HOLD the **[VOL+] or [VOL-]** button to adjust the volume to the desired level.

NOTE: You may also adjust the volume from your Bluetooth enabled device's volume control.

Skipping or searching songs* (Dependent on your phone supporting this feature)

Quickpress the **[VOL+] button** to go to the previous song. Quickpress the **[VOL-] button** to go to the next song.

Music Controls

- [P] button
Quickpress = Pause
Quickpress again = Play
- [VOL+] button
Quickpress = previous song
Press & Hold = volume down
- [VOL-] button
Quickpress = next song
Press & Hold = volume up

Troubleshooting tips

- I can pair the Bluetooth Speaker with my Bluetooth device, but I cannot hear any music?
 - Make sure your Bluetooth device supports A2DP profile.
- I cannot get the Bluetooth Speaker into Pairing Mode
 - Make sure the Bluetooth Speaker is plugged in and turned ON before beginning the pairing process.
 - Make sure the Bluetooth Speaker and Bluetooth enabled device are within 3 feet of each other during the pairing process.
 - Check that your device's Bluetooth feature is turned ON.
 - Try repeating the pairing process, see "Pairing the Speaker with a Bluetooth enabled device."
- My mobile phone is not able to pair with the Bluetooth Speaker
 - Make sure that the speaker is plugged in and turned on before pairing.
 - Keep your Bluetooth Speaker and Bluetooth enabled device within 3 feet of each other during the pairing process.
 - Check that your device's Bluetooth feature is turned ON.
 - Try repeating the pairing process, see "Pairing the Speaker with a Bluetooth enabled device."
- After successfully pairing my Bluetooth enabled device and Bluetooth Speaker, when I shut my device off and turn it on again, the speaker did not automatically connect.
 - Try turning the speaker OFF and then turning it ON again. When first attempting to reconnect to a newly paired Bluetooth device. Make sure you accept this option, so that your Bluetooth Speaker automatically reconnects to your Bluetooth enabled device, check the user guide of your Bluetooth enabled device for more information regarding options.
 - The pairing the speaker for your Bluetooth enabled device, and repeat the pairing procedure.
- The sound is very low.
 - Try adjusting the volume by using the [VOL] buttons on your speaker; make sure the volume on your Bluetooth enabled device is turned up as well.

FCC Part 15: Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this equipment not approved by the responsible party responsible for compliance may void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device, pursuant to part 15 of the FCC rules. These requirements are intended to provide reasonable protection against harmful interference when the equipment is operated in a home environment. This equipment uses radio frequency energy and can radiate radio frequency energy and may cause harmful interference with radio communications. However, it is guaranteed that this equipment will not cause harmful interference to radio or television reception, if it is installed and used in accordance with the following instructions:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warranty Information

Warranty service not provided

Emerson is not responsible for any damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event of any such damage. Emerson is not responsible for any product. All products being returned to the authorized service center for repair must be suitably packaged.

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. SOUTHERN TELECOM, INC. SHALL NOT BE LIABLE FOR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THE DISCLAIMER OF WARRANTIES AND LIMITED REMEDY HEREIN SHALL BE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

EMERSON™

Distributed by Southern Telecom Inc., Brooklyn, NY 11232

© 2012 Southern Telecom Inc. All rights reserved.

Emerson and the GC-1 logo are registered trademarks of Emerson Radio Corp., Parsippany, New Jersey USA.

The Bluetooth™ wordmark and logos are owned by the Bluetooth SIG, Inc. All other trademarks are trademarks of their respective owners.

www.emersonphones.com

Warranty Information

Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within one (1) year from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package
- Preserve all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes).
- Include the telephone contact number, and the defective unit, within the shipping container.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same model and specifications as the original product. Products determined to be defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

Southern Telecom, Inc.
ATTN: Customer Service - 2nd Floor
14-C 53rd Street
Brooklyn, NY 11232

Should you have any questions or problems concerning this product, please contact our customer service department at:

1-877-768-8483 (Toll Free)
Monday - Thursday 9 AM - 5 PM (EST)
Friday 9 AM - 3 PM (EST)

or
via e-mail at
cs@southern telecom.com

Safety Information

Observe all signs in the designated areas, these signs describe electric shock and fire. Radio products are required to be switched off. These could include airplanes, hospitals, blasting areas, and potentially explosive atmospheres.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Using as a wired speaker

The EBT2001 can be used as a wired speaker by using the included 3.5mm Auxiliary Cord.

- Make sure the Bluetooth Speaker is plugged in and turned on.
- Plug one end of the Auxiliary Cord into the **DC IN** jack located on the back of the Speaker.
- Plug the other end of the Auxiliary Cord into the headphones jack (this is a standard headphone 3.5mm jack) on any media device which has a 3.5mm headphones jack (this is a standard headphone 3.5mm jack).
- Use your media device's music controls to control the music and volume (the controls on the speaker will not function when using it as wired speaker).

Pairing the speaker with a Bluetooth enabled device

- Make sure the **Bluetooth Speaker** is plugged in and turned ON.
- Make sure the **Bluetooth Speaker** and Bluetooth enabled device are within 3 feet of each other during the pairing process.
- Check that your device's Bluetooth feature is turned ON.
- Try repeating the pairing process, see "Pairing the Speaker with a Bluetooth enabled device."

Pairing the speaker with a Bluetooth enabled device

- Make sure the **Bluetooth Speaker** is plugged in and turned ON.
- Make sure the **Bluetooth Speaker** and Bluetooth enabled device are within 3 feet of each other during the pairing process.
- Check that your device's Bluetooth feature is turned ON.
- Try repeating the pairing process, see "Pairing the Speaker with a Bluetooth enabled device."

Pairing the speaker with a Bluetooth enabled device

- Make sure the **Bluetooth Speaker** is plugged in and turned ON.
- Make sure the **Bluetooth Speaker** and Bluetooth enabled device are within 3 feet of each other during the pairing process.
- Check that your device's Bluetooth feature is turned ON.
- Try repeating the pairing process, see "Pairing the Speaker with a Bluetooth enabled device."

Pairing the speaker with a Bluetooth enabled device

- Make sure the **Bluetooth Speaker** is plugged in and turned ON.
- Make sure the **Bluetooth Speaker** and Bluetooth enabled device are within 3 feet of each other during the pairing process.
- Check that your device's Bluetooth feature is turned ON.
- Try repeating the pairing process, see "Pairing the Speaker with a Bluetooth enabled device."

Pairing the speaker with a Bluetooth enabled device

- Make sure the **Bluetooth Speaker** is plugged in and turned ON.
- Make sure the **Bluetooth Speaker** and Bluetooth enabled device are within 3 feet of each other during the pairing process.
- Check that your device's Bluetooth feature is turned ON.
- Try repeating the pairing process, see "Pairing the Speaker with a Bluetooth enabled device."

Pairing the speaker with a Bluetooth enabled device

- Make sure the **Bluetooth Speaker** is plugged in and turned ON.
- Make sure the **Bluetooth Speaker** and Bluetooth enabled device are within 3 feet of each other during the pairing process.
- Check that your device's Bluetooth feature is turned ON.
- Try repeating the pairing process, see "Pairing the Speaker with a Bluetooth enabled device."

Pairing the speaker with a Bluetooth enabled device

- Make sure the **Bluetooth Speaker** is plugged in and turned ON.
- Make sure the **Bluetooth Speaker** and Bluetooth enabled device are within 3 feet of each other during the pairing process.
- Check that your device's Bluetooth feature is turned ON.
- Try repeating the pairing process, see "Pairing the Speaker with a Bluetooth enabled device."

FRONT

BACK