



NetLink 7000 Series
Wireless Telephone and Accessories

NetLink 7020 Basic Wireless Telephone

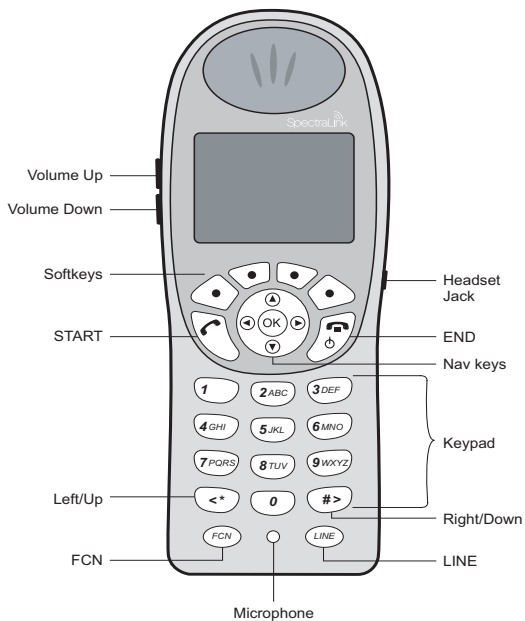

NetLink 7020 Enhanced Wireless Telephone

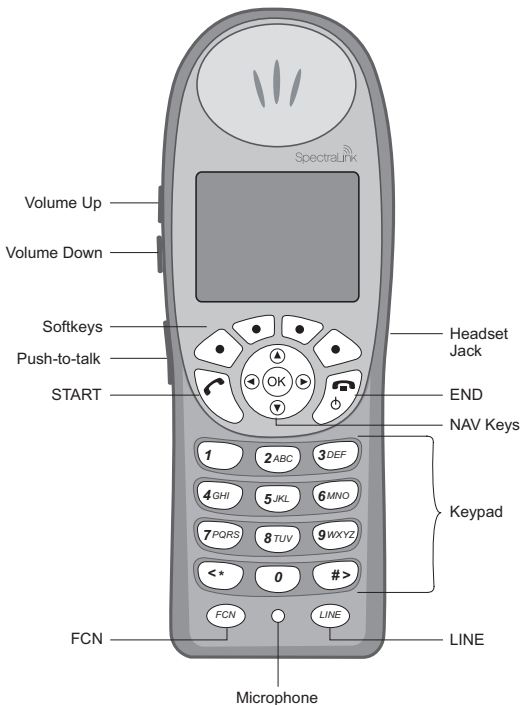

Trademark Information

SpectraLink
The SpectraLink logo
LinkPlus
Link
NetLink

Are trademarks and registered trademarks of SpectraLink Corporation.
All other trademarks used herein are the property of their respective owners.
Copyright © 2006 SpectraLink Corporation.
All rights reserved

Information in this document is subject to change without notice and does not represent a commitment on the part of SpectraLink Corporation. The software described in this document is furnished under a license and/or copyright and may only be used with the terms of SpectraLink's software license agreement as found in this manual or at http://www.spectralink.com/consumer/resources/software_updates.jsp.

The software may be used only in accordance with the terms of the agreement. No part of this manual, or the software described herein, may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose except for the sole intent to operate the product or without the express written permission of SpectraLink Corporation.

For regulatory information, please see NetLink Wireless Telephone Regulatory Guide (72-1303-00).

Registered Model Numbers

This document covers registered handset model: 702X/703X
Registered charger models: PCS1850
Registered Battery Pack models: PBP0850, PBP1300, PBP1850

SpectraLink Corporation
5755 Central Avenue
Boulder, CO 80301
303 440 5330
800 676 5465
www.spectralink.com

Please email questions or comments about this document to feedback@spectralink.com.

Introduction

Your NetLink 7020/7030 Wireless Telephone is a state-of-the-art communication device that utilizes radio wave technology to send and receive voice transmissions. It is designed to operate like a cell phone. However, the handset utilizes the private telephone system installed in your facility and will not operate outside the area covered by this system.

About This Guide

This guide is meant to provide general information about your handset. Contact your phone system administrator for additional information on how your handset functions within your telephone system. This guide includes information about:

- The Handset
- Getting Started
- Advanced Features
- Handset Accessories
- Handset Administration

Table of Contents

The Handset	8
Modes of Operation	10
Menu Navigation	11
Handset Displays	12
Status Bar Indicators	17
Softkey Labels	19
Feature Menu	22
One Touch Dialing or Speed-dial	22
Phonebook	23
Predial	23
Profiles	23
Redial	24
Speakerphone	25
Battery Packs	25
About Push-to-talk	26
Getting Started	32
Charging Your Handset	33
Basic Handset Operation Summary	33
Redial	38
Phonebook	38
Speed-dial	41
Indications of Low Battery	43
Removing and Inserting Battery Packs	44
PTT Operation Summary	44
Advanced Features	47
Text Messaging (OAI) Navigation	49
Advanced Feature Activation	49

The Standby Menu	49
Lock Keys	52
User Profiles	53
Phone Settings	68
Menu Grid	80
Advanced Telephony Features	82
Handset Accessories	84
About Chargers	85
Single Charger	89
Dual Charger	90
Quad Charger	92
Headsets	93
Carrying Options	93
Handset Administration	95
FAQs	96
Specifications	97
About Safe Use of Wireless Telephones	98
Care of Your Handset	101
Notice	104

The Handset

Modes of Operation	10
Menu Navigation	11
Shortcut Keys	12
Handset Displays	12
Standby Mode Display	12
Calling Display	13
Active Mode Display	13
Pre-dial Display	14
Feature Menu Display	15
Push-to-talk (PTT) Mode Display	16
Standby Menu Mode Display	16
Status Bar Indicators	17
Softkey Labels	19
Feature Menu	22
One Touch Dialing or Speed-dial	22
Phonebook	23
Predial	23
Profiles	23
Redial	24
Speakerphone	25
Battery Packs	25
Important Note About Battery Packs	26
About Push-to-talk	26
Interaction with Profiles	27
Priority channel	27
Call period	27
Selecting a channel	28
Initiating a call	29

Transmitting	29
Receiving	30
Change PTT volume	30
Muting a PTT call	30
Incoming PBX call during a PTT call	31
Making a PBX call during a PTT call	31
Incoming PTT call during a PBX call	31

Modes of Operation

Your handset has five modes of operation:

Mode	Description
Standby	The handset is on-hook and idle.
Active	The handset is in a call, a call is coming in, or a call is being dialed.
Standby menu	User preferences are being accessed in the standby menu. In this mode the handset is on, but will not receive calls.
Application	Custom OAI ^a applications may be programmed for your facility. This mode is activated through the FCN menu.
Push-to-talk (PTT)	The Link 7030 Enhanced model utilizes channels for incoming and outgoing radio communication. While PTT is active, the handset is in PTT mode.

^a Open Application Interface (OAI) is an advanced telephony feature that allows the NetLink 7020/7030 to utilize custom messaging applications.

The handset uses different amounts of power and bandwidth in different modes of operation. Bandwidth is provided by access points located throughout your facility.

Bandwidth availability varies by type of access point. Active mode uses the most power and bandwidth.


In the NetLink 7030 Enhanced model, PTT outgoing communication uses the same amount of bandwidth as the active mode. Incoming communication uses about half as much. If PTT is enabled by the phone system administrator and in use, standby Battery Pack life is decreased by about 60%.

Conservation of battery life and bandwidth is possible when you understand the modes and use them appropriately.

For all questions concerning available bandwidth in your facility, please contact your phone system administrator.

For more information on Battery Pack options, see the *Battery Packs* section of this document.

Menu Navigation

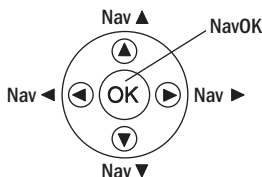

The navigation keys just below the softkeys are used to navigate through and select menu options. These are referred to in this guide as **Nav▲**, **Nav▼**, **Nav◀**, **Nav▶**, and **NavOK**.

Shortcut Keys

When available, the shortcut key is displayed on the right edge of the menu line. Press this key to activate the corresponding selected menu option.


Handset Displays

The top row of the display provides status indicators for various handset conditions. It is referred to as the status bar.

The middle lines display information about the handset identity, user profile, calls in progress, menu options, and data from PBX.

The bottom row displays softkey labels.

Standby Mode Display

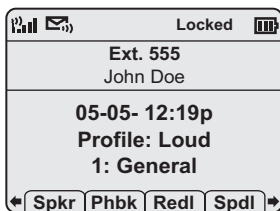


This display shows that there is excellent signal strength, a voicemail message is available, a text message may be retrieved, the keypad is locked, the Battery Pack is fully charged, the extension number assigned to this handset is 555, the date is May 5th, the time is 12:19 p.m., the user profile is Loud, and the default PTT channel is 1: General (Link 7030 Enhanced model only).

Additional standby mode softkeys are:




Calling Display

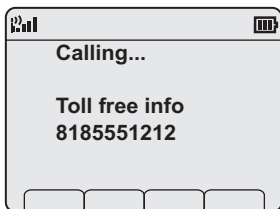


This display shows that the handset is in the process of calling the number shown. Once the dial sequence ends, you will hear ringing in the earpiece.

Active Mode Display

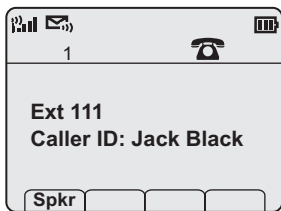


This example shows that the phone is ringing in a PBX call on line 1 from Jack Black at extension 111. Note that this display is dependent upon the programming of the PBX in

your facility and your handset may not appear like the above example.

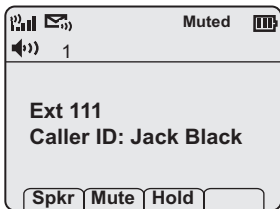

This example shows that you are in a PBX call on line 1 with Jack Black at extension 111. You are using the speakerphone and the handset is muted.


Pre-dial Display

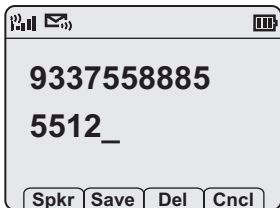

This example shows that you have dialed 14 digits and the insertion point indicates that additional digits may be entered. The **Spkr** softkey indicates you can start the call via speakerphone. The **Save** softkey indicates that this number


may be saved to the phonebook. **Del** allows you to delete the entry and **Cncl** returns you to the standby mode display.

Feature Menu Display

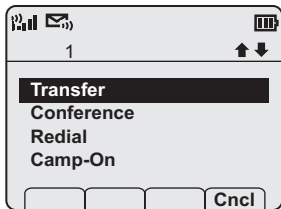


This display is reached by pressing the **FCN** key while off-hook. It displays a list of features that may be activated while in-call. Available features vary by facility. In the above example, the line indicator lets you know which line is active. The up/down icons indicate that there are additional menu items. The **Cncl** softkey will take you back to the active in-call display.

Push-to-talk (PTT) Mode Display

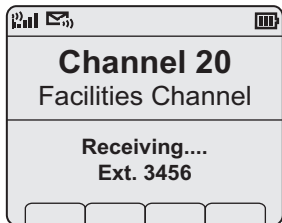





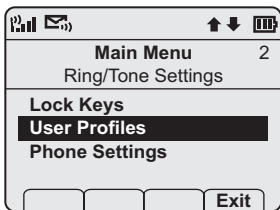

This example shows that you are receiving a call from extension 3456 on channel 20 which has been named the **Facilities Channel**.

Standby Menu Mode Display



This example shows that you are in the **Main Menu** at the top level. **User Profiles** is the selected menu option. The info line describes that this option will adjust **Ring/Tone** settings. The shortcut key is **2**.

Status Bar Indicators

Indicator	Function
	<p>The signal-strength icon indicates the strength of the signal and can assist the user in determining if the handset is moving out-of-range.</p>
	<p>The voicemail icon is activated when a new voicemail message is received if the feature is supported by the phone emulation.</p>
	<p>The battery icon indicates the amount of charge remaining in the Battery Pack. When only one level remains, the Battery Pack needs to be charged.</p>
	<p>The speakerphone icon displays when the speakerphone is active.</p>
	<p>The line indicators are associated with telephone line status and access.</p>
	<p>Up and down arrows are displayed when the menu has additional options above or below.</p> <p>Left or right arrows are displayed during editing when the cursor may be moved left or right.</p>

Indicator	Function
-----------	----------



PBX ring icon. A regular telephone call is coming in.



OAI ring icon. A call is coming in from the OAI application.



The push-to-talk ring icon. A PTT call is coming in.



The priority push-to-talk ring icon. A call is coming in on the priority PTT channel. This call will override any other.

Muted

The muted indicator displays after the **Mute** softkey has been pressed. It indicates that the microphone is not transmitting sound. Press the **Mute** softkey again to unmute the microphone.

Locked

Locked indicates that the keypad is locked to prevent accidental activation. Use the **Unlk** softkey plus the **#** key to unlock it.

Indicator	Function
-----------	----------

[No Service message]	If warning tones are not disabled, an alarm will sound and a descriptive message displays when the handset cannot receive or place calls. You may be outside of the covered area. Walk back into the covered area. The in-service tone indicates service is re-established.
----------------------	---



The download icon indicates that the handset is downloading code. This icon only appears while the handset is running the over-the-air downloader. It appears to the right of the Signal Strength icon in the same location as the Voicemail icon.

Softkey Labels

The bottom row of the handset displays labels associated with the four softkeys just below it. When a softkey is active, a label appears to describe its function. Pressing the softkey will activate the feature. When additional softkeys are available, **Nav** arrows appear to the left and right of the softkey labels. Press **Nav**▶ or ◀ to view the additional softkey labels.

These are some of the softkeys you will see.

Label	Description	Action
Back	Go back	Returns to the previous menu display.
CAPS caps	Change case	Toggles to allow a change in case when entering alphabetical text.
Clr	Clear	Deletes the entry.
Cncl	Cancel	Returns to the previous menu display without saving any data that might have been entered.
Del	Delete	Deletes the character to the left of the cursor.
Dial	Dial number	Dials the number just entered in the phonebook.
Edit	Edit	Opens an editing window so you can change information about an entry in the phonebook.
Exit	Exit	Exits out of the menus.
Hold	Hold	Places a call on hold.
Cfg	Configure	Opens the standby menu.

Label	Description	Action
Mute	Mute	Toggles to mute/unmute the microphone.
No	Negative reply	Press to reply No to a displayed question.
Phbk	Phonebook	Opens the phonebook.
Play	Play	Plays the selected ring tone.
Prof	Profile	Opens the Profile menu.
Redl	Redial	Displays a list of the last 10 numbers dialed.
Save	Save	Saves the current entry to the phonebook
Set	Set	From the speed-dial assignment display, opens the phonebook listing for assigning a phonebook entry to a speed-dial key.
Spdl	Speed-dial	Opens the list of speed-dial numbers.
Spkr	Speakerphone	Toggles speakerphone function.

Label	Description	Action
Unlk	Unlock keys	Press Unlk , then the # key to unlock a locked keypad.
View	View	Displays information about an entry in the phonebook or redial list.
Yes	Positive reply	Press to reply Yes to a displayed question.

Feature Menu

While off-hook press the **FCN** key to display the menu of advanced telephony features available in your facility. The features may be activated by pressing the corresponding shortcut key or by using the **Nav** keys to highlight the option and pressing **NavOK**.

One Touch Dialing or Speed-dial

The NetLink 7000 Series Wireless Telephone can assign up to 10 speed-dial keys from numbers entered into the phonebook.

Open the speed-dial list by pressing the **Spdl** softkey from standby mode. If programmed, the first item on this list is the system-wide speed-dial number set by the phone system administrator. It is specially marked with an asterisk (*) as the first character in its name. It is usually reserved for emergency situations.

See the speed-dial section in *Getting Started* for detailed information about using speed-dial keys.

To make a speed-dial call, press and hold the corresponding key for one (1) second. The system one touch dialing key must be pressed for three (3) seconds. The handset will display the name and number for one (1) second before the call is dialed. You may press **END** during this second to terminate the call.

Phonebook

The phonebook in your NetLink 7000 Series Wireless Telephone can store up to 20 user-defined numbers. Open the phonebook by pressing the **Phbk** softkey from the standby mode or by pressing the **Save** softkey during predial. You may enter, delete, or edit a phonebook entry, open the speed-dial list or start a call from the phonebook.

See the phonebook section in *Getting Started* for detailed information about using the phonebook.


Predial

Predial is automatically activated when you begin pressing numbers on the keypad while in standby mode. Up to 256 numbers may be pressed. The call is then placed by pressing the **START** key, **NavOK**, or the **Spkr** softkey. Press **Save** to add the dialed number to the phonebook before placing the call.

Profiles

Your handset ring behavior is established by five User Profiles: **Silent**, **Vibrate**, **Loud**, **Soft**, and **Custom**. The currently

active user profile is shown on the standby display. The ring behavior can be easily changed when the handset is in standby mode by pressing the **Prof** softkey and selecting a new profile from the list

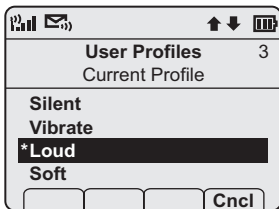

The currently active user profile is **Loud**, indicated by the asterisk (*) on its left. Use **Nav▲** and **Nav▼** to scroll through the profile options. Press **NavOK** to set a new profile and exit to the standby display.

See *User Profiles* in the standby menu to customize your profiles.

Redial

The **Redl** softkey is available in the standby mode. When pressed, a list of the last 10 outgoing called will be displayed. Use the **Nav** keys to highlight the number and press **START** to dial the number.

You may save any of these numbers to the phonebook by pressing the **Save** softkey. You may also view any entry already saved in the phonebook by pressing the **View** softkey.

See the Redial section in *Getting Started* for detailed information about using redial.

Speakerphone

Your phone system administrator can enable or disable the speakerphone mode. If the speakerphone is enabled, it is activated by pressing the **Spkr** softkey. Press the **Spkr** softkey again to end speakerphone mode. The audio then transfers to the handset earpiece. When speakerphone mode is disabled, **Spkr** will not appear as a softkey label.

Battery Packs

The handset will need to have its Battery Pack recharged periodically. Three Battery Pack types are available:

Type	Talk Time	Standby Time
Standard	4 hours	80 hours
Extended	6 hours	120 hours
Ultra-Extended	8 hours	160 hours

The Battery Pack icon on the status row indicates the charge amount remaining. Additionally the handset will sound warning tones and display the **Battery Low** message when there is less than two minutes of talk time remaining. A melody will play when the handset is powered on for the first time after being fully charged, unless this feature has been disabled. Each Battery Pack type has a different melody.

See your phone system administrator if you have questions about the type of Battery Pack you have been issued.

Important Note About Battery Packs

- Only use SpectraLink Battery Packs with NetLink 7020/7030 Wireless Telephones.
- Do not dip the Battery Pack in water or throw into fire.
- Do not throw away the Battery Pack with your domestic waste. Please recycle appropriately.
- It is normal for the Battery Pack to become warm when charging.
- Never use non-SpectraLink charging units as they could damage the Battery Pack.



Note

The type of Battery Pack is printed on the label. Remove the Battery Pack and view the label to determine the type of Battery Pack you have been issued.

About Push-to-talk

The PTT feature allows NetLink 7030 Enhanced Wireless Telephones to operate in a group broadcast mode in addition to the standard PBX telephone operation. The group broadcast mode allows the phones to behave like walkie-talkies, where a single phone can transmit to multiple listeners.

PTT is enabled by the phone system administrator and set up by the user in the standby menus. See Setting User Preferences for complete information about setting up PTT. If the phone system administrator has disabled PTT, the PTT options will not appear in the standby menus.

NetLink Wireless Telephones support twenty-four multi-cast channels, with the currently subscribed channels to saved in memory on the handset.

A PTT channel may be selected and a call initiated by pressing the **Talk** button located on the right side of the handset. All handsets that have subscribed to that channel will hear the transmission.

PTT dialogue is interrupted when you answer a PBX call. When the PBX call is ended, PTT dialogue resumes if the call is still active.

Interaction with Profiles

PTT is disabled by default in the Silent and Vibrate user profiles. When PTT is disabled, PTT calls cannot be received or transmitted.

Priority channel

If configured, the priority channel (25) can be used to call all PTT subscribers. It does not guarantee delivery of the message, but will interrupt existing PTT conversations. If a receiving handset is in another application (such as a PBX call or an OAI application), the handset will ring in-ear to indicate the priority call. Unlike a normal PTT call, which rings only once, the priority call will ring every five seconds for a total of four rings, unless the PTT call terminates sooner.

Call period

The NetLink 7000 Series Wireless Telephone in PTT mode operates like a two-way radio. A push-to-talk call period

begins with the first transmission and ends when there has been no two-way radio traffic on the channel for ten seconds.

The PTT mode controls the keypad during a PTT call period. Therefore it is not possible to use the keypad for any other function such as accessing the standby menus or an OAI application, unless the PTT call is terminated.

However, it is possible to easily place a PBX call.

The handset plays a start tone sequence when receiving a call and at the beginning of each transmit. At the end of each transmit or receive, an end tone sequence will play. A different tone sequence plays to inform you of a priority channel call.

Selecting a channel

If PTT is enabled and the phone is in standby mode, the current transmit channel is displayed on the screen on the bottom line above the softkey display. The channel's name will be displayed, unless a name has not been assigned.

If you wish to transmit on a different channel, press and release the **Talk** button. A menu of available channels will appear. The default channel will be at the top of the list. The last channel used (which may also be the default channel) will be second on the list. The priority channel, if configured, will be third. The remaining items will be the rest of the available channels listed in sequential order. Use the **Nav** ▼ button to highlight the channel you wish to use.

Once you have highlighted the desired channel, press and hold the **Talk** button to initiate the call. To abort the call and return to Standby mode, press the **End** key.

Initiating a call

To start a PTI call on the default channel, press and hold the **Talk** button. Wait briefly to activate the mode before talking. You may begin talking when the display shows **Transmitting**.

Transmitting

Once a call has been initiated, hold the handset two inches from your mouth and talk into the microphone while continuing to hold down the **Talk** button. Release the **Talk** button to end the transmission.

At the end of a transmission, the handset enters the waiting state where it monitors the channel for up to ten seconds and displays **Waiting** and the channel name and/or number. If you press the **Talk** button to transmit while in this state, the handset automatically transmits on the currently active channel. If no other transmission occurs within ten seconds the handset reverts to standby mode.

Note that while in an active PTI session, or in a waiting state, conversations from other channels will be ignored. To transmit on another channel, press the **END** key to exit the current conversation; then briefly press the **Talk** button to display and select another channel.

Receiving

Upon receiving a PTT transmission, the handset plays the “receiving alert” tones and enters the receive state.

In this state the handset receives all conversations on the selected channels. The handset ignores the **Talk** button while in the receive state. The screen shows the current active channel, the caller ID information of the current transmitter, and a PTT call icon.

A transmission on the priority channel will override the current PTT conversation. The priority channel then becomes the current channel.

If you press the **END** key while in the receive state, the handset exits the current conversation and returns to standby mode.

Change PTT volume

Volume levels for tones and speaker audio can be configured in the standby menu for PTT.

If you want to change the volume level while in a PTT call, use the volume buttons on the side of the handset to raise or lower PTT volume.

Muting a PTT call

To mute a current call, press the **Mute** softkey. This brings up a **Mute Two-Way Radio?** prompt. Press the **Yes** or **No** softkey. Use the **UnMt** softkey to unmute the PTT call.

Mute only affects the current PTT call. Mute does not allow the user to use the handset’s keypad for anything else, including an OAI application.

When the next PTT call period starts, the audio is automatically unmuted.

Incoming PBX call during a PTT call

A telephone call may be answered while in a PTT call session. To announce an incoming call, the handset will ring with a low-volume ring and display the PBX system message.

To answer the call, press the **START** key. The PTT call session will be pre-empted and no PTT audio will be heard.

After the PBX call is over, press the **END** key as usual to go back on-hook, at which time PTT goes out of pre-empted mode and becomes active again. If an already active PTT call has not ended, you will hear the PTT audio again.

If you do not answer the PBX call by pressing the **START** key, the PTT display will reappear after the ring has stopped.

Making a PBX call during a PTT call

To start a telephone call during a PTT call session, press the **START** key. This causes the two-way radio to be pre-empted as described above.

Incoming PTT call during a PBX call

The PTT receiving alert sound will play softly in the speaker audio if you are in a PBX call. You may continue your PBX call normally, or you may exit the PBX call and switch to the PTT call by pressing the **END** key. You cannot hear both calls at the same time.

Getting Started

Charging Your Handset	33
Basic Handset Operation Summary	33
Redial	38
Phonebook	38
Phonebook Entry Options:	39
Phonebook View Display Options	41
Speed-dial	41
View Speed-Dial List	42
Assign Speed-Dial Number	43
Indications of Low Battery	43
Removing and Inserting Battery Packs	44
PTT Operation Summary	44

Your NetLink 7020/7030 Wireless Telephone is designed for full mobility within the workplace and operates similar to a cellular phone. However, it also interfaces with the telephone system at your workplace and incorporates advanced telephony features. This section covers the basic functionality available in every facility. For specific telephony system functions, see the *Advanced Telephony Features* section or contact your phone system administrator.

Charging Your Handset

The handset's Battery Pack must be charged before its first use. See the section *Handset Accessories* for complete information about charging your handset.

Basic Handset Operation Summary

If you want to	Then
Turn handset on	Press and hold the END key until two chirps sound.
Turn handset off	Press and hold the END key. One chirp will sound. If in a call, hang up first, then turn the handset off.
Unlock keypad	Press the Unlk softkey, then # , to unlock the keypad.
Make an emergency call	If programmed, press and hold the key assigned to the system one touch dialing key for 3 seconds.
Lock keypad	Press the Menu softkey then NavOK , to manually lock the keypad. See <i>Setting User Preferences</i> to activate or deactivate Autolock.
Make an internal call	Press the START key, wait for dial tone, then dial the extension.
Make an external call	Press the START key, wait for dial tone, then dial the number just as you would from your desk phone.

If you want to	Then
Select line	If multiple lines are available, your telephone system may require you to select a line before dialing a number. Press LINE and the number key corresponding to the desired line. You will hear a dial tone.
Dial number	Once you hear a dial tone, press the number keys to dial the number.
Redial a number	From standby mode, press the keypad to enter up to xx numbers. Then dial the call by pressing START , NavOK or the Spkr softkey.
Redial a number	Press the Redl softkey from standby mode. A list of recently-dialed numbers displays. Select the number and press START , NavOK or the Spkr softkey.
Make a speed-dial call	Press and hold the speed-dial key assigned to the number.
Make a phonebook call	Press the Phbk softkey from standby mode. Highlight the name and press the Dial softkey.

If you want to Then

-
- | | |
|-----------------------------------|---|
| Answer call | The handset will ring or vibrate to alert you of an incoming call. Additionally, a line indicator on the display may flash and the display may show information about the call, such as caller's name and extension.

To answer a call, press the START key and hold the earpiece to your ear. You may also activate the speakerphone function or use a headset. |
| Answer call on second line | If you are on a call and hear subdued ringing, a call is coming in on a second line. The line number on the display may be flashing. To answer this call, put your first call on hold and press the LINE key then the line number of the second call. |
| Mute microphone | Press the Mute softkey. |
| Place call on hold | Press the Hold softkey. |
| Resume held call | Press the LINE key followed by the line number key. |

If you want to Then

- | | |
|---------------------------------|---|
| Hang up | Press the END key. Be sure to do this at the end of each call to return to the standby mode. |
| Change speaker volume | Press the up/down volume buttons on the side of the handset during the call. |
| Change ring volume | Press the up/down volume buttons on the side of the handset during ringing. The default ring volumes are set in the User Profile menus. |
| Silence while ringing | Press the END key to silence the ring. |
| Open the speed-dial list | Press the Phbk softkey from standby mode. Press NavOK and then press the Spdl softkey. |
| Activate speakerphone | Press the Spkr softkey and speak towards the handset. Note that this feature may be unavailable in your facility. |
| Headset answer | Press any key (other than END , a Nav key, or a softkey) to answer a call when a headset is plugged-in. |

If you want to Then

Headset volume Press the up/down volume buttons on the side of the handset during the call.


Change profile Press the **Prof** softkey and use the **Nav** keys to select a new profile while in standby mode.

Open the phonebook Press the **Phbk** softkey from standby mode.

Backlight The backlight comes on when any key is pressed or when there is an incoming call and stays on for ten seconds. It turns off after ten seconds if another key is not pressed within that period.

Redial

The **Redl** softkey is available in the standby mode. When pressed, a list of the last 10 outgoing called will be displayed. Use the **Nav** keys to highlight the number and press **START** or the **Spkr** softkey to dial the number.

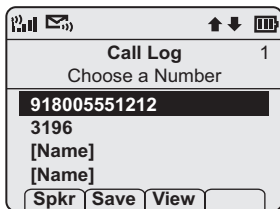


View information about the entry by pressing the **View** softkey. You may also add any of these numbers to the phonebook by pressing the **Save** softkey which opens the add name display in the phonebook. The **Save** and **View** softkeys are only available when appropriate for the selected entry.

Phonebook

The phonebook is opened by pressing the **Phbk** softkey which appears on the standby mode display and during pre-dialing. In standby mode, the phonebook can be opened to display a list of entries. The phonebook holds a maximum of 20 user-defined entries. The list is sorted alphabetically. If the system one touch dialing key has been programmed, it will be listed as the first entry with an asterisk (*) as the first character. Only the phone system administrator may

change this entry. The **<new>** option appears if the maximum number of entries has not been entered.

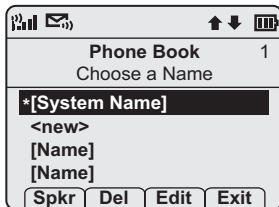


Phonebook Entry Options:


- Dial number** Press **START** or the **Spkr** softkey.
- View entry** Press **NavOK**.
- Enter new name** Select the **<new>** entry (if available) and press the **Edit** softkey to open the add number display.
- Delete entry** Press the **Del** softkey to delete an entry.
- Edit entry** Press the **Edit** softkey to open the add number display and edit the existing number. Use the **Nav** keys to highlight and select an entry. Press the **Dial** softkey to dial the number.

During predialing, when **Phbk** is pressed, the add number display opens.

Add number display:

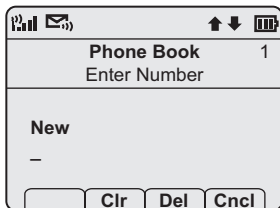


Enter the number and press **NavOK**. The add name display opens:

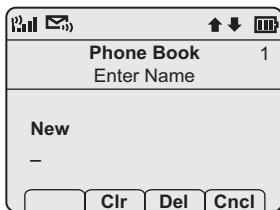

Enter the name and press **NavOK**. The phonebook display opens. The entry may be viewed, dialed, edited and assigned to a speed-dial key by pressing the **View** softkey.

View entry display

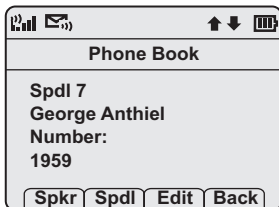

Phonebook View Display Options

Dial number Press **START** or the **Spkr** softkey.

Assign a speed-dial number to this entry Press the **Spdl** softkey.

Edit entry Press the **Edit** softkey to open the add number display and edit the existing number.


Return to phonebook list Press the **Back** softkey or **NavOK**.

Speed-dial

The speed-dial list may be opened from the standby mode to dial a number or from the phonebook for speed-dial key administration.


View Speed-Dial List

To display the list of speed-dial keys from the standby mode, press the **Spdl** softkey.

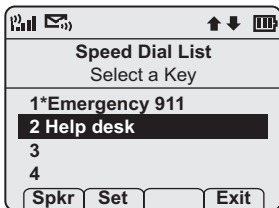

Use the **Nav** keys to highlight a key and then press **START** or the **Spkr** softkey to dial the number. The **Exit** softkey returns you to the standby mode.

A phonebook entry may be assigned to a speed-dial key from this display. Select the speed-dial key that you wish to assign and then press the **Set** softkey to open the list of phonebook entries. Use the **Nav** keys to select the desired entry.

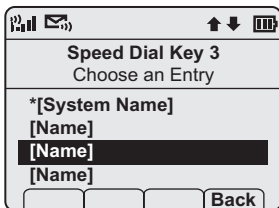


Press **NavOK** to assign the selected name to that speed-dial key. The **Back** softkey returns you to the speed-dial list.

Speed-dial entries may be edited through the phonebook, as described above.

Assign Speed-Dial Number

To add a phonebook number to the speed-dial list, view the entry in the phonebook and press the **Spdl** softkey. When opened, the list of speed-dial keys is displayed.

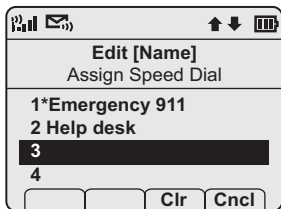

Use the **Nav** keys to highlight an empty slot and then press **NavOK** to assign that speed-dial key to the phonebook entry. The **Clr** softkey deletes the highlighted entry. The **Cncl** softkey returns you to the phonebook list.

Indications of Low Battery

The Battery Pack icon on the status line of the display gives you a visual indication of the amount of charge remaining in the Battery Pack. Additionally, when the icon shows empty, if the handset is in standby mode, you will hear a brief, modulated-ring signal and the **Battery Low** message displays. The handset may not be used until charged. If you are in a call, soft beeps will sound, first slow and then fast, until the handset becomes unusable. When you first start to

hear the beeps, you have two minutes to end the call or change the Battery Pack

The Battery Pack can be changed while the call is still in progress. Do not press **END**. Quickly remove the discharged Battery Pack and replace with a charged Battery Pack, press **END** to turn the handset back on and then press **START** to resume the call.

See the *Handset Accessories* section for complete information about chargers.

Removing and Inserting Battery Packs

To remove the Battery Pack, press down on the latch on the Battery Pack on the back of the handset and pull the Battery Pack towards you. The Battery Pack releases outward.

To replace, slide the lip of the Battery Pack into the bottom of the cavity. Push the top of the Battery Pack until it snaps into place. You should not have to force it into the handset.

PTT Operation Summary

(Link 7030 Enhanced Model Only)

Make a PTT call To call on the default channel press and hold the **TALK** button. Wait for the display to show **Transmitting** and then hold the handset 2 inches from your mouth and speak.

Respond to a PTT call Press and hold the **TALK** button during the 10 second wait period.

- | | |
|--|---|
| Select a different PTT channel | Press and release the TALK button. Select a different channel from the list. |
| End one PTT call and start another one | Press the END key to exit the PTT call. Press and release the TALK button and select a different channel from the list. Press and hold the TALK button to begin transmitting on the different channel. |
| Receive a PTT call while in a PBX call | Press the END key to end the PBX call. The PTT call can then be heard. |
| Transmit on the priority channel | Press and release the TALK button. Select the priority channel from the list. Press and hold TALK , then speak. |
| End a PTT call | Press the END key to exit the PTT call. |
| Change PTT volume | Use the Up and Down volume buttons on the side of the handset. |
| Answer a PBX call during a PTT transmission | Press the START key. PTT transmissions will be pre-empted by the PBX call. |
| Start a PBX call during a PTT transmission | Press the START key and dial the number. PTT transmissions will be pre-empted during the PBX call. |

Turn off PTT Change to a different profile (Silent and Vibrate disable PTT by default) or unsubscribe from all PTT channels.

Advanced Features

Text Messaging (OAI) Navigation	49
Advanced Feature Activation	49
The Standby Menu	49
Data Entry and Editing	50
Lock Keys	52
User Profiles	53
Default Profile Settings	55
Set or Edit a Profile	56
Ring Settings Grid	57
Telephone Ring Settings	59
Ring Cadence	59
Ring Tone	61
Ring Volume	62
Vibrate Cadence	63
Ring Delay	63
Auxiliary Ring 1 and 2	64
Noise Mode	65
Headset/Speaker Ring	66
Key Tones Enable/Disable	66
Warning Tones Enable/Disable	67
Push-to-talk On/Off	67
Phone Settings	68
Keypad Autolock	69
Set Language	70
Set Extension	71
Set User Name	72
Set Display Contrast	73
Hearing Aid	74

Startup Song Play/Inhibit	74
Push-to-talk	75
Default Channel	76
Subscribed Channel	77
PTT Audio Volume	78
PTT Tone Volume	79
Menu Grid	80
Advanced Telephony Features	82

Text Messaging (OAI) Navigation

Custom applications may allow you to read and respond to text messages. The OAI application is available through the **FCN** menu as programmed for your facility. While off-hook, press **FCN** to view the menu, then press one or more number keys to open the application. The handset is now in *application mode*. The **Nav** keys are not enabled by messaging applications. Instead, use **<*** to move left or up and **#>** to move right or down.

Advanced Feature Activation

The features that have been programmed in your system may be viewed and activated through the Feature menu.


Press the **FCN** key while off-hook to display the menu of advanced telephony features available in your facility. The features may be activated by pressing the corresponding shortcut key or by using the **Nav** keys to highlight the option and pressing **NavOK**.

See *Advanced Telephony Features* for more information about additional features that may be activated in your facility.

The Standby Menu

When the handset is in standby mode, press the **Menu** soft-key to enter standby menu mode and use the standby menu.

This menu allows you to set user preferences. The handset cannot make or receive calls while in standby menu mode.

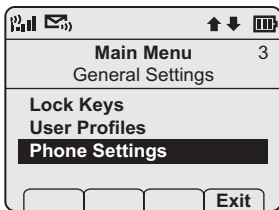

Scroll through menu options by using **Nav▲** and **Nav▼**. When an asterisk (*) appears to the left of an option, it indicates the option is currently selected. Press the **Exit** softkey to return to standby mode. Use the **Back** softkey to return to the previous menu.

Data Entry and Editing

Enter numbers by pressing the buttons on the keypad. The blinking underscore identifies the current cursor position. When entering alphanumeric strings, the **CAPS/caps** softkey will appear and may be pressed to toggle the case. Enter letters by repeatedly pressing the corresponding key until the desired letter displays on the screen. Use the **CAPS** softkey to change the case as needed.

To edit during entry, delete the character to the left of the cursor by pressing the **Del** softkey. To replace an entry, delete it by pressing the **Clr** softkey and then enter the new data. To edit an existing entry, use **Nav◀** and **Nav▶** to move the cursor position, and then press the **Del** softkey to delete


the character to the left. Insert new data by pressing the buttons on the keypad.

Alphanumeric entries:

Key	caps	CAPS
1 1	1	
2 2 a b c	2 A B C	
3 3 d e f	3 D E F	
4 4 g h i	4 G H I	
5 5 j k l	5 J K L	
6 6 m n o	6 M N O	
7 7 p q r s	7 P Q R S	
8 8 t u v	8 T U V	
9 9 w x y z	9 W X Y Z	
0 0	0	
* * . - ! \$ % & ' () + , : ; / \ = @ ~		
# <space>		


Lock Keys

The keypad may be locked to prevent accidental activation.

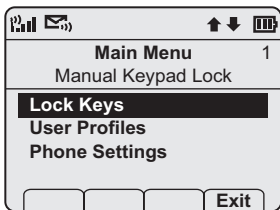


Lock Keys is the first option on the standby menu enabling the keypad to be quickly locked in standby mode by pressing **Fcn+NavOK**. The **Unlk** softkey will then display on the standby screen. The keypad may be unlocked by pressing the **Unlk** softkey and then the **#** key.

User Profiles

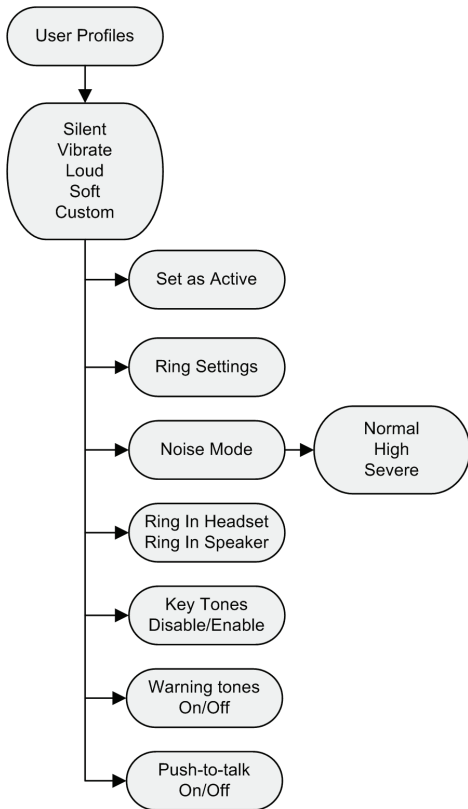


Ring Settings, Noise Mode, Headset/Speaker Ring, Key Tones, Warning Tones and Push-to-talk may be changed for each user profile.

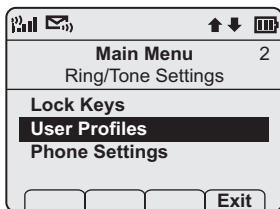

Press **NavOK** to select option.

The default user profile is Loud. Use **Nav▼** to see remaining user profile options. Press **NavOK** to edit the selected profile's settings.

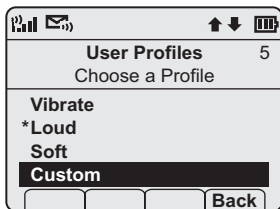

When a profile is selected and its settings are changed, those changes only affect the selected profile.


Default Profile Settings

Setting/Profile	Silent	Vibrate	Soft	Loud	Custom
Ring Cadence	Off	Off	PBX	PBX	PBX
Ring Tone	Tone 1	Tone 1	Tone 1	Tone 1	Tone 1
Ring Volume	1	1	3	7	5
Vibrate Cadence	Off	PBX	Off	Off	PBX
Ring Delay	0	0	0	0	6
Noise Mode	Normal	Normal	Normal	Normal	Normal
Headset/ Speaker	Speaker	Speaker	Speaker	Speaker	Speaker
Key Tones	Off	Off	On	On	On
Warning Tones	Off	Off	On	On	On
Push-to-talk	Off	Off	On	On	On


Contact your phone system administrator to reset all user profiles back to these default settings.

Set or Edit a Profile

A profile may be set or edited.

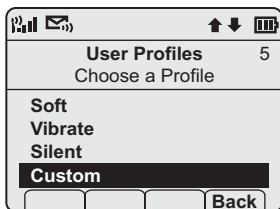


To select a profile, press **NavOK**.

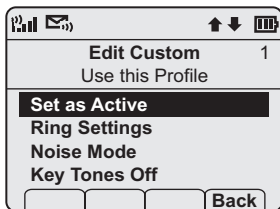


Use **Set as Active** and then press **NavOK** to make the selected profile become the active one. Scroll to the other menu options to edit the profile.


Ring Settings Grid

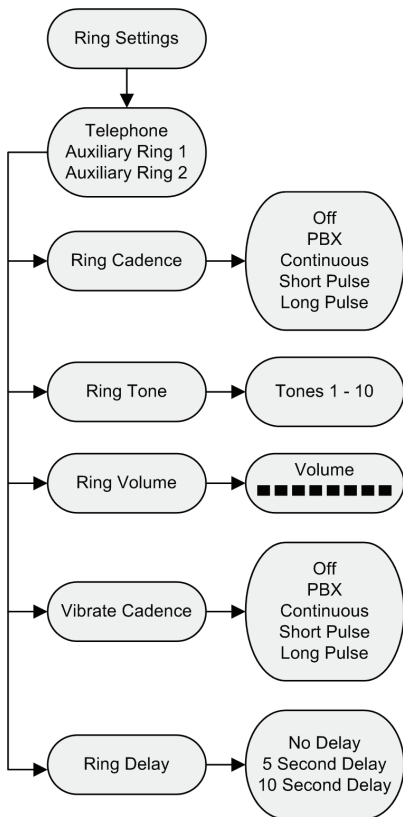

Use the **Ring Settings** option to adjust the ring attributes, including volume, tones, delay, and vibrate. All **Ring Settings** may be customized for each profile.

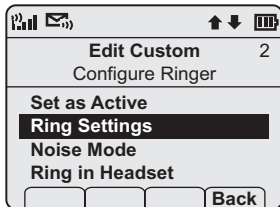


Press **NavOK** to select option.

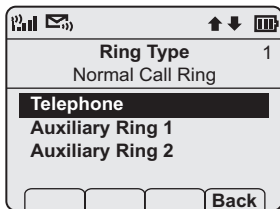


Telephone settings are used for the primary PBX functions. **Auxiliary Ring 1** and **2** are used for additional call systems such as messaging applications. **Auxiliary Ring** options are identical to **Telephone** options. Different ring styles can be set for each call system so that you are alerted to the type of call coming in. See your phone system administrator for information about auxiliary call or messaging systems in your facility.

Telephone Ring Settings

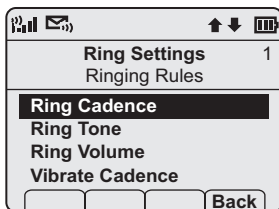


Ring Cadence

Ring cadence is the rhythm of the ring.

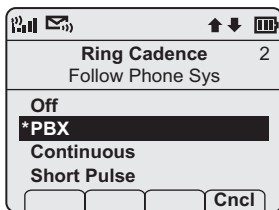

The default cadence is set by the **PBX** (e.g. the PBX may send rings that differentiate between internal and external calls). Use the **Off** option to silence all rings.

Scroll to see additional selections:

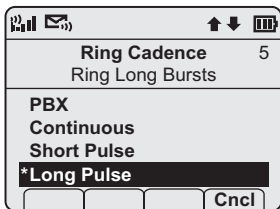

Continuous: rings continually until answered.


Short Pulse: rings in short bursts.

Long Pulse: rings in long bursts.


Use **Nav▲** and **Nav▼** to highlight an option. Press Play to preview ring cadence. Press **NavOK** to set a new ring cadence and return to the previous menu level.

Ring Tone

Select the ring style from ten available tones. Scroll down to see all available **Ring Tone** options. If **Ring Cadence** is turned off, the **Ring Tone** option will not appear on the menu.

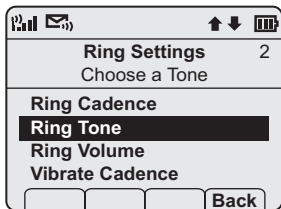


Press **NavOK** to select option.

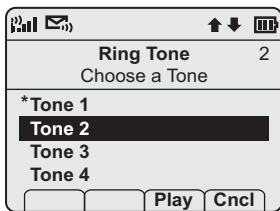

Use **Nav▲** and **Nav▼** to highlight an option. Press **Play** to preview ring tone. Press **NavOK** to set a new ring tone and return to the previous menu level. Press **Cncl** to retain current ring tone and return to the previous menu level.

Ring Volume

There are eight volume settings from soft to loud, indicated by a graduated bar. This setting may be overridden by adjusting the volume while the handset is ringing.

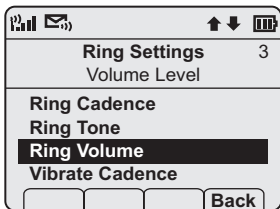

Press **NavOK** to select option.




Adjust ring volume by pressing the volume up and down buttons on the side of the handset. The graduated bar indicates the ring volume. Press **NavOK** to save and return to the previous menu level.

Vibrate Cadence


Vibrate Cadence options are the same as for **Ring Cadence**.

Ring Delay

Ring Delay determines how long the vibrate cadence will play before the audible ring starts.

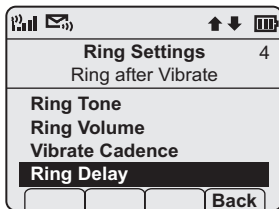


Press **NavOK** to select option.

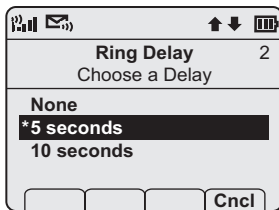

Use **Nav▲** and **Nav▼** to highlight an option. Press **NavOK** to set new ring delay and return to the previous menu level. Press **Cncl** to return to the previous menu level without changing the ring delay.


Auxiliary Ring 1 and 2

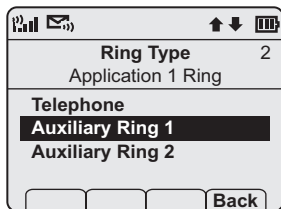


Auxiliary Rings 1 and 2 have the same options as **Telephone**. These additional settings are used when additional call system applications are used at your facility. Set a unique ring style for each system so that you are alerted to the type of call coming in. See your phone system administrator for additional information.

Noise Mode

Use the **Noise Mode** option to adjust the microphone for the level of ambient noise:

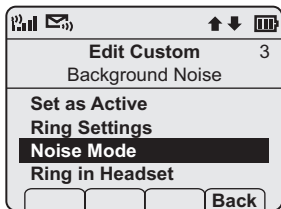


Press **NavOK** to select option.

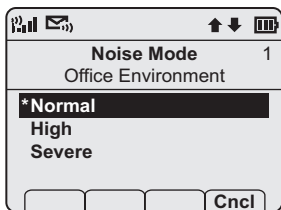

The **Normal** setting is suitable for most office environments. Select **High** for moderate background noise and **Severe** for very noisy environments. Use **Nav▲** and **Nav▼** to highlight an option. Press **NavOK** to set a new **Noise Mode** and return to the previous menu level.

Headset/Speaker Ring


When using a headset, the ring may be adjusted to ring as a softly modulated sound in the headset or as usual in the speaker. When no headset is plugged in, the ring goes to the speaker.

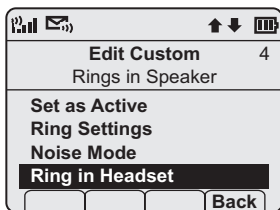

The current setting is displayed on the info line. Press **NavOK** to toggle to the alternate setting.

Key Tones Enable/Disable

Key tones sound when the keypad is pressed. They may be turned off for silent handset dialing.

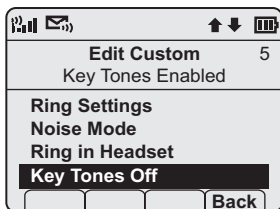

The current setting is displayed on the info line. Press **NavOK** to toggle to the alternate setting.

Warning Tones Enable/Disable

Warning tones sound when the handset is moved out of range. They may be turned off for silent handset operation.



The current setting is displayed on the info line. Press **NavOK** to toggle to the alternate setting.

Push-to-talk On/Off


Push-to-talk (PTT) may be turned on or off by Profile. PTT is available only in the NetLink 7030 Wireless Telephone.



The current setting is displayed on the info line. Adjust PTT settings in the Phone Settings menu. Press **NavOK** to toggle to the alternate setting.


Phone Settings

Phone settings options are used to customize your hand-set's functions.

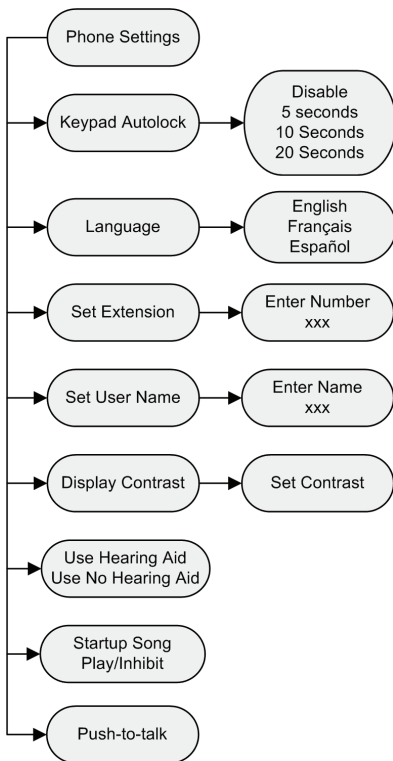


Keypad Autolock

The handset may be set to lock the keypad automatically when in standby mode. The automatic locking function of the keypad may be disabled or adjusted for a five, 10 or 20-second delay before locking.

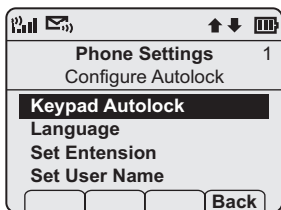


Press **NavOK** to select option.

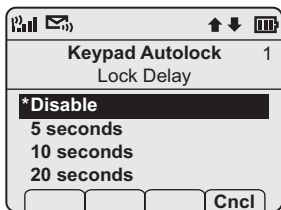


Use **Nav▲** and **Nav▼** to highlight an option. Press **NavOK** to set the Autolock option and return to the previous menu level. Press **Cncl** to return to the previous menu level without changing the Autolock option.

Set Language

The **Language** option will list what languages are available. Select the language from the list.

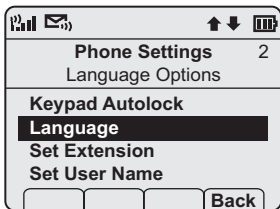


Press **NavOK** to select option.

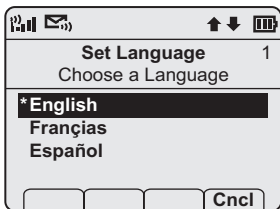


Use **Nav▲** and **Nav▼** to highlight an option. Press **NavOK** to set language option and return to the previous menu level. Press **Cncl** to return to the previous menu level without changing the language.

Set Extension

Set Extension is used to change the extension displayed in the standby menu. Changing the extension in the standby menu does not affect the extension number assigned to this handset in the PBX. Please see the phone system administrator if you have questions about the correct extension number for your handset.

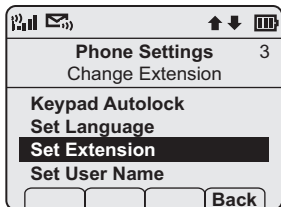

Press **NavOK** to select option.

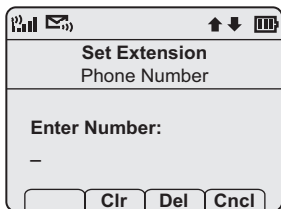


Enter the extension number by pressing the keypad. For entry information, see *Data Entry and Editing* above. Press **NavOK** to save and return to the previous menu level. Press


Cncl to return to the previous menu level without changing the extension.

Set User Name

A name may be entered to identify the handset's owner. It may be 18 or fewer characters.

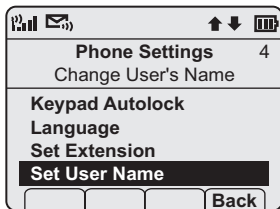


Press **NavOK** to select option.

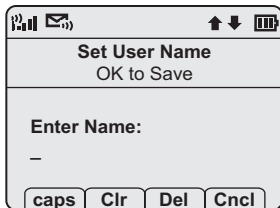


Enter the name number by pressing the keypad. For entry information, see *Data Entry and Editing* above. Press **NavOK** to save and return to the previous menu level. Press **Cncl** to return to the previous menu level without entering or changing the name.

Set Display Contrast

Display contrast may be adjusted to accommodate light conditions.

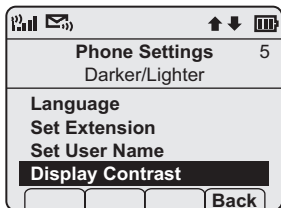


Press **NavOK** to select option.

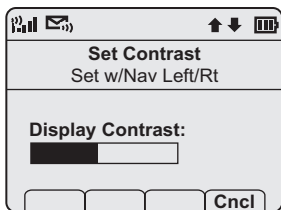

Use **Nav▶** to increase contrast and **Nav◀** to decrease contrast. Press **NavOK** to save and return to the previous menu level. Press **Cncl** to return to the previous menu level without changing the display contrast.

Hearing Aid


The handset may be adjusted for hearing aid compatibility.

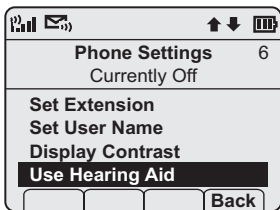

The current setting is displayed on the info line. Press **NavOK** to toggle to alternate setting.

Startup Song Play/Inhibit



The melody that plays when the handset is turned on after being fully charged may be silenced.

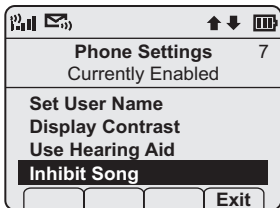

The current setting is displayed on the info line. Press **NavOK** to toggle to alternate setting.

Push-to-talk


Push-to-talk (PTT) is available only in the NetLink 7030 Wireless Telephone.

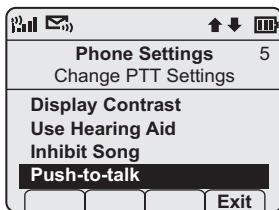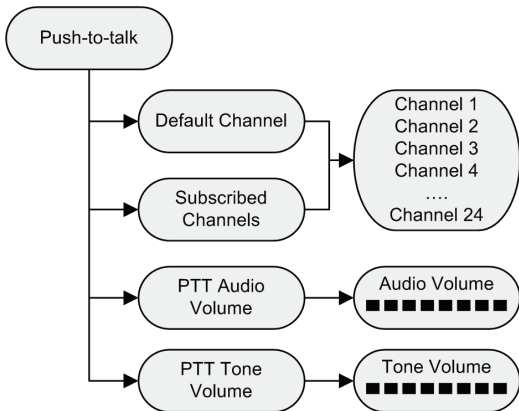

Press **NavOK** to change PTT settings.


Default Channel

The Default Channel menu is used to set the default channel for the handset.

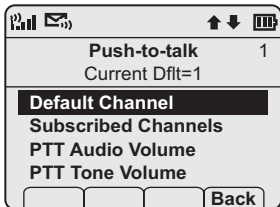

Press **NavOK** to select the Default Channel.


The screen now displays the first four subscribed channels. These channels are shown here as Channel 1, Channel 2, etc. but they may be assigned unique names by the phone system administrator. If so, those names will appear instead. The lowest enabled channel is set by default as the default channel. If you wish to select a different default channel for your handset, use **Nav▼** to scroll down to the channel you want.

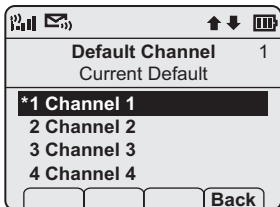


Press **NavOK** to select your default channel. Press **Back** to return to the previous menu.

Subscribed Channel

You may select the channels to which you wish to subscribe from the list of available channels under the Subscribed Channels menu.

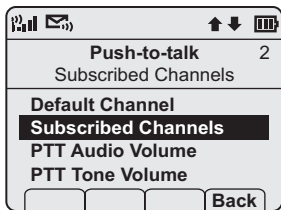

Press **NavOK** to select Subscribed Channels. Use **Nav▼** to scroll down to the first channel to which you wish to subscribe. (Channel 1 is subscribed to by default.)

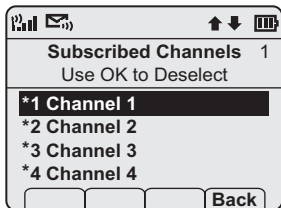


Press **NavOK** to subscribe to a channel. An * will appear to the left of the subscribed channel.


Repeat this operation for each channel to which you wish to subscribe. Press **Back** to return to the Main menu.

PTT Audio Volume

The PTT speaker volume may be set through the PTT Audio Volume menu.

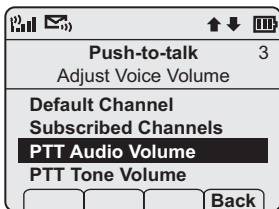

Press **NavOK** to select PTT Audio Volume.

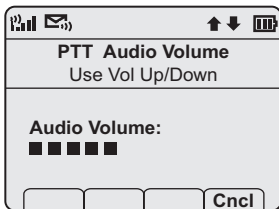


Use **Nav▶** and **Nav◀** or the Up/Down volume buttons on the side of the handset to adjust the volume level of the speaker. The graduated bars on the screen indicate the volume level. Press **NavOK** to save.

The selected PTT audio volume may be temporarily changed while in PTT mode by using the Up/Down keys.


Press **Cncl** to return to the Push-to-talk menu without changing the volume.

PTT Tone Volume

The volume of the PTT tones may be set through the PTT Tone Volume menu.

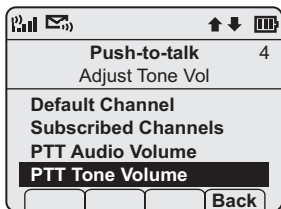


Press **NavOK** to select PTT Tone Volume.

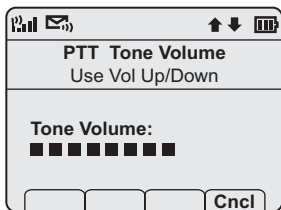


Use **Nav▶** and **Nav◀** or the Up/Down volume buttons on the side of the handset to adjust the volume level of the tones. The graduated bars on the screen indicate the volume level. Press **NavOK** to save.

Press **Cncl** to return to the Push-to-talk menu without changing the volume.

Menu Grid

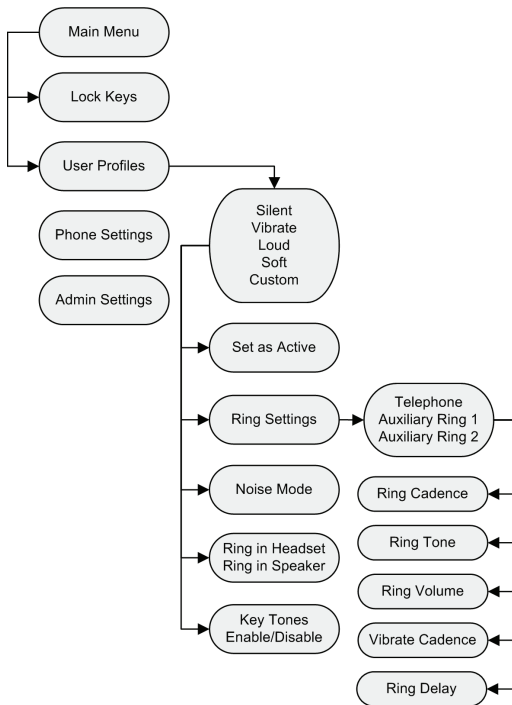

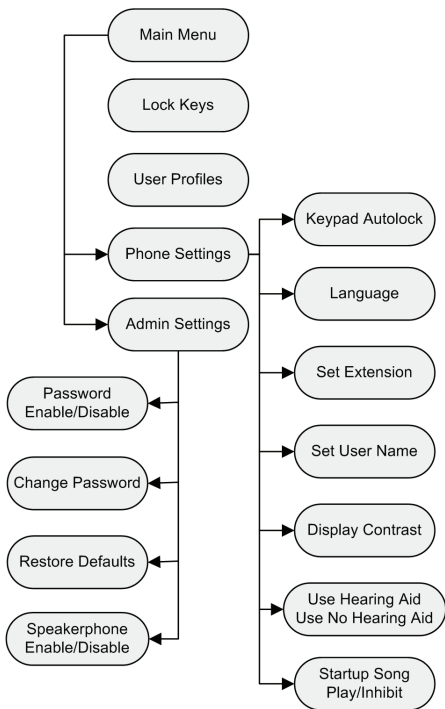

Advanced Telephony Features

Advanced telephony features are accessed through the **FCN** key followed by one or two additional key presses depending on the telephone system in use at your facility.

Check with your phone system administrator for specific features supported by your handset.

For your convenience, the following table has been provided to allow you to record the feature access sequences used in your facility.

Feature	Key Press
Transfer	Fcn + _____
Forward	Fcn + _____
Conference	Fcn + _____
Camp on	Fcn + _____
Redial	Fcn + _____
Voicemail	Fcn + _____
Flash	Fcn + _____
Application Mode	Fcn + _____
_____	Fcn + _____
_____	Fcn + _____
_____	Fcn + _____
_____	Fcn + _____
_____	Fcn + _____
_____	Fcn + _____

Handset Accessories

About Chargers	85
Charging Status	86
Charging Times	87
Single Charger	89
Dual Charger	90
Quad Charger	92
Headsets	93
Carrying Options	93

About Chargers

Three charger models are available for the NetLink 7020/7030 Wireless Telephone. The Single Charger will charge a single handset with an installed Battery Pack. The Dual Charger will charge the handset and a spare Battery Pack. The Quad Charger can charge up to four Battery Packs at a time. Any NetLink 7020/7030 Battery Pack can be charged in any charger.

The Single and Dual Chargers allow the handset to remain operative in speakerphone mode or with a headset while charging. Handsets may be charged while in standby mode, while in an active call or while turned off.

Place the Single or Dual Charger on a flat, horizontal surface and plug the power supply into the charger and into an appropriate wall outlet. The Quad Charger may be mounted on a horizontal or vertical surface.

Charging Status

The handset display and the LED on the Dual and Quad Chargers indicate whether or not charging is occurring or completed or if a Battery Pack failure has been detected.

Handset/LED*	Charging Status
Charging	The Battery Pack in the handset is charging.
LED Solid On	Battery Pack is charging. Note that in the Dual Charger, the handset's Battery Pack takes charging precedence, and when it is finished charging, the single Battery Pack in the rear slot will charge.
Charge Complete	The Battery Pack in the handset has finished charging.
LED Off	Battery Pack fully charged, empty slot, or unit is not powered.
Battery Failure	Error. Battery Pack not able to be charged. Reinsert Battery Pack or replace Battery Pack.
LED Flash	

* Note: the Single Charger does not have an LED indicator.

Charging Times

Each type of Battery Pack requires a different amount of time to achieve a fully charged state from a fully depleted state.

Type	Charging time
Standard	2 hours
Extended	3 hours
Ultra-Extended	4 hours



Note

The type of Battery Pack is printed on the label. Remove the Battery Pack and view the label to determine the type of Battery Pack you have been issued.



Caution

- It is normal for the Battery Pack to become warm when charging.
- Chargers are only authorized for use in the U.S. and Canada. The correct power supply for your charger will be provided with the charger.
- Chargers operate in a 50° to 85° F (10° to 30° C) environment. Do not expose them to freezing temperatures or direct sunlight.

- Do not place anything in the charger other than the handset or single Battery Pack as appropriate as the contacts could be bent. Bent contacts can keep the Battery Pack from charging.
- Only use SpectraLink Battery Packs with Spectra-Link chargers.
- Never use non-SpectraLink charging units as they could damage the Battery Pack.²
- Only use the original plug-in power adapter for the chargers.
- Contact your service representative for assistance if you have a faulty Battery Pack or a problem with your charger.

² If you have been issued a charger that carries another brand, please check with your phone system administrator for directions on how to properly use it.

Single Charger




The Single Charger is designed to allow the handset to remain operational through speakerphone or headset use while the handset's Battery Pack is being charged. The handset may also be charged while it is in standby mode or turned off.

Place the handset into the Single Charger facing forward. While the handset is charging in standby mode, it will display its extension number and **Charging....** An animated charge icon will indicate that charging is in progress. The handset is fully operational and will ring if called. When the handset is charging while turned off, only **Charging...** will display and no calls will be received. The dots will be racing during the charging cycle.

When the handset is fully charged, **Charge Complete** will display.

No charging information will display during an active call.

Dual Charger

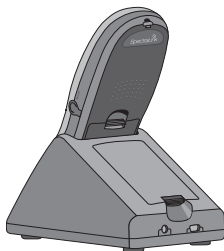

The Dual Charger is designed to charge the Battery Pack in the handset while it remains operational and also charge an additional Battery Pack in the rear charging bay. The handset has charging priority when both slots are occupied.


Place the handset in the front slot, facing forward. The Battery Pack alone snaps into the charging bay as shown in the illustration.

The LED indicates the status of the Battery Pack in the rear bay. The handset displays its charging status as described for the Single Charger.

When the handset is fully charged or is removed, the Battery Pack will begin charging.

Note that the time it takes for the Battery Pack to charge will be lengthened if its charging cycle is interrupted for a handset to charge.

Quad Charger

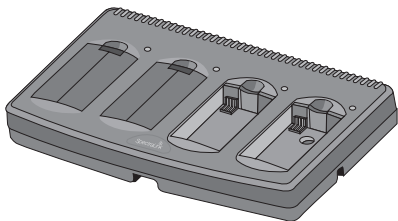

The Quad Charger is designed to simultaneously charge four Battery Packs. It may be mounted on a horizontal or vertical surface.

The Battery Pack snaps into the charging slot. The LED above the occupied bay indicates the charging status of the Battery Pack in the bay.



Note

If a flashing LED indicates a Battery Pack failure, verify the condition before replacing the Battery Pack. First check the Battery Pack in a different bay or substitute another charger and repeat the operation that caused the failure. If the same Battery Pack lights a steady LED when inserted in a different bay or charger, the first charger may be faulty. Contact your phone system administrator for service information.

Headsets

SpectraLink offers optional headsets for use in noisy environments or if you need to have your hands free while talking on the handset.

To use the headset, simply plug it into the jack on the right side of the handset.

While using a headset, the handset will ring according to the user profile setting established in the Headset/Speaker Ring option. The external ring will ring according to the setting of the profile.

The headsets offered by SpectraLink are specially designed to work properly with the NetLink 7020/7030 Wireless Telephone. SpectraLink does not recommend using other headsets.

Carrying Options

The following options are available for handset protection and easy handset carrying and removal.

Belt clip: Spring-loaded plastic belt clip that attaches to the back of the handset.

Swivel belt clip: Swivel-style belt clip that attaches to the back of the handset with full 360 degree swivel or eight-position ratchet options.

Swivel carrying case: Black leather case with keypad cover and swivel-style quick release belt clip.

Rugged holster: Black holster with belt clip.

Cord lanyard: Nylon cord lanyard with quick disconnect.

Coiled lanyard: Plastic coiled lanyard with clothing clip.

Handset Administration

FAQs	96
Specifications	97
About Safe Use of Wireless Telephones	98
Operational Warnings	98
Potentially Explosive Atmospheres	98
Care of Your Handset	101
Notice	104

FAQs

TBD

Specifications

Radio frequency

Transmission type

FCC certification

Voice encoding

Transmit power

Display

Model dimensions

Model weight

Standard Battery

Pack capacity

Extended Battery

Pack capacity

Ultra-Extended

Battery Pack

capacity

About Safe Use of Wireless Telephones



WARNING: Changes or modifications to this equipment not approved by SpectraLink Corporation may cause this equipment to not comply with part 15 of the FCC rules and void the user's authority to operate this equipment.



WARNING: SpectraLink products contain no user-serviceable parts inside. Refer servicing to qualified service personnel.

Operational Warnings

Potentially Explosive Atmospheres

Turn off your handset, prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.



The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often but not always posted.

Batteries

All batteries can cause property damage and/or bodily injury, such as burns if a conductive material such as jewelry, keys, or beaded chains touches exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

Electromagnetic Interference and Compatibility



Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

Facilities

To avoid electromagnetic interference and/or compatibility conflicts, turn off your handset in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of 6 inches (15 cm) be maintained between a handheld, wireless-radio product and a pacemaker. These recommendations are consistent with the independent research by, and recommendations of,

Wireless Technology Research. Persons with pacemakers should:

- ALWAYS keep the handset more than 6 inches (15 cm) from their pacemaker when the handset is turned ON.
- Not carry the handset in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn the handset OFF immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless handsets may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing-aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Use While Driving

Campus installations and warehouse facilities that use vehicles such as forklifts or golf carts should abide by these guidelines when using Wireless Telephones:

- Give full attention to driving and to the road, aisle, or path.

- Use hands-free operation, if available.
- Pull off the road, aisle, or path and park before making or answering a call.

For Vehicles Equipped with an Airbag:

Do not place a portable handset in the area over the airbag or in the airbag deployment area. An airbag inflates with great force. If a handset is placed in the airbag deployment area and the airbag inflates, the handset may be propelled with great force and cause serious injury to occupants of the vehicle.

Care of Your Handset

- Avoid dropping the handset or knocking it against hard surfaces. Carrying the handset in a holster or carrying case will help protect it.
- There are no serviceable parts in the handset or chargers. You should not open the handset case nor disassemble the chargers. Doing so will void your warranty.
- Turn off the handset and unplug chargers before you clean them. Never immerse either in liquid. Clean the exterior surfaces, including the charging contacts, with a cloth that has been slightly moistened with water. Take care not to exert undue pressure on charger electrical contacts while wiping.
- Wiping the handset surface with a water-dampened cloth or paper towel will remove most films or residues. If the soiling is too stubborn for plain water, a mild detergent solution may be used. Be sure to wipe away

any detergent residue with a clean water-dampened cloth.

- Should the headset connector become dirty, a scratchy or intermittent signal may be experienced. To clean the connector, dip the non-padded end of either a wooden or paper handled cotton swab in isopropyl alcohol. Gently insert in the connector and twist, repeating several times. If available, blow compressed air into the connector to clear debris.
- Keep the headset jack covered when it is not in-use.
- Using a carrying case may help protect the surfaces and help prevent liquids (e.g., rain) from entering into the interior of the handset. This product is not waterproof, and exposing the unit to liquids may result in permanent damage to the unit.
- If your handset interior gets wet, do not try to accelerate drying with the use of an oven or a dryer as this will damage the handset and void the warranty. Instead, do the following:
 - 1 Immediately power off the handset.
 - 2 Remove the Battery Pack from handset.
 - 3 Shake excess liquid from the handset.
 - 4 Place the handset and Battery Pack in an area that is at room temperature and has good airflow.
 - 5 Let the handset and Battery Pack dry for 72 hours before reconnecting the Battery Pack and/or powering on the handset.

If the handset does not work after following the steps listed above, contact your phone system administrator for servicing information.

Notice

SpectraLink Corporation has prepared this document for use by SpectraLink personnel and clients. The drawings and specifications contained herein are the property of SpectraLink and shall be neither reproduced in whole or in part without the prior written approval of SpectraLink, nor be implied to grant any license to make, use, or sell equipment manufactured in accordance herewith.

SpectraLink reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult SpectraLink to determine whether any such changes have been made.

The terms and conditions governing the sale of SpectraLink hardware products and the licensing of SpectraLink software consist solely of those set forth in the written contracts between SpectraLink and its customers. No representation or other affirmation of fact contained in this document including but not limited to statements regarding capacity, response-time performance, suitability for use, or performance of products described herein shall be deemed to be a warranty by SpectraLink for any purpose, or give rise to any liability of SpectraLink whatsoever.

In no event shall SpectraLink be liable for any incidental, indirect, special, or consequential damages whatsoever (including but not limited to lost profits) arising out of or related to this document, or the information contained in it, even if SpectraLink has been advised, knew, or should have known of the possibility of such damages.

P/N 72-1301-00 Rev. A