

# *User's Guide*





## Congratulations on your new wireless handset

The handset will provide you with the greatest possible degree of flexibility and mobility due to high battery capacity, practical weight, size and design.




### Contents:

<ul style="list-style-type: none"> <li>1. Construction .....4</li> <li>2. Battery installation .....5</li> <li>3. Charging .....6</li> <li>4. Key functions .....7</li> <li>5. Turning the handset ON/OFF .....9</li> <li>6. Making a call .....10                     <ul style="list-style-type: none"> <li>6.1 Receiving calls .....12</li> <li>6.2 During conversation .....13                             <ul style="list-style-type: none"> <li>6.2.1 Volume regulation .....13</li> <li>6.2.2 Microphone mute .....13</li> <li>6.2.3 Transferring the call to another handset .....13</li> </ul> </li> </ul> </li> <li>7. Set ups .....14</li> <li>8. Menu structure .....15                     <ul style="list-style-type: none"> <li>8.1 Using the alphanumeric keyboard .....16</li> <li>8.2 Key functions .....17</li> <li>8.3 Profile set up .....18</li> <li>8.4 Profile functions .....20</li> </ul> </li> </ul>	<ul style="list-style-type: none"> <li>8.5 Menu subscription and login .....21                     <ul style="list-style-type: none"> <li>8.5.1 Create subscription .....22</li> <li>8.5.2 Login .....23</li> <li>8.5.3 Auto login .....24</li> <li>8.5.4 Remove subscription .....25</li> </ul> </li> <li>8.6 Battery .....26</li> <li>8.7 Redial .....27</li> <li>8.8 Book .....29</li> <li>8.9 External services .....31</li> <li>8.10 MSF Functions .....32</li> <li>8.11 Mail/Text messages .....33</li> <li>9. Shortcuts .....35</li> <li>10. Information .....36                     <ul style="list-style-type: none"> <li>10.1 Error tree .....36</li> <li>10.2 Error information .....37</li> <li>10.3 Warranty .....37</li> <li>10.4 Technical information .....38</li> <li>10.5 Safety Instructions .....41</li> </ul> </li> </ul>
---	--






### 1. Construction

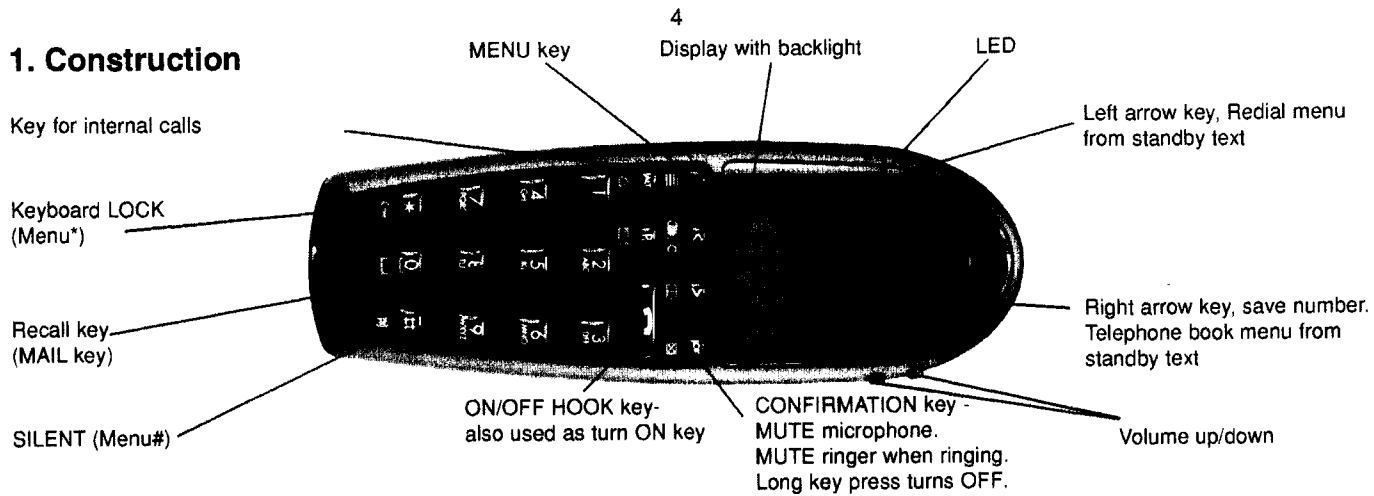


### 2. Battery installation

Before using the telephone it is important that you connect the battery to the connector in the battery box. Assemble the battery cover as described below and place the handset into the charger.

1. Push the battery cover 5 mm towards the headset plug using your thumbs.

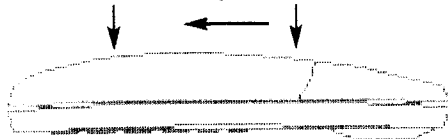

2. Lift off battery cover.
3. If the battery is not already installed, place battery plug in the slot in the battery box.
4. Insert battery with the label readable and replace cover.

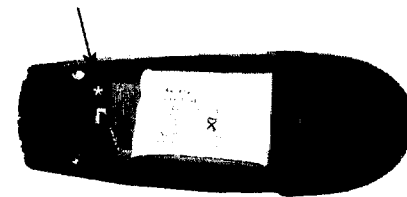

Place the battery plug in the slot with red wire closest to the mark \* (see figure)






### 3. Charging

 It takes approximately 3 1/2 hours to charge the handset from fully discharged to its full capacity. Place the handset in the charger. The display shows the charging status in line 3. For correct charging the room temperature has to be between 0°C and 25°C and therefore the handset must not be placed in direct sunshine. The battery has a built-in heat sensor which will stop the charging if the battery temperature is too high.

It is necessary to recharge the battery when the display shows "BATTERY LOW", or if it can not be turned on. The LED flashes at a low frequency while charging and lights constantly when the charging has finished. The display goes back to normal mode when fully charged.



When the handset is placed in the charger the vibrator will not work and the B-answer function is inactive even if chosen. If the battery is fully discharged, it will be a moment before charging starts.




### 4. Key Functions

 The handset has 21 keys:





Two keys are placed at the right side for volume control. Press upper or lower key to change the volume. Each key-press turns volume one step up/down.

- - Go to menu structure or exit menu structure. (Escape or »NO«)
- " < ", / C - Menu: left, Cursor left, after a digit: delete last digit. Long press: delete all.  
From standby text: Redial menu.
- " > ", - Menu: right, Cursor right, After a digit: Store number in telephone book.  
From standby text: Telephone book read.
- "OK", - Confirmation (»YES«) or jump to next level in the menu. In off hook: Mute.  
Long key press turns the handset OFF.






8

- "ALT",  -If residential systems: Internal calls off hook, and internal recall if already off hook.
- "R",  - If off hook: Recall. If on hook: Read message.
- " " - On hook/off hook and turn ON.
- " \* ",  - \* Long = pause (-), extra long: change from pulse to DTMF (a "T" appears in the display).
- "0-9" - Digits or letters in alphanumeric mode (names and messages)
- " # " - #, Choose uppercase or lowercase letters in alphanumeric mode.



## 5. Turning the handset ON/OFF

 
ON: Press -key for 1/2 second.

When the handset is turned on the  symbol is shown in the lower left corner of the display, if the handset is subscribed to a system. (For subscription, see 8.5.1)

OFF: Press the "OK" (MUTE) key for 3 seconds.

Please note: When the handset has been outside the coverage area, it can take up to 30 seconds before the handset is back on the system after re-entering the coverage area.

9





## 6. Making a call

For making or receiving calls the handset has to be subscribed to a system (☎) shown in display (see chap. 8.5.1)  
 Press the -key, the -icon in the display will flash until connection is established  
 Dial the number

### Pre-dial:

Press the number to dial (long press on »\*« will make a pause, if necessary)  
 Press the -key, the -icon will flash until the connection is established

### Telephone book:

Press the >-key to enter the telephone book  
 Search for the number either by using the <-key or the >-key or by pressing the first letter in the name by using the digits 1 – 9 (see chap. 8.2)  
 Press the -key, the -icon will flash until connection is established



### Redial:

Redial / CLIP (CLIP = Calling Line Identification Presentation) stack:  
 Press the <-key /C to enter the redial/CLIP stack  
 Search for the number by using the <-key or the >-key, redialled numbers are marked with REDIAL or name and clip numbers are marked either with CLIP or the name of the person who called and the LED is on.  
 Press the -key, the -icon will flash until the connection is established.

Using the handset on residential systems:

Internal call post-dial:

Press the ALT-key () , the -icon in the display will flash  
 Dial the number of another handset on the base station, the -icon will flash until the connection is established


Internal call pre-dial:

Press the number of another handset on the base station  
 Press the ALT-key () , the -icon will flash until the connection is established






### 6.1. Receiving calls

If the phone rings, the call can be answered by pressing the -key.

When ringing the LED flashes fast, and the display shows the CLIP (if presented). If it is an external call (or if no CLIP) the display shows "INCOMING CALL"

It is possible to stop the ringing signal without answering the call. Press  (OK) and the ringing signal is muted.  
Display shows: »RINGER MUTED«




### 6.2 During conversation

#### 6.2.1 Volume regulation:

Use the two keys placed at the right side of the handset for volume control.


#### 6.2.2 Microphone mute:

 
Press the OK-key () , MIC. MUTED is showed in the display.

Press the OK-key () to enable the microphone again.

#### 6.2.3 Transferring the call to another handset:

Press R, and dial new number.

Press the -key and the call is transferred to the other handset





## 7. Set ups

The handset has two user-defined profiles (set ups), and a mode where all sounds are disabled (SILENT). Pressing "■" followed by "OK" will show the chosen profile. A new profile can be selected by using the arrow keys. To select the chosen profile press "OK". To escape (without storing anything) press "■" again.


A quick way of choosing a profile, is to press "■" and then 1, 2 or # (1 is the INDOOR, 2 is the OUTDOOR profile and # is SILENT). To change the set up in a profile, press "■" followed by "OK" twice. All settings have to be defined under each of the two profiles. The display shows if the SILENT mode or PROFILE2 is chosen.




## 8. Menu structure

Pressing the ■-key, enters or exits the menu structure. It has to be used if a "NO" or "CLEAR" is wanted in the menu structure.

Pressing the OK-key, jumps to a lower level in the menu. When the lowest menu level is reached, it will store the setting and jump to a higher level. It has to be used if a "YES" is wanted.

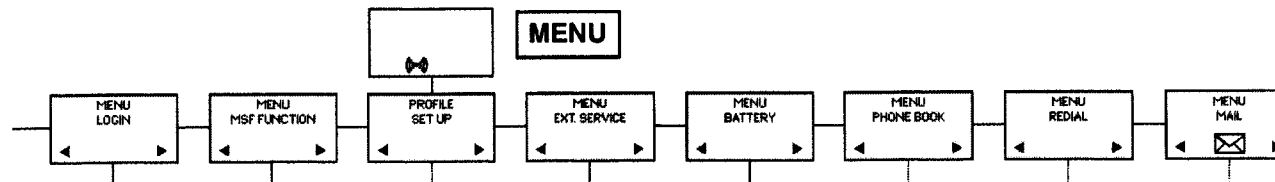

 The phone book and redial menu can be accessed directly. The phone book by pressing the >-key (□□) and the redial menu by pressing the <-key (●/C).







### 8.1 Using the alphanumeric keyboard

 
The normal dialling keys (0-9) are used for writing the name to be placed in the phone book. By pressing the keys a certain number of times the related letters or digits will appear in the display. Spaces are made by using the 0-key. Key # changes between uppercase and lowercase letters. The arrows will move the cursor. Left arrow is also used for deleting (hold for 1 sec.) = delete. New letters can be inserted.

Change of key press and pauses lasting more than 1 second automatically moves the cursor to next position.



### 8.2 The key functions

Key	
1	Æ Ø Å @ A O ß U 1
2	A B C @ A A A A 2
3	D E F 3
4	G H I I I 4
5	J K L 5
6	M N O O O O 6
7	P Q R S ß 7
8	T U V U U U U 8
9	W X Y Z 9
0	Space . , _ - + : ? ! 0
*	* # / \ ( ) = &
#	Upper/lower-case






### 8.3 Profile set-up

In the following you will find a description of how to set up one of the 2 profiles. To enter the Profile Set-up menu press "■". Then press "OK" and use > or < to find the profile you wish to change and confirm with "OK". You are now able to switch between the different settings. Press "OK" when you find the setting you wish to change (or see). Change the setting according to your needs, confirm with "OK" and automatically you go to the next setting. Press "■" to finalize profile setup.



Profile set-up (fig)

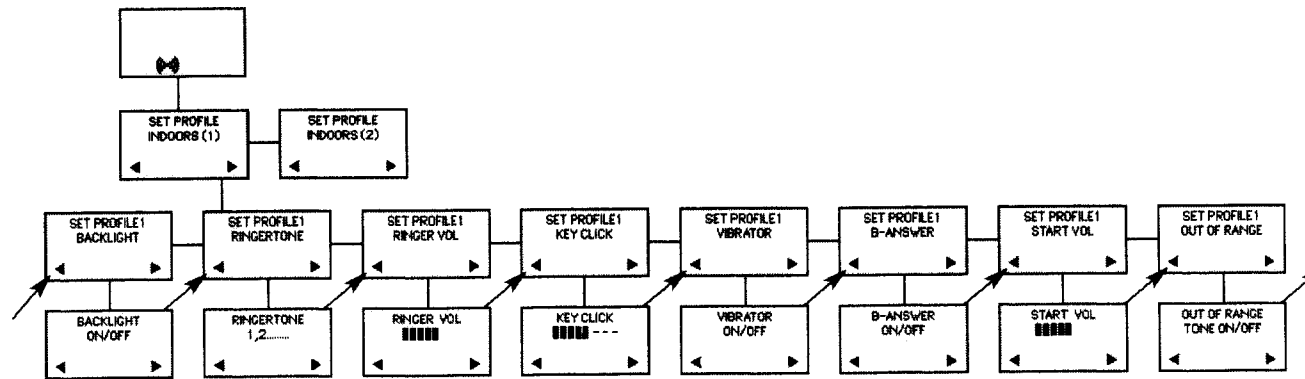





### 8.5.1 Create subscription


To make subscriptions, the system must allow subscriptions to be made. Some systems also require an Access Code (AC). If more than one system currently permits subscription, you will need to know the ID of the system to which you wish to subscribe. Access Codes and system ID's will be provided by the system administrator.

If the handset is already subscribed to 4 systems, you will have to remove a subscription before creating a new (see 8.5.3).

Choose the SUBSCRIPTION CREATE menu to subscribe to a new system. (see 8.5)

Use the < and > keys to scroll between the ID's of the different systems available.

Choose the system you wish to subscribe to. When a subscription is available, enter the free system using < or > and the AC (if required) using the keyboard, and press (OK).

If subscription was successful, the standby text and  is shown in the display. If not, subscription has failed and the procedure must be retried.



### 8.5.2 Login

 
The handset can be subscribed to 4 different systems enabling you to use the same handset on 4 different systems.

If you would like to change to another system, use the login menu to connect to another system number.

The actual chosen system is shown with the red LED on.

To change to another system use < or > and press OK to confirm.


To be able to log on to a system, subscription to the system has to be established. (See 8.5.1).





### 8.5.3 Auto login

The handset can be subscribed to 4 different systems. If Auto login is chosen from the menu, the handset automatically selects the "closest system". The selected system is marked with an "A".

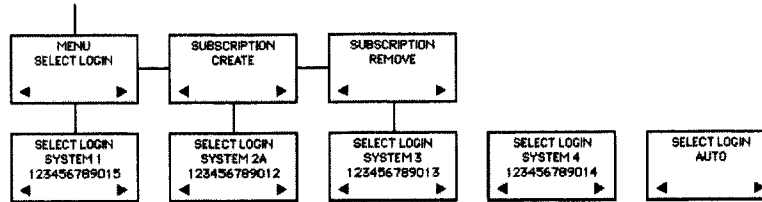

**Please note:** Auto login should only be used in separate systems without overlaps.



### 8.5.4 Remove subscription

Subscriptions can be removed from the system in use and from the 3 other systems (if connected). Removing a subscription requires a password. Password is factory set at 0000. If the system in use is removed, it is necessary either to select one of the remaining systems or to subscribe to a new one. If one of the systems not chosen is removed, the handset remains connected to the system in use.






### 8.6 Battery capacity

In the battery menu it is possible to see the remaining battery capacity. For reading the correct capacity, the handset has to be removed from the charger for at least one hour. Press "■" and use the > or < keys to reach the Battery Menu. Press "OK" to enter the menu, and you can see the current status of the battery capacity. Press "OK" to return to the menu system or press "■" to quit.

The indication on the display is not necessarily an exact reflection on the remaining speech time.

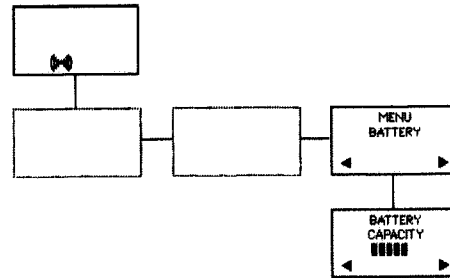

### 8.7 Redial

 
The handset has maximum 10 redial numbers and 10 Caller ID's placed in the same stack. Each number is only represented once. Enter the redial menu by pressing "<" (C/C) from the standby text. Repeated presses at the "<" button turn backward through the dialled numbers and CLIP numbers (from newest to the oldest). Right arrow moves in the opposite direction. It is also possible to reach the redial menu in the main menu. Numbers are named "REDIAL", "CLIP" or with the name.

The LED will flash slowly if a new number (unanswered call) has arrived in the CLIP stack. If no number (no clip) is represented by a call only the LED will flash slowly afterwards.


If you want to delete a "CLIP" or a "REDIAL" you scroll to the name/number and press »OK« twice.

The name/number is now deleted. If a number is stored, it is moved to the telephone book.








The Redial and CLIP stack Menu (fig)

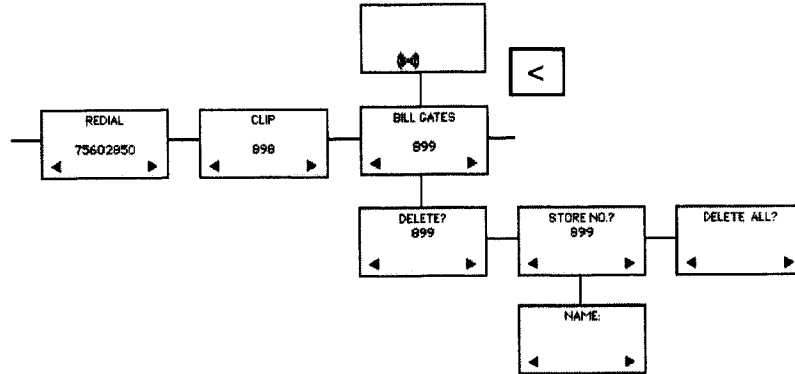


### 8.8 Book

  
Storing a number (max. 24 digits) in the telephone book is done by pressing the number to be stored (in on hook), then press the “>”- key followed by the “OK” key. It is possible to store up to 80 numbers with name in the phone book. Typing of the name and a confirmation is required. After storing the telephone will go back to standby mode. If the display shows “MEMORY FULL”, it is necessary to delete one or more numbers from the telephone book.  
(See menu structure page 30)

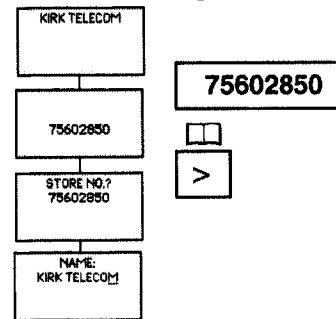



30

Read BOOK numbers: The telephone book is entered by pressing ">"(□□). For quick-search: press the first letter of the name (using 1-9)(see chap. 8.2). Call the displayed person by pressing the  key. It is also possible to reach the telephone book menu in the main menu.

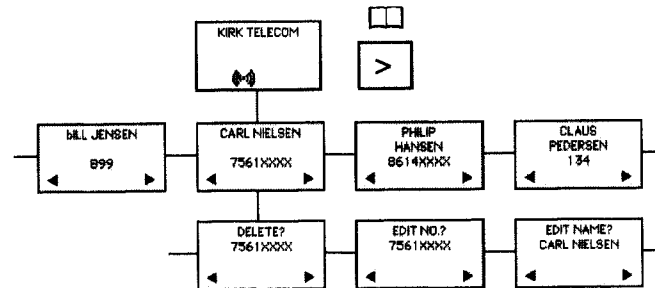

### 8.9 External services

External services are facilities placed in the main system, and only available if the handset is subscribed to a KIRK system

31








### 8.10 MSF-functions

MSF Functions are special functions, which are based on MSF (Message Service Function). The functions require special software in the main system.




### Mail/Text Messages

*Available in systems configured with the possibility of sending text messages*

 
At the reception of a text message the envelope icon  appears in the display. The envelope icon is indicating one or more unread messages.

The text message is shown in the display, and when the message is read the envelope icon will disappear.

If the message contains a callback number, this will be displayed on the bottom line of the display. As long as the callback number is in the display, it is possible to activate the number by pressing the -key.

1st letter in the display, in front of the timestamp, shows the message status: read (R), unread (N) or locked (L). Mails include a maximum of 72 letters or digits (2 display screens of 36 each). Call back no. is max 24 digits (or letters for E-mail).

14 messages can be "stored" in the handset. When receiving a new message, the oldest unlocked will be deleted. Locked messages will not automatically be overwritten, but can manually be deleted. Maximum 7 messages can be locked.





#### **Read a mail**

Press the "R"- (MAIL) key followed by the ✓-key or enter the mail menu (in on hook condition).  
If the message includes more than 36 letters or digits, the message will run over 2 display screens.  
Use the > -key to scroll.  
To see the **sender** of the mail, press the ✓-key.  
To leave the mail, press the MENU-key.

#### **Reply a mail**

Open the mail by pressing the R-key followed by the ✓-key, press the ✓-key again and use the < >-keys to find the reply feature, press the ✓-key and you are then able to reply the mail. After writing your reply press the ✓-key to confirm.

#### **Forward a mail**

Open the mail by pressing the R-key followed by the ✓-key, press the ✓-key again and use the < >-keys to find the forward feature, press the ✓-key twice and you are then able to write the number on the receiver. Confirm with the ✓-key.



#### **Delete a mail**

Open the mail by pressing the R-key followed by the ✓-key, press the ✓-key again and use the < >-keys to find the delete feature, press the ✓-key and the mail is deleted.

#### **Lock/unlock a mail**

Open the mail by pressing the R-key followed by the ✓-key, press the ✓-key again and use the < >-keys to find the lock/unlock feature, press the ✓-key and the mail is locked/unlocked.

#### **Write a mail**

To write a new mail press the R (mail)-key, confirm with the ✓-key and write your message. To send the mail press the ✓-key, type the number of the receiver and confirm with the ✓-key.

If one or more mails are stored do as followed: Press the R (mail)-key followed by the >-key confirm with the ✓-key and write your message. Press the ✓-key, type the number of the receiver and confirm with the ✓-key. The message is send.


#### **Note**

*In case a sent message is not received, the sender will get a message in the display.*



36

## Menu structure

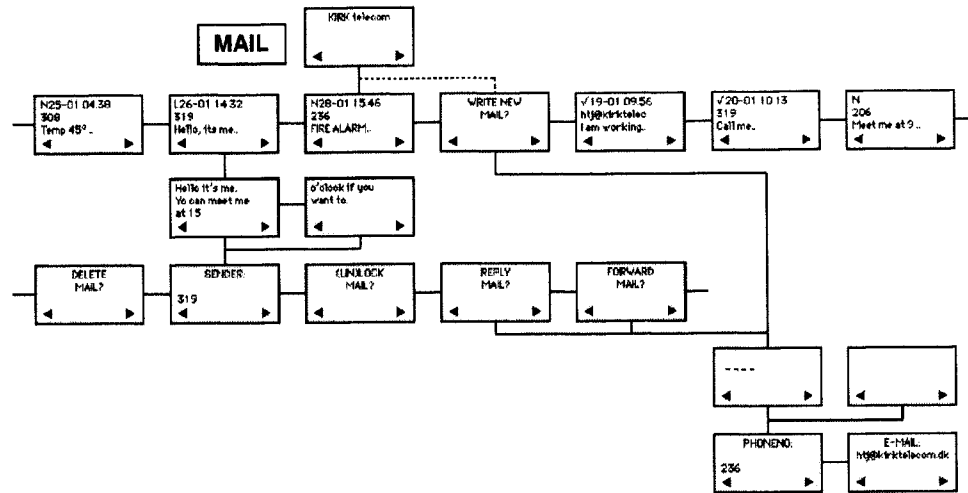

## 9. Shortcuts

"INDOORS PROFILE": Press: ■ 1.

"OUTDOORS PROFILE": Press: ■ 2. (Display shows PROFILE 2)

"SILENT": Press: ■ #. (No sounds) (Display shows SILENT)

"KEY LOCKED": Press: ■ \*. (Display shows KEY LOCKED)

"PHONE BOOK": Press > (□) key in standby.

Name search in phone book: Press the first letter in name and > (□) afterwards.

Store a number: Press > (□) after the number (in on hook).

"REDIAL" and "CLIP": Press < (●/C) key in standby.

"MAIL": Press R (✉) key in on hook.

MUTE temporarily the ringer: Press "OK" (⊗) when the telephone is ringing.

MUTE the microphone: Press "OK" (⊗) when the telephone is off hook.

RECALL: Press the ALT key if residential system, else press the "R"-key.


Pause(-): Hold \* for one second.

Change from pulse to DTMF(T): Hold \* for 2 seconds.

37

## 10. Information

### 10.1 Error tree

Problem	Check
The telephone freezes.	Remove and replace the battery pack. Press  to turn on the telephone.
The telephone does not ring.	Check whether the ringer is SILENT or RINGER VOL. is OFF.
The telephone cannot find a system ID at "SUBSCRIPTION CREATE".	Check whether the system is set to allow subscriptions.
The telephone cannot subscribe even if system ID has been found.	Check if Access Code is necessary.
Not possible to turn on the telephone	Check if battery is connected. If yes, charge the battery.

### 10.2 Error information

Improper function of the handset might be related to the installation of the Wireless system or failures related to the main system. Before declaring a handset for repair be sure that the main system is operating properly.

### 10.3 Warranty

The handset is covered by a normal warranty-solution, except for the battery. The lifetime of the battery depends on the general use of the handset.

The handset is not covered by a general warranty if:

- The handset is exposed to water or metal dust
- The handset is mistreated
- The handset is exposed to unauthorised break-in



#### 10.4. Technical information

##### Approvals

Acoustics:	TBR 10
Electrical:	FCC RULES PART 15/SUBPART C
EMC:	ETS 300 826/FCC PART15
Safety:	EN 60950/UL1950/CAN 22-950

##### Size and weight

Size:	143 x 48 x 26 mm
Weight:	121 g including battery $\pm$ 10 g

##### Capacity

Active talking time	10 hours
Stand-by time	90 hours

 


#### 10.5. Safety Instructions

##### Important Safety Instructions and Product Information

Before using your telephone equipment, you should always follow basic safety instruction to reduce the risk of fire, electrical shock and injury to persons, and damage to property.

- 1 Read and understand all instructions
- 2 Follow all warnings and instructions including those marked on the product
- 3 Unplug this product before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning
- 4 Do not install the telephone equipment in the bathroom or near a wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool
- 5 Slots or openings in the cabinet back and bottom of the equipment are provided for ventilation to protect it from over-heating. These openings must not be blocked or covered.
- 6 The product should be operated only from the type of power source indicated on the instructions. If you are not sure of the type of power supply, consult your dealer or local power company.





- 7 Do not overload wall outlets and extension cords as this can result in fire or electrical shock.
- 8 Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in fire, electrical shock, or injury. Never spill liquid of any kind into this product.
- 9 To reduce the risk of electrical shock or burns, do not disassemble this product. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current, or other risks. Incorrect reassemble can cause electrical shock when the appliance is subsequently used. If the product need repair, consult your dealer.
- 10 Refer servicing to qualified service personnel under the following conditions:
  - AQ If liquid has been spilled into the product
  - BQ If the product has been exposed to rain or water
  - CQ If the product does not operate normally when following the operating instructions in the manual. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and will often require extensive work by qualified service personnel to restore the product to normal operation.



- DQ If the product has been dropped or cabinet has been damaged
  - EQ If the product exhibits a distinct change in performance
- 11 Avoid using telephone during an electrical storm. There may be a risk of electrical shock from lightning
  - 12 Do not use the telephone to report a gas leak in the vicinity of the leak
  - 13 Do not place the base or charger near microwave ovens, radio equipment, or non-ground connected televisions. These appliances may cause electrical interference to the base or handset
  - 14 The charger must be placed on a hard, flat surface and connected to a functional 120 volt AC power netadapter and plug the adapter into the power outlet
  - 15 This telephone will not operate in the event of a blackout. Please keep a backup phone for emergencies

**Intrinsic safety**

Do not use the handset in conditions where there is a danger of electrically ignited explosions.





**Exposure to sunlight, heat and moisture**

Do not expose the cordless phone to direct sunlight for long periods. Keep the cordless phone away from excessive heat and moisture.

**Battery disposal**

Defective batteries must be returned to a collection point for chemical waste disposal.

**Spare parts and accessories**

Use only approved spare parts and accessories. The operation of non-approved parts cannot be guaranteed and may even cause damage.

**Power failure**

In the event of a power failure or flat battery, you cannot use the handset to make or receive calls



**Battery Precautions**

 
To reduce the risk of fire, injury or electrical shock, or property damage, and to properly dispose of batteries, please read and understand the following instruction.

**THIS PRODUCT CONTAINS NI MH BATTERIES. BATTERIES MUST BE RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN MUNICIPAL WASTE.**

- 1 Only use type KIRK 8474 3411 in the handset.

**DO NOT** use other rechargeable batteries or non-rechargeable batteries. The batteries could short-circuit and the battery shell may be damaged causing a hazardous condition.

- 2 Always follow basic safety precautions when using and disposing of batteries. Do not dispose of the batteries in a fire, cells may explode. Do not expose batteries to water. Check with local codes for special disposal instructions.





- 3 DO NOT USE ALKALINE OR LITHIUM BATTERIES IN THE HANDSET.
- 4 Periodically clean the charge contacts on both the charger and handset
- 5 Exercise care in handling batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. The batteries or conducting material may overheat and cause burns of fire
- 6 Do not open or mutilate the batteries, released electrolyte is corrosive and may cause damage to the eyes or skin. The electrolyte may be toxic if swallowed.
- 7 During charging batteries heat up. This is normal and not dangerous
- 8 Do not use non-KIRK charging devices. This could damage the batteries

#### NOTICES

**NOTICE:** Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

 


Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

**CAUTIONS:** Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

If your telephone equipment causes harm to the telephone network, the telephone company may ask you to disconnect the system from the line until the problem has been corrected or they may discontinue your service temporarily. If possible, they will notify you in advance, But if advance notice is not practical, you should be notified as soon as possible. You will be informed of your right to file a complaint with the FCC.







Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper functioning of your telephone system. If they do and it is possible, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service. If you experience trouble with this telephone system, disconnect it from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

**Note:** This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.




- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Power Outage:** In the event of a power outage, your cordless telephone will not operate. The cordless telephone requires electricity for operation. You should have a telephone which does not require electricity available for use during power outages.

**Information to user:** The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### LIMITED WARRANTY

 This limited, non-transferable warranty is provided to the original purchaser. The product is warranted to be free from defects in materials and workmanship under normal installation, use and service for a period of one (1) year





from the date of purchase as shown on the purchaser's receipt.

Our obligation under this warranty is limited to repair or replacement (at our option) of the product or any part(s) which are defective provided that the product is returned to the original place of purchase or an authorized service location during the warranty period. Products returned must be accompanied by a copy of the purchase receipt. In the absence of a purchase receipt, the warranty period shall be one (1) year from the date of manufacture. Repair or replacement of the product is your sole and exclusive remedy.

If the product is repaired, reconditioned component parts or materials may be used. If the product is replaced, we may replace it with a new or reconditioned product of the same or similar design. The repaired product will be warranted for either (a) 90 days or (b) the remainder of the original one (1) year warranty period, whichever is longer.

 
This warranty does not apply to the defects outside of our control, including but not limited to acts of God, fire, flood and damage while in transit to service facility. We do not warranty that the product will be compatible with any telephone equipment, systems or party lines.



This warranty shall be void if the product is damaged as a result of defacement, misuse, abuse, neglect, accident, destruction or alteration of the serial number, improper electrical voltages or currents, repair, alteration or maintenance by any person or party other than our authorized service facility, or any violation of instructions furnished by us.

This warranty is also void if this product is removed from the country in which it was purchased by the original purchaser, if it is used in a country in which it is not registered for use, or if it is used in a country for which it was not designed. Due to variations in telephone systems and communications laws, this product may be illegal for use in some countries. We assume no responsibilities for damages or penalties incurred resulting from the use of this product in a manner or location other than that for which it was intended.

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED. ANY IMPLIED WARRANTIES INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN LIMITED WARRANTY. WE DISCLAIM ANY LIABILITY FOR DAMAGES FOR LOSS OF USE OF THE PRODUCTS,





LOSS OF TIME, INCONVENIENCE, INJURY TO ANY PERSON, OR DAMAGE TO PROPERTY CAUSED BY THE PRODUCT, LOSS OF REVENUE OR PROFIT OR DAMAGES FOR ANY FAILURE TO PERFORM. IN NO EVENT SHALL WE BE LIABLE FOR ANY SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES EVEN IF WE ARE ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

This warranty is the sole and exclusive warranty provided for the product. There are no other express warranties. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

