

Exhibit 8: User's Manual

A copy of the user's manual is enclosed below. The compliance statement for the PTB600 is located on the front cover of the manual.



**The NetLink
Wireless Telephone™**



NOTE:
It is recommended that standard acceptance procedures be followed prior to operating this equipment in proximity of life-support systems.

To minimize risk of interference, pacemaker users SHOULD NOT carry the Wireless Telephone next to the pacemaker.

Operation of the Wireless Telephone may produce an audible noise noticeable to hearing aid users. It is recommended that a SpectraLink headset be used by hearing aid users.

© 1999, SpectraLink Corporation
PN 72-0064-00

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesirable operation.

**User Guide
Draft**

Using The NetLink Wireless Telephone™

Turn the Wireless Telephone On

Press and hold the **PWR** key. You will hear a double chirp. Your extension will display. The NO SVC message will display briefly. When it goes out, you are ready to make and receive calls.

Answer A Call

The Wireless Telephone will ring or vibrate to alert you. Additionally, a Line Indicator on the display may flash, and the display may show information about the call, such as caller's name and extension.

To answer a call, press the **START** key and hold the earpiece to your ear.

If you are on a call and hear subdued ringing, a call is coming in on a second line. To answer this call, put your first call on hold and press the **LINE** key then the line number of the second call.

Place A Call

Press the **START** key, wait for dial tone, then dial the number. Dial calls with the Wireless Telephone exactly as with your desk phone. Your telephone system may require you to select a line by pressing the **LINE** key, followed by a line number.

To hang up when you've finished the call, press the **END** key.

Do not use the **PWR** key to end a call, because that will turn your Wireless Telephone off and you will not receive calls until

you turn the Wireless Telephone back on.

Turn the Wireless Telephone Off

Press and hold the **PWR** key. You will hear a single chirp.

If you accidentally turn your Wireless Telephone off during a conversation, you can restore your conversation by pressing the **PWR** key and then the **START** key, provided the person you are talking to has not hung up.

Mute Microphone

To mute the microphone so you can hear but won't be heard, press **FCN** then press 1 until MUTED is displayed. Press **FCN** then 1 again to unmute the microphone.

Access To Telephone System Features

To access the features of your telephone system from the Wireless Telephone, press **FCN** to display a menu of available features. Press the key sequence for the desired feature, or press **FCN** to display more options. Select EXIT MENUS to exit.

If your Telephone system supports softkeys, pressing **FCN** provides access to softkey functions. You will need to press **FCN** twice to display the feature menu.

Because softkey and system features vary, your system administrator will explain them for your telephone system.

Setting User Preferences

Switch Volume Levels

The Wireless Telephone has two volume levels, low and high. While you are talking on the Wireless Telephone, to switch from low to high or vice versa, press the **VOL** key once.

Set Low Volume

To set the low volume level, press **FCV** until Volume Level displays, then press **0**. The Current Volume Level displays. Use the keypad to enter a volume level from 1 (softest) to 8 (highest). High volume is automatically set two levels higher than low volume. If you have a headset the headset's low volume must be adjusted separately.

Ring Type

The Wireless Telephone's ringing mode can only be changed if the telephone is on, but not on a call.

To change the Ring Type for the Wireless Telephone press **FCV**. Press **# >** until Ring Type displays, then press **0**. Press **0** to select Telephone Ring. The ring types will display one at a time. The ring type currently set on your Wireless Telephone displays with an asterisk (*). Press **0** when you see the desired ring type; press **# >** to bypass a ring type. Normal is the factory set default. Vibrator rings

work only if your Wireless Telephone has the optional vibrating ringer.

Auxiliary Ring Type

The Wireless Telephone supports two Auxiliary Ring types to be used with SpectraLink's Open Applications Interface (OAI). Press **FCV** then press **# >** until Ring Type displays. Press **0**, then press **# >** until Auxiliary Ring 1 or Auxiliary Ring 2 displays. Follow the prompts to select a ring type.

Set Extension Number

Press and hold **FCV** then press **# >** until EXTENSION displays. Press **0**, then enter the extension number using the keypad. Press **END** when done. The extension number will display each time the Wireless Telephone is turned on.



Headset

The Wireless Telephone Headset

SpectraLink offers optional headsets for use in noisy environments or if you need to have your hands free while talking on the Wireless Telephone.

To use the headset, simply plug it into the jack on the side of the Wireless Telephone. The headset is specially designed to work properly with The Link Wireless Telephone. We do not recommend using other headsets.

Ring with Headset

If your headset is plugged in and your ringing mode is set to soft (option 1), you must be using the headset to hear ringing.

Answer A Call

To answer a call when your headset is plugged in, press any key except **PWR**.

Low Headset Volume

To set the low volume level for your headset, plug in the headset. Press **FCN** until Volume Level displays. Use the keypad to enter a volume level from 1 (softest) to 8 (highest). High volume is automatically set two levels higher than low volume.

About Battery Packs

The Wireless Telephone will need to have its battery pack recharged periodically. The rechargeable (NIMH) Wireless Telephone battery pack gives you two hours of talk time or 20 hours of stand-by time. Stand-by time is when the phone is turned on, but you are not using it.

Indications of Low Battery

The Wireless Telephone will notify you when the charge on the battery pack becomes low. If you are using the Wireless Telephone, the BATT message will display and you will hear a soft beep through the earpiece every six seconds. When you notice these signals you have two minutes to terminate your conversation.

If the Wireless Telephone is idle, you will hear a brief modulated ring signal and the LOW BATTERY message will display. Your Wireless Telephone will not operate until you replace the battery.


Setting Up the Quick Charger

The Quick Charger uses 120 Volt AC current and operates in a 32° to 122° F (0° to 40° C) environment. Simply connect the charger to an appropriate wall outlet and it's ready for use.

and Battery Packs

To insure proper charging and to prevent damage, the battery pack should be at room temperature, 50° to 85° F. (10° to 30° C) when you charge it.

The Quick Charger holds a single battery pack and can charge it in approximately an hour and a half.

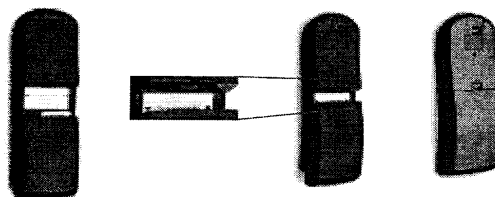

To replace the battery pack on the Wireless Telephone:

1. Hold the pack above the Wireless Telephone.

2. Position the pack so that the top edge of the pack aligns with label as shown.
3. Press down gently and slide the pack upwards.

Removing and Replacing the Battery Pack on the Wireless Telephone

To remove the battery pack, press down on the tab button above the pack and slide the pack toward the bottom of the Wireless Telephone until it stops, then lift up.

To replace the pack, first properly align the top of the pack with the arrows on the label on the back of the Wireless Telephone. Maintain gentle pressure and slide the pack toward the top of the Wireless Telephone until it clicks into place. Press the pack down gently. You should not have to force it against the Wireless Telephone.

Take care not to short the battery contacts on the pack with metal objects such as coins, keys or paper clips. Shorting the contacts can cause permanent damage.

Using the Quick Charger

Place the battery pack on the charger by gently sliding the pack upward into the stand in a manner similar to installing it on the Wireless Telephone. If placed correctly, the light on the Quick Charger will shine solid green. When the pack is fully charged, the green light will begin to flash.

Guide to The NetLink Wireless Telephone™

Keypad & Indicators



Functions

FUNCTION	ACTION
Power on	Press and hold POWER until double chirp
Power off	Press and hold POWER until single chirp
Answer call	Press CALL
Hang up	Press END
Place call	Press CALL , dial number
Select line	Press CALL then press LINE , then select line number (1-9)
Adjust volume during call	Press VOL while you are talking to toggle between base volume level and a louder volume level
Put call on hold	Press HOLD
Mute/Unmute microphone	Press FCM then 1
Feature Menus (while phone is in use)	Press FCM to display menus. Enter key sequence for desired feature or function, or press FCM to display more options
User Preferences (while phone is idle) (Base Volume, Ring Type, Ext. No.)	Press and hold FCM to display menus Press 2 Next menu item Press 3 Previous menu item Press 4 to Change item Press END to exit menu

Status Indicators

INDICATOR	DESCRIPTION
NO SVC	You are outside of the coverage area. Walk back into the covered area.
BATT	You will also hear a beep in the earpiece. Your battery needs to be recharged.
MSG	You have a message.

Maintenance

General Care of the Wireless Telephone and Chargers

This section applies to the Wireless Telephone, Charging Stand and the Quick Charger equally.

The Wireless Telephone and chargers have been designed to withstand the wear and tear of normal use; however, avoid dropping the Wireless Telephone or knocking it against hard surfaces. Carrying the Wireless Telephone in a holster or carrying case will help to protect it.

There are no serviceable parts in the Wireless Telephone or chargers. You should not open the Wireless Telephone case nor disassemble the chargers. Doing so will void your warranty.

Turn off the Wireless Telephone and unplug the charger before you clean them. Never immerse either in water. Clean their exteriors, including the charging contacts, with a cloth that has been slightly moistened with water. Take care not to exert undue pressure on the charger electrical contacts while wiping.

Do not use any chemical cleaners. They can harm the plastic shell. If necessary, a small amount of Fantastik® spray cleaner can be applied to the cloth, but do not spray the cleaner onto the Wireless Telephone or charger.

Tips For Use

- Before you use the Wireless Telephone, the battery must be charged. See Battery Packs.
- You can only use the Wireless Telephone with your facility's telephone system. It is not a public cellular phone.
- The **PWR** key turns the Wireless Telephone on and off. The **START** and **END** keys begin and end calls. When you finish a call, press the **END** key, not the **PWR** key.
- Keep the Wireless Telephone away from your ear when it is ringing.
- The microphone is in the telephone's lower right corner. This is a sensitive microphone that works well when the telephone is correctly positioned on your ear. There is no need to speak directly into the microphone, but do not cover it with your hand or cheek when talking on the Wireless Telephone.
- The Wireless Telephone's LCD panel displays information about the status of your Wireless Telephone and prompts you about features.
- If the Wireless Telephone's battery is low, you will hear a soft beep and see the BATT message in the display.
- Improper disposal of battery packs can damage the environment. Dispose of batteries properly.
- You can control the Wireless Telephone's volume level and the type of ring. See Setting User Preferences.
- To protect the Wireless Telephone, use a carrying case.

**If you need assistance with your Wireless Telephone,
call this number:**
