




HYPETACTIVES™



12+ YRS
EXPERT

2.4GHZ PERFORMANCE VEHICLE

INSTRUCTIONS

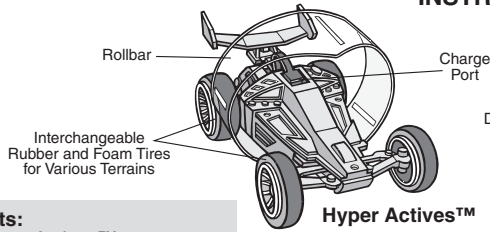

Hyper Actives™

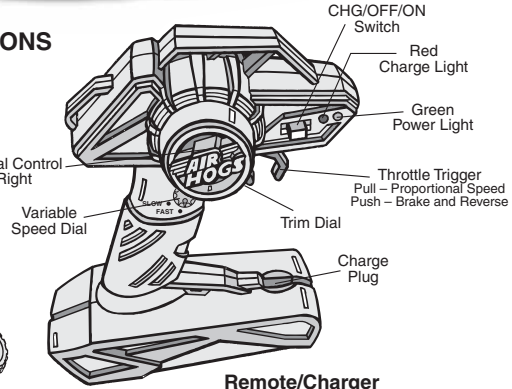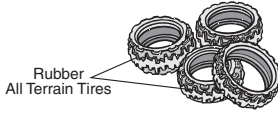


Remote/Charger

Contents:

- 1 x Hyper Actives™
- 4 x Rubber All Terrain Tires
- 4 x Rubber Foam Indoor Tires
- 1 x Pistol Grip Remote/Charger
- 1 x Instruction Guide

INSTALLING/REPLACING THE BATTERIES

1. Open the battery door with a screwdriver (not included).
2. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
4. Replace battery door securely.
5. Check your local laws and regulations for correct recycling and/or battery disposal.

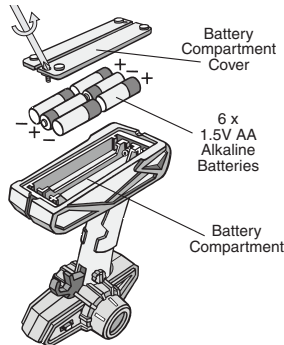


BATTERY SAFETY INFORMATION

- Remote charger requires 6 x 1.5V AA alkaline batteries (not included).
- Batteries are small objects.
- Replacement of batteries must be done by adults.
- Follow the polarity (+/-) diagram in the battery compartment.
- Promptly remove dead batteries from the toy.
- Dispose of used batteries properly.
- Remove batteries for prolonged storage.
- Only batteries of the same or equivalent type as recommended are to be used.
- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries.
- DO NOT mix different types of batteries, i.e.: alkaline/standard (carbon-zinc) or rechargeable batteries.
- DO NOT use rechargeable batteries.
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.
- DO NOT store your car or controller near heat or in direct sunlight.

HOW TO CHARGE YOUR HYPETACTIVES™

1. Turn vehicle OFF.
2. Turn remote/charger OFF.
3. Remove charge plug from storage base.
4. Remove charge cable from bottom storage groove.
5. Remove vehicle charge port cover.
6. Carefully insert the charge plug all the way into the vehicle's charge port.
7. Set the remote/charger switch to CHG.
8. The red charging light will turn on and charging will begin when it starts to flash. After 30 to 50 minutes the charging will be complete and the red charge light and green power light will both start to flash.
9. When charging is complete, set the charge switch to OFF.
10. Remove charge plug from the vehicle charge port.
11. Replace vehicle charge port cover.
12. Store charge plug cable and charge plug in remote/charger base.

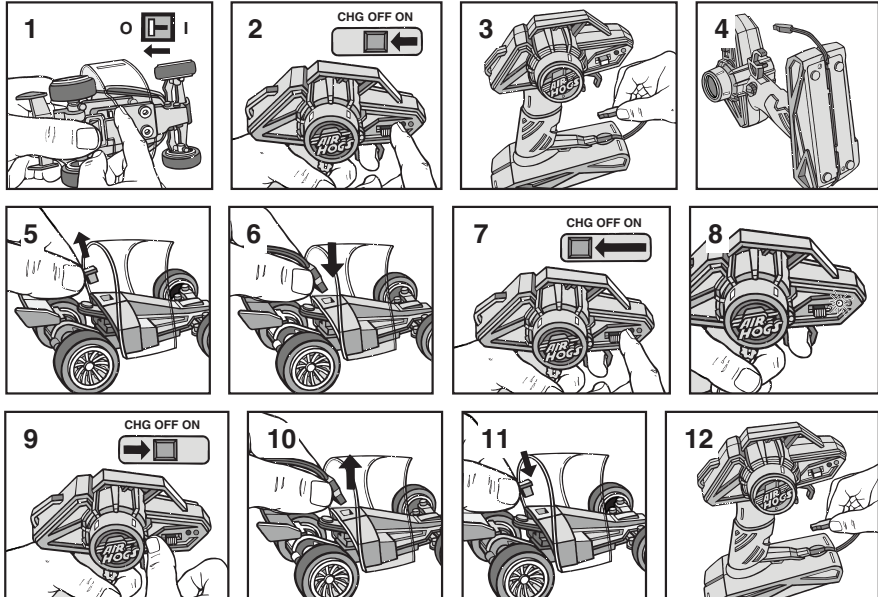

NOTE: 1. If the charge light and power light are flashing alternatively while charging, there may be a bad cable connection. Check that cable and plug are connected correctly and repeat charging steps 1 to 6.
2. The remote control will automatically shut off after idling for about


5 minutes. To reactivate turn off and on.

3. When the remote control is in either ON status or CHARGE status and the green power light is flashing, it means that the battery level is low and the batteries need to be replaced.

USING THE REMOTE/CHARGER

Forward/Reverse, Left/Right.


1. Turn vehicle ON.
2. Turn remote/charger ON.
3. Pulling the throttle trigger back moves the vehicle forward. Pushing the throttle trigger forward, brakes then reverses the vehicle.
4. To move the vehicle to the right turn the directional control to the right.
5. To move the vehicle to the left turn the directional control to the left.

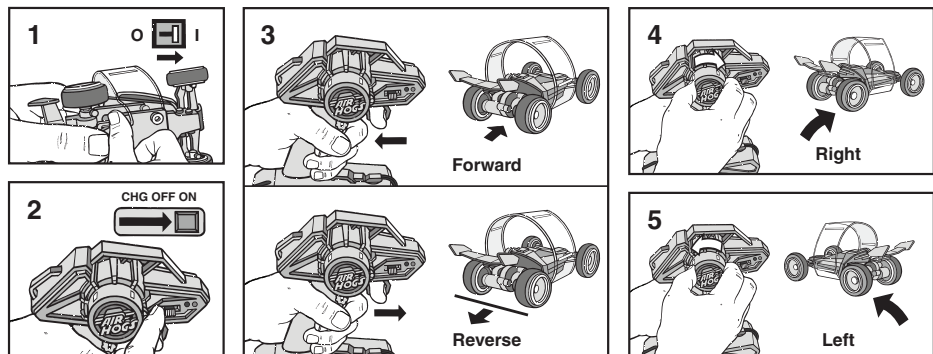

VEHICLE TRIM ADJUSTMENT


If the vehicle is not driving straight when you have the directional control wheel in the forward position, use the trim dial to correct the problem.

1. If the vehicle turns to the right, slowly turn the trim dial to the left until the vehicle drives straight.
2. If the vehicle turns to the left, slowly turn the trim knob to the right until the vehicle drives straight.

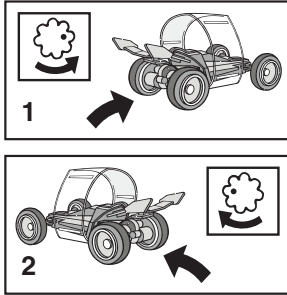


VARIABLE SPEED DIAL

Moving the variable speed dial to the right will limit the throttle travel decreasing the amount of speed available. Moving the dial to the left will activate full throttle and maximum speed.

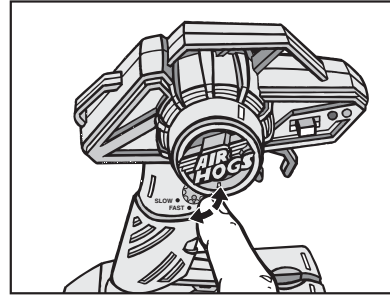


CHANGING TIRES

Before using your Hyper Actives™ outdoors, carefully remove the rubber foam indoor tires and replace them with the rubber all terrain outdoor tires!

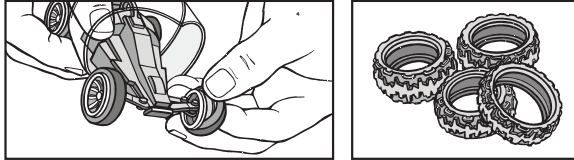


WHEN FINISHED PLAYING


Turn vehicle OFF.

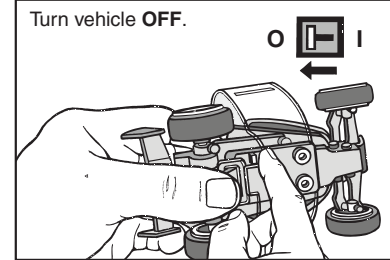

Turn remote/charger OFF.

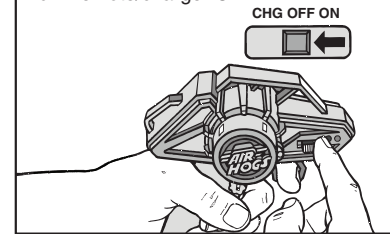

SELF-RIGHTING ROLLBAR

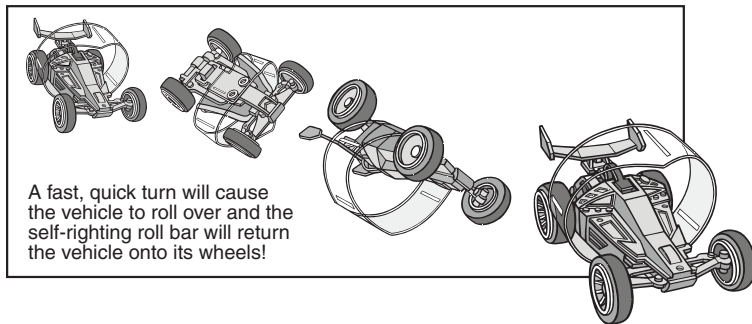

A fast, quick turn will cause the vehicle to roll over and the self-righting roll bar will return the vehicle onto its wheels!

TROUBLESHOOTING GUIDE

PROBLEM	CAUSE	SOLUTION
Vehicle is slow or will not move.	<ol style="list-style-type: none"> 1. Batteries in the controller need to be replaced if green power light is flashing. 2. Vehicle is out of range of controller. 3. There is hair or debris stuck in the wheels or wheel axles. 4. Batteries are installed incorrectly. 5. Improper surface for vehicle. 6. Remote not aimed at vehicle or objects interfering with signal. 7. Remote was inactive for 30 seconds or more and turned itself off to preserve your batteries. 	<ol style="list-style-type: none"> 1. Replace batteries in the remote with new, fresh batteries. 2. Move closer to the vehicle. 3. With the vehicle and remote turned off, have an adult carefully remove the hair or debris from the wheels or wheel axles. Remove debris by blowing gently on the wheel assembly area located on the bottom of the vehicle. 4. With the vehicle and remote turned off, have an adult check that the batteries are installed correctly in the remote. 5. Examples of poor play surfaces are thick grass, sand or pebbly areas. Examples of good play surfaces are tiles, concrete or asphalt. 6. Point remote IR at the vehicle. Ensure there are no objects blocking the controller "line of sight" to the vehicle. 7. Press the ON/OFF button.
Vehicle does not drive in a straight line.	Vehicle requires wheel alignment.	Refer to Trim Adjustment guide above.
My vehicle and/or remote is dirty.	<ol style="list-style-type: none"> 1. Inappropriate driving surface. 2. Dirty hands. 	Ensure the remote and vehicle are off. Have an adult remove the batteries first and replace the battery cover. Slightly dampen a clean cloth in water and wipe toy clean. DO NOT IMMERSE IN WATER and DO NOT USE ANY CHEMICALS. Let the toy completely dry before putting batteries back into clean, dry battery compartment.
Vehicle is not responding or driving on it's own.	<ol style="list-style-type: none"> 1. Using another vehicle remote/charger of the same frequency. 2. Infrared interference from another source. 	<ol style="list-style-type: none"> 1. Only use the remote/charger supplied with this vehicle. 2. Do not operate vehicle around devices that emit other infrared signals.
<p>NOTE: If normal function of the product is disturbed or interrupted, strong electro-magnetic interference may be causing the issue. To reset product, turn it completely off, then turn it back on. If normal operation does not resume, move the</p>		<p>product to another location and try again. To ensure normal performance, change the batteries, as low batteries may not allow full function.</p>

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesirable operation. This equipment has been tested and found to comply with the limits for Class B digital devices pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If not installed and used in accordance with the instructions, may cause harmful interference to radio communications. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful: • Reorient or relocate the receiving antenna • Increase the separation between the toy and the radio or the TV • Consult the dealer or an experienced TV-radio technician for help. **NOTE:** Changes, adjustments or modifications to this unit, including but not limited to, replacement of any transmitter component (crystal, semiconductor, etc.) could result in a violation of FCC rules under part 15 and/or 95 and must be expressly approved by Spin Master Ltd. or they could void the user's authority to operate the equipment.

CANADIAN Class B statement: This Class B digital apparatus meets all of the requirements of the Canadian Interference-Causing Equipment Regulations.

Your Hyper Actives™ is equipped with a Lithium Polymer battery.

SPECIAL LIPO BATTERY INSTRUCTIONS:

- Never charge battery unattended.
- Charge battery in isolated area. Keep away from flammable materials.
- Do not expose to direct sunlight.
- There is a risk of the batteries exploding, overheating, or igniting. Do not disassemble, modify heat, or short-circuit the batteries. Do not place them in fires or leave them in hot places.
- Do not drop or subject to strong impacts.
- Do not allow the batteries to get wet.
- Only charge the batteries with the specified Spin Master™ battery charger.
- Only use the batteries in the device specified by Spin Master™.
- Carefully read the instruction guide, and use the batteries correctly.
- In the unlikely event of leakage or explosion use sand or a chemical fire extinguisher for the battery.
- Batteries must be recycled or disposed of properly.

PRODUCT BATTERY REMOVAL INSTRUCTIONS: Internal battery is installed, product disassembly and battery removal must be performed by an adult. Do not puncture, cut, tear, compress or deform product during disassembly. Ensure product is turned off, then use a screw driver to remove all screws. Separate product body halves to expose internal electronics. When battery is visible in its entirety use scissors to cut a single battery wire, immediately wrap the cut wire end with tape to isolate it, repeat until all battery wires are cut and isolated, and the battery is free from the rest of the product. Dispose of battery in accordance with your local battery recycling or disposal laws. **NOTE:** Opening of product and/or removal of battery will render product inoperative and voids manufacturer warranties, dispose of remaining product components in accordance with local laws.

Spin Master Ltd., 450 Front Street West, Toronto, ON M5V 1B6 Canada
Spin Master Inc., PMB #10053, 300 International Drive, Suite 100,
Williamsville, NY 14221, USA
Spin Master Toys Far East Limited, Rm #1113, 11/F, Chinachem Golden Plaza,
77 Mody Rd., Tsimshatsui E., Kowloon, HK

North American Consumer Information
Phone: 1-800-622-8339
Email: customer@spinmaster.com
www.spinmaster.com

Air Hogs®, related trademarks & © 2011 Spin Master Ltd. All rights reserved.
This product conforms to safety requirements of ASTM F-963 & CHPA. Please retain this information for future reference. • Please remove all packaging materials before giving to children. • An adult should periodically check this toy to ensure no damage or hazards exist, if so, remove from use. • Children should be supervised during play. • Keep addresses and phone numbers for future reference. • The item inside this package may vary from the photographs and/or illustrations. MADE IN CHINA.

20043334, 20043335, 20049415, 20049426 REV 0
T20418_0001_20043334_NEN_IS_R1

