

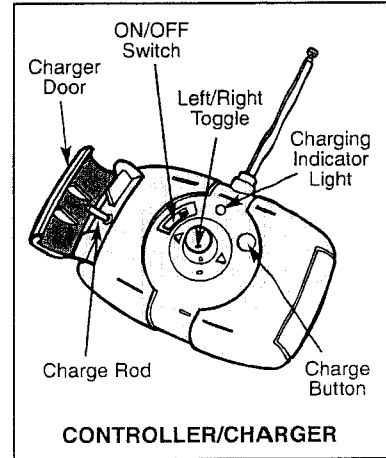


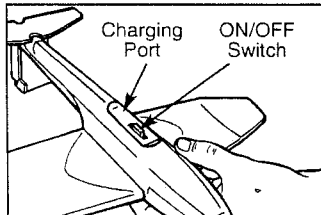

RUSH™

INSTRUCTIONS

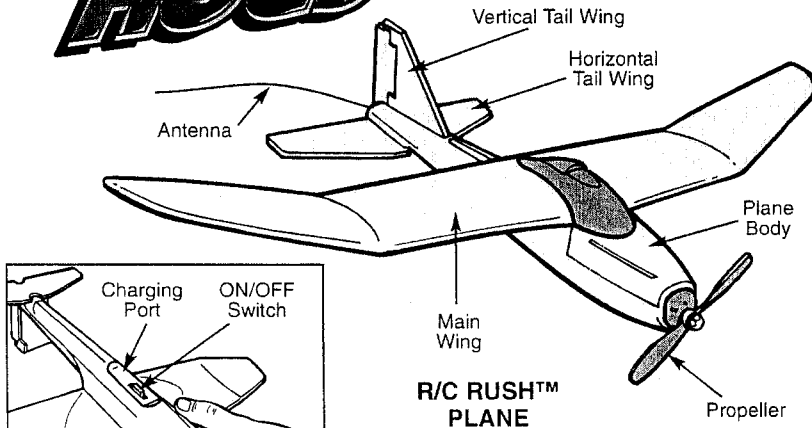


Contents:
 1 R/C Rush™ Plane
 1 Controller/Charger

BATTERY INSTALLATION FOR YOUR CONTROLLER

CONTROLLER

1. Use a Phillips screwdriver to loosen the screw in the battery compartment door.
2. Remove the battery door.
3. Insert six 1.5 Volt AA batteries (not included).
4. Replace battery compartment door and refasten the screw.

IMPORTANT:
 Be sure to insert the batteries as indicated inside compartment with the correct polarity.

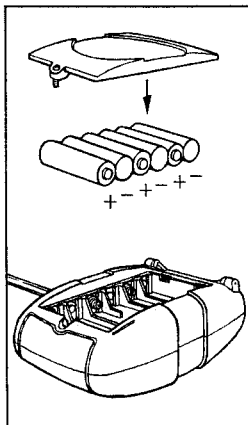



IMPORTANT BATTERY INFORMATION

- Battery installation should be performed by an adult.
- Use only batteries recommended. Be careful to install the batteries with the correct polarity, as indicated.
- Do NOT mix old and new batteries.
- Do NOT mix alkaline, standard, or rechargeable batteries.
- Do NOT attempt to charge non-rechargeable batteries.
- Do NOT short circuit the supply terminals.
- Exhausted batteries are to be removed, as they will adversely affect the performance.
- Caution: Plane contains a rechargeable cell. If fluid leaks from the plane, avoid contact with eyes and dispose of the plane.
- Only use charger supplied with this package.
- Do NOT use any other source to charge your R/C RUSH™.

ATTACHING THE MAIN WING


STEP 1


Align the MOUNTING PEGS on the underside of the MAIN WING with the ATTACHMENT HOLES on the upper surface of the PLANE BODY.

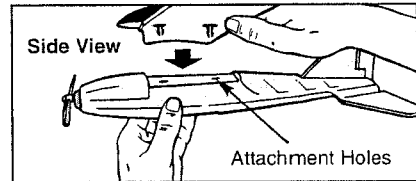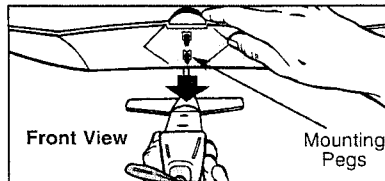

STEP 2

 Push the MAIN WING down onto the PLANE BODY until you hear the MOUNTING PEGS "CLICK" into place.


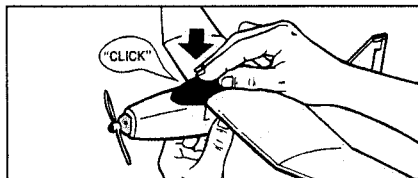




CHARGING YOUR R/C RUSH™ PLANE


STEP 1

Make sure that the ON/OFF switch on the PLANE and the CONTROLLER/CHARGER are "OFF".

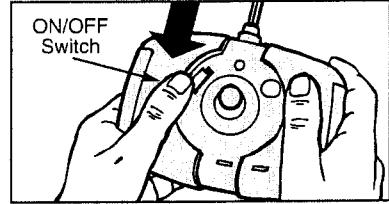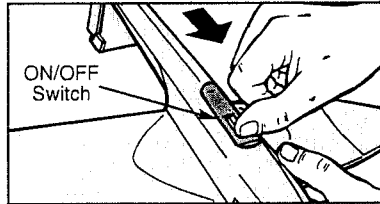


STEP 2

Open the CHARGER DOOR on the CONTROLLER/CHARGER.

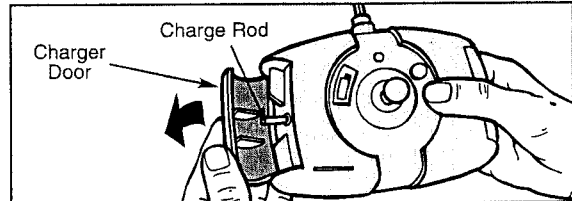


STEP 3

Insert the CHARGE ROD into the plane's CHARGING PORT.

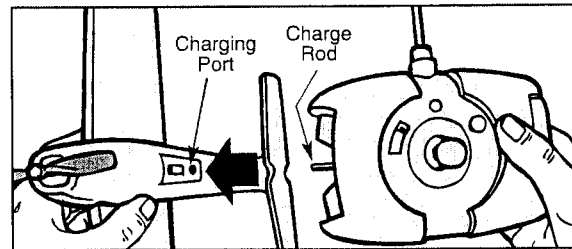

STEP 4


Push and hold down the CHARGE BUTTON for 2 minutes. The CHARGING INDICATOR LIGHT will blink during charging.

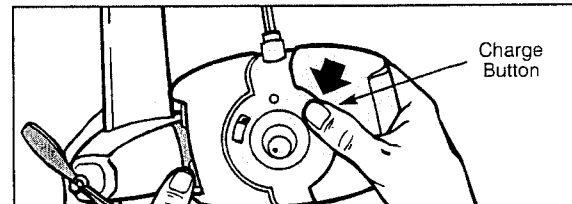

IMPORTANT: For your first flight, the charging process should be repeated twice before flying (for a total of 4 minutes). Subsequent flights only require a single 2 minute charge.



STEP 5


Carefully remove the plane from the CHARGE ROD.

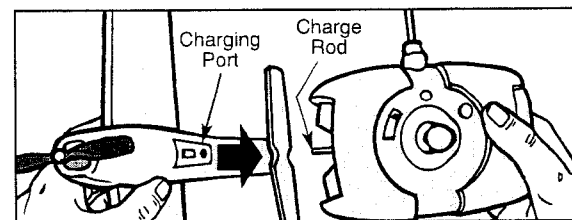

STEP 6

  Close the CHARGER DOOR.

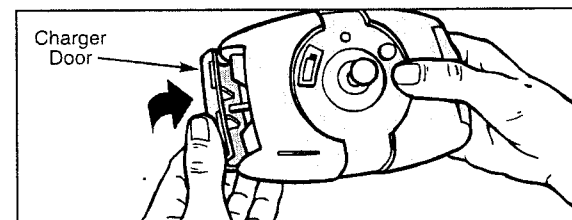




FLIGHT INSTRUCTIONS

IMPORTANT: Always launch the plane against the wind direction for best performance. Do not fly in winds greater than 9 MPH. HIGH WINDS WILL LIMIT AND MAY PREVENT YOUR ABILITY TO CONTROL THE PLANE. USE IN HIGH WINDS MAY ALSO RESULT IN LOSS OF, OR DAMAGE TO YOUR PLANE.

STEP 1


Using the knob on the tip of the antenna, pull the antenna until it is fully extended.

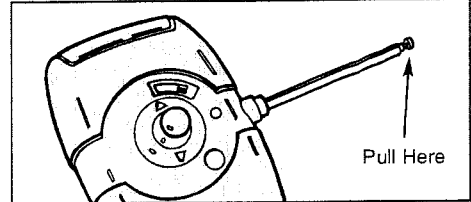

STEP 2


Turn the ON/OFF SWITCH on the plane to "ON".

NOTE: Engines will NOT start until you turn ON the CHARGER/CONTROLLER (See Step 3).

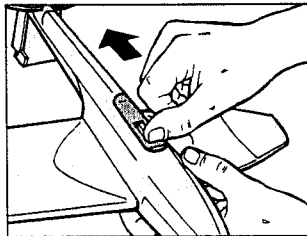


STEP 3

While holding the plane in one hand, use your other hand to set the CHARGER/CONTROLLER ON/OFF switch to the "ON" position. **NOTE:** Engines will start.

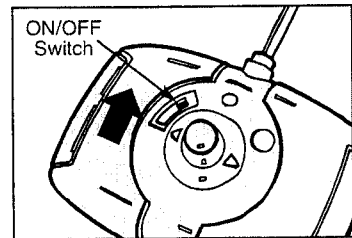



STEP 4

Immediately launch your R/C Rush™ at a 45° angle against the wind for best take-off and flight results.


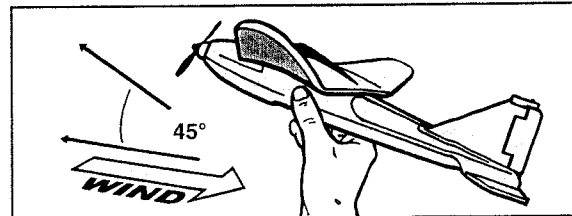


STEP 5


Use the LEFT/RIGHT TOGGLE to control your R/C Rush™.

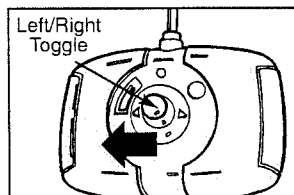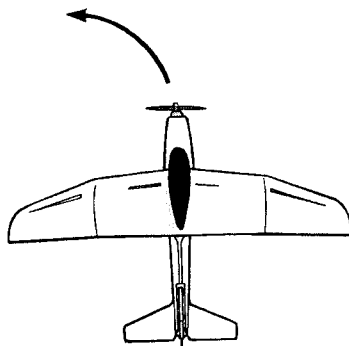

TOGGLE LEFT to turn left.

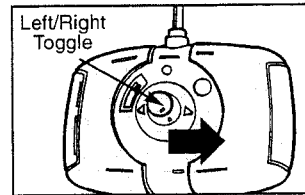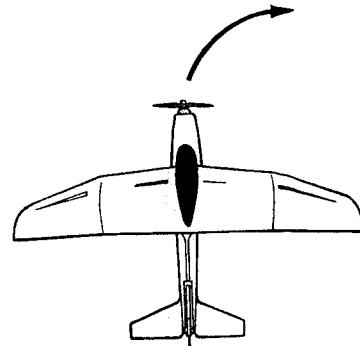

TOGGLE LEFT to turn right.

 

IMPORTANT INFORMATION – ADULT SUPERVISION RECOMMENDED

Keep propeller clear from face, eyes, hair, and fingers. Point plane away from face when launching. DO NOT launch at people or animals. Use caution; make sure people around you know you are playing with Air Hogs®. Recommended for use in wide-open, grassy area. DO NOT fly near overhead wires, trees, buildings, or other obstructions. DO NOT fly in rain, electrical storms, snow, or other adverse weather conditions. Fly on warm sunny days, with little wind. DO NOT fly in temperatures below 45°F/7°C. Use alkaline batteries only. Use only the Charger and Controller included in this package.

TROUBLE-SHOOTING GUIDE

| PROBLEM | CAUSE | SOLUTION |
|-------------------------------------|--|--|
| Plane crashes OR will NOT fly. | 1. Not enough charge. 2. Improper wing alignment. | 1. Please refer to the "Charging Your R/C Rush™" section for the proper charging process. 2. Ensure that the MOUNTING PEGS under the MAIN WING are inserted into the ATTACHMENT HOLES on the PLANE BODY. You will hear a "CLICK" sound. Also make sure that the HORIZONTAL WING is parallel to the MAIN WING. |
| Plane does not respond to controls. | 1. The ANTENNA is not fully extended. 2. The batteries in the controller are not working. | 1. Make sure that the ANTENNA is fully extended. 2. Check to ensure that the batteries were inserted with the correct polarities. If they were inserted properly, and the problem persists, try installing new batteries. |

FCC REQUIREMENT

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
 Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
 NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 Reorient or relocate the receiving antenna.
 Increase the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
 Consult the dealer or an experienced radio/TV technician for help.

WARRANTY (U.S.A.)

Spin Master Ltd. warrants to the original consumer purchaser, that this product is thoroughly tested and inspected before shipment and is guaranteed to be free of factory defects in materials and workmanship for ninety (90) days (unless specified in alternate warranties) from the date of purchase.
 In the event of such a defect within the warranty period, Spin Master Ltd., at our sole option, will repair or replace the product or provide you with another product of equal value. Repair or replacement shipment is free of charge. Shipping replacement may take 2 to 6 weeks, depending on customer's location.
 In the event of a defect covered under this warranty, please call the toll-free number listed below. Many problems can be solved in this manner. If necessary, you will be instructed to return the defective part or unit, packed securely, postage prepaid and insured by the customer, to the address below. Enclose your name, address, dated sales receipt, and a brief explanation of the defect. There may be an additional handling charge if you send the entire toy.
 The warranty is valid if and only if the product has been operated in accordance with the instructions. This warranty does not cover worn or defective batteries, damage resulting from neglect, unauthorized modification, accident, misuse, abuse, any action or omission which constitutes a deviation from the instructions or from the use of accessories or parts not manufactured by Spin Master Ltd. If the product is returned without a dated sales receipt the product is excluded from coverage under this warranty.
 Spin Master Ltd.'s liability for defects in material and workmanship under this warranty shall be limited to repair or replacement, at our sole option, and in no event shall we be responsible for accidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation) or refunds. This warranty is exclusive, and is made in lieu of any express or implied warranty. This warranty is valid only for products sold in the U.S.A. This warranty gives you specific legal rights and you may have other rights, which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.
 Spin Master Ltd. reserves the right to improve the design of any product without assuming any obligation to modify any product previously manufactured.

If you have a problem, please contact our Customer Care Centre below for help.

SPIN MASTER LTD.
 CUSTOMER CARE CENTRE
 450 Front Street West
 Toronto, Ontario M5V 1B6 CANADA
 TOLL-FREE NUMBER 1-800-622-8339
 (valid only in North America)
 Hours: 8:00 A.M. – 5:00 P.M.
 Eastern Time: Monday – Friday.

Air Hogs® is a registered trademark and R/C Rush™ is a trademark of Spin Master Ltd.
 © 2003 Spin Master Ltd. All rights reserved.
 Conforms to safety standards ASTM F963-96a, EN71 Regulatory Requirements. Products and colors may vary. MADE IN CHINA.

Asst. #44041
 U.S. English REV 3

