



LONG RANGE WALKIE TALKIES

Ages 6 and up
70437

Requires three AAA batteries (LR03), not included.

Warning: Do not hold close to the ear. Misuse may damage hearing.

Important: Please save this instruction sheet. It contains valuable product information.

FUNCTION DESCRIPTION

Belt clip: The belt clip is attached for easy use.

LCD Panel: Displays current channel selection and other radio status symbols.

POWER/DOWN BUTTON: Press and hold the button to turn your unit on/off. Press the button to decrease the speaker volume.

MENU/UP BUTTON: Press and hold the button to Channel and function selector. Press the button to increase the speaker volume.

PTT/CALL button: Press and hold PTT/CALL button to transmit. Press PTT/CALL button twice to Call.

LCD PANEL ICON DESCRIPTIONS

Receiving icon, displayed when receiving a signal

Transmitting icon, displayed when transmitting a signal

Display of current volume

Displayed during the Channel Scan mode

Display of the current battery level

Channel number

OPERATION

Turning the unit ON

- Press and hold the button. The unit will beep and the LCD display will display the current channel.

Turning the unit OFF

- Press and hold the button. The unit will beep and the LCD display will turn blank.

Adjusting speaker volume

- Press the button to increase the speaker volume.
- Press the button to decrease the speaker volume.
- The speaker volume level is indicated by the number of bars displayed in the lower left corner of the LCD display.

RECEIVING COMMUNICATION

- When the unit is switched on and not being used for speech or calling, it is always in the receiving mode.
- Pressing the PTT/Call button automatically overrides and turns off the receiving mode.

Calling another radio

- Turn the volume up to an audible level.
- Set both units to the same channel.
- Press PTT/CALL button twice to Call. The other unit will make a 2 second call tone.

Changing channels

The COMMUNICATOR has multi-channels. To change channels:

- Press and hold the button until the current channel number and (ch) icon flash on the LD display.
- While the channel number is flashing:
 - Press the button to move to a higher channel.
 - Press the button to move to a lower channel.
- Press and hold the button to choose the desired channel and return to normal mode, or press the PTT/CALL button.

MONITOR

This feature helps in receiving signals at maximum range, but will pick up loud static signals too.

- Press the on and buttons at the same time to activate the MONITOR.
- Press the on or buttons to change the speaker volume.
- Press the PTT/CALL button to restore to normal.


CHANNEL SCAN

- Your radio can scan across 14 channels allowing it to search for other radios without changing channels. To scan:
 - Press and hold the button until the current channel number and (ch) icon flash on the LCD display.
 - Press the PTT/CALL button to select the SCAN feature.
 - Press the button to ON to activate the channel scan. The channel number will run rapidly on the display. When a signal is detected, the channel scan pauses keeping the active signal broadcasted. Press the button to search for another active channel.
 - To stop the scanning operation, press the PTT/CALL button again.

Low battery indicator

When the batteries need to be changed, the battery level icon will flash. To ensure uninterrupted communication, replace the batteries as soon as possible.

Long range walkie talkie
Model: 74047
RF Power: 0.5W
Freq.: 462.5625-467.7125MHz

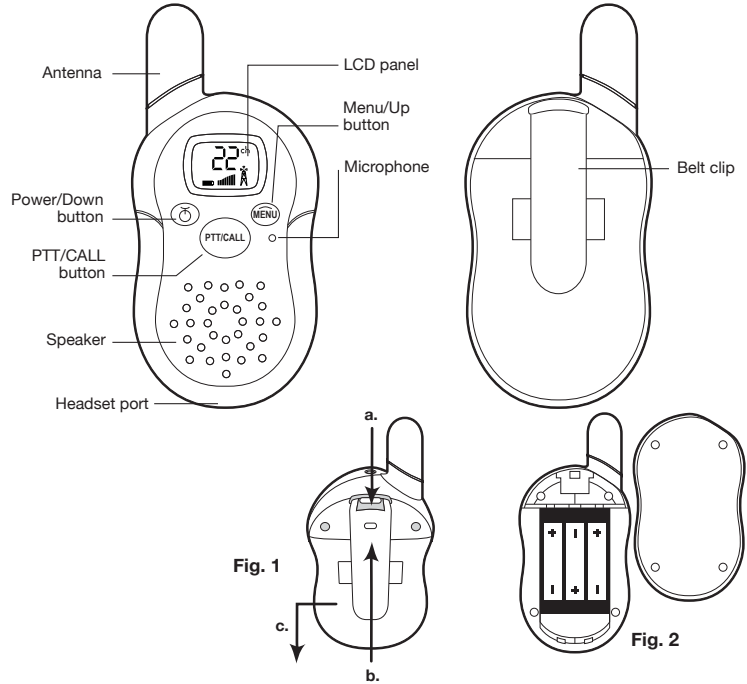

ATTENTION ADULTS— TO REPLACE BATTERIES

The Long Range Walkie Talkies requires three AAA batteries (LR03), not included.

- Remove belt clip: (a.) pinch tab inside the top of the clip; (b.) slide clip up to release; and (c.) slide battery cover down and off. (Fig. 1)
- Use a small Phillips screwdriver to loosen the screw in the BATTERY COVER. NOTE: Screws will not detach from battery compartment cover.
- Remove the cover.
- Place batteries in the compartment as shown. (Fig. 2)
- Replace BATTERY COVER and tighten screws.

BATTERY SAFETY

- Only adults should install and replace batteries.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Non-rechargeable batteries are not to be recharged.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short-circuited.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose batteries in a fire; they may explode.
- Dispose of batteries safely.

Warning! Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warning: Any adjustment to this equipment is recommended to be performed by or under the immediate supervision and responsibility of a person certified as technically qualified to perform transmitter maintenance and repair duties in the private land mobile services and fixed services by an organization or committee representative of users of those services.

Warning: Replacement of any transmitter component (crystal, semiconductor, etc.) for this equipment could result in violation of FCC rules.

SAFETY INFORMATION

Your wireless hand-held portable transceiver contains a low power transmitter. When the Push-to-Talk (PTT) button is pushed it sends out radio frequency (RF) signals. The device is authorized to operate at a duty factor not to exceed 50%. In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless devices.

CAUTION: To maintain compliance with the FCC's RF exposure guidelines hold the transmitter and antenna at least 1 inch (2.5 centimeters) from your face and speak in a normal voice, with the antenna pointed up and away from the face.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This unit has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this unit does cause harmful interference to radio or television reception, which can be determined by turning the unit off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the unit and receiver.
- Connect the unit into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Body Worn configuration

For body worn operation, this unit has been tested and meets FCC RF exposure guidelines when used with the supplied belt-clip. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Foreign patents pending. Product colors and specifications subject to change.

LONG RANGE WALKIE TALKIES 70437-4000-G1 PS 5/11

TM & © Spin Master Ltd. All rights reserved.

SPIN MASTER LTD., 450 FRONT ST. WEST, TORONTO, ON M5V 1B6 CANADA

Spin Master Inc., PMB #10053, 300 International Drive,

Suite 100, Williamsville, NY 14221 customercare@spinmaster.com

1-800-622-8339 • www.spinmaster.com

MADE IN CHINA

