

SETUP & OPERATION INSTRUCTIONS

NXLXCVR3000 900 MHz WIRELESS CONTROL

Connecting The Transmitter

1. Connect the transmitter's interface cable to the 8-pin female end of the adapter cable, then plug the 5-pin male end of the adapter cable into *either* of the controller's control cable jacks. (See Figure 1)
2. Supply power to the controller using the supplied 12-volt DC wall transformer. Connect the transformer to the power receptacle on the back of the controller before plugging the wall transformer into a live outlet. (See Figure 1)
3. Turn the controller's **POWER** switch *ON*.



When the **POWER** switch is turned *ON* the controller's LCD will read:

To Continue Last Game Press Enter
To Start New Game Press Reset

Pressing either **ENTER** or **RESET** will enter the controller's game mode. From here, the operator can begin scoring the game or enter the option menu where the game may be changed and keyboard options such as contrast and clock functions may be set. For complete and detailed operating instructions for your scoreboard model(s), please refer to the **OPERATION MANUAL** included with the scoreboard(s).

IMPORTANT FCC STATEMENTS

FCC ID: NXLXCVR3000

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION! Any modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This is set forth by FCC 47 CFR 15.21.