



SpotCell™ Coverage Extension Kit Installation Guide

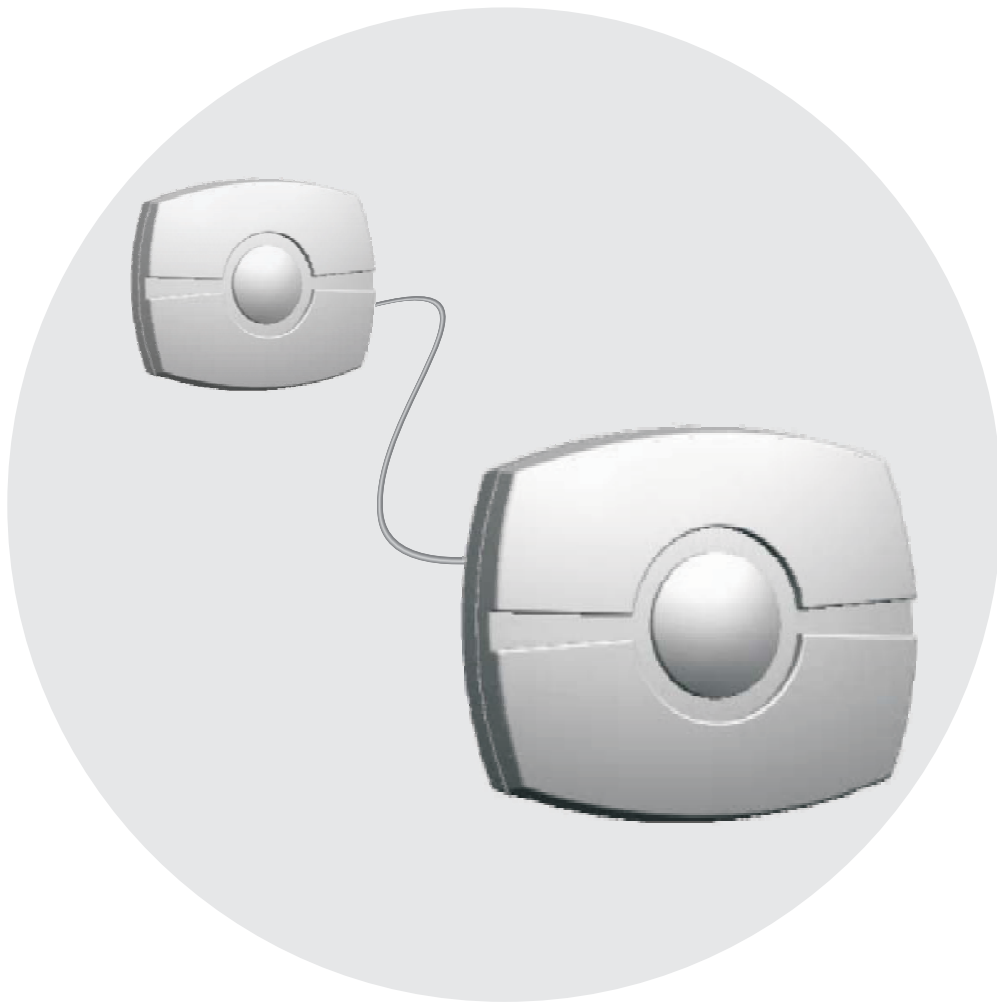


The SpotCell Coverage Extension kit extends SpotCell system coverage into hard to reach places that are blocked by obstructions such as dense walls or shadowed by elevator shafts or duct work.

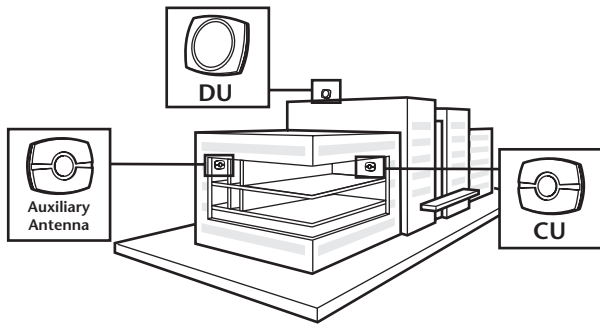


1. Parts List

- Extension antenna
- Adapter cable
- coax connector
- 25m RG6 cable

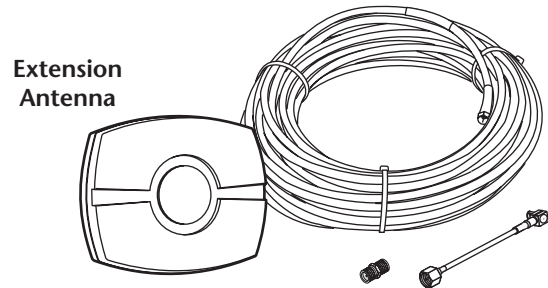

2. Extension antenna location


The only limitations to mounting the extension antenna are the length of the RG6 cable and the minimum required distance (10 cm) separating the Auxiliary antenna and CU.

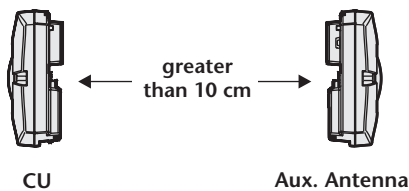

The SpotCell Coverage Extension should be connected to the Coverage Unit (CU) only after the SpotCell 100 or SpotCell 200 system has been properly installed.


3. CU connection

Connect the Adapter cable to the auxiliary antenna (MCX) connector on the back of the CU. The CU can be powered and operational while connecting the auxiliary antenna.

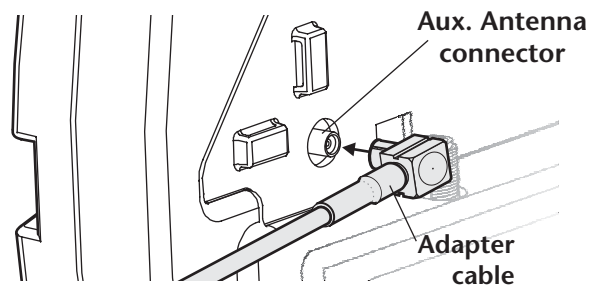


4. Adapter cable to RG6

Join the other end of the adapter cable to one end of the provided RG6 cable with the supplied connector.

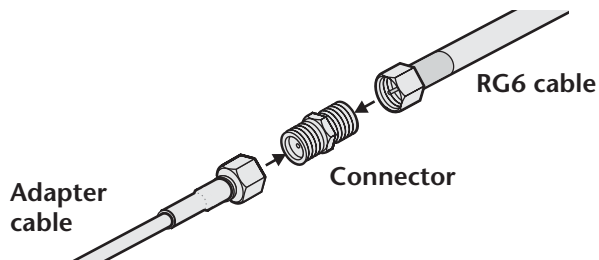

5. Connect RG6 to Auxiliary Antenna

Connect the other end of the RG6 cable to the F-connector on the auxiliary antenna.

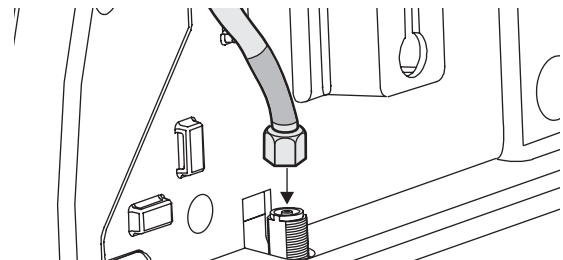

Finally, mount the antenna in a suitable location on the wall or ceiling.

LIMITED WARRANTY

Spotwave Wireless Inc. warrants to the original Purchaser that the Spotwave SpotCell Coverage Extension is free from defects in material and workmanship under normal use and service for a period of 12 months from the date of shipment from Spotwave (the "Limited Warranty Period").