

# DEWALT®



**Instruction Manual  
Guide D'utilisation  
Manual de instrucciones**

**DCR008**

**Rechargeable Mini Bluetooth® Speaker**

**[www.DEWALT.com](http://www.DEWALT.com)**

**If you have questions or comments, contact us.  
Pour toute question ou tout commentaire, nous contacter.  
Si tiene dudas o comentarios, contáctenos.**

**1-800-4-DEWALT**

English (**original instructions**)

---

3

Français (*traduction de la notice d'instructions originale*)

---

17


Español (*traducido de las instrucciones originales*)

---

31

Fig. A

# DCR008

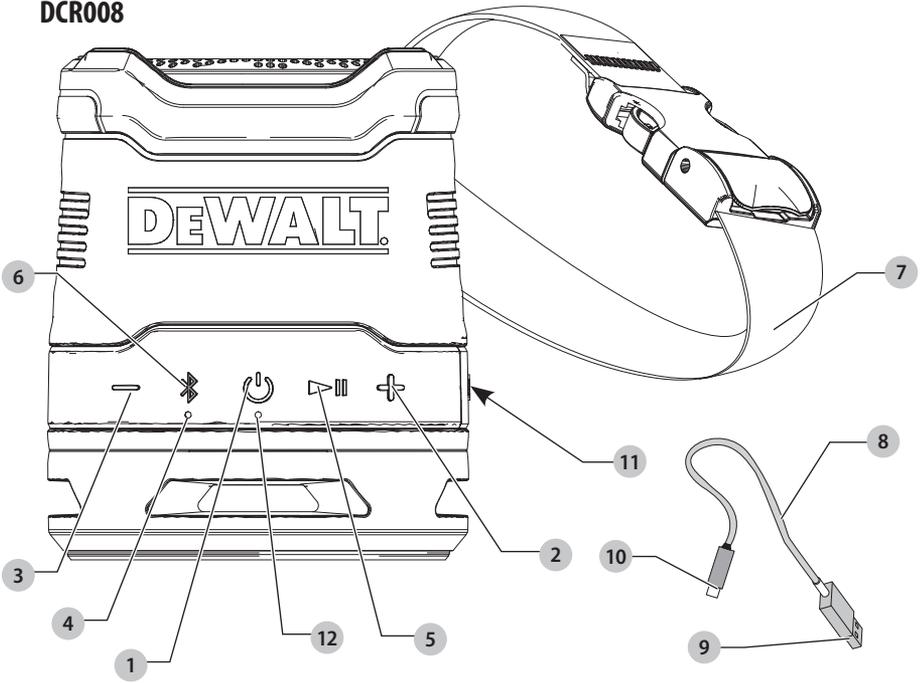


- 1 Power button
- 2 Volume up button
- 3 Volume down button
- 4 Bluetooth<sup>®</sup> status indicator LED
- 5 Play/Pause button
- 6 Bluetooth<sup>®</sup> button
- 7 Carry strap
- 8 Charging cable
- 9 Charger plug
- 10 Charging plug
- 11 Charging port cover
- 12 Charge indicator LED

## Composants

## Componentes

Fig. B

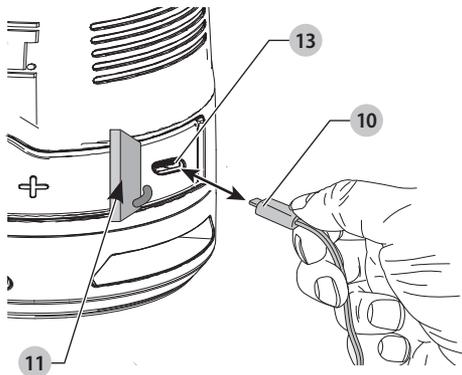



**WARNING: Read all safety warnings and all instructions.** Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.



**WARNING:** To reduce the risk of injury, read the instruction manual.

## Intended Use

This DeWALT Bluetooth® speaker is designed to play/stream audio via a wireless Bluetooth® connection to a mobile phone or other audio device.

**DO NOT** use under wet conditions or in presence of flammable liquids or gases.

**DO NOT** let children come into contact with the unit. Supervision is required when inexperienced operators use this unit.

## Definitions: Safety Alert Symbols and Words

This instruction manual uses the following safety alert symbols and words to alert you to hazardous situations and your risk of personal injury or property damage.



**DANGER:** Indicates an imminently hazardous situation which, if not avoided, **will** result in **death or serious injury**.



**WARNING:** Indicates a potentially hazardous situation which, if not avoided, **could** result in **death or serious injury**.



**CAUTION:** Indicates a potentially hazardous situation which, if not avoided, **may** result in **minor or moderate injury**.



(Used without word) Indicates a safety related message.

**NOTICE:** Indicates a practice **not related to personal injury** which, if not avoided, **may** result in **property damage**.

## IMPORTANT SAFETY INSTRUCTIONS



**WARNING:**

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Use in accordance with the manufacturer's instructions.
- Do not use near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Protect the charging cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.

- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been **damaged in any way, such as charring cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.**
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not use under wet conditions or in presence of flammable liquids or gases.
- Do not keep ears close to this appliance.

## Safety Instructions for Speakers

- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- Do not abuse charging cord. Never carry the speaker by its charging cord. Never pull the charging cord to disconnect from the charging port. Keep the charging cord away from heat, oil and sharp edges.
- Switch off before leaving speaker unattended, when speaker is not in use, before changing accessories or attachments, and before servicing.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- No exposed flame sources, such as lighted candles, should be placed on or near the speaker.
- To reduce the risk of hearing damage, do not place ears too close to the speaker.

## SAVE THESE INSTRUCTIONS FOR FUTURE USE

### Additional Safety Information



**WARNING:** Never modify the speaker or any part of it. Damage or personal injury could result.

The label on your speaker may include the following symbols. The symbols and their definitions are as follows:

V .....	volts	OPM .....	oscillations per minute
Hz .....	hertz	RPM .....	revolutions per minute
min .....	minutes	sfpm .....	surface feet per minute
— — or DC .....	direct current	SPM .....	strokes per minute
⊕ .....	Class I Construction (grounded)	A .....	amperes
.../min .....	per minute	W .....	watts
BPM .....	beats per minute	Wh .....	watt hours
IPM .....	impacts per minute		

Ah.....	amp hours	⚠	.....	safety alert symbol
~ or AC.....	alternating current	☠	.....	visible radiation do not stare into the light
⎓ or AC/DC.....	alternating or direct current	☹	.....	wear respiratory protection
□	Class II Construction (double insulated)	☹	.....	wear eye protection
n <sub>0</sub> .....	no load speed	☹	.....	wear hearing protection
n.....	rated speed	📖	.....	read all documentation
PSI.....	pounds per square inch	☹	.....	do not expose to rain
⊕	earthing terminal			

## BATTERIES

The product is not fully charged out of the carton. Before using the product, read the safety instructions below and then follow the charging procedures outlined.

**NOTE:** If the product is unused for approximately 90 days, fully charge the battery to help prolong the life of the battery.

## Important Safety Instructions for All Integral Battery Charging

**⚠ WARNING:** Read all safety warnings, instructions, and cautionary markings for the battery, charging cable and product. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

**⚠ WARNING:** Only charge product using a certified power adapter that is compliant with applicable country regulations and international/regional safety standards. Using adapters that do not meet applicable safety standards could result in injury.

- Only use the charging cable supplied by the manufacturer for charging.
- The provided charging cable is not intended for any uses other than charging DEWALT rechargeable tools with charging ports. Charging other types of tools may cause their batteries to overheat and burst, resulting in personal injury, property damage, fire, electric shock or electrocution.
- DO NOT expose charging cable to water, rain or snow.
- Pull by the plugs rather than the cord when disconnecting the charging cable. This will reduce the risk of damage to the plugs and cord.
- Make sure that the cord is located so that it will not be stepped on, tripped over or otherwise subjected to damage or stress.
- DO NOT use a charging cable with a damaged cord or plugs. Have them replaced immediately.
- Foreign materials of a conductive nature, such as, but not limited to, grinding dust, metal chips, steel wool, aluminum foil or any buildup of metallic particles should be kept away from the charging plugs and port.
- Always unplug the charging cable from the power supply when there is no tool attached to it.

## Charging Procedure (Fig. A, B)

1. Pull the charging port cover **11** away from the speaker.
2. Insert the charging plug **10** into the charging port **13**.
3. Plug the charger plug **9** into any charging port (such as a computer or wall adapter).  
**NOTE:** Charging takes two hours depending on power supply rating (5V, 1A).
4. The charge indicator LED **12** color is red and continuously on while charging.
5. Charging is complete when the charge indicator LED **12** color is green and continuously on. The battery can be left charging or the USB cable can be disconnected.

## Hot/Cold Delay

When the speaker detects that the battery is too hot or too cold, it automatically starts a hot/cold delay, suspending charging until the battery has reached an appropriate temperature. The speaker then automatically switches to charging mode. This feature ensures maximum battery life.

1. A cold battery may charge at a slower rate than a warm battery.
2. During a hot/cold delay the charge indicator LED **12** will not illuminate. Charging will not activate until the battery temperature reaches between 40 °F and 104 °F (4 °C and 40 °C).
3. Once the battery has reached an appropriate temperature, the charge indicator LED **12** will continuously blink, indicating that the speaker has resumed the charging procedure.

## Important Charging Notes

1. The speaker may become warm to the touch while charging. This is a normal condition, and does not indicate a problem. To facilitate the cooling of the speaker after use, avoid placing the speaker in a warm environment such as in a metal shed or an uninsulated trailer.
2. If the speaker does not charge properly, take the speaker and USB cable to your local service center.
3. You may charge a partially used battery whenever you desire with no adverse effect on the speaker.

## Over Temperature Protection (Fig. A)

When over temperature protection is activated, the charge indicator LED **12** will turn off.

**NOTE:** The unit can still be used during over the temperature protection cycle.

## Checking State of Charge (Fig. A)

- When the speaker is powered ON, press the power button **1** and the speaker will tell you the percentage of charge remaining in the battery.  
**NOTE:** It does not indicate tool functionality and is subject to variation based on product components, temperature and end-user application.

## Charge Indicator LED Status

	LEVEL OF CHARGE	CHARGE INDICATOR LED COLOR
	≥50%	Green
	25% - 50%	Yellow
<b>DURING USE</b>	≤25%	Red and blinking. If 3% or less of charge remains, the speaker will tell you "Battery low, please recharge."
<b>DURING CHARGING</b>	0% - 99%	Red
	100%	No illumination
<b>CHARGING WHILE IN USE</b>	0% - 99%	Red
	100%	Green

## OPERATION

### Button Functions (Fig. A)

#### Power Button

- Press and hold the power button **1** to turn the speaker on or off.
- When the speaker is on, press the power button **1** and the speaker will tell you the percentage of charge remaining in the battery.

#### Play/Pause Button

**When audio device connected via Bluetooth®:** Press the play/pause button **5** to begin playing a selection from the audio device.

- Press the play/pause button **5** again to pause play.
- To advance to the next track, press the play/pause button **5** twice quickly.
- To skip to previous track, press the play/pause button **5** three times quickly.

#### Volume Adjustment Buttons

The volume buttons **2**, **3** can be used to increase or decrease volume on the speaker.

- The volume will increase or decrease one level with a quick press of either volume buttons **2**, **3**.
- The volume will increase continuously with a long press of either volume buttons **2**, **3**.

### Playing Audio

Audio can be played through the speaker via a wireless Bluetooth® connection to a compatible Bluetooth® audio device.

#### Pairing Speaker with a Bluetooth® Audio Device (Fig. A)

- Place the speaker and the Bluetooth® audio device within 3 ft. (1 m) of each other.
- Turn on the speaker by pressing the power button **1**.
- Be sure the Bluetooth® audio device has Bluetooth® turned on. (Please consult your device's instruction manual for specific pairing instructions.)
- Press the Bluetooth® button **6** on the speaker.
- The blue Bluetooth® status indicator **4** will flash twice indicating the speaker is in pair mode.

- Select **DEWALT DCR008** on your device and confirm pairing.
- Once pairing is successful, the Bluetooth® status indicator **4** will remain illuminated blue.
- The speaker will now play audio from your device.

**NOTE:** Audio output power: 1x5W.

#### Bluetooth® Status Indicator

Blink Patterns	Status/Mode
Flashes twice	Speaker is in pairing mode and discoverable by your device.
Solid light	Speaker is connected with a device.
No light	Speaker has timed out and/or is off.

#### Connecting a Previously Paired Bluetooth® Audio Device

If a Bluetooth® device has been previously paired to the speaker, it should automatically reconnect when the speaker is powered on.

**NOTE:** The Bluetooth® audio device must have Bluetooth® turned on to automatically pair.

- If connection does not occur and you are unable to stream audio, please follow the instructions for **Pairing Speaker with a Bluetooth® Audio Device**.

#### Stereo Pairing with Two Speakers

- On both speakers, simultaneously press and hold the Bluetooth® button **6** or three seconds.
- Speakers will announce left channel and right channel to indicate that pairing was successful.
- The Bluetooth® status indicator **4** will be blue on the left channel speaker and the Bluetooth® status indicator **4** will not be illuminated on right channel speaker.

#### Timeout Functionality (Fig. A)

To conserve battery life, the speaker is designed to power off automatically after fifteen minutes of inactivity. This inactivity could be due to the device being unpaired for fifteen minutes or the Bluetooth® connection being broken for the same period of time. If the speaker powers off due to inactivity of any kind, refer to **Connecting a Previously Paired Bluetooth® Audio Device**.

#### Bluetooth® Range

Optimum Bluetooth® streaming range is roughly 30 ft. (9 m) with a straight line of sight to the speaker, but distances up to 100 ft. (30 m) are possible. Physical obstacles, other wireless devices or electromagnetic devices may affect the connection quality.

- If Bluetooth® connection is lost due to exceeding time of separation, exceeding the optimum distance, obstacles or otherwise, reconnecting your device with the speaker may be necessary.

#### Incoming Call

- If your phone receives a call while it is connected to the speaker, it will pause the Bluetooth® connection.
- When the call is disconnected, the speaker will automatically switch back to the Bluetooth® connection.

## MAINTENANCE

Your DEWALT power tool has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper tool care and regular cleaning.

### Cleaning



**WARNING:** *Never use solvents or other harsh chemicals for cleaning the non-metallic parts of the tool. These chemicals may weaken the plastic materials used in these parts. Use a dry cloth only. Never let any liquid get inside the tool; never immerse any part of the tool into a liquid.*

### Accessories



**WARNING:** *Since accessories, other than those offered by DEWALT, have not been tested with this product, use of such accessories with this product could be hazardous. To reduce the risk of injury, only DEWALT recommended accessories should be used with this product.*

Recommended accessories for use with your product are available at extra cost from your local dealer or authorized service center. If you need assistance in locating any accessory, please contact DEWALT. Call **1-800-4-DEWALT (1-800-433-9258)** or visit our website: [www.dewalt.com](http://www.dewalt.com)

### Repairs

The speaker and charging cable are not serviceable. There are no serviceable parts inside the speaker.



**WARNING:** *To assure product SAFETY and RELIABILITY, repairs, maintenance and adjustment should be performed by a DEWALT factory service center or a DEWALT-authorized service center. Always use identical replacement parts.*

## Register Online

Thank you for your purchase. Register your product now for:

- **WARRANTY SERVICE:** Registering your product will help you obtain more efficient warranty service in case there is a problem with your product.
- **CONFIRMATION OF OWNERSHIP:** In case of an insurance loss, such as fire, flood or theft, your registration of ownership will serve as your proof of purchase.
- **FOR YOUR SAFETY:** Registering your product will allow us to contact you in the unlikely event a safety notification is required under the Federal Consumer Safety Act.
- Register online at [www.dewalt.com](http://www.dewalt.com).

## Three Year Limited Warranty

For warranty terms, go to <https://www.dewalt.com/support/warranty>.

To request a written copy of the warranty terms, contact: Customer Service at DEWALT Industrial Tool Co., 701 East Joppa Road, Towson, MD 21286 or call 1-800-4-DEWALT (**1-800-433-9258**).

**LATIN AMERICA:** This warranty does not apply to products sold in Latin America. For products sold in Latin America, see country specific warranty information contained in the packaging, call the local company or see website for warranty information.

**FREE WARNING LABEL REPLACEMENT:** If your warning labels become illegible or are missing, call 1-800-4-DEWALT (**1-800-433-9258**) for a free replacement.

DeWALT Industrial Tool Co. 701 East Joppa Road, Towson, MD 21286  
Copyright © 2022

The following are trademarks for one or more DeWALT power tools: the yellow and black color scheme, the "D" shaped air intake grill, the array of pyramids on the handgrip, the kit box configuration, and the array of lozenge-shaped humps on the surface of the tool.