

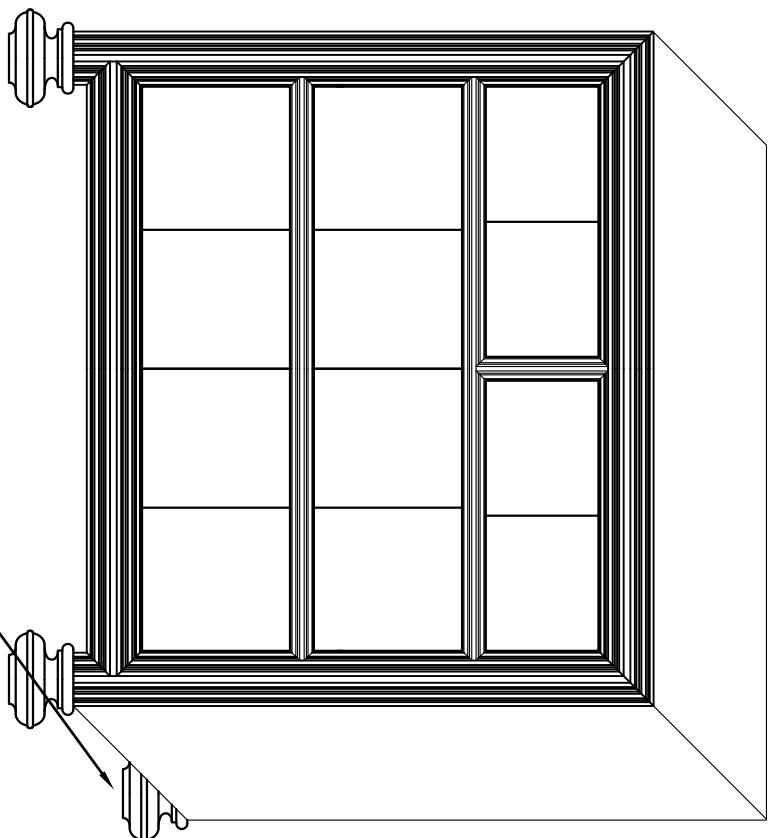


 
CAREFULLY READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE PROCEEDING!

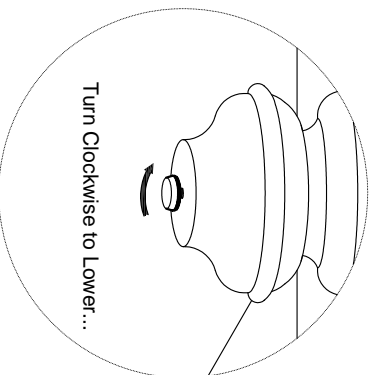


### ADJUSTABLE GLIDES

Adjustable Glides are located under feet of case as shown in the drawing. Turn Adjustable Glide **CLOCKWISE** to lower case; **COUNTERCLOCKWISE** to raise.

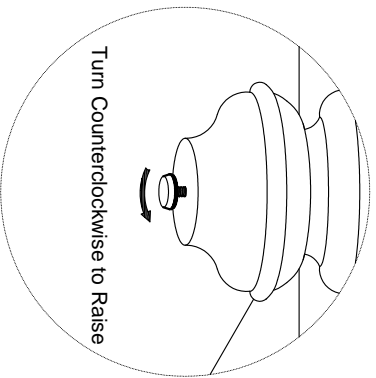

110 Volt AC ONLY!  

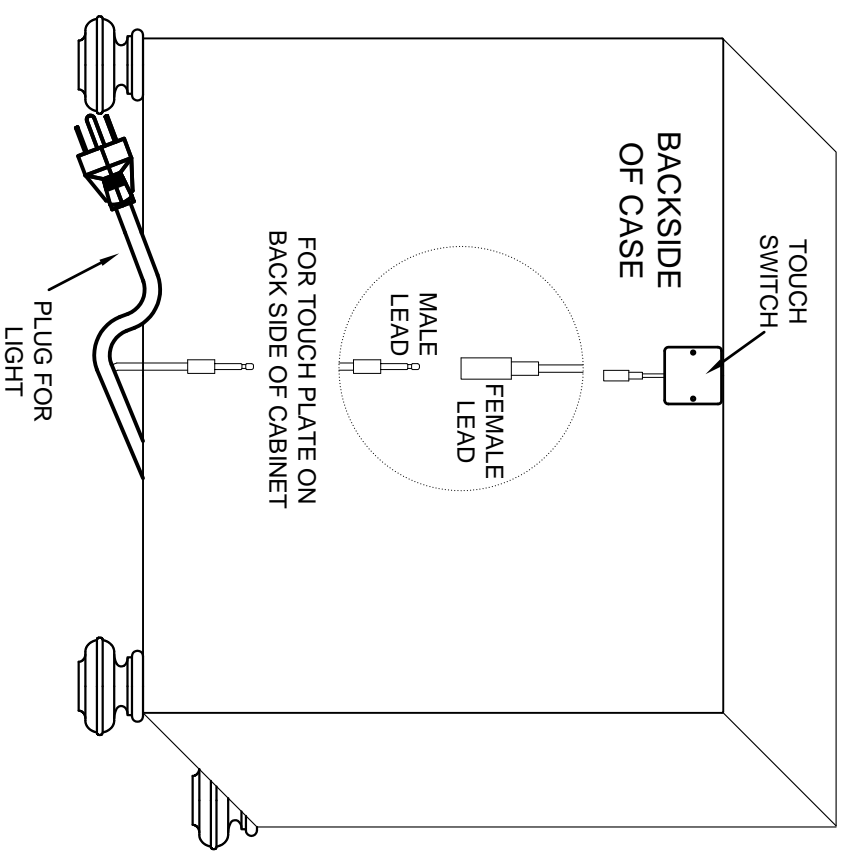


Connect Electric LIGHTS as shown...

From the **BACK SIDE** of the Cabinet:  
Plug **MALE LEAD** from **TOUCH SWITCH** into **FEMALE LEAD** from **SWITCH BOX**.  
Plug **POWER CORD** from **SWITCH BOX** into a standard **110V AC outlet ONLY**.