

Table of Contents

Mobile appearance picture	4
1. Foreword	5
2. Quick start	8
Icon Explain	8
Knowing the Keys	9
Install SIM card	9
Install T-flash card	10
Installing Battery	10
Battery Charging	10
Switching on/off	11
3. Call function	12
Dialing telephone	12
Receiving telephone	12
call in the menu	13
4. Phonebook	15
5. Multimedia	17
Image viewer	18
Video recorder	18
Video player	19
Audio player	19
Sound recorder	20
FM radio	21
6. Fun&Games	23
7. Services	24
Homepage	24
Bookmarks	24
Input address	24

Recent pages	24
Settings	24
8. Settings	26
Dual SIM switch	26
Dual SIM settings	26
Phone settings	26
Network settings	27
Security Settings	27
Connectivity	30
Sound effects	30
Restore factory settings	30
9. SNS	31
10. Messages	32
Write message	32
Inbox	33
Drafts	34
Outbox	34
Sent messages	34
11. Extra	38
Calculator	38
Currency converter	38
Stopwatch	38
Flashlight	38
Calendar	38
Tasks	39
Alarm	39
World clock	40
Notes	40
Bluetooth	40

12.	File manager	42
13.	Shortcuts	43
14.	User profiles.....	44
15.	Call Center.....	46
	Call history	46
	Call settings	47
16.	Input methods.....	50
17.	Phone maintenance	51
18.	Accessories	53
19.	Environment.....	54
20.	Technical Specifications.....	55

Mobile appearance picture



1. Foreword

Honorable mobile phone user, thank you for choosing our mobile phone!

Our cellular phone is according with the communication industry standards of PRC, and also according with the standards of European, and are approved for GSM networks.

Your phone may be used internationally with various networks depending on your roaming arrangements with your service provider.

To use this phone you must subscribe to a GSM service from a provider. We have included many features in this device but their function depends on the features available with your subscribed wireless network. Please contact your service provider for more information.

We strongly recommend you carefully read and understand this manual before using your phone in order to keep it under best conditions for your effective usage and utmost satisfaction.

Safety

Never attempt to disassemble your phone. You alone are responsible for how you use your phone and any consequences of its use.

As a general rule, always switch off your phone wherever the use of a phone is prohibited.

Use of your phone is subject to safety measures designed to protect users and their environment.

Do not use your phone in damp areas (bathroom, swimming pool...). Protect it from liquids and other moisture.

Do not expose your phone to extreme temperatures lower than - 10°C and higher than + 55°C.

The physicochemical processes created by chargers impose temperature limits when charging the battery. Your phone automatically protects the batteries in extreme temperatures.

Do not leave your phone within the reach of small children

(certain removable parts may be accidentally ingested).

Electrical safety

Only use the chargers listed in the manufacturer's catalogue. Using any other charger may be dangerous; it would also invalidate your warranty. Line voltage must be exactly the one indicated on the charger's serial plate.

Aircraft safety

When traveling by plane, you will need to switch your phone off when so instructed by the cabin crew or the warning signs. Using a mobile phone may be dangerous to the operation of the aircraft and may disrupt the phone network.

Its use is illegal and you could be prosecuted or banned from using cellular networks in the future if you do not abide by these regulations.

Explosive materials

Please comply with warning signs at petrol station when personnel asking you to switch your phone off. You will need to comply with radio equipment usage restrictions in places such as chemical plants, fuel depots and at any location where blasting operations are under way.

Electronic equipment

To avoid the risk of demagnetization, do not let electronic devices close to your phone for a long time.

Electronic medical equipment

Your phone is a radio transmitter which may interfere with electronic medical equipment or implants, such as hearing aids, pacemakers, insulin pumps, etc. It is recommended that a minimum separation of 15cm be maintained between the phone and an implant. Your doctor or the manufacturers of such equipment will be able to give you any advice you may need in this area.

Hospitals

Always make sure that your phone is switched off in hospitals when so instructed by warning signs or by medical staff.

Road safety

Do not use your phone when driving. In order to give your full attention to driving, stop and park safely before making a call. You must comply with any current legislation.

Distance of operation

This phone model has been tested and meets radiofrequency exposure guidelines when used

As follows:

 








·Against the ear: place or receive a phone call and hold the phone as you would a wire line telephone.

·Body worn: when transmitting, place the phone in a carry accessory that contains no metal and positions the phone a minimum of 2.5cm from your body. Use of other accessories may not ensure compliance with radiofrequency exposure guidelines. If you do not use a body worn accessory and are not holding the phone at the ear, position the phone a minimum of 2.5 cm from your body,

·Data operation: when using a data feature, position the phone a minimum of 2.5cm from your body for the whole duration of the data transmission.

2. Quick start

Icon Explain

Icon	Function description
	Network signal strength: number of the more stronger the signal;
	Battery capacity number of the more power the more full;
	SMS SIM1/SIM2 have unread SMS
	Missed call SIM1/SIM2 have missed calls
	Used profiles Different icons show different icon: General, Silent, Meeting, Outdoor
	Headset Plug in headset
	Alarm Alarm function opened
	Stopwatch Stopwatch function turn on
	Key lock Show key and screen lock

Knowing the Keys

- 1. Left soft key/Right soft key:** Implement the functions shown in the lower left/right hand corner.
- 2. Call/Answer key (Green 1/2 key):** Press the key to dialing, Press if there is an incoming call to answer. Press from standby to go to call records list.
- 3. End/Power key (Red key):** Long press to switch phone on/off; Press to end, reject call; or to exit a menu.
- 4. OK key:** Confirm or accept selection in menu access. Press from standby to enter the selected shortcuts list function.
- 5. Music key:** Press from standby to enter the audio player interface.
- 6. Navigator Keys:** Press the up/down navigation key into the shortcut function. In idle mode, press the left/right direction keys to select the shortcut function showed on the bottom of the screen, and then press the OK key to confirm.
- 7. 0-9 alphanumeric keys:** Press corresponding keys to input numbers when dialing or numbers and characters when editing. From Standby: Long press “2” to “9” key to dial speed dial numbers (as defined in the menu [Phonebook /Phonebook settings / Speed dial]).
- 8. # Key:** Press in standby to input “#” character; long press from standby to activate or deactivate silent mode.
- 9.* (star) key:** Press in standby to input “*” character, press the left soft key + * key to lock or unlock the keypad in the idle screen.

Install SIM card

This phone supports two GSM SIM cards. Find SIM card's

groove in the back of the phone and slide it completely there. During installation, please make sure the chip is facing downwards and pay attention to slot direction.

Note:

- 1. Keep SIM card out of children's touch.**
- 2. Any abrasion or folding could easily damage SIM card, so please be extremely careful when you insert, Remove and preserve it.**
- 3. Please make sure that you have cut off the power supply and have taken out battery before you remove SIM card.**

Install T-flash card

1. First switch off the phone and remove the battery.
2. T card metal piece down, in accordance with the direction of the logo on the cover of the phone, T-Flash card inserted in the slot

Note:

- 1.To avoid damaging memory card, please do not plug memory card fast or frequently.**
- 2. Please regularly backup information in the cards on other equipment when you use Cards like T-flash! Improper use or other uncertain factors may cause the damage or loss to the content in the cards.**

Installing Battery

Align the battery chip with the metallic salient point in battery jar, insert the battery until it is inserted into the battery jar. Slide battery cover into back of the phone until it is locked.

Battery Charging

insert one end of the charger, i.e., the charging plug into attachment mode and the other end into electrical outlet, Screen will display the charging sign. After charging is finished, just pull out the plug.

Note:

- 1. Please use the standard battery and charger, or may**

explode.

2. If the battery is completely discharged, the battery icon should be in charge after 2 to 3 minutes to appear. Generally based on the current state of the phone (if boot, call, etc.) of different charging time for 2 to 5 hours.

3. Please use the charger, charging as much as possible to avoid using USB cable.

4. To ensure optimal battery performance, the completion of two to three times the battery charge and discharge cycles. Several new battery initial charge, please charge more than 10 hours straight.

Switching on/off

Long press the Red key to switch your phone on or off.

1. If there is no SIM card, SIM card is defective, or SIM card contact is loose, you will be prompt with a warning after powering on, shut down and check your SIM and its installation.

2. If inserted one GSM SIM card only into the phone, meanwhile phone code and PIN code is turn on. When switched on, after entering the PIN code and phone code, the phone enter the standby mode by the current SIM.

3. If inserted two GSM SIM cards, meanwhile phone code, PIN1 code and PIN2 code are all turned on. When switched on, you will be prompted to enter the code one by one. After switched on, the phone will automatically search the network.

4. If the phone detected authorized network, the screen will display network name and signal strength; If there is no authorized network is found, the phone can only make emergency calls or use non-communications features.

3. Call function

Dialing telephone

In standby mode, press the corresponding numeric keys to enter the phone number that you want to dial, including necessary area codes. Press the Clear key ← to delete erroneous inputs; if inserted one GSM SIM card, press the Call/Answer key to make a call when done to connect. If inserted two GSM SIM card, press the call/answer key 1 use the SIM1 to dial, press the Call/answer 2 use the SIM2 to dial.

1. Dialing Fixed/Land Line Extensions: You cannot directly get through some fixed line extensions, and need to dial the telephone exchange or trunk line first and then press [P] key to switch until "P" appears on the screen. And then dial the extension.

2. Making an International Call: To make an international call, press the + key and number.

3. Dialing from Phonebook: Enter the Phonebook via the menu to enter the phonebook list, use the Up/Down Navigator keys to scroll to the desired contact, or press the first letter of the name of the desired contact as saved in your phonebook for quick access to names beginning with the letter then scroll to the desired one.

4. Dialing from Call history: Enter the Call center (press the Call/Answer key from standby or via the menu), use the Up/Down navigator keys to scroll to the desired contact.

Receiving telephone

When there is an incoming call, the phone will give corresponding alert, if your network supports caller ID, the screen will display caller's name or number (depending on whether there is information of the caller in your phonebook).

1. Press the green key or press the Left soft key and confirm [Answer] to answer the incoming call.

2. If function of [call center/call setting/Advanced setting/

Answer mode] is selected as [Any-key], press the any key to answer the incoming call except the Right soft key or the Red key.

3. If you do not want to answer an incoming call, press the Red key or the Right soft key [Reject] to reject it.

You can also press the Red key to end a call.

4. During a call, you can press the Up/Down navigator key to adjust receiver volume.

call in the menu

During a call, press the right soft key can also open / close the hands-free function, press the left soft-key into the options:

- **Swap***: Is maintained in the current call and switch between calls

- **Conference***:Into the multi-party conference call, you can follow the prompts to answer the waiting call, to add multi-session conference call will be maintained; and the party conference in private conversation, the call to keep all other parties; the parties to keep the party; the end of the current Calls and all calls remain.

- **Hold/Retrieve single call***: The current call on hold or resume the call

- **End single call***: end off the current call.

- **End all calls***:end off the current call and the hold call

- **Transfer***: the function need network support.

- **New call**: enter the dial-up interfaces.

- **Phonebook**: enter the phonebook list of interfaces.

- **Messages**: access to the message menu.

- **Call history**: access to call history list.

- **Sound recorder**: record the current call.

Note:

Recording of the call, in some countries is illegal. Therefore, when you talk to Recording, should seek prior approval from the other party's consent.

- **Mute**: mute on or off, open the case in the quiet do not send local voice.

-**DTMF**: The dual tone multi-frequency switching operation (a call, you press the keys on the keyboard, the audio signal will be sent to each other, for telephone banking, automatic answering machine, etc.)

Note:

Denotes menu items only appear in specific circumstances. Such as: [Swap] exist only in the state of the phone and call the phone only appears to be suspended. At the same time for the conferencing, you need to the appropriate service provider to subscribe.

4. Phonebook

Stores and manages contacts that you often use.

There are two locations where you can store the names and numbers that you regularly use, in the SIM memory and in the phone memory. The volume of contacts can be saved in SIM card depends on SIM capacity.

Enter the Phonebook list via the menu, including all records saved in the phone and the SIM card. There are different icons before different records indicating its memory location.

As you are browsing, you could enter a character, characters or number and jump to contacts whose names (as saved in the phonebook) starting with or most closely matching with the characters entered.

After searching for the name, press the Call/Answer key to dial the number of record, and press the Red key to end. Press the OK key to view details of the record, press the Left soft key [Options] to access the menu options:

- View:** Display details of the currently recorded.
- Send text message:** Send a text message to the currently recorded.
- Send multimedia message:** Send a multimedia message to the currently recorded.
- Call:** Dial the currently selected phone number.
- IP dial:** If set and activated IP number in the [Call center/Call settings/Advance settings/IP dial] option, you can dial the currently selected phone number that adds IP number.
- Edit:** Modify the currently selected contactor record.
- Delete:** Delete the currently selected record.
- Copy:** Copy this record to SIM card if it is saved in phone and vice versa.
- Move:** Move this record to SIM card if it is saved in phone and vice versa.
- Add to Blacklist:** Add the phone number to the black list.

·Phonebook settings

Speed dial: Set phone's speed dial functions.

Use the OK key at 'Enable speed dial' option to turn speed dial function on or off. Select 'Set number', scroll to a key number (8 available, from 2 to 9), press the OK key and select 'Edit', scroll to the desired number to set as speed dial number for the key and press the OK key.

When a number is set as speed dial and the function is enabled, you can simply press and hold the corresponding numeric key to the number for instant and automatic dialing.

Extra numbers: Save and view up to 2 own numbers (with name), service dialing number and SOS number.

Memory status: View the service condition of the SIM card and phone's phone book. The capacity of SIM card depends on different SIM card.

Copy contacts: You can select 'SIM to phone, phone to SIM' option to copy the phone book you want.

Move contacts: You can select 'SIM to phone, phone to SIM' option to move the phone book you want.

Delete all contacts: Select to delete the contacts from SIM or the phone memory and you must input the phone password.

Add new contact

This menu allows you to add the new record to the SIM card or the Phone. Enter the phone number directly in standby mode, then press the OK key to save the phone number in the SIM card or the Phone.

First you need to select storage: To SIM or To Phone.

To SIM: New records added to the SIM, each name can only be stored under a number.

To Phone: you can input name, number and set caller ring-tone. This Records stored in your phone,.

5. Multimedia

Camera

Your phone is fitted with camera allows you to take photos whenever possible. You can store the pictures in phone or customize the wallpaper.

In the multimedia menu, select the camera into the camera preview screen, press the following keys can be set for the following cameras:

Press left/right navigation key to adjust [Exposal bias]

Press up/down navigation key to adjust [Focal distance]

Press "1" key to adjust [Image Size]

Press"2" key to adjust [Image Quality]

Press"4" key to adjust [White balance]

Press"6" key to adjust [Delay timer]

Press"7" key to adjust [Cont. shot]

Press the OK key to take photo, press the right soft key to return, press the left soft key to option:

Photos: select the function into image viewer.

Camera settings: Press the left/right navigation key to adjust the following options, including Shutter sound, Ev, Anti-flicker, Contrast, Delay timer, Cont. shot, Profile that is complete, press the left soft key or the OK key to confirm the current setting.

Image settings: can set the image quality and image size.

White balance: can set white balance

Scene mode: can set the photo mode as auto or night.

Effect settings: can set special effect

Storage: Can choose camera phone or memory card as the storage location

Restore default: select the function and confirmed, the camera parameters can be restored to the default location

After taking pictures, press the back button to return camera preview screen, press the left soft key to enter options, can take pictures to send or delete

Image viewer

This feature is convenient for users to view the photos stored in albums, press the OK key to open the picture, press the left soft key to open the option menu:

View: open the current image to view.

Image information: can display the current image information.

Browse style: can set to list style or Matrix style.

Send: Pictures can be selected through the "MMS" or "Bluetooth" method to send.

Use as: The selected picture set to phone wallpaper, Screen saver, power on display, power off display.

Rename: Change the name of the selected picture.

Delete: Delete the select image.

Sort by: Can sort by name, Type, Time, Size, None

Delete all files: Delete all image files.

Storage: Can choose phone or memory card as the storage location

Note:

When no pictures in Image viewer, the options menu only displays the browse style and storage.

Video recorder

In the multimedia menu, select the video recorder into the video preview screen, Press left/right navigation key to adjust [Exposal bias], Press up/down navigation key to adjust [Focal distance], press "2" key to adjust [video quality], press "3" key to adjust [Night mode], press"4"key to adjust [white balance], press the left soft key into options menu:

Camcorder settings: Press the left/right navigation key to adjust the following options, including EV, Night mode, Anti-flicker.

Video settings: Can set the image quality

White balance: Can set white balance

Effect settings: Can set special effect.

Storage: Can choose camera phone or memory card as the storage location

Restore default: select the function and confirmed, the camera parameters can be restored to the default location.

Press the OK key to start recorder, recording, press the OK key to pause or resume recording; Press the right soft key to stop recording, the screen will be auto save the video, press the OK key can play the video, don't operate the screen will auto return to the preview screen.

Video player

This feature can be played stored in the mobile U disk or video files, supported formats to 3gp, mp4, Avi file player.

In the multimedia menu, select the video player into the video list, press left soft key open the option menu:

Play: Play the current video file

Send: can be selected video through the "MMS" or "Bluetooth" method to send.

Rename: Change the name of the selected video.

Delete: Delete the select video.

Delete all files: Delete all video files.

Sort by: Can sort by name, Type, Time, Size, None

Storage: Can choose phone or memory card as the storage location

In playing interface, press the OK key to start/pause the current video, press the left/right navigation key to pull the progress bar forward or backward; press "1" key to switch full screen, press the */# key to adjust the volume, press the right soft key to stop play.

Audio player

Play the audio files saved in the phone or memory card.

In playing interface, press the up navigation key to start/pause the current song, press the down navigation key

to stop play, press the left/right navigation key to switch previous/next song; press the */# key to adjust the volume, In playing interface, press the red key or the right soft key to exit player interface, Phone into the background playing mode, while the idle screen shows the name of the music.

Press the left soft key into the play list, play the left soft key into option menu:

Play: play the current song.

Details: can view the current song information, include song size and time.

Refresh list: can refresh the play list.

Settings:

Pre. Play list: Press the left/right navigation key to switch phone or memory card.

List auto gen.: Select this option enabled, each time the player list will automatically update.

Repeat: You can choose play mode repeat all, repeat one or off.

Shuffle: When you select on, the player will not play in order by list.

Background play: Select ON when playing the exit music player can continue playing.

Bluetooth settings: you can set BT output to stereo or mono.

Audio effect: can set sound effect

Sound recorder

Enter the recording screen, press the left key into options menu:

New record: when you choose the function, start new record, In recording, press the OK key or left soft key to pause/ continue record, press the right soft key to stop record, the screen will be auto to save record, press the down navigation key to play the current record.

Play*: can play the current recording.

Rename *: Change the name of the current recorder file
Delete*: Delete the current recording.
List: Display recorder files list
Settings: you can set storage location and audio quality.
Use as*: you can set the current recorder as coming call ring-tone.
Send*: Can be current recorder through the “MMS” or “Bluetooth” method to send.

FM radio

FM radio is supported by the phone. Access the function only when you have plugged the earphone. In FM radio interface, press the down navigation key to open/close FM. Press the up navigation key to open/close auto tuning function, when open this feature, press the left / right navigation key to move forward / backward auto search until the search to the channel so far. When close the automatic search function, you can use the manual to search for the channel, press the left / right navigation key to move forward /backward 0.1MHZ. Press the */# key to adjust play volume. Press the right soft key or red key to exit FM radio, and FM plays in the background. Press the left soft key to the option menu:

Channel list: Display channel list

Manual input: Manual enter frequency to identify, Radio interface automatically skip to the frequency to listen.

Auto search: Can auto search channel and save channel

Settings:

Background play: Phone back to the idle screen after Select the function, FM plays in the background.

Loudspeaker: Open (close) the function, Radio sound will play outside/Handset mode.

Note: Quality of radio subscription is possible influenced by environment like indoor or under shield. You can improve this situation as following: stand closer to the window, adjust the

position of earphone line or adjust the channel manually

6. Fun&Games

Ebook reader

You can read the *.TXT format document by this function, after you have copied the TXT document into folder [File manager/Phone or Memory Card/Ebook]. Select any Ebook, press the OK key to read. open the selected E-Book, press the navigation keys to view the ebook, press the Left soft key into options menu to related operation:

- Open ebook:** Read the document.
- Clean up bookshelf:** Refresh the E-book document list.
- Global settings:** In this option, you can use the direction keys to do the following operations: Font size, Scroll by, Auto scroll, Scroll speed, Full screen, Encoding, Alignment, select storage (if inserted the memory card).
- Book Info:** View the details of E-Book document.
- Delete:** Delete the selected E-Book document.
- Delete all files:** Delete all E-Book documents.
- Sort by:** Sort the E-Book document by name, type, time, size or random.
- Apply global settings:** Restore the system default setting.
- Help:** Check helps information when you encounter difficulty.

Games

The phone provides one classic game.

For specific operations, please refer to the directions of the game.

7. Services

The Internet is the combination of wireless communications and Internet application platform that enables you to get rich by phone and ecommerce and other Internet information resources application.

Note:

1. **Your ISP may not support some features, in order to ensure the normal operation of the browser, make sure your SIM card is supported and open Internet access.**
2. **If you browse the web, you need to charge fees related to traffic.**

Homepage

This is the WAP settings you set in the homepage address, if you have no other set will have a direct connection to the phone pre-set or the default home page.

Bookmarks

In this menu, the display has all the bookmarks in the bookmark, you can add and save you frequently visit the site name and address for future quick access.

Input address

Enter the need to access the WAP services, and URL addresses, complete, can be connected to the WAP site you want to connect. From the surface in the bookmarks, web history, other than to provide you a flexible way to access the network.

Recent pages

List of pages you have recently visited records to facilitate your browsing history in selected cases, can directly select [Enter] to access the page, the record could be deleted.

Settings

Homepage: Into the function, you can select default homepage or user-defined.

Select profile: Into the function, you can set the mode to

access your account is always asked, SIM1 or SIM2.

Data account: Into the function, you can set correspond SIM card data account.

Browser options: Clear the temporary buffer information and cookie, it's can avoid congestion and improve web browsing speed, periodically clear.

Preferences: You can set the appropriate parameters, including the display time, display pictures, cache and cookie.

8. Settings

Dual SIM switch

You can set manually selected by user or Automatically decided by SIM cards

Dual SIM settings

You can choose dual-mode card, only SIM1 open or SIM2 open.

Phone settings

Time and date

Set home city: You can choose a phone provided in the city as the current time zone of your location

Set time/date: Under this you can set the phone to the current date and time. The phone allows you to set the date range of calendar 2000 to 2030.

Set format: Under this you can set the time and date display format

Schedule power on/off

There are four switch time for you to edit, including the following items each time setting the timer on / off, power on / off and timing of the time and so on. When turned on and set to boot, set the time automatically when the power; when turned on and set off, then set the time when you are prompted to shut down.

Note: Time to set the same, can not be activated in order to avoid conflict.

Language

Under this you can choose the language provided by the phone.

Pref. input method

You can set default input method.

Display

Wallpaper: The standby interface is used to set the background wallpaper. You can choose from the built-in

wallpaper can also be selected from File Manager image file.

Screen saver

Status: The following can be turned on or off the screen saver function

Waiting: This screen saver can be set to start the waiting time for 5S, 15S, 30S, 1minute

Select Screen Saver: This screen saver can choose the system default can also choose from other document management as a screen saver picture

Power on display: The animation can be set to boot, you can choose preset animation for mobile phones, but also into the File Manager, select the desired animation.

Power off display: The animation can be set to shutdown, set with the power on display

Show date and time: You can set the idle screen time display on or off.

Flight mode

This optional mode in which the phone is normal mode or flight mode, flight mode if you choose, the phone can only use some of the functions of non-communications

Misc. settings

Under this function can be left / right navigation key on the backlight to adjust the time

Network settings

Can be set automatically or manually select the network, select Automatic, the phone will be SIM card based on the network where the first selection, select Manual, you need to select the SIM card registered with the network operator can use the same network

Security Settings

SIM security

You can use the PIN code, PIN2 code, set the boot password and set security features to protect information security.

PIN password (PIN1) is the SIM card PIN. If the user don't changes the password ,the original password is 1234 or 0000. If you enable the boot PIN code, then after each start 4-digit PIN code is necessary to input, PIN code can be amended, to protect their SIM card is not used by others. Note that, if the input PIN code wrong three times, the phone card will automatically lock and unlock prompted to enter PUK code, this time close to the edge of danger, so if unauthorized modification of the PIN code, we must bear in mind.

PUK password (PUK1) from consists of 8 digits, which users can not change. PIN code when the phone is locked, and when prompted enter the PUK password, do not act rashly, because the PUK code input opportunities is only 10 times and if enter the wrong words for 10 times, SIM card will be permanently locked, that is scrapped. Part of the SIM card PUK code is never used when the user comes with the card, while the other part of the network operators will need to obtain the PIN code if you do not know the PUK code locked, do not random input, then the correct way is to call the SIM card hotline operators, after a simple user data are verified, you can obtain the PUK password to unlock the phone lock, the service is free of charge.

Note: Please use this feature with caution, if forget PUK password, please contact the network operator. If input PUK code in error for 10 times consecutively , SIM card will be scrapped.

PIN lock

Under this you can enable or disable PIN password, PIN code on or off are required to enter the correct PIN password. When open this feature, every time you turn the phone prompts you to enter the PIN password.

Change PIN

If the current PIN password is already open, you can make changes to the PIN password. First enter the old PIN password,

after repeated twice to determine and identify new password.

Change PIN2

PIN2 (PersonalIdentificationNumber2) password is to enter a particular function (such as setting a fixed number, set the call billing, etc.) to enter the personal identification number.

Pin2 password is provided by suppliers for SIM card to another password, used to qualify the dial personal identification password, Mainly used to eliminate the call cost information, set the phone calls and the billing currency unit, the cost limit function, limited dial-up ("Security settings "----" limited dial-up" can only be opened after the phone call which can be used to set the number and do not call this). My phone's SIM card predictive value is 12345. Pin2 after input error password 3 will be locked, needed Puk2 to unlock.

PIN2 password is used to set the phone billing. If you enter three times wrong, the phone will need PUK2 unlock password, the process described in the previous PIN password, PUK password the same. However, both the password and network SIM card billing and modify the internal data, it will not open, and even if PIN2 password locked, it will not affect the normal use of mobile phones. Thus, PIN2 password, and not to deliberately ignore PUK2 password.

Note:

Please use this feature with caution, If input PUK code in error for 10 times consecutively, SIM card will be scrapped.

Change operation with the PIN1.

Phone security

Under this password there you can set the phone to avoid unauthorized use of your mobile phone

Phone lock

Under this you can enable or disable phone password, phone password on or off are required to enter the correct phone

password. When open this feature, every time you turn the phone prompts you to enter the phone password.

Change password

You can make changes to the phone password. First enter the old phone password, after repeated twice to determine and identify new password.

Auto keypad lock

Under this you can set the time to open or close the keyboard lock keyboard lock feature. Set the keyboard lock time, the idle screen, mobile phone within the set time the keyboard does not perform any operation, it will be automatically locked, then you can press the left soft key, then press the * key to unlock.

Note: Keyboard locked and the backlight is off, to be selected button lights up the screen, then press the left soft key, then press the * key to unlock

Connectivity

Data account

You can choose the Internet account. You can add Internet accounts by yourself.

In the Internet interface, press [Options], you can do operations as followed:

Edit: Edit selected network count.

Add PS account: Mobile support 6 maximum data account.

Every account to edit the information: account name, APN, user name, password, auth type, SIM selection, advanced settings etc.

Delete: delete the selected Internet account

Change default: select this function to restore default.

Sound effects

In this feature, you can set all audio equalizer.

Restore factory settings

Reset the parameter value mobile phone, make your phone reset to default settings. Please enter a privacy password (initial password is 1234), restore factory settings

9. SNS

MSN/Facebook/Yahoo/Skype/Twitter

Your phone has built-in a variety of chat tool, you can use these function to chat with friends or others by connected the internet site.

10. Messages

Message service is a network dependent function, which allows you to send, receive and edit all kinds of messages. Please contact the network operator for more details.

Write message

Text message

Edit a new message, save or send it to the recipient.

Note: To send SMS, you need to set the correct SMS service center number which can be obtained from network provider.

While composing, a text message can be up to 612 characters. Press the OK Key, into add recipient interface, you can enter number and add from phonebook, you can add one number or more number, press the Left Soft key [Options] to select options when editing:

- **Send:** Enter the destination number is sent, or press OK into the address book to find the necessary records, you can select the type of SIM card, confirmed, you can send
- **Edit recipient:** you can edit recipient number.
- **Remove recipient:** you can remove one recipient.
- **Remove all recipients:** you can remove all recipients
- **Save to drafts:** Save the edited message to the Drafts box

Multimedia message

It's multimedia information, with the information service, you can use the phone to send or receive text content. Including color pictures, animation and music can be sent by MMS to each other or receive their own phone.

Notice: To use this feature only when the network operator is supported. And only those that with compatible MMS-enabled mobile phone can receive and display properly.

Into the editing interface, press left soft key to option:

- send to:** You can enter number and add from phonebook, you can add one number or more number, after number edit, you can also remove number, change to CC or change to BCC.
- Input method:** You can select input method, or insert symbol.
- Add picture:** Insert picture in phone or memory card to MMS.
- Picture options*:** can remove the current picture
- Add sound:** Insert audio file in phone or memory card to MMS.
- Sound options*:** Can remove the current sound
- Add video:** Insert video file in phone or memory card to MMS.
- Video options*:** can remove the current video
- Add subject:** Add MMS subject
- Preview MMS:** Preview each page in turn.
- Slide options:** Under this option adder to the next page, add the page to the previous page and set the slide timing.
- Advanced:** can select insert attachment and insert bookmark option
- Save to Drafts:** Save the MMS to the [Drafts], re-edit or send.

Inbox

Received SMS/MMS messages can be stored either in phone or in SIM1/SIM2 memory, and are accessed here.

When you have received a message, the tones or vibration to alert you and message mark will also be shown on the screen. Press the Left soft key [Read] or the OK key to read the new message, press the Right soft key [Back] to return, and you can also access the inbox to read the new message.

If the message memory is full, the indication "Memory full" and the message icon will be shown on the screen and flashed. Before you can receive new messages, delete some of your old messages in the inbox folder. If the capacity of new messages is beyond the capacity of the inbox, the information will be lost and incomplete.

In message list, press the OK key to read the selected

message, press the Left soft key [Options] to make the following menu:

- View:** view the current message
- Reply by SMS:** Reply SMS to the message sender directly.
- Reply by MMS:** Reply MMS to the message sender directly.
- Call Sender:** Select to call the sender number
- Forward:** forward the current message to other number.
- Delete:** Delete the messages.
- Delete all:** delete all messages in inbox.
- Save to phonebook:** Save the information in the sender number to the phonebook.

Drafts

Not send SMS and MMS, will be stored in the mail within, the operation is the same with inbox

Outbox

Failed to send SMS and MMS, will be stored in the mail within, the operation is the same with inbox.

Sent messages

If SMS or MMS is sent successfully, then be stored in the letter box. Automatically save messages need to select in [Message Settings ---Text message ---common setting---save sent message], other operation is the same with inbox.

Delete messages

Select a different mailbox to delete all the information.

Broadcast messages

Broadcast message is sent by network operators, public information, this function needs the network operator support, please contact the network operator. Using the cell broadcast service, you can receive from the network operator information on various topics, such as weather, taxis, hospitals and so on. For information on available topics, please consult your local network operator.

Message settings

Text message

Profile settings: You can choose either of two modes, custom different parameters.

SMSC address: you can set SMS center number, but you need notice, if you set uncorrect center number, SMS can't send and receive, only you set correct number, SMS can natural use.

Delivery report: Open the function, after a successful send text messages, the system will return to report.

Reply path: If the network allows, open the function, the recipient receives a text message, the system will send a confirmation message.

Preferred connection: You can select prefer connection: GPRS or GSM.

Voicemail server: When you can not answer the phone, automatically incoming calls to voice mail number, you can let the other party to your message, a message stored in the network's voice mail system, and afterwards, you can access the voice mail system to listen to a message.

Into the voice mail sub-menu, you can see the current voice message (up to the establishment of two voice mail)

Voice mail function needs the support of network operator, you may need to subscribe to the service. For details, please contact with the operator.

Validity period: you can set SMS validity period.

Memory status: can view the memory storage status.

Save sent message: open the function, After the success of SMS will be automatically saved in the Outbox.

Preferred storage: you can choose to give priority to messages stored in SIM card or mobile phone.

Multimedia message

Data account: Internet access account settings.

Common settings:

Compose: In the menu, you can set slide time, creation mode, signature set act.

Sending:

Delivery report: Select [On], when the recipient receives and download, the network will send a message to notify you (subject to network support); You can also choose [Off]

Read report: Select [On], then when the recipient read the MMS, you can choose to read the report sent to you(need network support), you can also choose [Off].

Priority: Priority Setting MMS.

Delivery time: you can set delivery time,immediate\1 hour later\12 hours later\24 hours later.

Send and save: open the function, After the success of MMS will be automatically saved in the Outbox.

Retrieval: In the menu, you can set home network\Roaming\Filters\Read report\Delivery report

Preferred storage: you can select preferred storage as phone or memory card.

Memory status: you can select phone or memory card to view Used status.

Service messages

Enable push: you can select accept all push messages or disable.

Enable service loading: you can select prompt, Auto launch

or disable.

11. Extra

Calculator

Into the calculator, the calculator interface:

Press 0 - 9 numeric keys to enter the number to be calculated,
Press the navigation key to select the location on the screen
corresponding to add, subtract, multiply and divide symbols for
computing

Press the . key for a decimal point.

Press the right soft key to clear the last bit can be input or the
result (no input figures, has withdrawn from the calculator
function) Press the left soft key or the OK button to display the
results.

Currency converter

Enter the exchange rate conversion interface, first enter the
exchange rate, determined to enter conversion interface, the
rate of switching bar, press the left / right navigation key to
switch the current exchange rate of the proportional method,
that is, the local currency to foreign currency rate or its
reciprocal, press the up/down navigation key to switch to local
currency field, enter the amount of domestic currency, the press
the left soft key, you can display in the foreign currency
translation results.

Stopwatch

The phone provide typical stopwatch and Nway stopwatch use
for you.

Flashlight

Into the flashlight interface, select on, torch light; select off,
torch dark.

Standby interface, long press the up navigation key Torch on or
off quickly.

Calendar

Choose to enter the calendar, the screen will display the
system date on the calendar month, and have a background

box marked the current date. Press the navigation key to select the date, calendar information on the screen will be updated accordingly.

Select any date, press the left soft key to enter options to the following:

View: View the details of the selected schedule, and re-editing of the operating schedule

View all: view all schedule

Add event: Create a calendar reminder, the default time is the date where the calendar highlights.

Delete event: Delete calendar.

Jump to date: Jump the selected date.

Go to today: the date of the input query calendar information

Go to weekly/monthly view: can set the calendar display mode through week or month

Tasks

This feature allows you to easily manage all tasks in working life, arrange and record your do in the future matters. When you scheduled a matter of time arrives, the phone will provide a tone with you to complete these pre-arranged matters, the use of the same calendar

Alarm

You can use the phone as alarm clock, this feature allows you to set time arrives, make the phone ring or vibrate to remind issue.

When the alarm is turned on state, the alarm symbol is displayed in the top of the screen.

When the alarm clock for reminders, press the left soft key to terminate the alarm reminder, press the right soft key is the alarm clock to sleep.

The phone number of alarm clocks available, both in the off or silent mode, set the alarm clock function has been effective.

Select any of the alarm clock, press the left soft key or OK key to the following:

1, can be turned on or off the selected alarm to open before the alarm clock icon will be displayed

2, set the alarm, reminder time

3, according to the time you need to set the alarm clock to remind the period of a day, week or custom to be reminded of a few days

4, the selected option when the alarm time to remind ring-tone

5, you can set the alarm time to remind the selected mode: ring and vibration, ring, vibration

6, you can set sleep time

Set the required entry, press the right soft key to save and return directly.

World clock

In this menu, press the left / right navigation key to view some cities in the world relative to the current time the phone correspond to time.

Notes

This is a Notepad, you can record important information in this feature

Bluetooth

The phone supports Bluetooth, users can turn the feature on according to demand.

Bluetooth technology can connect electronic devices wirelessly.

Because Bluetooth communicate by radio, so in your phone and another Bluetooth device do not need to in the opposite direction, please maintain the maximum distance that between

two devices is not more than 10 meters during communicating.

In some countries or regions may be developed within a number of provisions restricting the use of Bluetooth devices, please contact your local authorities.

Power: Press the OK key or the left soft key to open or close

the Bluetooth function. If close some function, then you will end all the Bluetooth connection. Bluetooth connection will

consume battery power, reducing cell phone operation time,

when using the phone to perform other operations, please consider this factor.

Visibility: Press the OK key or the left soft key to switch on or off, if you select on, other Bluetooth devices can find the phone; if you select off, other Bluetooth devices can't find the phone.

My device: Select to add new equipment, search for Bluetooth devices within range of the signal. After the Bluetooth device is found, you can select the matching connections.

Search audio device: Search within signal range of Bluetooth hands-free devices, such as Bluetooth headsets.

My name: Display the Bluetooth device name of the machine can access to view and edit.

Advanced:

Audio path: set the audio path, is leave in phone or forward to Bluetooth headsets.

Storage: set storage location in phone or memory card.

My address: Display the Bluetooth device address.

12. File manager

In document management, you can open files in the Phone or Memory card, you can select file or folder to press the left soft key into [Options], you can do the following (Perform different file operations are also different, depending on the specific operation by the file):

- **Open:** open the file or folder.
- **New Folder:** the folder in the selected directory New Folder.
- **Rename:** you can rename the select folder.
- **Delete:** delete the selected file or folder.
- **use as:** if the selected file is audio files, can set the file use as SIM1/SIM2 incoming call; if the selected file is image file, can set the file use as wallpaper, Screen saver, Power on display or Power off display.
- **Search:** memory card can be customized to find all the documents.
- **Sort by:** can "name", "time", "size", "type" or "none".
- **Send:** the select file can send by MMS or Bluetooth.
- **Copy:** you can copy the select file to other folders.
- **Move:** you can move the select file to other folders.
- **Details:** you can view the select file information.

Note:

Memory card as the default save path, order to facilitate the use of multimedia features, please copy the appropriate files to Audio, My music, Photos, Videos etc. folders.

13. Shortcuts

Select this option to enter the functions directly that you often want to use.

Scroll to a listed function and press the OK key or the Left soft key to select [Add], scroll to a desired function from the list of available functions, then use the Left/Right navigator keys to select 1-6 order and press the OK key to replace.

You can also select [Add, Edit, Delete, Delete all, Change order] options to set the function.

14. User profiles

The phone provides you with five profiles: general, silent, meeting, outdoor and my style. It's help you according to the different events and environments in different custom ring tones. according to different scenarios, choose a different profile, then you only need to personalize your profile and activate.

Note: The factory setting various modes set has been done and has been the general pattern of the default start

Activate: Start the selected profile.

Customize: You can set all kinds of effects to your own needs. In the Settings screen, press the down navigation key to move the highlight to the item needs to be set.

Alert type: Press the left/right navigation key to select: vibrate only, vibrate and ring, vibrate then ring or ring only.

Ring type: Press the left/right navigation key to select: Repeat, Ascending, Beep once

Incoming call: There are ten built-in ring tones to choose for you, and you may also to choose your favorite audio file as your ring-tone from file management.

Ring-tone volume: Press the left/right navigation key to adjust the ring-tone volume.

Message ring-tone: There are five built-in ring tones to choose for you, and you may also to choose your favorite audio file as your ring-tone from file management.

Message volume: Press the left/right navigation key to adjust the ring-tone volume.

Keypad: Press the left/right navigation key to select click, or tone.

Key-tone volume: Press the left/right navigation key to adjust the key-tone volume.

Power on/off: Phone preset five tone to choose for you, you can also choose silent to turn off the power on/off tone.

System alert: You can set whether to open system alert tone.

Reset: restore the default settings

15. Call Center

This phone can record all received, dialed and missed calls as well as their call time. Only when related function is supported by network and phone is switched on and in network service area, it can record the answered and missed calls. Call records may be accessed by pressing the Green key from standby or accessing through the menu.

Access the Call Center menu using the normal menu path, the submenus are as follow:

Call history

In the call history list ,press the left/right navigation key, switch to Display list of all /dialed/missed/received calls.

Once on the call records list, press the Green key to make a call; press the OK key to view the details of current call record; press the left soft key to make the following options:

- **View:** View the details of current call record.
- **Call:** call current record.
- **Send text message:** send SMS to the select number
- **Send multimedia message:** send MMS to the select number.
- **Save to phonebook:** Store the number as a phonebook entry.
- **Add to blacklist:** The phone number is set to refuse to answer the phone, you can set the number after the [call center →call setting →Advanced settings →blacklist] query to
- **Edit before call:** Edit number before the call history
- **Delete:** Delete the current call record.
- **Delete all:** Delete all call records.

Advanced:

Call timers

View all time for the Last call time; Total received time; Total dialed time and all call time; and press the left soft key can reset all time.

Text msg. counter

View SIM1/SIM2 sent and received Message quantity.

GPRS counter

View the GPRS data volume on the network.

Call settings

SIM call settings

Call waiting:

You can choose to Activate, Deactivate or Query status of this feature.

Activate this feature, if you call any other incoming call, the phone beeps, and the screen will display the caller number or name and call waiting information.

Call divert:

This feature allows you to play to your phone calls transferred to your voice mailbox or another phone number you specify. This function needs the support of network operator, please contact the network operator.

Transfer in the following ways, each way can be set to enable, disable, and query status. When turned on, the on-screen prompts to transfer the phone number.

Divert all voice call: Transfer all voice calls to your settings in the phone number or voice mail

Divert if unreachable: When your phone is off or not on the network service area, the transfer of all voice calls to your phone number or set voice mail

Divert if no answer: No answer transfer all voice calls to your phone number or set voice mail

Divert if busy: When the call is busy, the transfer of all voice calls to your phone number or set voice mail

Divert all data calls: Transfer all the data calls to the phone number you set, this function is supported by the network operator, please contact the network operator.

Cancel all diverts: cancel all call forwarding type.

Call barring:

Set limits each case to answer or dial the phone. Network

operators must first apply for international calling features, and limit access network password, to set the limit function.

This function needs the support of network operator, please contact the network operator.

Call restrictions can be set for activate, deactivate and query status

Line switching:

Can switch to Line 1 or Line 2, Line 1 is default, if you choose line 2, then there may be no phone call.

- Advanced settings

Blacklist

You can on or off this feature to edit the blacklist number, up to 20 numbers can be edited. Open the function, the blacklist numbers you call, the other shows you are on the phone, and your phone is in a state of no response.

Auto redial

You can enable or disable this feature, the feature is turned on, after the dial-up, then if the other party does not answer the phone over a period of time will be automatically re-dial, redial the number up to 10 times, in this period, the user can not call any other phone , to end the re-dial, simply press the right soft key to cancel.

IP dial

You can edit IP number with three at most.

Select one and press the OK key or press the Left soft key [Options] to select 'Edit' option, then edit the IP number, press the OK key or press the Left soft key to confirm and the current IP number is both activated.

For the edit IP number, you can press the Left soft key [Options] to select 'Activate' option.

Call time reminder

Can set the prompt type:

Off: When the phone call, no minutes of tone.

Single: Select 1-3000 seconds after the prompt enter either of

the time, when you call the phone at the time when prompted.
Periodic: Select 30-60 seconds after the input in any one time, when you call for every minute the phone will be reminded of the time.


Answer mode

Any key: Select the feature, all incoming calls, in addition to the red key and right soft keys, all keys can answer the call

Auto answer when headset: Enable this feature, when the phone is in headset mode, there are about 2 seconds after the incoming call, the phone will automatically answer the call.


16. Input methods

This phone provides diversified input modes for you to enter letter information when editing SMS and adding phonebook.

Use the  key on the right of the phone to switch between different input methods.

When editing the key controls:

The Left soft key: Generally represents confirmation.


The Right soft key : Press to clear one character, long press to clear all.

The End/Power key: Return to the idle interface.

[sym] key: In every input status, press this key to call out punctuation and symbol input frame.

[Space] key: press the key to input blank once.

[Fn] key: press the key to shift character type on the keypad.

 key: press the key on the left of the phone to shift lower or capital case.

General input method

General input method include abc\es\pt three languages input, Each key corresponding input one character, there is no association function.

The Numeric input method

To input numerical values, press the respective numeric keys.

17. Phone maintenance

Mobile is a high-precision electronic products, please carefully maintained. The following suggestions can help you maintain phone, to extend the lifespan:

- Phone and its accessories should be placed out of the reach of children.
- Keep the device dry. Rain, humidity or moisture will corrode the circuit board. If the phone is accidentally flooded, shall promptly remove the battery, and immediately sent to a local authorized service center for processing.
- Do not place your phone in dusty places, this may affect the normal use of mobile phones.
- LCD display is easily damaged cell phone parts, mobile phone dropped onto the ground should be avoided or be strong vibration; prohibit the use of sharp objects to touch the screen.
- Do not place the phone where the temperature is too high. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt plastic shell phone.
- Do not place the phone where the temperature is too low. Otherwise, when the phone temperature to normal temperature, moisture will be generated internally, could damage the device electronic circuit boards.
- Do not drop, knock or severe shaking the phone, so as not to damage the internal circuit boards and precision mobile structure.
- Do not use chemicals, cleaning solvents or strong detergents to clean the device, apply a soft cloth soaked in soapy water and gently scrub.
- Do not use paint pigment cell phone to avoid moving parts and be stuck to proper operation.
- Use a clean soft lens cleaning cloth. Such as: camera lens.

- Replacement antenna, use only the supplied or designated by the antenna. Use of unauthorized antennas, cell phone accessories or modifications, could damage the device and may violate regulations governing radio devices.

18. Accessories

Use only batteries, chargers, and accessories approved by the manufacturer with this device. Use of any other types will invalidate the warranty and may be dangerous. Check with your dealer for available accessories. You may opt to buy:

Extra Battery

Extra batteries of various capacities are available from our company or through your dealer.

Charger Plug, charger cable

Charger plug used to connect with the charger cable for charging on wall outlets. Also you can use the charger cable to connect with the other devices such as the personal computers to charge the phone.

Charging time is about 2 to 3 hours. The charging condition is displayed on screen. You may use your phone while charging.

Earphone

A mini, practical, hands-free device; you can use its button to answer and end calls. Some models may also come with a volume control knob.

Do not plug or unplug the earphone when connecting dialed or incoming calls.

Please to adjust the incoming call alert volume to the felicitousness before you plug in the earphone.

19. Environment

Packaging

To facilitate the recycling of packaging materials, please obey the sorting rules instituted locally for this type of waste.

Batteries

Spent batteries must be deposited at the designated collection points.

The product

The crossed-out waste bin mark affixed to the product means that it belongs to the family of electrical and electronic equipment.

To promote the recycling and recovery of waste electrical and electronic equipment (WEEE) and at the same time safeguard the environment, European regulations require you to obey the sorting rules instituted locally for this type of waste.

20. Technical Specifications

Weight: 79g (including the Battery and Battery cover)

Dimensions: 103.6*55.5*10.8mm

Battery: Li-ion Battery, 3.7V

Band: GSM 900/1800/850/1900MHz

Battery Capacity: 650mAh

Talk Time: about 2.5h

Standby Time: about 170 h

Note: Actual operating conditions depend on the local network environment, SIM, and user behavior.

Warning: Any consequence caused by misuse, abuse, or not following any and all of the above-written suggestions and instructions shall not hold the producer in any way responsible to any degree.

Announcement: The manufacturer reserves the right to change or upgrade specifications or software versions without prior or separate notice. Trade marks mentioned or used in this material belong to their respective owners.

21. FCC Statement

1. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

SAR Information Statement

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base

station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is **0.923W/Kg** and when worn on the body, as described in this user guide, is **1.158W/Kg**(Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RFexposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on **FCC ID: PRMC900** Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. * In the United States and Canada,

the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a sub-stantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 15mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.