TURN ON

Take the two earbuds out of the charging case, long press the control buttons for 5 seconds, they will turn on. Once the earbuds have powered up, you should hear a sound indicating that they have automatically connected with one another.

TURN OFF

Long press the control button until LED turns red to indicate not in use, this will turn off your device. Earbuds will turn off automatically if away from case for more than 5 mins without connection.



BLUETOOTH CONNECT

- Power the device on. The earbuds will pair with one another automatically when they are turned on.
- Turn on your device's Bluetooth from the Bluetooth menu and select "MV_EB5469".
- 3 . When paired successfully the device will make a tone to confirm the connection has been made to your device.
- 4 . Remember to turn the earbuds off after each use to ensure longest play time.

Note: The earbuds will reconnect automatically if your device has been paired previously. Depending on your device's type and configuration, manual reconnection may be required each time.

CHARGING

- 1 . EARBUDS: Just place the earbuds into the charging case, and briefly press the charging case's button to enter charging mode. The earbuds will automatically enter charging mode if the charging case is connected to the power supply. The earbuds will display a red LED light while they are charging, and switch off LED light when they are fully charged.
- CASE: Use the cable provided to connect the charging case to the power supply.

FUNCTION KEYS

- PLAY/STOP MUSIC: When playing music, quickly press either earbud's control button.
- ANSWERING CALL: When a call is received, briefly press either earbud's control button.
- HANGING UP: During a phone call, briefly press earbud's control button to end call.
- 4 . **REDIAL:** Press either earbud's control button twice quickly to dial last number on your list.
- 5 . DECLINING CALL: When playing music, press and hold control button for 1.5 seconds*.

residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installate and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not cour in a particular installation. If this equipment does cause harmful interference will not oradio or television reception, which can be determined by turning the equipment off and not, the user is encouraged to try to correct the interference by one or more of the following measures:

NOTE: This equipment has been tested and found to comply with the limits for a

Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

 $\textbf{Note:} \ \textbf{If you hold control button for 3 seconds earbuds will power down.}$