



02170

Please read the following instructions and warnings carefully.

Keep this instruction manual for future reference.

Tools required:

Phillips head screwdriver (not included)

In portable mode, Baby's Unit requires 3 AAA batteries (not included) and the Parent's Unit requires one rechargeable battery (included).

For Technical Support Call 1-800-268-6237 or E-Mail at customerservice@summerinfant.com

For use with children from birth and up.

! WARNING:
Adult assembly required.
Exercise care when unpacking and assembling product.



We at Summer Infant stand behind all of our products. If you are not completely satisfied or have any questions, please contact our Customer Service Department at 1-800-268-6237 or e-mail us at customerservice@summerinfant.com.

INSTRUCTION MANUAL

SECURE SOUNDS 2.4 GHZ DIGITAL MONITOR

Thank you for buying the Secure Sounds 2.4 GHz Digital Monitor from Summer Infant. This audio monitor is a great addition to any home. The 2.4 GHz digital technology eliminates interference and provides a secure and private transmission. The digital technology automatically selects a free and secure channel so you only hear your baby. It allows parent to monitor baby in the nursery from any part of the home within 600 ft. The Parent's Unit features volume control, sound lights, out of range indicator, convenient belt clip, rechargeable battery, and a recharging base. The Baby's Unit has a battery compartment that holds 3 "AAA" batteries (not included) in case of power outages.



visit us at
www.summerinfant.com

Summer Infant, Inc.

6 Blackstone Valley Place, Suite 206
Lincoln, RI 02865 USA 1-800-268-6237
© 2005 Summer Infant, Inc.
Please retain information for
future reference.

Summer Infant Europe, LTD.

20 Sparrows Herne
Bushey, Hertfordshire
WD23 1FX UK 44 (0)20 8420 4429
Colors and styles may vary.
MADE IN CHINA 8/05

WARNING:

THIS PRODUCT CANNOT REPLACE RESPONSIBLE ADULT SUPERVISION.

- Prevent cord entanglement – do not place transmitter in crib or within arm's reach of baby. Never use extension cords with AC adapters. Only use the AC Adapters provided.
- When an AC Adapter is plugged into an electrical outlet, do not touch the exposed end.
- Test monitor before first use, periodically, and when changing location of the components.
- Do not use monitor near water (such as bathtub, sink, etc.).
- Keep monitor away from heat sources (such as stoves, radiators, etc.) and make sure there is proper ventilation (not on sofas, cushions, beds, etc. which may block ventilation).
- Nursery monitors use public airwaves to transmit and receive signals. This monitor may pick up signals from other monitors or similar devices, and signals broadcast by this monitor may be picked up by other receivers.
- This product is not a toy. Do not allow children to play with it.

BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard, or rechargeable batteries.
- Remove batteries and unplug the re-chargeable battery pack pig tail when product is stored for long period of time or when batteries are exhausted.
- Dispose of exhausted batteries properly.
- Use only the original re-chargeable battery pack. Warranty void if other batteries are used. Please contact Summer Infant, Inc. for a replacement battery pack, contact information can be found at the end of the instruction booklet.

CAUTION:

2 KEEP SMALL PARTS OUT OF CHILD'S REACH.

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by Summer Infant Inc. may void the users authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

NOTE: Use only the original re-chargeable battery pack. Warranty void if other batteries are used. Please contact Summer Infant, Inc. for a replacement battery pack, contact information can be found on the next page.

PROBLEM SOLVING:

No sound coming from speaker

- Make sure both Units are "ON."
- Set volume to a higher setting.

Static

- Move the Parent's Unit closer to the Baby's Unit.

Squealing noise

- Parent's Unit and Baby's Unit too close together – move further apart.
- Turn down the volume on Parent's or both Units.

Weak reception or no reception

- Make sure both Units are turned on.
- Move Parent's Unit closer to the Baby's Unit.
- Make sure the battery is charged.

NOTE: Digital technology will automatically scan multiple channel frequencies and select a free and secure channel.

 
If you experience a problem that is not noted in this manual, please do not return the product to the store. Our Customer Service Department may have a simple solution to your problem. Please contact us 1-800-268-6237 or e-mail us at customerservice@summerinfant.com.

FEATURES & COMPONENTS:


Parent's Unit:




Parent's Unit (Back View):

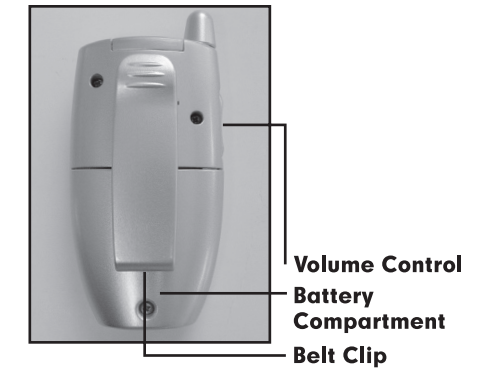


Baby's Unit:

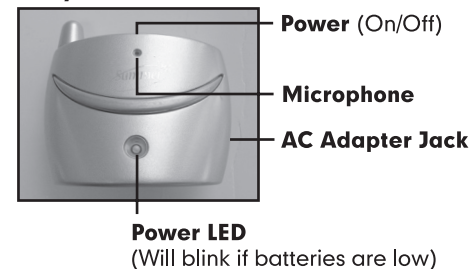 

Baby's Unit (Back View):

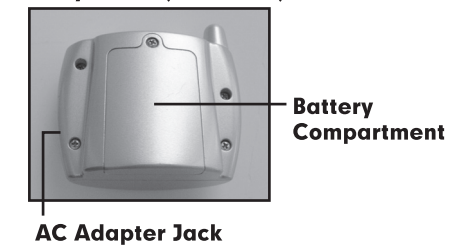 


Function of Sound LEDs:

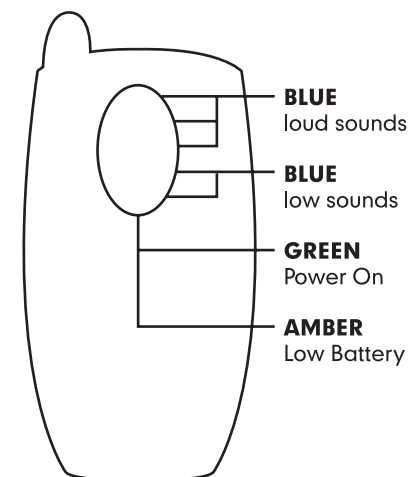 

Parent's Unit will beep after 10 seconds if Baby's Unit is too close, out of range or turned off.

 Parent's Unit Rechargeable Base:

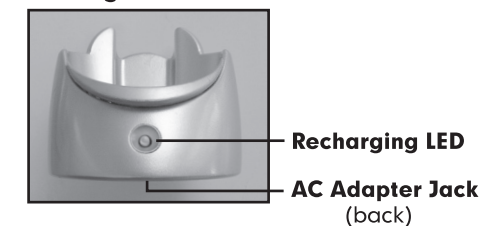

AC Adaptors (2)



SET UP & USE:

Baby's Unit

Step 1: Place the Baby's Unit in the nursery near the crib on a flat surface, such as a dresser, bureau or shelf (not in the crib or within child's reach). Insert AC Adapter into the AC Adapter Jack on the right side of the Baby's Unit. Plug the AC Adapter into a standard electrical outlet.

Note: Be sure to keep all cords out of baby's reach.

Step 2: Slide power switch to On position on top of Baby's Unit.

Parent's Unit

Step 1: Place the Parent's Unit in the room from which you want to monitor your baby (ie. bedroom or living room). Plug an AC Adapter into the AC Adapter Jack on the back of the Parent's Unit recharger base and the other end into a standard electrical outlet.

Step 2: Slide power switch to On position on top of Parent's Unit

Step 3: Set Volume to desired level using Volume Control on side of Parent's Unit.

Note: Charge battery in Parent's Unit for 12-16 hours before first use.

To use the Parent's Unit in Portable Mode

For use in portable mode, the Parent's Unit requires one 4.8 V rechargeable battery (included). Open battery compartment door using a phillips screwdriver and make sure battery is connected. Replace battery compartment door. When the power LED is amber color, the battery needs to be recharged.



SET UP & USE (continued):

To use the Baby's Unit in Portable Mode

For use in portable mode, the Baby's Unit requires 3 AAA batteries (not included). Open battery compartment door using a phillips head screwdriver and insert 3 AAA batteries. Replace battery compartment door.



Power LED on Baby's Unit will blink if batteries need to be replaced.

CAUTION: When using Baby's Unit in portable mode, be sure to keep it out of the child's reach.

Testing the Product

You should be able to clearly hear all levels of sound coming from the Baby's Unit through the Speaker on the Parent's Unit. Digital technology will automatically scan and select a free and secure channel so you only hear your baby. If no sound comes from the Speaker of the Parent's Unit check to make sure all cords are fully plugged in and connected and batteries are fresh. Make sure both Units are turned on.

Belt Clip:

For convenience and portability, you can clip the Parent's Unit to your belt or waistband.

